

# WH-5400CPE

High Power Outdoor Solution

# **User's manual**



**Powered by OvisLink Corp.** 

## The Wireless Technology

#### Standard

The Wireless Access Point utilizes the 802.11b and the 802.11g standards. The IEEE 802.11g standard is an extension of the 802.11b standard. It increases the data rate up to 54 Mbps (108Mbps in Super G mode) within the 2.4GHz band, utilizing OFDM technology. This means that in most environments, within the specified range of this device, you will be able to transfer large files quickly or even watch a movie in MPEG format you're your network without noticeable delays. This technology works by transmitting high-speed digital data over a radio wave utilizing OFDM (Orthogonal Frequency Division Multiplexing) technology. OFDM works by splitting the radio signal into multiple smaller sub-signals that are then transmitted simultaneously at different frequencies to the receiver. OFDM reduces the amount of cross talk (interference) in signal transmissions. The AP will automatically sense the best possible connection speed to ensure the greatest speed and range possible. 802.11g offers the most advanced network security features available today, including: WPA, TKIP, AES and Pre-Shared Key mode.

### Planning Your Wireless Network

#### **Network Topology**

A wireless network is a group of computers, each equipped with one wireless adapter. Computers in a wireless network must be configured to share the same radio channel. Several PCs equipped with wireless cards or adapters can communicate with one another to form an ad-hoc network. The wireless adapters also provide users access to a wired network when using an access point or wireless router. An integrated wireless and wired network is called an infrastructure network. Each wireless PC in an infrastructure network can talk to any computer in a wired network infrastructure via the access point or wireless router. An infrastructure configuration extends the accessibility of a wireless PC to a wired network, and may double the effective wireless transmission range for two wireless adapter PCs. Since an access point is able to forward data within a network, the effective transmission range in an infrastructure network may be doubled.

#### Roaming

Infrastructure mode also supports roaming capabilities for mobile users. Roaming means that you can move your wireless PC within your network and the access points will pick up the wireless PC's signal, providing that they both share the same channel and SSID. Before enabling you consider roaming, choose a feasible radio channel and optimum access point position. Proper access point positioning combined with a clear radio signal will greatly enhance performance.

#### **Network Layout**

The AP Access Point has been designed for use with 802.11g and 802.11b products. With 802.11g products communicating with the 802.11b standard, products using these standards can communicate with each other. The Access point is compatible with 802.11g and 802.11b adapters, such at the PC Cards for your laptop computers, PCI Card for your desktop PC, and USB Adapters for when you want to enjoy USB connectivity. These wireless products can also communicate with a 802.11g or 802.11b wireless Print Server. When you wish to connect your wired network with your wireless network, the Access Point's network port can be used to connect to any of switches or routers.

#### **Installation Considerations**

The AP lets you access your network, using a wireless connection, from virtually anywhere within its operating range. Keep in mind, however, that the number, thickness and location of walls, ceilings, or other objects that the wireless signals must pass through, may limit the range. Typical ranges vary depending on the types of materials and background RF (radio frequency) noise in your home or business. The key to maximizing wireless range is to follow these basic guidelines:

- Keep your product away (at least 3-6 feet or 1-2 meters) from electrical devices or appliances that generate RF noise.
- Keep the number of walls and ceilings between the AP and other network devices to a minimum each wall or ceiling can reduce your AP's range from 3-90 feet (1-30 meters.) Position your devices so that the number of walls or ceilings is minimized.
- Be aware of the direct line between network devices. A wall that is 1.5 feet thick(.5 meters), at a 45-degree angle appears to be almost 3 feet (1 meter) thick. At a 2-degree angle it looks over 42 feet (14 meters) thick! Position devices so that the signal will travel straight through a wall or

ceiling (instead of at an angle) for better reception.

 Building materials can impede the wireless signal - a solid metal door or aluminum studs may have a negative effect on range. Try to position wireless devices and computers with wireless adapters so that the signal passes through drywall or open doorways and not other materials.

## Wireless AP Mode Wireless Client Mode Wireless Client Mode Wireless Client Mode

## Network Topology – AP Mode and Client Mode

## Network Topology – Gaming Bridge Mode





#### **Network Topology – Repeater Mode**

### Network Topology – WDS Point to Point Mode





## Network Topology – WDS Point to Multi-Point Mode





**CPE Installation Diagram** 



## Hardware Installation

## Making a Connection



Attention:
• The cable distance between the Router and PC/hub/Switch should
not exceed 100 meters.
Make sure the wiring is correct. In 10Mbps operation, Category
3/4/5 cable can be used for connection. To reliably operate your
network at 100Mbps, you must use Category 5 cable, or better
Data Grade. Make sure 4-paired wires are used.

## **AP Configuration Using Locator**

While entering the Locator utility, the Locator will automatically search the AP available on the same network. Locator will show the Device Name, Device Type, IP Address, Ethernet MAC Address and Firmware Version in first page. Before start using Locator, make sure you disable personal firewall installed in you PC. (Ex. Windows XP personal firewall)

LL	ocator								
File	<u>T</u> ools <u>V</u> iew	/ <u>H</u> elp		11					
	Q Search	Setup Wizard	n Setting	WinSless Setting	Factory (	lefault	<b>D</b> evice Info	e Web	
Dev:	ice Name	Device	Туре	IP Address		Etherne	t MAC Address	Firmware Version	[
mini	AP	802.11;	g Access Point	192.168.1.20		00:03:71	7:E0:01:AD	0.0.19 beta3	
Ready								NUM	1.33

To setup the access point, just simply click on the "**Setup Wizard**" icon and the Locator configuration utility will lead you step by step to finish all the settings. After click on the "**Setup Wizard**" icon, the first page show up will be "Login". Please input your user name and password into the column. Default user name and password ex-factory as below:

> User Name: Admin Password: (leave blank)

Setup Wizard		×
Login		
Welcome to use the Setup Wi Before configuring, please log password is null.	izard. You can easily setup the AP step by step. gin first. Default user name is "Admin" and default	
User Name: Password:	Admin	
	<上一步图 下一步 10 > 完成 取消	

After type in correct user name and password, the utility will lead you into "**IP Setting**" page. Here you can choose to get IP from a DHCP server or specify IP address manually. Choose to obtain an IP address from DHCP server if your environment or ISP provide DHCP server. Otherwise, you can manually setup IP address. Keep the default IP setting if you are not familiar with TCP/IP setting. After you finish IP setting, click on "**Next**" to continue the configuration.

Setup Wizard			
IP Sett	ing	k	
<ul> <li>Here you can</li> <li>The IP address stay with defased on the state of the stat</li></ul>	choose to get IP from a D s need to be unique to yo ult IP address 192.168.1.1 fask must be the same as t h as a router, in the Gatew n leave this field blank.	OHCP server or specify IP address manually. ur network. We would like to recommend y 20. hat set on your Ethernet network. ay field. If your network does not have a	ου
	<ul> <li>Obtain an IP addres</li> <li>Specify an IP addre</li> </ul>	s automatically (DHCP) ss	
	IP Address:	192 . 168 . 1 . 20	
	Subnet Mask:	255 . 255 . 255 . 0	
	Default Gateway:	192 . 168 . 1 . 1	
-			
	<上一步	B 下一步 M > 完成	取消

You may assign any name to the Access Point. Memorable, Unique names are helpful especially if you are employing multiple access points on the same network. The device name needs to be less than 32 characters. After verify the name you input and click "**Next**" to continue the setting.

Setup Wizard			×
Dev	ice Nan	ne	
	<ul> <li>You may assign at names are helpful points on the same 32 characters.</li> </ul>	b ny name to the Access Point. Memorable, Unique especially if you are employing multiple access e network. The device name needs to be less than	
	Device Name:	miniAP (1 to 32 characters required)	
		< <u>&lt;上─毋圓</u> 下─毋₪> 完成	  取消

The following page is operation mode setting. Default operation mode is Access Point, this connects your wireless PCs and devices to a wired network. In most cases, no change is necessary. You can switch operation mode to Wireless Client or Repeater mode depends on your application. Wireless Client mode can allow AP act as a client within its range. Your Ethernet devices behind the AP can connect to remote AP. Repeater mode is able to talk with one remote access point within its range and retransmit its signal. Choose repeater mode if you want to extend the range of your original AP.

Note: due to the built-in internal directional patch antenna, repeater mode and WDS option do not apply in WH-5400CPE.

Setup Wizard	×
Operation Mode	
<ul> <li>The default operation mode is Access Point, this connects your wireless PCs and devices to a wired network. In most cases, no change is necessary. You can switch operation mode to Wireless Client or Repeater mode depends on your application.</li> <li>Wireless Client mode can allow AP act as a client within its range. Your Ethernet devices behind the AP can connect to remote AP.</li> </ul>	
<ul> <li>Kepealer</li> <li>(上一步(B)) 下一步(M)&gt; 完成 取消</li> </ul>	

Here we choose the AP to work in Access Point mode, and then the utility will ask for SSID, Channel and Wireless Mode. Keep the default value if you do not have special requirement for these settings.

SSID: airlive Channel: Smart Select Wireless Mode: 2.4GHz 54Mbps (802.11g)

Setup Wizard		X
Wireless \$	Setting	
<ul> <li>The SSID is the unique is must be identical for all</li> <li>Select the appropriate classifier settings.</li> <li>System supports all 802. SuperG function for Ath</li> <li>Click "Next" button to c don't want to make any setting the setting of the setti</li></ul>	name shared among all points in a wireless network. The SSID points in the wireless network. hannel from the list provided to correspond with your network 	
:0166	(1 to 32 characters required)	
Channel:	Smart Select	
Wireless Mode:	2.4GHz 54Mbps(802.11g)	
		_
	<上一步(B) 下一步(N) > 完成 取消	

Next page is wireless security setting; you can choose different level of security support for your wireless environment here. The default value is "**Disable**" which means anybody who can receive the wireless signal can link to your access point. Once you choose different security level, your wireless LAN card will also need to have corresponding security setting as well. Keep default value if you are not familiar with wireless security setting.

With default setting "**Disable**" may cause your wireless network vulnerable to hacker or even neighbor since there is not any encryption or authentication protect. But this setting will help you to get best connectivity with most wireless clients available.

Setup Wizard	×
Wireless Security	
<ul> <li>There are three wireless security modes options supported by the Access Point: WEP, WPA-PSK and WPA, and two security wireless modes supported by Wireless client Infrastructure: WEP and WPA-PSK.</li> <li>The WP310A supports WEP keys of 64, 128 and 152bit key length.</li> <li>Select your security method and click "Next" button to make detail setting. Note: WPA detail setting are not support in this Wizard yet. If you select this security method. In order to work correctly, please make it on the web page.</li> </ul>	
<ul> <li>Disable</li> <li>WEP 64bits</li> <li>WEP 128bits</li> <li>WEP 152bits</li> <li>WPA-PSK</li> <li>WPA</li> </ul>	
<ul><li>&lt;上一步(2)</li><li>下一步(2)</li><li>完成</li><li>取消</li></ul>	

After finish the security setting, you can click on the "**Finish**" button to jump to confirmation page. In the confirmation page, the Locator utility will show you the new settings and old settings in a comparison chart. If you agree with all the changes in the table, just easily click on the "**OK**" button. All settings will take effect immediately after system reboot.

	Old Setting	New Setting
IP Address:	192.168.1.20	192.168.1.20
Subnet Mask:	255.255.255.0	255.255.255.0
Default Gateway:	192.168.1.1	192.168.1.1
Device Name:	miniAP	miniAP
Operation Mode:	Access Point	Access Point
SSID:	Generic	Generic
Channel:	<smart select=""></smart>	<smart select=""></smart>
Wireless Mode:	2.4GHz 54Mbps(802.11g)	2.4GHz 54Mbps(802.11g)
Security:	Disabled	Disabled

Congratulations!! Now you have finished all setting needed to the access point by just a few mouse clicks.

## AP Configuration Using Web User Interface

#### Before Setup...

#### Verify the IP address setting

You need to configure your PC's network settings to obtain an IP address. Computer use IP addresses to communicate with each other across a network, such as the Internet.

- From the taskbar, click the Start button, select Settings > Control Panel. From there, double-click the Network connections icon.
- Right click the Local Area Connection icon Properties; select the TCP/IP line for the applicable Ethernet adapter. Then, click the Properties button.
- Click the IP Address tab page, select USE the following IP address, type 192.168.1.123 (but, 192.168.1.20 for the device use) in the IP Address field and 255.255.255.0 in the Subnet Mask field, then click OK button.

#### **Start Setup by Browser...**

 After getting the correct connection, start the web browser (make sure you disable the proxy) and type <u>192.168.1.20 (outdoor unit</u> <u>ip Address)</u> in the Address field. Press Enter.

🕘 http://192.168.1.20

- Enter the factory default *User name* and *Password* fields: User Name: Admin Password: (leave blank) then click OK button.
- 3. You will enter the Utility homepage.

#### **Start Setup by Locator...**

 You just need to click on the "Web" icon in Locator main page. The Locator will launch a default browser for you and lead you into web UI directly

L	ocator								
File	<u>I</u> ools <u>V</u> ie	ew <u>H</u> elp							
	Search	Setup Wizard	main for the setting state of	Wireless Setting	Factory default	Device Info	(C) Web		
Dev	vice Name	Device	е Туре	IP Address	Ethernet	MAC Address	Frimware Version		
min	iap	802.11	g Access Point	192.168.1.20	00:4F:7F	E0:01:41	0.0.18		
Read	у							NUM	1,31

## Wireless Configuration - AP Mode

#### System Status -

The first page appears in main page will show "**System Status** -> **System Summary**" automatically, you can find detail system configuration in this page including

- **System Information** This will display system name and both Ethernet MAC address and Wireless MAC address. Current country setting and firmware version will also be available here.
- **Current IP Settings** This section show current IP address setting including IP address, Subnet Mask, Default Gateway and DHCP status.
- Current Wireless Settings This area show current wireless setting including operation mode, wireless mode, SSID, channel and security setting.

<b>Air Live</b>	🤭 🌍 💲 🛞 Powered by OvisLink Corp.
Access Point	System Status -> System Summary ?
System Status	System Information
System Summary	System Name miniAP
System Configuration	Ethernet MAC Address 00:4F:7F:E0:01:AD
Administration	Wireless MAC Address 00:4F:7F:BE:F1:02
IP Settings	Country NO_COUNTRY_SET
Wireless Network	Firmware Version AP software 0.0.21 US Built ON Sep 22 2005
Wireless Security     Wireless Advanced Settings	Current IP Settings
WDS Settings	IP Address 192.168.1.20
Management	Subnet Mask 255.255.0
Wireless Station List	Default Gateway 192.168.1.1
Backup/Restore Settings     Eirmware Upgrade	DHCP Client Disable
Reboot	Current Wireless Settings
	Operation Mode Access Point
	Wireless Mode 2.4GHz 54Mbps (802.11g)
	Wireless Network Name (SSID) Generic
	Channel / Frequency Channel 11 / 2462MHz
	Security Disabled

#### System Configuration -

Now you can start to configure the system. In **System Properties** page, you can config

• **Device Name** – You may assign any name to the Access Point. Memorable, Unique names are helpful especially if you are employing multiple access points on the same network. The device name needs to be less than 32 characters. After verify the name you input and click "**Apply**" to save the setting.

- Country/Region Here you can set the AP to follow different country and region regulation. The AP can support. Please select your country region correctly.
- Operation Mode The default operation mode is Access Point, this connects your wireless PCs and devices to a wired network. In most cases, no change is necessary. You can switch operation mode to Wireless Client or Repeater mode depends on your application. Wireless Client mode can allow AP act as a client within its range. Your Ethernet devices behind the AP can connect to remote AP. Repeater is able to talk with one remote access point within its range and retransmit its signal. Choose repeater mode if you want to extend the range of your original AP. (Note: due to built-in internal directional patch antenna, repeater mode does not apply.)

Air Live Access Point	System Configu	🚱 🌍 瀪 🕤 uration ->System Properțies	Powered by OvisLink Cor
ystem Status System Summary	Device Name:	miniAP	(1 to 32 characters)
ystem Configuration [System Properties] Administration IP Settings Wireless Network Wireless Security Wireless Advanced Settings WDS Settings	Operation Mode: You must clic	Wireless Client (Infrastructure)       Od-hoc (Peer-to-Peer)       Repeater       Apply       Cancel       k Apply to save your settings	before moving to another
tanagement Wireless Station List Backup/Restore Settings Firmware Upgrade Reboot		page.	
Reput			

#### Administration –

In the administration page, you can modify "**Administrator Name**" and "**Password**". Changing the sign-on user name and password is as easy as typing the string you wish in the column. Then, type the password into second column to confirm. Click "**Apply**" to finish the procedure. Be sure you noted the modification before apply all changes.

Access Point	System Configuration ->Administra	ation
System Status System Summary	Administrator Name Admin	(0-32 characters)
ystem Configuration	Password	(0-32 characters)
System Properties Administration	Confirm Password	
Wireless Network Wireless Security Wireless Advanced Settings WDS Settings		
anagement Wireless Station List Backup/Restore Settings Firmware Upgrade Reboot		

#### **IP Settings –**

IP Setting page can configure system IP address. Default IP address is 192.168.1.20 and Subnet Mask is 255.255.255.0. You can manually input IP address setting or get an IP from a DHCP server. If use DCHP to get IP address, use Locator utility to find the access point later.

- IP Network Setting Here you can choose to get IP from a DHCP server or specify IP address manually. Choose to obtain an IP address from DHCP server if your environment or ISP provide DHCP server. Otherwise, you can manually setup IP address.
- IP Address The IP address need to be unique to your network. We would like to recommend you stay with default IP address 192.168.x.x. This is private address and should work well with your original environment.
- IP Subnet Mask The Subnet Mask must be the same as that set on your Ethernet network.
- **Default Gateway** If you have assigned a static IP address to the Access Point, then enter the IP address of your network's Gateway, such as a router, in the Gateway field. If your network does not have a Gateway, then leave this field blank.

Air Live	🧒 🌍 🔇 Powered by OvisLini	Corp.
Access Point	System Configuration-> IP Settings	?
System Status System Summary	IP Network Setting: Obtain an IP address automatically (DHCP) O Specify an IP address	
System Configuration System Properties	IP Address 192 168 1 20	
Administration IP Settings	IP Subnet Mask 255 . 255 . 0	
Wireless Network Wireless Security	Default Gateway 192 . 168 . 1 . 1	
Wireless Advanced Settings WDS Settings	Apply Cancel	
tanagement Wireless Station List Backup/Restore Settings Firmware Upgrade Reboot		

#### Wireless Network -

At Wireless Network page can set "**SSID**" / "**Wireless Mode**" and "**Channel**". AP supports not only standard 11b/g but also 108M SuperG. (Note: 108 M SuperG only works with Atheros<sup>®</sup> based 11a/g solution)

- Wireless Network Name (SSID) The SSID is the unique name shared among all points in a wireless network. The SSID must be identical for all points in the wireless network. It is case-sensitive and must not exceed 32 alphanumeric characters, which may be any keyboard character. Make sure this setting is the same for all points in your wireless network. For added security, you should change the SSID from the default name Generic, to a unique name.
- **Suppressed SSID** This option can hide the SSID not available from site survey tool. Enable this function only if you do not want the Access Point to be found by others.
- Wireless Mode Default setting is "2.4GHz 54Mbps (802.11g)". This will support all 802.11b/g clients connect to the AP. You can choose "2.4GHz 11Mbps (802.11b)" in wireless mode column if your environment only have 802.11b clients. The final selection "2.4GHz 108Mbps (802.11 SuperG)" supports high speed 108Mbps SuperG function. In order to support SuperG 108M transmission, all wireless clients will need to be Atheros<sup>®</sup> solution.
- Channel / Frequency Select the appropriate channel from the list

provided to correspond with your network settings. All points in your wireless network must use the same channel in order to function correctly. The default setting is **"SmartSelect"** means the system will pick best channel for you automatically. Stay with default setting if you do not have special request on channel selection.

<b>Air Live</b>	🤭 🍖 🔇 S Dowered by OvisLink Corp.
Access Point	System Configuration -> Wireless Network ?
System Status System Summary	SSID Generic (1 to 32 characters)
System Configuration	Supressed SSID
Administration	Wireless Mode 2.4GHz 54Mbps (802.11g)
IP Settings     Wireless Network     Wireless Security     Wireless Advanced Settings     WDS Settings	Channel / Frequency SmartSelect
Management • Wireless Station List • Backup/Restore Settings • Firmware Upgrade • Reboot	

#### Wireless Security -

The wireless security settings configure the security of your wireless network. There are three wireless security mode options supported by the Access Point: WEP, WPA-PSK and WPA. (WPA stands for Wi-Fi Protected Access, which is a security standard stronger than WEP encryption. WEP stands for Wired Equivalent Privacy.)

In Wireless Security page, you can configure the AP to work with **No Security**, **WEP**, **WPA-PSK** and **WPA** security mode. Once you setup the AP to work in security mode, all wireless stations will also need to have corresponding settings. System default setting is **"No Security"**.



WEP is a basic encryption method, which is not as secure as WPA. To use WEP, you will need to select a default transmit key and a level of WEP encryption,

- Authentication type Select "Open System" to communicate the key across the network. Select "Share Key" to limit communication to only those devices that share the same WEP settings.
- Shared keys input type Select HEX or ASCII depends on your preference
- **Key table** You can input 4 different WEP encryption keys into the table and by choosing the radio button to decide which one is valid now. The AP supports 64, 128 and 152bit key length. The longer key we choose usually means the encryption is stronger.

After all changes are made, be sure to click on **"Apply"** to make sure all changes are saved into system.

	<b>6</b> 🖗 S	Powered by OvisI	Link Corp.
System Confi	iguration -> Wirelèss Sec	urity	?
Changing the wi different one. Th	ireless security settings may cause his may temporarily disrupt your c	e this access point to associate onfiguration session.	e with a
Security: WEP Authentica Shared keys in	vition type: Open System v nput type: HEX v		
Enter all four share Default	ed keys,then select a key by clickin Shared Key	ng a radio button: Key Length	
Key #1		None	~
0 #2		None	~
0 #3		None	~
		None	~
	System Conf Changing the w different one. TI Security: W22 Authentica Shared keys i Enter all four share Default Key #1 #2 #2	System Configuration -> Wirel§ss Sec         Changing the wireless security settings may cause different one. This may temporarily disrupt your of Security:         Authentication type:         Open System ~         Shared keys input type:         HEX ~         Enter all four shared keys, then select a key by clickin Key         #1         #2         #3	Authentication type:       Open System       Open Sys

WPA-PSK stands for Wi-Fi Protected Access – Pre-Shared Key. WPA-PSK is design for home users who do not have RADIUS server in their network environment. WPA can provide better security level than WEP without difficult setting procedure.

- **PassPhrase** Enter a WPA Shared Key of 8-63 characters. The Shared Key should be also applying the clients work in the same wireless network.
- **Cipher Type -** WPA gives you two encryption methods, TKIP and AES, with dynamic encryption keys. Select the type of algorithm, **TKIP** or **AES**.
- **Group Key Renewal period** Enter a number of seconds which instructs the Access point how often it should change the encryption keys. Usually the security level will be higher if you set the period shorter to change encryption keys more often. Default value is 1800 seconds, set 0 in Group Key Renewal period to disable key renewal.

Remember to click on **"Apply"** to make sure all changes are made before leaving this page.

<b>Air Live</b>	🤭 🍖 💲 🕤 Powered by OvisLink Corp.
Access Point System Status	System Configuration -> Wireless Security ? Changing the wireless security settings may cause this access point to associate with a
System Summary System Configuration     System Properties     Administration     IP Settings     Wireless Network     Wireless Network     Wireless Security     Wireless Advanced Settings     WDS Settings	PassPhrase: (8-63 characters )
Management • Wireless Station List • Backup/Restore Settings • Firmware Upgrade • Reboot	Cipher Type: TKP v Group Key Update Interval: 1900 [30-3600] seconds (0: Disabled) Apply Clear You must click Apply All Changes to save your settings before moving to another page.

WPA option features WPA used in coordination with a RADIUS server. (This should only be used when a RADIUS server is connected to the Access Point.)

- **RADIUS Server** Here enter the IP address of your RADIUS server.
- **RADIUS Port** Port number for RADIUS service, default value is 1812
- **RADIUS Secret** RADIUS secret is the key shared between Access Point and RADIUS server.
- **Cipher Type –** WPA gives you two encryption methods, TKIP and AES, with dynamic encryption keys. Select the type of algorithm, **TKIP** or **AES**.
- **Group Key Update Interval** This column indicate how often should the Access Point change the encryption key.

Access Point	System Configuration -> Wireless Security	?
System Status System Summary	Changing the wireless security settings may cause this access point to associate with a different one. This may temporarily disrupt your configuration session.	
System Configuration System Properties Administration	Security: WFA	
IP Settings Wireless Network	RADIUS Server:	1
Wireless Security Wireless Advanced Settings WDS Settings	RADIUS Port: 1812	
Aanagement	RADIUS Secret:	
Wireless Station List Backup/Restore Settings Firmware Upgrade	Cipher Type: TKIP V Group Key Update Interval: 1800 [30-3600] seconds (0: Disabled)	2
Reboot	Apply Clear	
	You must click Apply All Changes to save your settings before moving to anoth	er p

#### Wireless Advance Settings -

The page below can help users to configure advanced wireless setting. Before making any changes at this page, please check your wireless settings on other system as well, as these changes will alter the effectiveness of the Access Point. In most cases, these settings do not need to be changed.

- Data Rate In data rate column you can select all bit rate supported in current operation mode. Default value is "best" means the system will automatically adjust the connection speed dynamically according to your current link status.
- Transmit Power You can reduce RF output power by selecting Half (-3dB) / Quarter (-6dB) / Eighth (-9dB) / Minimum. To change transmit power may decrease your wireless signal coverage.
- Beacon Interval (20-1000) This value indicates the frequency interval of the beacon. A beacon is a packet broadcast by the Access Point to keep the network synchronized. A beacon includes the wireless LAN service area, the AP address, the Broadcast destination address, a time stamp, Delivery Traffic Indicator Maps, and the Traffic Indicator Message (TIM).
- Data Beacon Rate (DTIM) (1-16384) This value indicated how often the Access Point sends out a Delivery Traffic Indication Message. Lower settings result in more efficient networking, while preventing your PC from dropping into power-saving sleep mode. Higher settings allow your PC to

enter sleep mode, thus saving power, but interferes with wireless transmissions.

- Fragment Length (256-2346) This specifies the maximum size a data packet will be before splitting and creating a new packet and should remain at its default setting of 2,346. A smaller setting means smaller packets, which will create more packets for each transmission. If you have decreased this value and experience high packet error rates, you can increase it again, but it will likely decrease overall network performance. Only minor modifications of this value are recommended.
- **RTS/CTS Threshold (256-2346)** This setting determines how larget a packet can be before the Access Point coordinates transmission and reception to ensure efficient communication. This value should remain at its default setting of 2,346. Should you encounter inconsistent data flow, only minor modifications are recommended.
- Short Preamble Preambles are a sequence of binary bits that help the receivers synchronize and ready for receipt of a data transmission. Some older wireless systems like 802.11b implementation use shorter preambles. If you are having difficulty connecting to an older 802.11b device, try to enable short preamble.
- Protection Mode Protection Mode should remain default value (Auto) unless you are having severe problems with your 11g Wireless LAN products not being able to transmit to the Access Point in an environment with heavy 802.11b traffic. To enable this function boosts the Access Point's ability to catch all 11g Wireless transmissions but will severely decrease performance.

Remember to click on **"Apply"** to make sure all changes are made before leaving this page.

System Status System Summary	Data Rate: best v	
System Configuration	Transmit Power: Full 👻	
Administration	Beacon Interval (20 - 1000): 100	
Wireless Network	Data Beacon Rate (DTIM) (1 - 255): 1	
Wireless Security Wireless Advanced Settings	Fragment Length (256 - 2346): 2346	
WDS Settings	RTS/CTS Threshold (256 - 2346): 2346	
Management Wireless Station List	Short Preamble:  O Disable O E	nable
Backup/Restore Settings	Protection Mode: Auto 🗸	
Reboot	Apply Cancel	

#### Wireless Station List -

Wireless Station List page can help user identify current clients who already associated to the AP. You can also click on the MAC address column then the system will show the detail technical information for each wireless station.

System Status System Summary System Configuration System Properties Administration IP Settings Wireless Network Wireless Security	D: Generic Station ID STA 1	MAC Adress 00:4F:79:18:CA:C1	Status associated
System Summary System Configuration System Properties Administration IP Settings Wireless Network Wireless Security	Station ID STA 1	MAC Adress 00:4F:79:18:CA:C1	Status associated
System Properties     Administration     PSettings     Wireless Network     Wreless Security	STA 1	00:4F:79:18:CA:C1	associated
Wireless Advanced Settings     WDS Settings		Refresh	
VUS Settings Vanagement Vireless Station Lisi Backup/Restore Settings Firmware Upgrade			

The page below describes the detail connection information with each station. You can get all information needed right here.

Access Point	Manageme	nt -> Wi	reles	s Station L	ist 🧏 s	Station Sta	atus	
ystem Status System Summary	2.4GHz AF	ois asso	ciated	I.				
System Configuration System Properties Administration	Wireless Mode:	2.4GHz 54Mb	ps (802.	11g)	nution	Cin	hor Advorti	irad
	Or	pen Syster	n	Enci	no	Cip	None	iseu
IP Settings Wireless Network							1000	
Wireless Security	Authenticati	ion Dea	uthenti	cation Asso	ciation	Disassociat	ion Reas	ssociation
Wireless Advanced Settings	1		1		2	0		0
Work Settings Management     Wireless Station List     Backup/Restore Settings	59	MEDU	Data	Multicast	Max	tagament	Control	Errore
	Receive	4	16	4	Pia	2	0	O
	Transmit	2	0	0		2	0	0
Reboot								
	Receive	Discard	ed	Duplicate	CRC	Decrypt	PHY	DMA
	0	12		0	0	0	0	0
	Transn	nit 5	0	iscarded Frames		Excessive		DMA
	0			0		0		0

#### Backup/Restore Setting / Firmware Upgrade and Reboot -

In Management section, you can **Backup/Restore Setting**, **Firmware Upgrade** and **Reboot** the system in following pages.

- Backup the current settings to a file Click on the "Backup" button, system will prompt you where to save the backup file. You can choose the directory to save your configuration file.
- **Restore settings from a backup file** Here you can restore the configuration file from where you previous saved.
- Restore factory default setting Be very carefully before restore system back to default since you will lose all current settings immediately. If you act the function, the IP address will restore the establishing value situation.

**192.168.1.20** in the **IP Address** field and **255.255.255.0** in the **Subnet Mask** field,

Backup the current settings to a file       System Summary       System Configuration       System Properties       Administration       IP Settings       Wireless Network       Wireless Scurity       Wireless Advanced Settings       Woreless Station List	Access Point	Management -> Backup/Restore Settings	
ystem Configuration System Properties Administration IP Settings Wireless Network Wireless Security Wireless Security Wireless Advanced Settings WDS Settings anagement Wireless Station List Yes	ystem Status System Summary	Backup the current settings to a file	Dealars
Wireless Security     Restore       Wireless Advanced Settings     Restore       WDS Settings     Restore factory default settings       anagement     Yes	/stem Configuration System Properties Administration IP Settings Wireless Network	Restore settings from a backup file File:	Backup
tanagement Restore factory default settings Yes	Wireless Security Wireless Advanced Settings WDS Settings		Restore
Wireless Station List 165	anagement	Restore factory default settings	Maa
Backup/Restore Settings Firmware Upgrade Reboot	Backup/Restore Settings Firmware Upgrade Reboot		

Firmware Upgrade – Enter the location of the firmware upgrade file in the file path field, or click the "Browse" button to find the firmware upgrade file. Then click on the "Upgrade" button, and follow the on-screen instructions. The whole firmware upgrade process will take around 60 seconds. Before upgrade, make sure you are using correct version. Double check with your technical support service if available.

<b>Air Live</b>	🧒 🍖 🖏 😨 Powered by OvisLink Corp.
Access Point	Management -> Firmware Upgrade ?
System Status	Current Firmware Version: AP software 0.0.21 US Built ON Sep 22 2004
System Configuration • System Properties • Administration • IP Settings • Wireless Network • Wireless Network • Wireless Security • Wireless Advanced Settings • WDS Settings	Browse to locate the firmware file:
Management • Wireless Station List • Backup/Restore Settings • Firmware Upgrade • Reboot	

• **Reboot** – Click on "**Reboot**" button to restart Access Point.

🚱 🌍 🔇 Powered by O	visLink Corp.
Management -> Reboot	?
Reboot access point: Reboot Cancel	
	Management -> Reboot           Reboot access point:         Reboot

## Wireless Configuration – WDS Mode (P2P & P2MP)

Due to built-in internal directional patch antenna, WDS does not apply in WH-5400CPE. This operation option is reserved for future application.

WDS (Wireless Distribution System) operation as defined by the IEEE802.11 standard has been made available. In IEEE 802.11 terminology a "Distribution System" is system that Interconnects, so-called, Basic Service Sets (BSS). A BSS is best compared to a "Cell", driven by a single Access Point (one of those circles in the diagram below). So a "Distribution System" connects cells in order to build a premise wide network which allows users of mobile equipment to roam and stay connected to the available network resources.

WDS is used for wirelessly connect Access Points, and in doing so extend a wired infrastructure to locations where cabling is not possible or inefficient to implement. (Be sure you understand the purpose of WDS mode before proceed configuration.)

The WDS mode is coexisting with Access Point mode in this AP, therefore, you can support regular wireless stations and WDS link at the same time. In the **"WDS Settings page"**, click the **"Enable WDS"** check box and switch the **"Mode"** to **"Enable"**. Then you are able to fill in MAC Address of each WDS link.

Access Point	System Co	nfiguration -> WDS Settings	?
System Status System Summary	✓ Enable W	DS	
System Configuration	ID	MAC Address	Mode
ystem Properties Administration IP Settings Wireless Network Wireless Security	1	00 : 00 : 00 : 00 : 00	Enable 🗸
	2	00 : 00 : 00 : 00 : 00	Disable 🐱
	3	00 : 00 : 00 : 00 : 00	Disable 🗸
WDS Settings	4	00 : 00 : 00 : 00 : 00 : 00	Disable 🐱
anagement Wireless Station List	5	00 : 00 : 00 : 00 : 00	Disable 🗸
Backup/Restore Settings	6	00 : 00 : 00 : 00 : 00	Disable 🗸
Reboot	7	00 : 00 : 00 : 00 : 00	Disable 🗸
	8	00 : 00 : 00 : 00 : 00 : 00	Disable 🐱
	0	Apply Clear	

#### Considerations before installation -

- Loop Prevention Be careful to plan you WDS connections, prevent your wireless network topology to have loop. Once loop shows up, you network traffic will become unstable.
- **Performance** The system can support up to 8 WDS links. But all links and wireless stations that operate at the same time will all share single radio bandwidth. (Ex. 11g have 54Mbps bandwidth)
- Latency In the chain topology configuration, if the chain becomes very long, end-to-end latency issue may come in play. We suggest the WDS link topology planning should not exceed 2 hops in chain configuration.

#### WDS Security -

WDS now only supports limit wireless security protocol and will have full dependency with Access Point mode security settings. Here lists 4 different AP security settings below:

- **No Security** Both AP and WDS traffic transmit without encryption
- WEP Both AP and WDS traffic are encrypted by the same WEP key
- WPA-PSK The AP work in WPA-PSK mode and WDS link is no security
- WPA The AP work in WPA mode and WDS link is no security

## Wireless Configuration – Wireless Client Mode

AP can also work as an Ethernet client bridge to connect up to 16 Ethernet device into wireless network. In order to setup the AP to work in Ethernet bridge mode, you need to choose "**Wireless Client**" mode and click "**Apply**" at System Properties page. After need to reboot the AP to make sure the AP work in client mode.



After the system reboot is done, you can see the page as below. Status page show the AP is now working in Wireless Client mode.

Wireless Client (Infrastructure)	System Status -> System Summary	?
System Status	System Information	
Connection Status	System Name miniAP	
System Configuration • System Properties • Administration • UD Softieres	Ethernet MAC Address 00:4F:7F:E0:01:AD	
	Wireless MAC Address 00:4F:7F:BE:F1:02	
	Einmutare Version AD coftware 0.0.21 US Built ON Son 22 2005	
Wireless Network	Current IP Settings	-
Wireless Security     Wireless Advanced Settings	IP Address 192.168.1.20	
	Subnet Mask 255.255.255.0	
Ethernet Client List	Default Gateway 192.168.1.1	
Backup/Restore Settings	DHCP Client Disable	
Firmware Upgrade	Current Wireless Settings	
Rebool	Operation Mode Wireless Client	
	Wireless Mode 2.4GHz 54Mbps (802.11g)	
	Wireless Network Name (SSID) Generic	
	Channel / Frequency Channel 11 / 2462MHz	
	Security Disabled	

#### **Connection Status -**

- Connection This column show current connection status. If AP already connect to an Access Point or station, here will show the MAC address of the associated Access Point or station. Otherwise, connection column will show "N/A" which means no connection to any Access Point or station.
- Network Type Here indicates the Access Point works in AP mode or Client mode (Infrastructure mode / Ad Hoc mode)
- **SSID** SSID column displays current SSID assigned to the AP
- Wireless Mode Here show the Access Point current work in either 11b or 11g mode
- **Current Channel** This column indicates the radio channel currently in use.
- Security Here indicates AP security settings in client mode. Should be either "Disabled", "WEP" or 'WPA-PSK".
- Link Quality This column shows current link quality with AP by signal strength in 0 to 100 percentage scale.

Wireless Client	System Status ->Con	nection Status	?
(Infrastructure)		A	
System Status	Network Type	Wireless Client	
System Summary	SSID	wirelesslan	
System Configuration System Properties Administration IP Settings Wireless Network Wireless Security	BSSID	00:4F:E9:00:9B:5F	
	Connection Status	Associated	
	Wireless Mode	2.4GHz 54Mbps (802.11g)	
	Current Channel	2437 MHz (Channel 6)	
	Security	Disabled	
Wireless Advanced Settings	Rx Data Rate(Mbps)	11	
lanagement Control	Tx Data Rate(Mbps)	5	
Ethernet Client List	Link Quality	45%	
Backup/Restore Settings	Signal strength	100%	
Firmware Upgrade Reboot	Activity (Packets Rx)	1	
	Activity (Packets Tx)	2	
		Refresh	

#### Wireless Network -

- Network Mode You can set the wireless client into 2 different modes by clicking radio button. Wireless Client (Infrastructure) act as an AP client while Ad-hoc can support peer to peer network. Both Infrastructure and Ad-hoc can support up to 108M SuperG transmission.
- Wireless Mode Default setting is "2.4GHz 54Mbps (802.11g)". This will support all 802.11b/g clients connect to the AP. You can choose "2.4GHz 11Mbps (802.11b)" in wireless mode column if your environment only have 802.11b clients. The final selection "2.4GHz 108Mbps (802.11 SuperG)" supports high speed 108Mbps SuperG function. In order to support SuperG 108M transmission, all wireless clients will need to be Atheros<sup>®</sup> solution.
- SSID The SSID is the unique name shared among all points in a wireless network. The SSID must be identical for all points in the wireless network. It is case-sensitive and must not exceed 32 alphanumeric characters, which may be any keyboard character. You can choose "Attach to any available SSID"; system will determine the Access Point currently available and establish connection with that Access Point. If you already understand your wireless environment well, you can type in the SSID in "Specify the static SSID" manually.

At Wireless Network page you can find a "**Site Survey**" button as shown below. You can easily click on the "**Site Survey**" to find all wireless networks available in your current environment.



The Site Survey page can help you identify all the APs currently working in your environment. Just easily click on the BSSID column, the system will join you to the SSID you specify. In the Site Survey page you can also see the details of all SSID currently available.

Wireless Client (Infrastructure)	System Config	guration-> W	irelee s	ettings	->Site	Surve	у	1
ystem Status System Summary Connection Status	2.4GHz Site Sur	vey			I	:Infrastr	ucture 🖋	:Ad_hoo
vstem Configuration	BSSID	SSID	Channel	Signal	Туре	Cipher	Security	Mode
system Properties	00:02:8A:97:C9:B3	LITEONIT	1	81 %	в	WEP	WEP	4
Iministration	00:02:8A:97:CA:67	liteonssid	1	86 %	В	WEP	WEP	Å
reless Network	00:02:8A:97:C7:67	LITEONIT	1	15 %	В	WEP	WEP	i
reless Security	00:09:22:41:00:33	ITEON_WP3210	6	89 %	G			4
reless Advanced Settings	00:02:8A:97:C7:46	liteonssid	6	90 %	В	WEP	WEP	Å
agement Control	00:03:7F:8E:F1:7F	For_Visitor	11	100 %	G			4
ackup/Restore Settings	00:07:40:DA:A5:D3	DC-RD-AP2	11	76 %	G			4
rmware Upgrade	00:90:CC:84:63:58	BIOS	10	37 %	G			i
eboot	00:02:8A:78:B7:70	liteonssid	1	37 %	В	WEP	WEP	1
	00:02:8A:97:CB:E3	LITEONIT	1	37 %	В	WEP	WEP	4

After you determine which AP (SSID) to join, you can click on the BSSID column your want to choose. The system will automatically join the SSID you specified

after reboot.

#### Wireless Security –

WEP is a basic encryption method, which is not as secure as WPA. To use WEP as a client, you will need to input a transmit key and a level of WEP encryption exactly the same as the Access Point.

- Shared keys input type Select HEX or ASCII depends on your preference
- **Key table** You can input 4 different WEP encryption keys into the table and by choosing the radio button to decide which one is valid now. The AP supports 64, 128 and 152bit key length. The longer key we choose usually means the encryption is stronger.

After all changes are made, be sure to click on **"Apply"** to make sure all changes are saved into system.

<b>Air Live</b>		<b>6</b> 🖗 🖏	S Powered by Ovisl	Link Corp.
Wireless Client (Infrastructure)	System Conf	iguration -> Wireless Se	ecurity	?
System Status  System Summary  Connection Status	Changing the w different one. The Security: WEP	ireless security settings may cau his may temporarily disrupt your	se this access point to associat configuration session.	e with a
ystem Configuration System Properties Administration IP Settings Wireless Network Wireless Security Wireless Advanced Settings	Authentica Shared keys i	nput type: HEX v		
anagement Control Ethernet Client List Backup/Restore Settings	Enter all four share Default Key	ed keys,then select a key by click Shared Key	ing a radio button: Key Length	
Firmware Upgrade Reboot	0 #1		None	~
	0 #2		None	*
	() #3		None	*
	6 #4		None	*

WPA-PSK stands for Wi-Fi Protected Access – Pre-Shared Key. WPA-PSK is design for home users who do not have RADIUS server in their network environment. WPA can provide better security level than WEP without difficult setting procedure.

• PassPhrase Key - Enter a WPA Shared Key of 8-63 characters. The

Shared Key should be also applying the Access Point work in the same wireless network.

• **Cipher Type -** WPA gives you two encryption methods, TKIP and AES, with dynamic encryption keys. Select the type of algorithm, **TKIP** or **AES**.

Remember to click on **"Apply"** to make sure all changes are made before leaving this page.

<b>Air Live</b>	🚱 🍖 🔇 S Powered by OvisLink Corp.	
Wireless Client (Infrastructure)	System Configuration -> Wireless Security	?
System Status     System Summary     Connection Status	Changing the wireless security settings may cause this access point to associate with a different one. This may temporarily disrupt your configuration session. Security: WPAPSX	
System Configuration  System Properties  Administration  IP Settings  Wireless Network  Wireless Security  Wireless Advanced Settings	Cipher Type: TKP v Must enter a hexadecimal key or pass-phrase	
Management Control • Ethermet Client List • Backup/Restore Settings • Firmware Upgrade • Reboot	key:	
	You must click Apply All Changes to save your settings before moving to another page.	

#### Ethernet Client List -

In Ethernet Client List page, you can check all the details here including IP Address and MAC Address. Press **"Refresh"** if you add any new Ethernet client into network. The page will update latest status of current Ethernet network.

Air Live		<b>6</b> 🖗 S	S Powered by OvisLink C	Corp.
Wireless Client (Infrastructure)	Management	Control -> Ethernet Clie	ent List	?
System Status     System Summary     Connection Status	The Wireless Wo Use the Refresh	orkgroup Bridge will support sev button to update the table.	eral specific Ethernet devices as clien	is.
System Configuration System Properties Administration IP Settings Wireless Network Wireless Security Wireless Advanced Settings	Client 1	IP Address 192.168.1.200 Refres	MAC Address 00: 4F:02:93:89:B5	
Management Control • Ethernet Client List • Backup/Restore Settings • Firmware Upgrade • Reboot	,			

## Wireless Configuration – Wireless Repeater Mode

Due to built-in internal directional patch antenna, repeater mode does not apply in WH-5400CPE. This operation mode is reserved for future application.

When set the Access Point to Repeater mode, the AP is able to talk with one remote access point within its range and retransmit its signal. In order to setup the AP to work in Ethernet bridge mode, you need to choose "**Repeater**" mode and click "**Apply**" at System Properties page. After need to reboot the AP to make sure the AP work in repeater mode.



After enable the repeater mode, you can click on "**Wireless Network**" and choose "**Site Survey**" to pick one of the SSIDs you would like to retransmit its signal. (Please be aware that while using the repeater mode, the throughput performance maybe nearly only half compare with access point mode. Because the repeater needs to communicate with original AP and also the clients associate to the repeater at the same time.)



After click on the "**Site Survey**" button, you can choose the Access Point you need to extend its range by clicking on "**BSSID**" column. Then "**Apply**" the change to make sure system working properly with new setting.

Wireless	System Conf	iguration-	> Wirel	ee settin	igs->Si	te Surv	еу	?
Repeater						2		
stem Status System Summary Connection Status	2.4GHz Site Su	irvey				I :Infras	tructure 🖌	:Ad_hoo
ystem Configuration	BSSID	SSID	Channel	Signal	Туре	Cipher	Security	Network Mode
System Properties	00:02:8A:97:CA:67	liteonssid	1	81 %	В	WEP	WEP	Å
IP Settings	00:02:8A:97:C7:46	liteonssid	6	100 %	В	WEP	WEP	1
Wireless Network	00:03:7F:8E:F1:7F	For_Visitor	11	60 %	G			4
Wireless Security Wireless Advanced Settings	00:02:E3:40:E0:82	Generic	3	93 %	G			4
Wireless Station List Backup/Restore Settings Firmware Upgrade Reboot	-		GO B	ack Re	fresh			

After all the changes are made, you can check the "**Connect Status**" page to check current SSID and link quality / signal strength. Some more information are all available at this page.

Repeater		R	ſ
ystem Status	Network Type	Wireless Repeater	
System Summary	SSID	Generic	
Connection Status	BSSID	00:4F:E3:40:E6:82	
System Configuration	Connection Status	Associated	
Administration	Wireless Mode	2.4GHz 54Mbps (802.11g)	
IP Settings	Current Channel	2422 MHz (Channel 3)	
Wireless Network	Security	Disabled	
Wireless Security	Rx Data Rate(Mbps)	1	
wineless Advanced Setungs	Tx Data Rate(Mbps)	6	
Mireless Station List	Link Quality	11%	
Backup/Restore Settings	Signal strength	88%	
Firmware Upgrade	Activity (Packets Rx)	0	
Reboot	Activity (Packets Tx)	3	
	the second se	(Defer al)	

## Appendix A: Glossary

**802.11b** - An IEEE wireless networking standard that specifies a maximum data transfer rate of 11Mbps and anoperating frequency of 2.4GHz.

**802.11g** - An IEEE wireless networking standard that specifies a maximum data transfer rate of 54Mbps, an operating frequency of 2.4GHz, and backward compatibility with 802.11b devices.

Adapter - This is a device that adds network functionality to your PC.

**Ad-hoc** - A group of wireless devices communicating directly with each other (peer-to-peer) without the use of an access point.

**Backbone** - The part of a network that connects most of the systems and networks together, and handles the most data.

Bandwidth - The transmission capacity of a given device or network.

**Beacon Interval** - Data transmitted on your wireless network that keeps the network synchronized.

Bit - A binary digit.

**Browser** - An application program that provides a way to look at and interact with all the information on the World Wide Web.

**CSMA/CA** (Carrier Sense Multiple Access/Collision Avoidance) - A method of data transfer that is used to prevent data collisions.

**CTS** (Clear To Send) - A signal sent by a wireless device, signifying that it is ready to receive data.

**Database** - A collection of data that is organized so that its contents can easily be accessed, managed, and updated.

**DHCP** (Dynamic Host Configuration Protocol) - A networking protocol that allows administrators to assign temporary IP addresses to network computers by "leasing" an IP address to a user for a limited amount of time, instead of assigning permanent IP addresses. **Download** - To receive a file transmitted over a network.

**DSSS** (Direct-Sequence Spread-Spectrum) - Frequency transmission with a redundant bit pattern resulting in a lower probability of information being lost in transit.

**DTIM** (**D**elivery Traffic Indication Message) - A message included in data packets that can increase wireless efficiency.

Encryption - Encoding data transmitted in a network.

**Ethernet** - IEEE standard network protocol that specifies how data is placed on and retrieved from a common transmission medium.

Firmware - The programming code that runs a networking device.

**Fragmentation** -Breaking a packet into smaller units when transmitting over a network medium that cannot support the original size of the packet.

**Gateway** - A device that interconnects networks with different, incompatible communications protocols.

**Hardware** - The physical aspect of computers, telecommunications, and other information technology devices.

**IEEE** (The Institute of Electrical and Electronics Engineers) - An independent institute that develops networking standards.

**Infrastructure** - A wireless network that is bridged to a wired network via an access point. **IP** (Internet Protocol) - A protocol used to send data over a network.

**IP Address** - The address used to identify a computer or device on a network.

ISM band - Radio bandwidth utilized in wireless transmissions.

ISP (Internet Service Provider) - A company that provides access to the Internet.

LAN - The computers and networking products that make up your local network.

**MAC** (Media Access Control) Address - The unique address that a manufacturer assigns to each networking device.

**Network** - A series of computers or devices connected for the purpose of data sharing, storage, and/or transmission between users.

Node - A network junction or connection point, typically a computer or work station.

Packet - A unit of data sent over a network.

**Passphrase** - Used much like a password, a passphrase simplifies the WEP encryption process by automatically generating the WEP encryption keys for Linksys products.

**Port** - The connection point on a computer or networking device used for plugging in cables or adapters.

**Roaming** - The ability to take a wireless device from one access point's range to another without losing the connection.

Router - A networking device that connects multiple networks together.

**RTS** (Request To Send) - A networking method of coordinating large packets through the RTS Threshold setting.

**Server** - Any computer whose function in a network is to provide user access to files, printing, communications, and other services.

**SNMP** (Simple Network Management Protocol) - A widely used network monitoring and control protocol.

**Software** - Instructions for the computer. A series of instructions that performs a particular task is called a "program".

**SOHO** (Small Office/Home Office) - Market segment of professionals who work at home or in small offices.

**Spread Spectrum** - Wideband radio frequency technique used for more reliable and secure data transmission.

SSID (Service Set IDentifier) - Your wireless network's name.

Static IP Address - A fixed address assigned to a computer or device that is connected to a

network.

Subnet Mask - An address code that determines the size of the network.

**Switch** - 1. A data switch that connects computing devices to host computers, allowing a large number of devices to share a limited number of ports. 2. A device for making, breaking, or changing the connections in an electrical circuit.

**TCP** (Transmission Control Protocol) - A network protocol for transmitting data that requires acknowledgement from the recipient of data sent.

**TCP/IP** (Transmission Control Protocol/Internet Protocol) - A set of instructions PCs use to communicate over a network.

**TKIP** (Temporal Key Integrity Protocol) - a wireless encryption protocol that provides dynamic encryption keys for each packet transmitted.

Topology - The physical layout of a network.

**Upgrade** - To replace existing software or firmware with a newer version.

**WEP** (Wired Equivalent Privacy) - An optional cryptographic confidentiality algorithm specified by IEEE 802.11 that may be used to provide data confidentiality that is subjectively equivalent to the confidentiality of a wired local area network (LAN) medium that does not employ cryptographic techniques to enhance privacy confidentiality.

**WPA** (**W**i-Fi **P**rotected **A**ccess) - a wireless security protocol using TKIP (Temporal Key Integrity Protocol) encryption, which can be used in conjunction with a RADIUS server.

## **Appendix B: Specification**

Standard support		IEEE802.11b
		IEEE802.11g
		IEEE802.3
		IEEE802.3u
Interface		Wireless IEEE802.11b/g
		One 10/100 RJ-45 port
SDRAM		8Mbyte
Flash		2Mbyte
Max. Bandwidth		
	Ethernet	Full Duplex: 200Mbps (for 100BASETX), 20Mbps (for 10BaseT)
		Half Duplex: 100Mbps (for 100BaseTX), 10Mbps (for 10BaseT)
	Wireless	1, 2, 5.5, 6, 9, 11, 12, 24, 36, 48, 54, 108Mbps Auto Fall-Back
Wireless Radio		Data Rate
		1, 2, 5.5, 6, 9, 11, 12, 24, 36, 48, 54 and 108Mbps
		Signal Frequency
		2.4Ghz to 2.5Ghz OFDM with BPSK, QPSK, 16QAM, 64QAM,
		DBPSK, DQPSK, CCK
		Encryption
		64bit / 128bit and 152bit WEP data encryption
		Channel
		America/FCC : 2.412~2.462 GHz (11 channels)
		Europe CE/ETSI:2.412~2.472 GHz (13 channels)
		Japan :2.412~2.484 GHz (14 channels)
		France: 2.457~2.472 GHz(4 channels)
		Spain: 2.457~2.462 GHz (2 channels)
		RF Power Output: 18dBm at 11Mbps / 14dBm at 54Mbps (typical)
		Receiver Sensitivity: 54Mbps OFDM, 10% PER, -74dBm
		11Mbps CCK, 8% PER, -88dBm
Wireless Setting		<ul> <li>Operation Mode – AP / Wireless Client (Infrastructure and Ad</li> </ul>
		Hoc) / Repeater / WDS P2P and P2MP Mode
		– SSID
		<ul> <li>Channel Selection</li> </ul>
		- Transmission Rate (Best, 108, 54, 48, 36, 24, 18, 12, 11, 9, 6, 5.5,
		2, 1) in Mbps

	- Transmit power (Full, Half, Quarter, Eighth, Minimum)
	- Beacon Interval (20-1000): 100
	<ul> <li>Data Beacon Rate (DTIM (1-16384): 1</li> </ul>
	<ul> <li>Fragment Length (256-2346): 2346</li> </ul>
	<ul> <li>RTS Threshold (256-2346): 2346</li> </ul>
	<ul> <li>Short Preamble: Enable</li> </ul>
	<ul> <li>Allow 2.4GHz 54Mbps Station Only</li> </ul>
	<ul> <li>Protection Mode: Auto / Enable / Disable</li> </ul>
Wireless Security	WEP setting
	<ul> <li>Authentication type: Open System / Shared Key</li> </ul>
	<ul> <li>Shared keys input type: HEX / ASCII</li> </ul>
	<ul> <li>Shared keys length: (64-bit, 128-bit, 152-bit)</li> </ul>
	<ul> <li>Default WEP Key to use (1-4)</li> </ul>
	WPA-PSK setting
	- PassPhrase
	<ul> <li>WPA Cipher Type (Auto, TKIP, AES)</li> </ul>
	<ul> <li>Group Key Update Interval: 300</li> </ul>
	WPA setting
	<ul> <li>Radius Server IP Address</li> </ul>
	<ul> <li>Radius Port: 1812</li> </ul>
	<ul> <li>WPA Cipher Type (Auto, TKIP, AES)</li> </ul>
	- Shared Key
	<ul> <li>Group Key Update Interval: 300</li> </ul>
Software / Firmware	– Site Survey
	<ul> <li>DHCP Client</li> </ul>
	<ul> <li>WPA Support (WPA personal and enterprise)</li> </ul>
	<ul> <li>Web-based configuration via popular browser (MS IE,</li> </ul>
	Netscape)
	<ul> <li>Windows "Locator" program to help find IP in DHCP client mode</li> </ul>
	<ul> <li>Firmware upgrade and configuration backup via Web</li> </ul>
	<ul> <li>Reset to default by WebUI</li> </ul>
Forwarding Mode	Store and Forward
Antenna	Internal PCB antenna