

1

Synology 2U Rail Kit is designed for installing your 2U RackStation or expansion unit in a rack. This installation guide contains instructions on how to install Synology 2U Rail Kit Sliding and secure your RackStation in a rack.

Package Content

Rack mount slide x 2	Bracket x 2
	
	Short screw for installation x 10
	
	1.3 cm screw for the rack x 10
	
	2 cm screw for the rack x 4
	
	Cage nut x 12
	

2

Install the Rack Mount Slide

The rack mount slide consists of the following parts:

- 1 The **outer channel**
- 2 The **inner channel** inside the outer channel
- 3 The **sliding rail** inside the inner channel




Follow the steps below to install the rack mount slide:

- 1 Remove the sliding rail from the rack mount slide.
 - a Extend the sliding rail until you hear a clicking sound indicating the sliding rail is locked.



3

- b Push the white latch forward to unlock the sliding rail. Carefully pull the sliding rail to remove it from the rack mount slide.

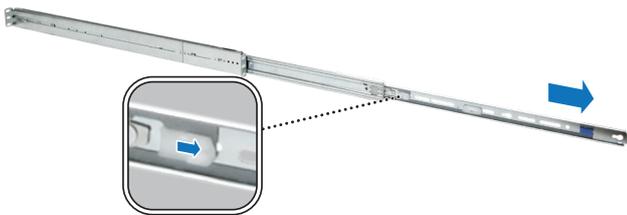

- c Repeat step a and b for the other rack mount slide.

- 2 Secure the sliding rail to your RackStation or expansion unit.
 - a Align the  holes on the sliding rail with the pegs on the side of your RackStation (or expansion unit).
 - b Position the sliding rail on the side of the unit, and slide the sliding rail slightly forward to engage the pegs in the short slots.



4


- c Use the short screws that came with your rail kit to secure the sliding rail to the unit.




- d Repeat step a to c for the other rack mount slide.

- 3 Adjust the length of the outer channel.


- a Compare the length of the outer channel with the depth of the rack.

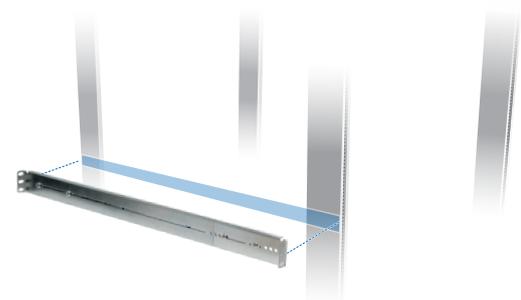


- b If adjustment is needed, turn over the rack mount slide, slide the inner channel forward to reveal the 2 screws on the back of the outer channel. Unscrew the 2 screws while holding the nuts on the front of the outer channel.

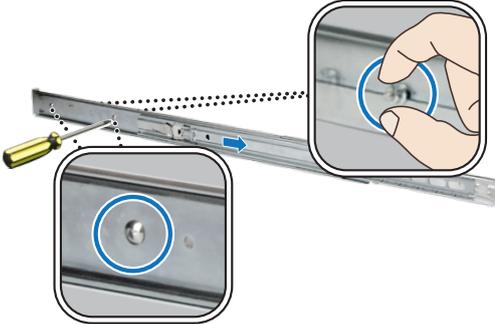


- c Adjust the length of the outer channel. When the length of the outer channel fits the depth of the rack, tighten the screws.
- d Use the 2cm and 1.3cm screws to secure the outer channel to the posts of the rack. Depending on the type of your rack, cage nuts might be required during the installation process (shown below).

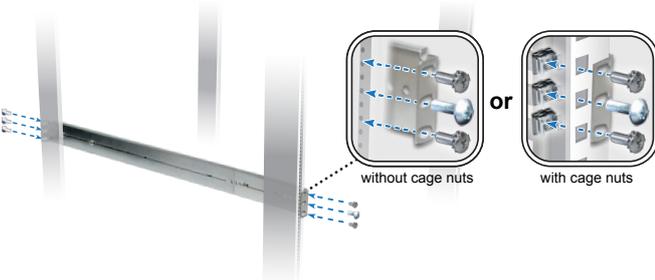

- e Repeat step a to d for the other rack mount slide.
- 4 Insert your RackStation (or expansion unit) into the rack.
 - a Guide the sliding rails on the sides of the unit into the inner channels of the rack mount slides.

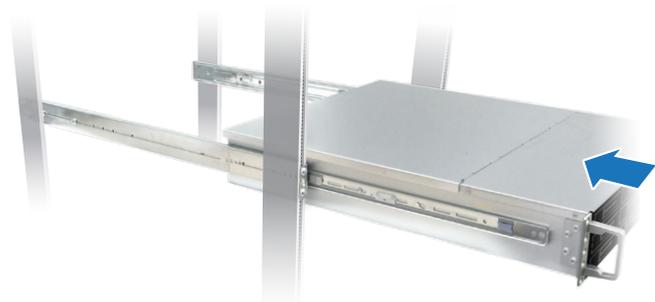

- b When you hear a clicking sound indicating the sliding rails are locked, push the purple latches backward to unlock the sliding rails.

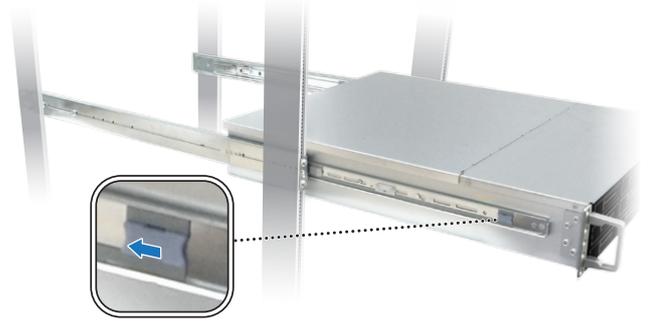

- c Push the unit all the way into the rack.




Remove your RackStation or Expansion Unit from the Rack

- 1 Pull the RackStation (or expansion unit) until the white latches on the inner channels are revealed.



- 2 Push the white latch forward to unlock the sliding rails, and carefully pull the unit out of the rack.

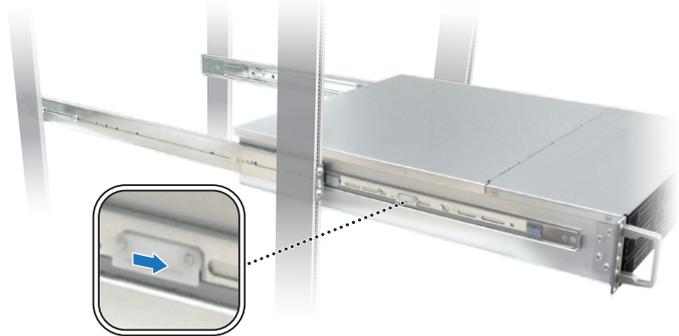

Warning: Before pulling the unit out of the rack, please make sure you have disconnected all the cables from your RackStation (or expansion unit). You might also need other people's help to hold the unit steady and prevent it from accidental dropping.

SYNOLOGY INC.
www.synology.com

Copyright © 2011 Synology Inc. All rights reserved. Synology, the Synology logo, and other names of Synology Products are proprietary marks or registered trademarks of Synology Inc.

RailKitSliding2U03152011
Printed in Taiwan