

DiskStation DS410



Quick Installation Guide

Document ID: Synology_QIG_4bay2_20100514

SAFETY INSTRUCTIONS

Please read these safety instructions carefully before use, and keep this manual in a safe place for your future reference.



PACKAGE CONTENTS

Before you begin, please check the package contents to verify that you have received the items below.

Main Unit X 1 (4 hard disk trays included)	Installation CD	AC power adapter
2M RJ-45 LAN cable	AC power cord	
Assembling Kit		
Te		
Screws for securing 3.5" hard drives x 18	Screws for securing 2.5" hard drives x 18	Screws for securing hard disk trays x 8
-		
Cable lock X 1		

Note: It is recommended that you install hard disks with the same size to make the best use of hard disk capacity.

INSTALLING HARD DISKS

DiskStation requires at least one 3.5" or 2.5" SATA hard disk for installation. Refer to the following steps for details:

Warning! If you use a hard disk with data on it to install, system will format the hard disk and erase all data in some cases. Please back up the data if you need it in the future.

1. Remove the four screws fixed on the back cover.



2. Put the back cover down carefully.




3. Lift the upper case and then pull it out.



- 4. You will see four hard disk trays. Pull one hard disk tray out.
 - a. If you are using 3.5" hard disks, place the hard disk into the hard disk tray. Secure the hard disk on the two sides with the 4 screws (for securing 3.5" hard drives) provided.



b. If you are using 2.5" hard disks, align the hard disk with the 4 smaller holes on the hard disk tray, and secure the hard disk from the bottom with the screws (for securing 2.5" hard drives) provided.

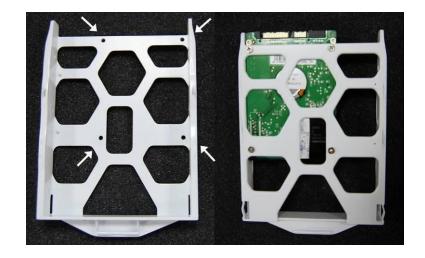


5. Put the hard disk tray back in the DiskStation and repeat step 4 for each hard disk. Make sure the hard disk trays are pushed all the way to the back.



6. If you are using 3.5" hard disks, secure the hard disk trays with the screws (for securing hard disk trays) provided.




7. Place the upper case back to its position.

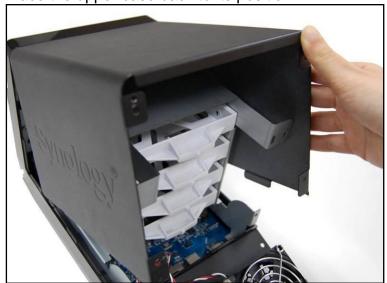

8. Attach the cable lock to the corresponding hole above the power port on the back cover. Make sure the cable lock is hooked on the inner side of the back cover.




9. Close the back cover and fix it with the four screws.

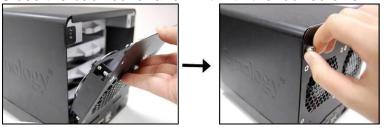


TURN ON SERVER

1. Connect the AC adapter to the power port, and fix the cable to the cable lock. Then plug the power cord into a power socket.

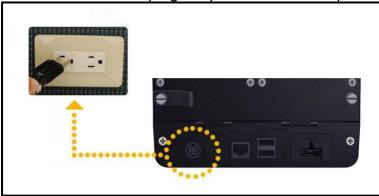

2. Connect the RJ-45 cable to the server and connect the other end to your switch/hub/router.

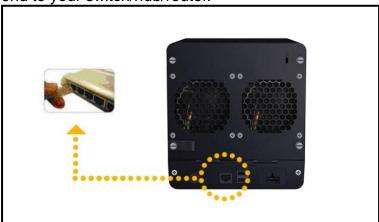

3. Remove the plastic wraps on the front panel. Press the Power button on the front panel to turn on the server.



INSTALL SYSTEM SOFTWARE

Windows User

1. Insert the installation CD to your computer.



2. Choose **Set up the Synology Server** on the autorun menu.



- 3. Click **Browse** to select the ".pat" installation file in the installation CD.
- 4. Follow the on-screen instructions to complete the setup process.

Note: If you choose **One-Click Setup**, the admin password will be blank.

Mac User


1. Insert the installation CD to your computer.



2. Double click on the CD-Rom Drive thumbnail.



3. Double click MacOSX.

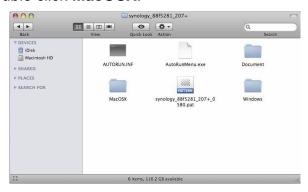

4. Double click SYNOLOGY-Assistant.dmg.



5. Double click on the automatically generated thumbnail **SYNOLOGY-Assistant.dmg** on the desktop.



6. Double click **Synology Assistant** to run the Setup Wizard.



- 7. Click **Browse** to select the ".pat" installation file in the installation CD.
- 8. Follow the on-screen instructions to complete the setup process.

Note: If you choose **One-Click Setup**, the admin password will be blank.

CONGRATULATIONS!

Server has been set up. Refer to the User's Guide in the installation CD for advanced settings and management. For more information or online resources, please visit http://www.synology.com.