

# TigerStack II

## 10/100/1000

### Gigabit Ethernet Switch

- ◆ 24/48 auto-MDI/MDI-X 10/100/1000BASE-T ports
- ◆ 4 RJ-45 ports shared with 4 SFP transceiver slots
- ◆ 2 10GBASE extender module slots
- ◆ Non-blocking switching architecture
- ◆ Support for a redundant power unit
- ◆ Spanning Tree Protocol, RSTP, and MSTP
- ◆ Up to 32 LACP or static 8-port trunks
- ◆ Layer 2/3/4 CoS support through eight priority queues
- ◆ Layer 3/4 traffic priority with IP Precedence and IP DSCP
- ◆ Full support for VLANs with GVRP
- ◆ IGMP multicast filtering and snooping
- ◆ Manageable via console, Web, SNMP/RMON
- ◆ Security features: ACL, RADIUS, 802.1x
- ◆ Routing features: IP/RIP routing, CIDR
- ◆ Supports IPv4/IPv6, dual protocol stack





# **TigerStack II 10/100/1000 Management Guide**

---

From SMC's Tiger line of feature-rich workgroup LAN solutions

**SMC<sup>®</sup>**

**Networks**

38 Tesla

Irvine, CA 92618

Phone: (949) 679-8000

April 2006

Pub. # 150200054400A

Information furnished by SMC Networks, Inc. (SMC) is believed to be accurate and reliable. However, no responsibility is assumed by SMC for its use, nor for any infringements of patents or other rights of third parties which may result from its use. No license is granted by implication or otherwise under any patent or patent rights of SMC. SMC reserves the right to change specifications at any time without notice.

Copyright © 2006 by

SMC Networks, Inc.

38 Tesla

Irvine, CA 92618

All rights reserved. Printed in Taiwan

## **Trademarks:**

SMC is a registered trademark; and EZ Switch, TigerStack and TigerSwitch are trademarks of SMC Networks, Inc. Other product and company names are trademarks or registered trademarks of their respective holders.



# LIMITED WARRANTY

**Limited Warranty Statement:** SMC Networks, Inc. (“SMC”) warrants its products to be free from defects in workmanship and materials, under normal use and service, for the applicable warranty term. All SMC products carry a standard 90-day limited warranty from the date of purchase from SMC or its Authorized Reseller. SMC may, at its own discretion, repair or replace any product not operating as warranted with a similar or functionally equivalent product, during the applicable warranty term. SMC will endeavor to repair or replace any product returned under warranty within 30 days of receipt of the product.

The standard limited warranty can be upgraded to a Limited Lifetime\* warranty by registering new products within 30 days of purchase from SMC or its Authorized Reseller. Registration can be accomplished via the enclosed product registration card or online via the SMC Web site. Failure to register will not affect the standard limited warranty. The Limited Lifetime warranty covers a product during the Life of that Product, which is defined as the period of time during which the product is an “Active” SMC product. A product is considered to be “Active” while it is listed on the current SMC price list. As new technologies emerge, older technologies become obsolete and SMC will, at its discretion, replace an older product in its product line with one that incorporates these newer technologies. At that point, the obsolete product is discontinued and is no longer an “Active” SMC product. A list of discontinued products with their respective dates of discontinuance can be found at: [http://www.smc.com/index.cfm?action=customer\\_service\\_warranty](http://www.smc.com/index.cfm?action=customer_service_warranty).

All products that are replaced become the property of SMC. Replacement products may be either new or reconditioned. Any replaced or repaired product carries either a 30-day limited warranty or the remainder of the initial warranty, whichever is longer. SMC is not responsible for any custom software or firmware, configuration information, or memory data of Customer contained in, stored on, or integrated with any products returned to SMC pursuant to any warranty. Products returned to SMC should have any customer-installed accessory or add-on components, such as expansion modules, removed prior to returning the product for replacement. SMC is not responsible for these items if they are returned with the product.

Customers must contact SMC for a Return Material Authorization number prior to returning any product to SMC. Proof of purchase may be required. Any product returned to SMC without a valid Return Material Authorization (RMA) number clearly marked on the outside of the package will be returned to customer at customer's expense. For warranty claims within North America, please call our toll-free customer support number at (800) 762-4968. Customers are responsible for all shipping charges from their facility to SMC. SMC is responsible for return shipping charges from SMC to customer.

**WARRANTIES EXCLUSIVE:** IF AN SMC PRODUCT DOES NOT OPERATE AS WARRANTED ABOVE, CUSTOMER'S SOLE REMEDY SHALL BE REPAIR OR REPLACEMENT OF THE PRODUCT IN QUESTION, AT SMC'S OPTION. THE FOREGOING WARRANTIES AND REMEDIES ARE EXCLUSIVE AND ARE IN LIEU OF ALL OTHER WARRANTIES OR CONDITIONS, EXPRESS OR IMPLIED, EITHER IN FACT OR BY OPERATION OF LAW, STATUTORY OR OTHERWISE, INCLUDING WARRANTIES OR CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. SMC NEITHER ASSUMES NOR AUTHORIZES ANY OTHER PERSON TO ASSUME FOR IT ANY OTHER LIABILITY IN CONNECTION WITH THE SALE, INSTALLATION, MAINTENANCE OR USE OF ITS PRODUCTS. SMC SHALL NOT BE LIABLE UNDER THIS WARRANTY IF ITS TESTING AND EXAMINATION DISCLOSE THE ALLEGED DEFECT IN THE PRODUCT DOES NOT EXIST OR WAS CAUSED BY CUSTOMER'S OR ANY THIRD PERSON'S MISUSE, NEGLIGENCE, IMPROPER INSTALLATION OR TESTING, UNAUTHORIZED ATTEMPTS TO REPAIR, OR ANY OTHER CAUSE BEYOND THE RANGE OF THE INTENDED USE, OR BY ACCIDENT, FIRE, LIGHTNING, OR OTHER HAZARD.

**LIMITATION OF LIABILITY:** IN NO EVENT, WHETHER BASED IN CONTRACT OR TORT (INCLUDING NEGLIGENCE), SHALL SMC BE LIABLE FOR INCIDENTAL, CONSEQUENTIAL, INDIRECT, SPECIAL, OR PUNITIVE DAMAGES OF ANY KIND, OR FOR LOSS OF REVENUE, LOSS OF BUSINESS, OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE SALE, INSTALLATION, MAINTENANCE, USE, PERFORMANCE, FAILURE, OR INTERRUPTION OF ITS PRODUCTS, EVEN IF SMC OR ITS AUTHORIZED RESELLER HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

SOME STATES DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES OR THE LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR CONSUMER PRODUCTS, SO THE ABOVE LIMITATIONS AND EXCLUSIONS MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, WHICH MAY VARY FROM STATE TO STATE. NOTHING IN THIS WARRANTY SHALL BE TAKEN TO AFFECT YOUR STATUTORY RIGHTS.

\* SMC will provide warranty service for one year following discontinuance from the active SMC price list. Under the limited lifetime warranty, internal and external power supplies, fans, and cables are covered by a standard one-year warranty from date of purchase.

SMC Networks, Inc.  
38 Tesla  
Irvine, CA 92618

# TABLE OF CONTENTS

---

## Section I Getting Started

<b>1</b>	<b>Introduction</b>	<b>1-1</b>
	Key Features	1-1
	Description of Software Features	1-3
	System Defaults	1-9
<b>2</b>	<b>Initial Configuration</b>	<b>2-1</b>
	Connecting to the Switch	2-1
	Configuration Options	2-1
	Required Connections	2-3
	Remote Connections	2-4
	Stack Operations	2-5
	Selecting the Stack Master	2-5
	Selecting the Backup Unit	2-6
	Recovering from Stack Failure or Topology Change	2-7
	Broken Link for Line and Wrap-around Topologies	2-7
	Resilient IP Interface for Management Access	2-8
	Resilient Configuration	2-8
	Renumbering the Stack	2-8
	Ensuring Consistent Code is Used Across the Stack	2-8
	Basic Configuration	2-9
	Console Connection	2-9
	Setting Passwords	2-10
	Setting an IP Address	2-11
	Manual Configuration	2-11
	Dynamic Configuration	2-15
	Enabling SNMP Management Access	2-18
	Community Strings (for SNMP version 1 and 2c clients)	2-19
	Trap Receivers	2-20
	Configuring Access for SNMP Version 3 Clients	2-20
	Managing System Files	2-21
	Saving Configuration Settings	2-22

---

## Section II Switch Management

<b>3</b>	<b>Configuring the Switch</b>	<b>3-1</b>
	Using the Web Interface	3-1
	Navigating the Web Browser Interface	3-3
	Home Page	3-3
	Configuration Options	3-4
	Panel Display	3-5
	Main Menu	3-6
<b>4</b>	<b>Basic Management Tasks</b>	<b>4-1</b>
	Displaying System Information	4-1
	Displaying Switch Hardware/Software Versions	4-4
	Displaying Bridge Extension Capabilities	4-6
	Setting the Switch's IP Address (IP Version 4)	4-8
	Manual Configuration	4-10
	Using DHCP/BOOTP	4-11
	Setting the Switch's IP Address (IP Version 6)	4-13
	Configuring an IPv6 Address	4-13
	Configuring an IPv6 General Network Prefix	4-22
	Configuring Neighbor Detection Protocol and Static Entries	4-24
	Configuring Support for Jumbo Frames	4-28
	Managing Firmware	4-29
	Downloading System Software from a Server	4-30
	Saving or Restoring Configuration Settings	4-32
	Downloading Configuration Settings from a Server	4-34
	Console Port Settings	4-36
	Telnet Settings	4-38
	Configuring Event Logging	4-41
	System Log Configuration	4-41
	Remote Log Configuration	4-43
	Displaying Log Messages	4-45
	Sending Simple Mail Transfer Protocol Alerts	4-46
	Renumbering the Stack	4-48
	Resetting the System	4-49
	Setting the System Clock	4-50

	Configuring SNMP	4-50
	Setting the Time Zone	4-51
<b>5</b>	<b>Simple Network Management Protocol</b>	<b>5-1</b>
	Enabling the SNMP Agent	5-4
	Setting Community Access Strings	5-4
	Specifying Trap Managers and Trap Types	5-6
	Configuring SNMPv3 Management Access	5-10
	Setting a Local Engine ID	5-10
	Specifying a Remote Engine ID	5-11
	Configuring SNMPv3 Users	5-12
	Configuring Remote SNMPv3 Users	5-15
	Configuring SNMPv3 Groups	5-18
	Setting SNMPv3 Views	5-24
<b>6</b>	<b>User Authentication</b>	<b>6-1</b>
	Configuring User Accounts	6-1
	Configuring Local/Remote Logon Authentication	6-3
	Configuring HTTPS	6-7
	Replacing the Default Secure-site Certificate	6-9
	Configuring the Secure Shell	6-10
	Generating the Host Key Pair	6-13
	Configuring the SSH Server	6-16
	Configuring Port Security	6-18
	Configuring 802.1X Port Authentication	6-21
	Displaying 802.1X Global Settings	6-22
	Configuring 802.1X Global Settings	6-23
	Configuring Port Settings for 802.1X	6-24
	Displaying 802.1X Statistics	6-27
	Filtering IP Addresses for Management Access	6-29
<b>7</b>	<b>Access Control Lists</b>	<b>7-1</b>
	Configuring Access Control Lists	7-1
	Setting the ACL Name and Type	7-2
	Configuring a Standard IPv4 ACL	7-3
	Configuring an Extended IPv4 ACL	7-4
	Configuring a MAC ACL	7-7

## TABLE OF CONTENTS

	Configuring a Standard IPv6 ACL . . . . .	7-9
	Configuring an Extended IPv6 ACL . . . . .	7-10
	Binding a Port to an Access Control List . . . . .	7-13
<b>8</b>	<b>Port Configuration . . . . .</b>	<b>8-1</b>
	Displaying Connection Status . . . . .	8-1
	Configuring Interface Connections . . . . .	8-4
	Creating Trunk Groups . . . . .	8-8
	Statically Configuring a Trunk . . . . .	8-9
	Enabling LACP on Selected Ports . . . . .	8-11
	Configuring LACP Parameters . . . . .	8-13
	Displaying LACP Port Counters . . . . .	8-17
	Displaying LACP Settings and Status for the Local Side . . . . .	8-18
	Displaying LACP Settings and Status for the Remote Side . . . . .	8-21
	Setting Broadcast Storm Thresholds . . . . .	8-23
	Configuring Port Mirroring . . . . .	8-25
	Configuring Rate Limits . . . . .	8-26
	Showing Port Statistics . . . . .	8-28
<b>9</b>	<b>Address Table Settings . . . . .</b>	<b>9-1</b>
	Setting Static Addresses . . . . .	9-1
	Displaying the Address Table . . . . .	9-3
	Changing the Aging Time . . . . .	9-5
<b>10</b>	<b>Spanning Tree Algorithm . . . . .</b>	<b>10-1</b>
	Displaying Global Settings . . . . .	10-4
	Configuring Global Settings . . . . .	10-8
	Displaying Interface Settings . . . . .	10-13
	Configuring Interface Settings . . . . .	10-17
	Configuring Multiple Spanning Trees . . . . .	10-21
	Displaying Interface Settings for MSTP . . . . .	10-24
	Configuring Interface Settings for MSTP . . . . .	10-26
<b>11</b>	<b>VLAN Configuration . . . . .</b>	<b>11-1</b>
	IEEE 802.1Q VLANs . . . . .	11-1
	Enabling or Disabling GVRP (Global Setting) . . . . .	11-5
	Displaying Basic VLAN Information . . . . .	11-6

	Displaying Current VLANs .....	11-7
	Creating VLANs .....	11-8
	Adding Static Members to VLANs (VLAN Index) .....	11-10
	Adding Static Members to VLANs (Port Index) .....	11-13
	Configuring VLAN Behavior for Interfaces .....	11-14
	Configuring Private VLANs .....	11-17
	Enabling Private VLANs .....	11-17
	Configuring Uplink and Downlink Ports .....	11-18
	Configuring Protocol-Based VLANs .....	11-19
	Configuring Protocol Groups .....	11-19
	Mapping Protocols to VLANs .....	11-20
<b>12</b>	<b>Class of Service .....</b>	<b>12-1</b>
	Layer 2 Queue Settings .....	12-1
	Setting the Default Priority for Interfaces .....	12-1
	Mapping CoS Values to Egress Queues .....	12-3
	Selecting the Queue Mode .....	12-6
	Setting the Service Weight for Traffic Classes .....	12-7
	Layer 3/4 Priority Settings .....	12-8
	Mapping Layer 3/4 Priorities to CoS Values .....	12-8
	Selecting IP Precedence/DSCP Priority .....	12-9
	Mapping IP Precedence .....	12-10
	Mapping DSCP Priority .....	12-12
	Mapping IP Port Priority .....	12-14
<b>13</b>	<b>Quality of Service .....</b>	<b>13-1</b>
	Configuring Quality of Service Parameters .....	13-2
	Configuring a Class Map .....	13-2
	Creating QoS Policies .....	13-6
	Attaching a Policy Map to Ingress Queues .....	13-10
<b>14</b>	<b>Multicast Filtering .....</b>	<b>14-1</b>
	Layer 2 IGMP (Snooping and Query) .....	14-2
	Configuring IGMP Snooping and Query Parameters .....	14-2
	Displaying Interfaces Attached to a Multicast Router .....	14-5
	Specifying Static Interfaces for a Multicast Router .....	14-6
	Displaying Port Members of Multicast Services .....	14-7

## TABLE OF CONTENTS

	Assigning Ports to Multicast Services .....	14-9
<b>15</b>	<b>Domain Name Service .....</b>	<b>15-1</b>
	Configuring General DNS Service Parameters .....	15-1
	Configuring Static DNS Host to Address Entries .....	15-4
	Displaying the DNS Cache .....	15-6
<b>16</b>	<b>Dynamic Host Configuration Protocol .....</b>	<b>16-1</b>
	Configuring DHCP Relay Service .....	16-2
	Configuring the DHCP Server .....	16-4
	Enabling the Server, Setting Excluded Addresses .....	16-5
	Configuring Address Pools .....	16-6
	Displaying Address Bindings .....	16-11
<b>17</b>	<b>IP Routing .....</b>	<b>17-1</b>
	Overview .....	17-1
	Initial Configuration .....	17-1
	IP Switching .....	17-2
	Routing Path Management .....	17-4
	Routing Protocols .....	17-4
	Basic IP Interface Configuration .....	17-5
	Configuring IP Routing Interfaces .....	17-7
	Address Resolution Protocol .....	17-9
	Proxy ARP .....	17-10
	Basic ARP Configuration .....	17-11
	Configuring Static ARP Addresses .....	17-13
	Displaying Dynamically Learned ARP Entries .....	17-14
	Displaying Local ARP Entries .....	17-16
	Displaying ARP Statistics .....	17-17
	Displaying Statistics for IP Protocols .....	17-19
	IP Statistics .....	17-19
	ICMP Statistics .....	17-21
	UDP Statistics .....	17-24
	TCP Statistics .....	17-25
	Configuring Static Routes .....	17-26
	Displaying the Routing Table .....	17-28



Configuring the Routing Information Protocol .....	17-30
Configuring General Protocol Settings .....	17-31
Specifying Network Interfaces for RIP .....	17-34
Configuring Network Interfaces for RIP .....	17-35
Redistributing Routing Information from Other Domains ..	17-39
Displaying RIP Information and Statistics .....	17-41

---

## Section III Command Line Interface

### 18 Overview of the Command Line Interface .....18-1

Using the Command Line Interface .....	18-1
Accessing the CLI .....	18-1
Console Connection .....	18-1
Telnet Connection .....	18-2
Entering Commands .....	18-3
Keywords and Arguments .....	18-3
Minimum Abbreviation .....	18-4
Command Completion .....	18-4
Getting Help on Commands .....	18-4
Showing Commands .....	18-5
Partial Keyword Lookup .....	18-6
Negating the Effect of Commands .....	18-6
Using Command History .....	18-6
Understanding Command Modes .....	18-7
Exec Commands .....	18-7
Configuration Commands .....	18-8
Command Line Processing .....	18-11
Command Groups .....	18-12

### 19 General Commands .....19-1

enable .....	19-2
disable .....	19-3
configure .....	19-3
show history .....	19-4
reload .....	19-5
prompt .....	19-6

## TABLE OF CONTENTS

end .....	19-6
exit .....	19-7
quit .....	19-7
<b>20 System Management Commands .....</b>	<b>20-1</b>
Device Designation Commands .....	20-2
hostname .....	20-2
switch renumber .....	20-3
System Status Commands .....	20-4
show startup-config .....	20-4
show running-config .....	20-6
show system .....	20-8
show users .....	20-9
show version .....	20-10
Frame Size Commands .....	20-11
jumbo frame .....	20-11
File Management Commands .....	20-12
copy .....	20-13
delete .....	20-17
dir .....	20-18
whichboot .....	20-19
boot system .....	20-20
Line Commands .....	20-21
line .....	20-22
login .....	20-23
password .....	20-24
timeout login response .....	20-25
exec-timeout .....	20-26
password-thresh .....	20-27
silent-time .....	20-28
databits .....	20-28
parity .....	20-29
speed .....	20-30
stopbits .....	20-31
disconnect .....	20-31
show line .....	20-32

Event Logging Commands	20-34
logging on	20-34
logging history	20-35
logging host	20-36
logging facility	20-37
logging trap	20-38
clear log	20-39
show logging	20-40
show log	20-42
SMTP Alert Commands	20-43
logging sendmail host	20-43
logging sendmail level	20-44
logging sendmail source-email	20-45
logging sendmail destination-email	20-45
logging sendmail	20-46
show logging sendmail	20-47
Time Commands	20-48
ntp client	20-48
ntp server	20-49
ntp poll	20-50
show ntp	20-51
clock timezone	20-52
calendar set	20-53
show calendar	20-53
<b>21 SNMP Commands</b>	<b>21-1</b>
snmp-server	21-2
show snmp	21-2
snmp-server community	21-4
snmp-server contact	21-5
snmp-server location	21-5
snmp-server host	21-6
snmp-server enable traps	21-9
snmp-server engine-id	21-10
show snmp engine-id	21-12
snmp-server view	21-13
show snmp view	21-14

## TABLE OF CONTENTS

snmp-server group .....	21-15
show snmp group .....	21-16
snmp-server user .....	21-18
show snmp user .....	21-20

## 22 User Authentication Commands ..... 22-1

User Account Commands .....	22-2
username .....	22-2
enable password .....	22-4
Authentication Sequence .....	22-5
authentication login .....	22-5
authentication enable .....	22-7
RADIUS Client .....	22-8
radius-server host .....	22-9
radius-server port .....	22-10
radius-server key .....	22-10
radius-server retransmit .....	22-11
radius-server timeout .....	22-11
show radius-server .....	22-12
TACACS+ Client .....	22-13
tacacs-server host .....	22-13
tacacs-server port .....	22-14
tacacs-server key .....	22-14
show tacacs-server .....	22-15
Web Server Commands .....	22-15
ip http port .....	22-16
ip http server .....	22-16
ip http secure-server .....	22-17
ip http secure-port .....	22-18
Telnet Server Commands .....	22-20
ip telnet server .....	22-20
Secure Shell Commands .....	22-21
ip ssh server .....	22-24
ip ssh timeout .....	22-25
ip ssh authentication-retries .....	22-26
ip ssh server-key size .....	22-27
delete public-key .....	22-28

ip ssh crypto host-key generate .....	22-28
ip ssh crypto zeroize .....	22-29
ip ssh save host-key .....	22-30
show ip ssh .....	22-31
show ssh .....	22-31
show public-key .....	22-32
Port Security Commands .....	22-34
port security .....	22-35
802.1X Port Authentication .....	22-37
dot1x system-auth-control .....	22-38
dot1x default .....	22-38
dot1x max-req .....	22-39
dot1x port-control .....	22-39
dot1x operation-mode .....	22-40
dot1x re-authenticate .....	22-41
dot1x re-authentication .....	22-42
dot1x timeout quiet-period .....	22-42
dot1x timeout re-authperiod .....	22-43
dot1x timeout tx-period .....	22-44
show dot1x .....	22-44
IP Filter Commands .....	22-48
management .....	22-48
show management .....	22-49
<b>23 Access Control List Commands .....</b>	<b>23-1</b>
IPv4 ACLs .....	23-2
access-list ip .....	23-3
permit, deny (Standard IPv4 ACL) .....	23-4
permit, deny (Extended IPv4 ACL) .....	23-5
show ip access-list .....	23-7
ip access-group .....	23-8
show ip access-group .....	23-9
IPv6 ACLs .....	23-9
access-list ipv6 .....	23-10
permit, deny (Standard IPv6 ACL) .....	23-11
permit, deny (Extended IPv6 ACL) .....	23-12
show ipv6 access-list .....	23-14

## TABLE OF CONTENTS

	ipv6 access-group .....	23-15
	show ipv6 access-group .....	23-16
MAC ACLs .....		23-16
	access-list mac .....	23-17
	permit, deny (MAC ACL) .....	23-18
	show mac access-list .....	23-20
	mac access-group .....	23-20
	show mac access-group .....	23-21
ACL Information .....		23-21
	show access-list .....	23-22
	show access-group .....	23-22
<b>24</b>	<b>Interface Commands .....</b>	<b>24-1</b>
	interface .....	24-2
	description .....	24-3
	speed-duplex .....	24-3
	negotiation .....	24-5
	capabilities .....	24-6
	flowcontrol .....	24-7
	media-type .....	24-8
	shutdown .....	24-9
	switchport broadcast packet-rate .....	24-10
	clear counters .....	24-11
	show interfaces status .....	24-12
	show interfaces counters .....	24-13
	show interfaces switchport .....	24-15
<b>25</b>	<b>Link Aggregation Commands .....</b>	<b>25-1</b>
	channel-group .....	25-3
	lacp .....	25-4
	lacp system-priority .....	25-6
	lacp admin-key (Ethernet Interface) .....	25-7
	lacp admin-key (Port Channel) .....	25-8
	lacp port-priority .....	25-9
	show lacp .....	25-10

<b>26</b>	<b>Mirror Port Commands</b>	<b>26-1</b>
	port monitor	26-1
	show port monitor	26-2
<b>27</b>	<b>Rate Limit Commands</b>	<b>27-1</b>
	rate-limit	27-1
<b>28</b>	<b>Address Table Commands</b>	<b>28-1</b>
	mac-address-table static	28-2
	clear mac-address-table dynamic	28-3
	show mac-address-table	28-4
	mac-address-table aging-time	28-5
	show mac-address-table aging-time	28-6
<b>29</b>	<b>Spanning Tree Commands</b>	<b>29-1</b>
	spanning-tree	29-3
	spanning-tree mode	29-4
	spanning-tree forward-time	29-5
	spanning-tree hello-time	29-6
	spanning-tree max-age	29-7
	spanning-tree priority	29-8
	spanning-tree pathcost method	29-9
	spanning-tree transmission-limit	29-10
	spanning-tree mst-configuration	29-10
	mst vlan	29-11
	mst priority	29-12
	name	29-13
	revision	29-14
	max-hops	29-14
	spanning-tree spanning-disabled	29-15
	spanning-tree cost	29-16
	spanning-tree port-priority	29-18
	spanning-tree edge-port	29-18
	spanning-tree portfast	29-19
	spanning-tree link-type	29-21
	spanning-tree mst cost	29-22
	spanning-tree mst port-priority	29-23

## TABLE OF CONTENTS

spanning-tree protocol-migration .....	29-24
show spanning-tree .....	29-25
show spanning-tree mst configuration .....	29-27
<b>30 VLAN Commands .....</b>	<b>30-1</b>
GVRP and Bridge Extension Commands .....	30-2
bridge-ext gvrp .....	30-2
show bridge-ext .....	30-3
switchport gvrp .....	30-4
show gvrp configuration .....	30-4
garp timer .....	30-5
show garp timer .....	30-6
Editing VLAN Groups .....	30-7
vlan database .....	30-7
vlan .....	30-8
Configuring VLAN Interfaces .....	30-9
interface vlan .....	30-9
switchport mode .....	30-10
switchport acceptable-frame-types .....	30-11
switchport ingress-filtering .....	30-12
switchport native vlan .....	30-13
switchport allowed vlan .....	30-14
switchport forbidden vlan .....	30-15
Displaying VLAN Information .....	30-16
show vlan .....	30-16
Configuring Private VLANs .....	30-17
pvlan .....	30-17
show pvlan .....	30-18
Configuring Protocol-based VLANs .....	30-19
protocol-vlan protocol-group (Configuring Groups) .....	30-20
protocol-vlan protocol-group (Configuring Interfaces) .....	30-21
show protocol-vlan protocol-group .....	30-22
show interfaces protocol-vlan protocol-group .....	30-23
<b>31 Class of Service Commands .....</b>	<b>31-1</b>
Priority Commands (Layer 2) .....	31-1
queue mode .....	31-2



	switchport priority default . . . . .	31-3
	queue bandwidth . . . . .	31-4
	queue cos-map . . . . .	31-5
	show queue mode . . . . .	31-7
	show queue bandwidth . . . . .	31-7
	show queue cos-map . . . . .	31-8
	Priority Commands (Layer 3 and 4) . . . . .	31-8
	map ip port (Global Configuration) . . . . .	31-9
	map ip port (Interface Configuration) . . . . .	31-10
	map ip precedence (Global Configuration) . . . . .	31-10
	map ip precedence (Interface Configuration) . . . . .	31-11
	map ip dscp (Global Configuration) . . . . .	31-12
	map ip dscp (Interface Configuration) . . . . .	31-13
	show map ip port . . . . .	31-14
	show map ip precedence . . . . .	31-15
	show map ip dscp . . . . .	31-16
<b>32</b>	<b>Quality of Service Commands . . . . .</b>	<b>32-1</b>
	class-map . . . . .	32-3
	match . . . . .	32-4
	policy-map . . . . .	32-5
	class . . . . .	32-6
	set . . . . .	32-8
	police . . . . .	32-9
	service-policy . . . . .	32-10
	show class-map . . . . .	32-11
	show policy-map . . . . .	32-12
	show policy-map interface . . . . .	32-12
<b>33</b>	<b>Multicast Filtering Commands . . . . .</b>	<b>33-1</b>
	IGMP Snooping Commands . . . . .	33-2
	ip igmp snooping . . . . .	33-2
	ip igmp snooping vlan static . . . . .	33-3
	ip igmp snooping version . . . . .	33-3
	show ip igmp snooping . . . . .	33-4
	show mac-address-table multicast . . . . .	33-5

## TABLE OF CONTENTS

IGMP Query Commands .....	33-6
ip igmp snooping querier .....	33-6
ip igmp snooping query-count .....	33-7
ip igmp snooping query-interval .....	33-8
ip igmp snooping query-max-response-time .....	33-9
ip igmp snooping router-port-expire-time .....	33-10
Static Multicast Routing Commands .....	33-11
ip igmp snooping vlan mrouter .....	33-11
show ip igmp snooping mrouter .....	33-12
<b>34 Domain Name Service Commands .....</b>	<b>34-1</b>
ip host .....	34-2
clear host .....	34-3
ip domain-name .....	34-4
ip domain-list .....	34-5
ip name-server .....	34-6
ip domain-lookup .....	34-7
show hosts .....	34-8
show dns .....	34-9
show dns cache .....	34-9
clear dns cache .....	34-10
<b>35 DHCP Commands .....</b>	<b>35-1</b>
DHCP Client .....	35-2
ip dhcp client-identifier .....	35-2
ip dhcp restart client .....	35-3
DHCP Relay .....	35-4
ip dhcp restart relay .....	35-4
ip dhcp relay server .....	35-5
DHCP Server .....	35-6
service dhcp .....	35-7
ip dhcp excluded-address .....	35-8
ip dhcp pool .....	35-8
network .....	35-9
default-router .....	35-10
domain-name .....	35-11
dns-server .....	35-11

next-server .....	35-12
bootfile .....	35-13
netbios-name-server .....	35-13
netbios-node-type .....	35-14
lease .....	35-15
host .....	35-16
client-identifier .....	35-17
hardware-address .....	35-18
clear ip dhcp binding .....	35-19
show ip dhcp binding .....	35-20
<b>36 IP Interface Commands .....</b>	<b>36-1</b>
Basic IP Configuration .....	36-2
ip address .....	36-4
ip default-gateway .....	36-6
ip dhcp restart client .....	36-7
show ip interface .....	36-8
show ip redirects .....	36-8
ping .....	36-9
ipv6 enable .....	36-10
ipv6 general-prefix .....	36-12
show ipv6 general-prefix .....	36-13
ipv6 address .....	36-14
ipv6 address autoconfig .....	36-16
ipv6 address cui-64 .....	36-18
ipv6 address link-local .....	36-20
show ipv6 interface .....	36-22
ipv6 default-gateway .....	36-24
show ipv6 default-gateway .....	36-25
ipv6 mtu .....	36-26
show ipv6 mtu .....	36-27
show ipv6 traffic .....	36-27
clear ipv6 traffic .....	36-35
ping ipv6 .....	36-36
ipv6 neighbor .....	36-38
ipv6 nd dad attempts .....	36-39
ipv6 nd ns interval .....	36-41

## TABLE OF CONTENTS

show ipv6 neighbors	36-43
clear ipv6 neighbors	36-45
Address Resolution Protocol (ARP)	36-45
arp	36-45
arp-timeout	36-46
clear arp-cache	36-47
show arp	36-47
ip proxy-arp	36-48
<b>37 IP Routing Commands</b>	<b>37-1</b>
Global Routing Configuration	37-2
ip routing	37-2
ip route	37-3
clear ip route	37-4
show ip route	37-5
show ip host-route	37-6
show ip traffic	37-7
Routing Information Protocol (RIP)	37-8
router rip	37-9
default-metric	37-9
timers basic	37-11
network	37-12
neighbor	37-13
version	37-14
redistribute	37-15
ip rip receive version	37-16
ip rip send version	37-17
ip split-horizon	37-19
ip rip authentication key	37-20
ip rip authentication mode	37-21
show rip globals	37-22
show ip rip	37-22

## APPENDICES:

---

### Section IV Appendices

<b>A</b>	<b>Software Specifications . . . . .</b>	<b>A-1</b>
	Software Features . . . . .	A-1
	Management Features . . . . .	A-3
	Standards . . . . .	A-3
	Management Information Bases . . . . .	A-4
<b>B</b>	<b>Troubleshooting . . . . .</b>	<b>B-1</b>
	Problems Accessing the Management Interface . . . . .	B-1
	Using System Logs . . . . .	B-3

### Glossary

### Index

## *TABLE OF CONTENTS*

# TABLES

Table 1-1	Key Features .....	1-1
Table 1-2	System Defaults .....	1-9
Table 3-1	Web Page Configuration Buttons .....	3-4
Table 3-2	Switch Main Menu .....	3-6
Table 4-1	Logging Levels .....	4-41
Table 5-1	SNMPv3 Security Models and Levels .....	5-2
Table 5-2	Supported Notification Messages .....	5-19
Table 6-1	HTTPS System Support .....	6-8
Table 6-2	802.1X Statistics .....	6-27
Table 8-1	LACP Port Counters .....	8-17
Table 8-2	LACP Internal Configuration Information .....	8-18
Table 8-3	LACP Neighbor Configuration Information .....	8-21
Table 8-4	Port Statistics .....	8-28
Table 10-1	Recommended STA Path Cost Range .....	10-19
Table 10-2	Default STA Path Costs .....	10-19
Table 10-3	Recommended STA Path Cost Range .....	10-27
Table 10-4	Default STA Path Costs .....	10-27
Table 12-1	Mapping CoS Values to Egress Queues .....	12-3
Table 12-2	CoS Priority Levels .....	12-4
Table 12-3	Mapping IP Precedence .....	12-10
Table 12-4	Mapping DSCP Priority .....	12-12
Table 17-1	Address Resolution Protocol .....	17-9
Table 17-2	ARP Statistics .....	17-17
Table 17-3	IP Statistics .....	17-19
Table 17-4	ICMP Statistics .....	17-22
Table 17-5	UDP Statistics .....	17-24
Table 17-6	TCP Statistics .....	17-25
Table 17-7	RIP Information and Statistics .....	17-41
Table 18-1	General Command Modes .....	18-7
Table 18-2	Configuration Command Modes .....	18-10
Table 18-3	Keystroke Commands .....	18-11
Table 18-4	Command Group Index .....	18-12
Table 19-1	General Commands .....	19-1
Table 20-1	System Management Commands .....	20-1
Table 20-2	Device Designation Commands .....	20-2
Table 20-3	System Status Commands .....	20-4

## TABLES

Table 20-4	Frame Size Commands	20-11
Table 20-5	Flash/File Commands	20-13
Table 20-6	File Directory Information	20-18
Table 20-7	Line Commands	20-21
Table 20-8	Event Logging Commands	20-34
Table 20-9	Logging Levels	20-35
Table 20-10	show logging flash/ram - display description	20-41
Table 20-11	show logging trap - display description	20-41
Table 20-12	SMTP Alert Commands	20-43
Table 20-13	Time Commands	20-48
Table 21-1	SNMP Commands	21-1
Table 21-2	show snmp engine-id - display description	21-12
Table 21-3	show snmp view - display description	21-14
Table 21-4	show snmp group - display description	21-17
Table 21-5	show snmp user - display description	21-20
Table 22-1	Authentication Commands	22-1
Table 22-2	User Access Commands	22-2
Table 22-3	Default Login Settings	22-3
Table 22-4	Authentication Sequence Commands	22-5
Table 22-5	RADIUS Client Commands	22-8
Table 22-6	TACACS+ Client Commands	22-13
Table 22-7	Web Server Commands	22-15
Table 22-8	HTTPS System Support	22-18
Table 22-9	Telnet Server Commands	22-20
Table 22-10	Secure Shell Commands	22-21
Table 22-11	show ssh - display description	22-31
Table 22-12	Port Security Commands	22-34
Table 22-13	802.1X Port Authentication Commands	22-37
Table 22-14	IP Filter Commands	22-48
Table 23-1	Access Control List Commands	23-1
Table 23-2	IPv4 ACL Commands	23-2
Table 23-3	IPv6 ACL Commands	23-9
Table 23-4	MAC ACL Commands	23-16
Table 23-5	ACL Information Commands	23-21
Table 24-1	Interface Commands	24-1
Table 24-2	show interfaces switchport - display description	24-16
Table 25-1	Link Aggregation Commands	25-1



Table 25-2	show lacp counters - display description . . . . .	25-11
Table 25-3	show lacp internal - display description . . . . .	25-11
Table 25-4	show lacp neighbors - display description . . . . .	25-13
Table 25-5	show lacp sysid - display description . . . . .	25-14
Table 26-1	Mirror Port Commands . . . . .	26-1
Table 27-1	Rate Limit Commands . . . . .	27-1
Table 28-1	Address Table Commands . . . . .	28-1
Table 29-1	Spanning Tree Commands . . . . .	29-1
Table 29-2	Recommended STA Path Cost Range . . . . .	29-16
Table 29-3	Default STA Path Costs . . . . .	29-17
Table 29-4	Recommended STA Path Cost Range . . . . .	29-22
Table 29-5	Default STA Path Costs . . . . .	29-22
Table 30-1	VLAN Commands . . . . .	30-1
Table 30-2	GVRP and Bridge Extension Commands . . . . .	30-2
Table 30-3	Commands for Editing VLAN Groups . . . . .	30-7
Table 30-4	Commands for Configuring VLAN Interfaces . . . . .	30-9
Table 30-5	Commands for Displaying VLAN Information . . . . .	30-16
Table 30-6	Private VLAN Commands . . . . .	30-17
Table 30-7	Protocol-based VLAN Commands . . . . .	30-19
Table 31-1	Priority Commands . . . . .	31-1
Table 31-2	Priority Commands (Layer 2) . . . . .	31-1
Table 31-3	Default CoS Priority Levels . . . . .	31-6
Table 31-4	Priority Commands (Layer 3 and 4) . . . . .	31-8
Table 31-5	Mapping IP Precedence to CoS Values . . . . .	31-11
Table 31-6	Mapping IP DSCP to CoS Values . . . . .	31-13
Table 32-1	Quality of Service Commands . . . . .	32-1
Table 33-1	Multicast Filtering Commands . . . . .	33-1
Table 33-2	IGMP Snooping Commands . . . . .	33-2
Table 33-3	IGMP Query Commands . . . . .	33-6
Table 33-4	Static Multicast Routing Commands . . . . .	33-11
Table 34-1	DNS Commands . . . . .	34-1
Table 34-2	show dns cache - display description . . . . .	34-9
Table 35-1	DHCP Commands . . . . .	35-1
Table 35-2	DHCP Client Commands . . . . .	35-2
Table 35-3	DHCP Relay Commands . . . . .	35-4
Table 35-4	DHCP Server Commands . . . . .	35-6
Table 36-1	IP Interface Commands . . . . .	36-1

## TABLES

Table 36-2	Basic IP Configuration Commands . . . . .	36-2
Table 36-3	show ipv6 interface - display description . . . . .	36-23
Table 36-4	show ipv6 mtu - display description . . . . .	36-27
Table 36-5	show ipv6 traffic - display description . . . . .	36-29
Table 36-6	show ipv6 neighbors - display description . . . . .	36-43
Table 36-7	Address Resolution Protocol Commands . . . . .	36-45
Table 37-1	IP Routing Commands . . . . .	37-1
Table 37-2	Global Routing Configuration Commands . . . . .	37-2
Table 37-3	show ip route - display description . . . . .	37-5
Table 37-4	show ip host-route - display description . . . . .	37-6
Table 37-5	Routing Information Protocol Commands . . . . .	37-8
Table 37-6	show rip globals - display description . . . . .	37-22
Table 37-7	show ip rip - display description . . . . .	37-23
Table B-1	Troubleshooting Chart . . . . .	B-1

# FIGURES

Figure 3-1	Home Page .....	3-3
Figure 3-2	Front Panel Indicators .....	3-5
Figure 4-1	System Information .....	4-2
Figure 4-2	Switch Information .....	4-5
Figure 4-3	Displaying Bridge Extension Configuration .....	4-7
Figure 4-4	IPv4 Interface Configuration - Manual .....	4-10
Figure 4-5	Default Gateway .....	4-10
Figure 4-6	IPv4 Interface Configuration - DHCP .....	4-11
Figure 4-7	IPv6 Interface Configuration .....	4-21
Figure 4-8	IPv6 General Prefix Configuration .....	4-23
Figure 4-9	IPv6 Neighbor Detection and Neighbor Cache .....	4-27
Figure 4-10	Configuring Support for Jumbo Frames .....	4-28
Figure 4-11	Copy Firmware .....	4-30
Figure 4-12	Setting the Startup Code .....	4-31
Figure 4-13	Deleting Files .....	4-31
Figure 4-14	Downloading Configuration Settings for Start-Up .....	4-34
Figure 4-15	Setting the Startup Configuration Settings .....	4-35
Figure 4-16	Configuring the Console Port .....	4-37
Figure 4-17	Configuring the Telnet Interface .....	4-40
Figure 4-18	System Logs .....	4-42
Figure 4-19	Remote Logs .....	4-44
Figure 4-20	Displaying Logs .....	4-45
Figure 4-21	Enabling and Configuring SMTP Alerts .....	4-47
Figure 4-22	Renumbering the Stack .....	4-49
Figure 4-23	Resetting the System .....	4-49
Figure 4-24	SNTP Configuration .....	4-51
Figure 4-25	Clock Time Zone .....	4-52
Figure 5-1	Enabling the SNMP Agent .....	5-4
Figure 5-2	Configuring SNMP Community Strings .....	5-5
Figure 5-3	Configuring SNMP Trap Managers .....	5-9
Figure 5-4	Setting the SNMPv3 Engine ID .....	5-11
Figure 5-5	Setting an Engine ID .....	5-12
Figure 5-6	Configuring SNMPv3 Users .....	5-14
Figure 5-7	Configuring Remote SNMPv3 Users .....	5-17
Figure 5-8	Configuring SNMPv3 Groups .....	5-23
Figure 5-9	Configuring SNMPv3 Views .....	5-25

# FIGURES

Figure 6-1	User Accounts . . . . .	6-2
Figure 6-2	Authentication Server Settings . . . . .	6-6
Figure 6-3	HTTPS Settings . . . . .	6-8
Figure 6-4	SSH Host-Key Settings . . . . .	6-15
Figure 6-5	SSH Server Settings . . . . .	6-17
Figure 6-6	Port Security . . . . .	6-20
Figure 6-7	802.1X Global Information . . . . .	6-22
Figure 6-8	802.1X Global Configuration . . . . .	6-23
Figure 6-9	802.1X Port Configuration . . . . .	6-25
Figure 6-10	802.1X Port Statistics . . . . .	6-28
Figure 6-11	IP Filter . . . . .	6-30
Figure 7-1	Selecting ACL Type . . . . .	7-3
Figure 7-2	ACL Configuration - Standard IPv4 . . . . .	7-4
Figure 7-3	ACL Configuration - Extended IPv4 . . . . .	7-6
Figure 7-4	ACL Configuration - MAC . . . . .	7-8
Figure 7-5	ACL Configuration - Standard IPv6 . . . . .	7-9
Figure 7-6	ACL Configuration - Extended IPv6 . . . . .	7-12
Figure 7-7	ACL Port Binding . . . . .	7-13
Figure 8-1	Port - Port Information . . . . .	8-2
Figure 8-2	Port - Port Configuration . . . . .	8-6
Figure 8-3	Static Trunk Configuration . . . . .	8-10
Figure 8-4	LACP Trunk Configuration . . . . .	8-12
Figure 8-5	LACP - Aggregation Port . . . . .	8-15
Figure 8-6	LACP - Port Counters Information . . . . .	8-17
Figure 8-7	LACP - Port Internal Information . . . . .	8-20
Figure 8-8	LACP - Port Neighbors Information . . . . .	8-22
Figure 8-9	Port Broadcast Control . . . . .	8-24
Figure 8-10	Mirror Port Configuration . . . . .	8-26
Figure 8-11	Rate Limit Configuration . . . . .	8-27
Figure 8-12	Port Statistics . . . . .	8-33
Figure 9-1	Static Addresses . . . . .	9-2
Figure 9-2	Dynamic Addresses . . . . .	9-4
Figure 9-3	Address Aging . . . . .	9-5
Figure 10-1	STA Information . . . . .	10-6
Figure 10-2	STA Global Configuration . . . . .	10-12
Figure 10-3	STA Port Information . . . . .	10-16
Figure 10-4	STA Port Configuration . . . . .	10-20

Figure 10-5	MSTP VLAN Configuration .....	10-22
Figure 10-6	MSTP Port Information .....	10-24
Figure 10-7	MSTP Port Configuration .....	10-28
Figure 11-1	Globally Enabling GVRP .....	11-5
Figure 11-2	VLAN Basic Information .....	11-6
Figure 11-3	VLAN Current Table .....	11-7
Figure 11-4	VLAN Static List - Creating VLANs .....	11-9
Figure 11-5	VLAN Static Table - Adding Static Members .....	11-12
Figure 11-6	VLAN Static Membership by Port .....	11-13
Figure 11-7	VLAN Port Configuration .....	11-16
Figure 11-8	Private VLAN Status .....	11-17
Figure 11-9	Private VLAN Link Status .....	11-18
Figure 11-10	Protocol VLAN Configuration .....	11-20
Figure 11-11	Protocol VLAN Port Configuration .....	11-21
Figure 12-1	Default Port Priority .....	12-2
Figure 12-2	Traffic Classes .....	12-5
Figure 12-3	Queue Mode .....	12-6
Figure 12-4	Queue Scheduling .....	12-7
Figure 12-5	IP Precedence/DSCP Priority Status .....	12-9
Figure 12-6	IP Precedence Priority .....	12-11
Figure 12-7	IP DSCP Priority .....	12-13
Figure 12-8	IP Port Priority Status .....	12-14
Figure 12-9	IP Port Priority .....	12-15
Figure 13-1	Configuring Class Maps .....	13-5
Figure 13-2	Configuring Policy Maps .....	13-9
Figure 13-3	Service Policy Settings .....	13-11
Figure 14-1	IGMP Configuration .....	14-4
Figure 14-2	Multicast Router Port Information .....	14-6
Figure 14-3	Static Multicast Router Port Configuration .....	14-7
Figure 14-4	IP Multicast Registration Table .....	14-8
Figure 14-5	IGMP Member Port Table .....	14-10
Figure 15-1	DNS General Configuration .....	15-3
Figure 15-2	DNS Static Host Table .....	15-5
Figure 15-3	DNS Cache .....	15-7
Figure 16-1	DHCP Relay Configuration .....	16-3
Figure 16-2	DHCP Server General Configuration .....	16-5
Figure 16-3	DHCP Server Pool Configuration .....	16-8

## FIGURES

Figure 16-4	DHCP Server Pool - Network Configuration . . . . .	16-9
Figure 16-5	DHCP Server Pool - Host Configuration . . . . .	16-10
Figure 16-6	DHCP Server - IP Binding . . . . .	16-12
Figure 17-1	IP Global Settings . . . . .	17-6
Figure 17-2	IP Routing Interface . . . . .	17-8
Figure 17-3	ARP General . . . . .	17-12
Figure 17-4	ARP Static Addresses . . . . .	17-13
Figure 17-5	ARP Dynamic Addresses . . . . .	17-15
Figure 17-6	ARP Other Addresses . . . . .	17-16
Figure 17-7	ARP Statistics . . . . .	17-17
Figure 17-8	IP Statistics . . . . .	17-21
Figure 17-9	ICMP Statistics . . . . .	17-23
Figure 17-10	UDP Statistics . . . . .	17-24
Figure 17-11	TCP Statistics . . . . .	17-26
Figure 17-12	IP Static Routes . . . . .	17-27
Figure 17-13	IP Routing Table . . . . .	17-29
Figure 17-14	RIP General Settings . . . . .	17-33
Figure 17-15	RIP Network Addresses . . . . .	17-34
Figure 17-16	RIP Interface Settings . . . . .	17-38
Figure 17-17	RIP Redistribution Configuration . . . . .	17-40
Figure 17-18	RIP Statistics . . . . .	17-42

# SECTION I

## GETTING STARTED

---

This section provides an overview of the switch, and introduces some basic concepts about network switches. It also describes the basic settings required to access the management interface.

Introduction .....	1-1
Initial Configuration .....	2-1

## *GETTING STARTED*



# CHAPTER 1

## INTRODUCTION

---

This switch provides a broad range of features for Layer 2 switching and Layer 3 routing. It includes a management agent that allows you to configure the features listed in this manual. The default configuration can be used for most of the features provided by this switch. However, there are many options that you should configure to maximize the switch's performance for your particular network environment.

**Note:** The current software release includes Layer 2 and 4 features. Layer 3 features will be included in future releases.

### Key Features

**Table 1-1 Key Features**

Feature	Description
Configuration Backup and Restore	Backup to TFTP server
Authentication	Console, Telnet, web – User name / password, RADIUS, TACACS+ Web – HTTPS Telnet – SSH SNMP v1/2c - Community strings SNMP version 3 – MD5 or SHA password Port – IEEE 802.1X, MAC address filtering
Access Control Lists	Supports up to 256 ACLs, 96 MAC rules, 96 IP rules, and 96 IPv6 rules
DHCP Client, Relay and Server	Supported

**Table 1-1 Key Features (Continued)**

<b>Feature</b>	<b>Description</b>
DNS	Client and Proxy service
Port Configuration	Speed and duplex mode and flow control
Rate Limiting	Input and output rate limiting per port
Port Mirroring	One or more ports mirrored to single analysis port
Port Trunking	Supports up to 32 trunks using either static or dynamic trunking (LACP)
Broadcast Storm Control	Supported
Address Table	Up to 8K MAC addresses in the forwarding table, 1024 static MAC addresses; Up to 2K IPv4 entries in the host table, 1K entries in the ARP cache; 512 IPv4 entries in the IP routing table, 64 static IP routes; 32 IP interfaces
IP Version 4 and 6	Supports IPv4 and IPv6 addressing, management, and QoS
IEEE 802.1D Bridge	Supports dynamic data switching and addresses learning
Store-and-Forward Switching	Supported to ensure wire-speed switching while eliminating bad frames
Spanning Tree Algorithm	Supports standard STP, Rapid Spanning Tree Protocol (RSTP), and Multiple Spanning Trees (MSTP)
Virtual LANs	Up to 256 using IEEE 802.1Q, port-based, protocol-based, or private VLANs
Traffic Prioritization	Default port priority, traffic class map, queue scheduling, IP Precedence, or Differentiated Services Code Point (DSCP), and TCP/UDP Port
Quality of Service	Supports Differentiated Services (DiffServ)
IP Routing	Routing Information Protocol (RIP), static routes
ARP	Static and dynamic address configuration, proxy ARP
Multicast Filtering	Supports IGMP snooping and query

## Description of Software Features

The switch provides a wide range of advanced performance enhancing features. Flow control eliminates the loss of packets due to bottlenecks caused by port saturation. Broadcast storm suppression prevents broadcast traffic storms from engulfing the network. Untagged (port-based), tagged, and protocol-based VLANs, plus support for automatic GVRP VLAN registration provide traffic security and efficient use of network bandwidth. CoS priority queueing ensures the minimum delay for moving real-time multimedia data across the network. While multicast filtering provides support for real-time network applications. Some of the management features are briefly described below.

**Configuration Backup and Restore** – You can save the current configuration settings to a file on a TFTP server, and later download this file to restore the switch configuration settings.

**Authentication** – This switch authenticates management access via the console port, Telnet or web browser. User names and passwords can be configured locally or can be verified via a remote authentication server (i.e., RADIUS or TACACS+). Port-based authentication is also supported via the IEEE 802.1X protocol. This protocol uses Extensible Authentication Protocol over LANs (EAPOL) to request user credentials from the 802.1X client, and then uses the EAP between the switch and the authentication server to verify the client's right to access the network via an authentication server (i.e., RADIUS server).

Other authentication options include HTTPS for secure management access via the web, SSH for secure management access over a Telnet-equivalent connection, SNMP Version 3, IP address filtering for SNMP/web/Telnet management access, and MAC address filtering for port access.

**Access Control Lists** – ACLs provide packet filtering for IP frames (based on address, protocol, TCP/UDP port number or TCP control code) or any frames (based on MAC address or Ethernet type). ACLs can

by used to improve performance by blocking unnecessary network traffic or to implement security controls by restricting access to specific network resources or protocols.

**DHCP Server and DHCP Relay** – A DHCP server is provided to assign IP addresses to host devices. Since DHCP uses a broadcast mechanism, a DHCP server and its client must physically reside on the same subnet. Since it is not practical to have a DHCP server on every subnet, DHCP Relay is also supported to allow dynamic configuration of local clients from a DHCP server located in a different network.

**Port Configuration** – You can manually configure the speed and duplex mode, and flow control used on specific ports, or use auto-negotiation to detect the connection settings used by the attached device. Use the full-duplex mode on ports whenever possible to double the throughput of switch connections. Flow control should also be enabled to control network traffic during periods of congestion and prevent the loss of packets when port buffer thresholds are exceeded. The switch supports flow control based on the IEEE 802.3x standard.

**Rate Limiting** – This feature controls the maximum rate for traffic transmitted or received on an interface. Rate limiting is configured on interfaces at the edge of a network to limit traffic into or out of the network. Traffic that falls within the rate limit is transmitted, while packets that exceed the acceptable amount of traffic are dropped.

**Port Mirroring** – The switch can unobtrusively mirror traffic from any port to a monitor port. You can then attach a protocol analyzer or RMON probe to this port to perform traffic analysis and verify connection integrity.

**Port Trunking** – Ports can be combined into an aggregate connection. Trunks can be manually set up or dynamically configured using IEEE 802.3-2002 (formerly IEEE 802.3ad) Link Aggregation Control Protocol (LACP). The additional ports dramatically increase the throughput across

any connection, and provide redundancy by taking over the load if a port in the trunk should fail. The switch supports up to 32 trunks.

**Broadcast Storm Control** – Broadcast suppression prevents broadcast traffic from overwhelming the network. When enabled on a port, the level of broadcast traffic passing through the port is restricted. If broadcast traffic rises above a pre-defined threshold, it will be throttled until the level falls back beneath the threshold.

**Static Addresses** – A static address can be assigned to a specific interface on this switch. Static addresses are bound to the assigned interface and will not be moved. When a static address is seen on another interface, the address will be ignored and will not be written to the address table. Static addresses can be used to provide network security by restricting access for a known host to a specific port.

**IEEE 802.1D Bridge** – The switch supports IEEE 802.1D transparent bridging. The address table facilitates data switching by learning addresses, and then filtering or forwarding traffic based on this information. The address table supports up to 16K addresses.

**Store-and-Forward Switching** – The switch copies each frame into its memory before forwarding them to another port. This ensures that all frames are a standard Ethernet size and have been verified for accuracy with the cyclic redundancy check (CRC). This prevents bad frames from entering the network and wasting bandwidth.

To avoid dropping frames on congested ports, the SMC8824M and SMC8848M provide 75 MB and 1.5 MB, respectively for frame buffering. This buffer can queue packets awaiting transmission on congested networks.

**Spanning Tree Algorithm** – The switch supports these spanning tree protocols:

Spanning Tree Protocol (STP, IEEE 802.1D) – This protocol provides loop detection. When there are multiple physical paths between segments,

this protocol will choose a single path and disable all others to ensure that only one route exists between any two stations on the network. This prevents the creation of network loops. However, if the chosen path should fail for any reason, an alternate path will be activated to maintain the connection.

**Rapid Spanning Tree Protocol (RSTP, IEEE 802.1w)** – This protocol reduces the convergence time for network topology changes to about 3 to 5 seconds, compared to 30 seconds or more for the older IEEE 802.1D STP standard. It is intended as a complete replacement for STP, but can still interoperate with switches running the older standard by automatically reconfiguring ports to STP-compliant mode if they detect STP protocol messages from attached devices.

**Multiple Spanning Tree Protocol (MSTP, IEEE 802.1s)** – This protocol is a direct extension of RSTP. It can provide an independent spanning tree for different VLANs. It simplifies network management, provides for even faster convergence than RSTP by limiting the size of each region, and prevents VLAN members from being segmented from the rest of the group (as sometimes occurs with IEEE 802.1D STP).

**Virtual LANs** – The switch supports up to 255 VLANs. A Virtual LAN is a collection of network nodes that share the same collision domain regardless of their physical location or connection point in the network. The switch supports tagged VLANs based on the IEEE 802.1Q standard. Members of VLAN groups can be dynamically learned via GVRP, or ports can be manually assigned to a specific set of VLANs. This allows the switch to restrict traffic to the VLAN groups to which a user has been assigned. By segmenting your network into VLANs, you can:

- Eliminate broadcast storms which severely degrade performance in a flat network.
- Simplify network management for node changes/moves by remotely configuring VLAN membership for any port, rather than having to manually change the network connection.

- Provide data security by restricting all traffic to the originating VLAN, except where a connection is explicitly defined via the switch's routing service.
- Use private VLANs to restrict traffic to pass only between data ports and the uplink ports, thereby isolating adjacent ports within the same VLAN, and allowing you to limit the total number of VLANs that need to be configured.
- Use protocol VLANs to restrict traffic to specified interfaces based on protocol type.

**Traffic Prioritization** – This switch prioritizes each packet based on the required level of service, using eight priority queues with strict or Weighted Round Robin Queuing. It uses IEEE 802.1p and 802.1Q tags to prioritize incoming traffic based on input from the end-station application. These functions can be used to provide independent priorities for delay-sensitive data and best-effort data.

This switch also supports several common methods of prioritizing layer 3/4 traffic to meet application requirements. Traffic can be prioritized based on the priority bits in the IP frame's Type of Service (ToS) octet or the number of the TCP/UDP port. When these services are enabled, the priorities are mapped to a Class of Service value by the switch, and the traffic then sent to the corresponding output queue.

**IP Routing** – The switch provides Layer 3 IP routing. To maintain a high rate of throughput, the switch forwards all traffic passing within the same segment, and routes only traffic that passes between different subnetworks. The wire-speed routing provided by this switch lets you easily link network segments or VLANs together without having to deal with the bottlenecks or configuration hassles normally associated with conventional routers.

Routing for unicast traffic is supported with the Routing Information Protocol (RIP). This protocol uses a distance-vector approach to routing. Routes are determined on the basis of minimizing the distance vector, or hop count, which serves as a rough estimate of transmission cost.

**Address Resolution Protocol** – The switch uses ARP and Proxy ARP to convert between IP addresses and MAC (i.e., hardware) addresses. This switch supports conventional ARP, which locates the MAC address corresponding to a given IP address. This allows the switch to use IP addresses for routing decisions and the corresponding MAC addresses to forward packets from one hop to the next. You can configure either static or dynamic entries in the ARP cache.

Proxy ARP allows hosts that do not support routing to determine the MAC address of a device on another network or subnet. When a host sends an ARP request for a remote network, the switch checks to see if it has the best route. If it does, it sends its own MAC address to the host. The host then sends traffic for the remote destination via the switch, which uses its own routing table to reach the destination on the other network.

**Quality of Service** – Differentiated Services (DiffServ) provides policy-based management mechanisms used for prioritizing network resources to meet the requirements of specific traffic types on a per-hop basis. Each packet is classified upon entry into the network based on access lists, IP Precedence or DSCP values, or VLAN lists. Using access lists allows you select traffic based on Layer 2, Layer 3, or Layer 4 information contained in each packet. Based on network policies, different kinds of traffic can be marked for different kinds of forwarding.

**Multicast Filtering** – Specific multicast traffic can be assigned to its own VLAN to ensure that it does not interfere with normal network traffic and to guarantee real-time delivery by setting the required priority level for the designated VLAN. The switch uses IGMP Snooping and Query to manage multicast group registration.



# System Defaults

The switch’s system defaults are provided in the configuration file “Factory\_Default\_Config.cfg.” To reset the switch defaults, this file should be set as the startup configuration file (page 5-48).

The following table lists some of the basic system defaults.

**Table 1-2 System Defaults**

Function	Parameter	Default
Console Port Connection	Baud Rate	auto
	Data bits	8
	Stop bits	1
	Parity	none
	Local Console Timeout	0 (disabled)
Authentication	Privileged Exec Level	Username “admin” Password “admin”
	Normal Exec Level	Username “guest” Password “guest”
	Enable Privileged Exec from Normal Exec Level	Password “super”
	RADIUS Authentication	Disabled
	TACACS Authentication	Disabled
	802.1X Port Authentication	Disabled
	HTTPS	Enabled
	SSH	Disabled
	Port Security	Disabled
	IP Filtering	Disabled

**Table 1-2 System Defaults** (Continued)

<b>Function</b>	<b>Parameter</b>	<b>Default</b>
Web Management	HTTP Server	Enabled
	HTTP Port Number	80
	HTTP Secure Server	Enabled
	HTTP Secure Port Number	443
SNMP	SNMP Agent	Enabled
	Community Strings	“public” (read only) “private” (read/write)
	Traps	Authentication traps: enabled Link-up-down events: enabled
	SNMP V3	View: defaultview Group: public (read only); private (read/write)
Port Configuration	Admin Status	Enabled
	Auto-negotiation	Enabled
	Flow Control	Disabled
Rate Limiting	Input and output limits	Disabled
Port Trunking	Static Trunks	None
	LACP (all ports)	Disabled
Broadcast Storm Protection	Status	Enabled (all ports)
	Broadcast Limit Rate	500 packets per second
Spanning Tree Algorithm	Status	Enabled, RSTP (Defaults: All values based on IEEE 802.1w)
	Fast Forwarding (Edge Port)	Disabled
Address Table	Aging Time	300 seconds

Table 1-2 System Defaults (Continued)

Function	Parameter	Default
Virtual LANs	Default VLAN	1
	PVID	1
	Acceptable Frame Type	All
	Ingress Filtering	Disabled
	Switchport Mode (Egress Mode)	Hybrid: tagged/untagged frames
	GVRP (global)	Disabled
	GVRP (port interface)	Disabled
Traffic Prioritization	Ingress Port Priority	0
	Queue Mode	WRR
	Weighted Round Robin	Queue: 0 1 2 3 4 5 6 7 Weight: 1 2 4 6 8 10 12 14
	IP Precedence Priority	Disabled
	IP DSCP Priority	Disabled
	IP Port Priority	Disabled

**Table 1-2 System Defaults (Continued)**

Function	Parameter	Default
IP Settings	Management. VLAN	Any VLAN configured with an IP address
	IP Address	0.0.0.0
	Subnet Mask	255.0.0.0
	Default Gateway	0.0.0.0
	DHCP	Client: Enabled Relay: Disabled Server: Disabled
	DNS	Clinet/Proxy: Disabled
	BOOTP	Disabled
	ARP	Enabled Cache Timeout: 20 minutes Proxy: Disabled
Unicast Routing	RIP	Disabled
Multicast Filtering	IGMP Snooping	Snooping: Enabled Querier: Disabled
System Log	Status	Enabled
	Messages Logged	Levels 0-7 (all)
	Messages Logged to Flash	Levels 0-3
SMTP Email Alerts	Event Handler	Enabled (but no server defined)
SNTP	Clock Synchronization	Disabled

# CHAPTER 2

## INITIAL CONFIGURATION

---

### Connecting to the Switch

#### Configuration Options

The switch includes a built-in network management agent. The agent offers a variety of management options, including SNMP, RMON and a web-based interface. A PC may also be connected directly to the switch for configuration and monitoring via a command line interface (CLI).

**Note:** An IPv4 address for this switch is obtained via DHCP by default. To change this address, see “Setting an IP Address” on page 2-11.

The switch’s HTTP web agent allows you to configure switch parameters, monitor port connections, and display statistics using a standard web browser such as Netscape Navigator version 6.2 and higher or Microsoft IE version 5.0 and higher. The switch’s web management interface can be accessed from any computer attached to the network.

The CLI program can be accessed by a direct connection to the RS-232 serial console port on the switch, or remotely by a Telnet connection over the network.

The switch’s management agent also supports SNMP (Simple Network Management Protocol). This SNMP agent permits the switch to be managed from any system in the network using network management software such as HP OpenView.

The switch's web interface, CLI configuration program, and SNMP agent allow you to perform the following management functions:

- Set user names and passwords
- Set an IP interface for any VLAN
- Configure SNMP parameters
- Enable/disable any port
- Set the speed/duplex mode for any port
- Configure the bandwidth of any port by limiting input or output rates
- Control port access through IEEE 802.1X security or static address filtering
- Filter packets using Access Control Lists (ACLs)
- Configure up to 255 IEEE 802.1Q VLANs
- Enable GVRP automatic VLAN registration
- Configure IP routing for unicast traffic
- Configure IGMP multicast filtering
- Upload and download system firmware via TFTP
- Upload and download switch configuration files via TFTP
- Configure Spanning Tree parameters
- Configure Class of Service (CoS) priority queuing
- Configure up to 6 static or LACP trunks per switch, up to 32 per stack
- Enable port mirroring
- Set broadcast storm control on any port
- Display system information and statistics
- Configure any stack unit through the same IP address

## Required Connections

The switch provides an RS-232 serial port that enables a connection to a PC or terminal for monitoring and configuring the switch. A null-modem console cable is provided with the switch.

**Note:** When configuring a stack, connect to the console port on the Master unit.

Attach a VT100-compatible terminal, or a PC running a terminal emulation program to the switch. You can use the console cable provided with this package, or use a null-modem cable that complies with the wiring assignments shown in the Installation Guide.

To connect a terminal to the console port, complete the following steps:

1. Connect the console cable to the serial port on a terminal, or a PC running terminal emulation software, and tighten the captive retaining screws on the DB-9 connector.
2. Connect the other end of the cable to the RS-232 serial port on the switch.
3. Make sure the terminal emulation software is set as follows:
  - Select the appropriate serial port (COM port 1 or COM port 2).
  - Set to any of the following baud rates: 9600, 19200, 38400, 57600, 115200 (Note: Set to 9600 baud if want to view all the system initialization messages.).
  - Set the data format to 8 data bits, 1 stop bit, and no parity.
  - Set flow control to none.
  - Set the emulation mode to VT100.
  - When using HyperTerminal, select Terminal keys, not Windows keys.

- Notes:**
1. When using HyperTerminal with Microsoft® Windows® 2000, make sure that you have Windows 2000 Service Pack 2 or later installed. Windows 2000 Service Pack 2 fixes the problem of arrow keys not functioning in HyperTerminal's VT100 emulation. See [www.microsoft.com](http://www.microsoft.com) for information on Windows 2000 service packs.
  2. Refer to "Line Commands" on page 20-21 for a complete description of console configuration options.
  3. Once you have set up the terminal correctly, the console login screen will be displayed.

For a description of how to use the CLI, see "Using the Command Line Interface" on page 18-1. For a list of all the CLI commands and detailed information on using the CLI, refer to "Command Groups" on page 18-12.

## Remote Connections

Prior to accessing the switch's onboard agent via a network connection, you must first configure it with a valid IP address, subnet mask, and default gateway using a console connection, DHCP or BOOTP protocol.

An IPv4 address for this switch is obtained via DHCP by default. To manually configure this address or enable dynamic address assignment via DHCP or BOOTP, see "Setting an IP Address" on page 2-11.

- Notes:**
1. This switch supports four concurrent Telnet/SSH sessions.
  2. Each VLAN group can be assigned its own IP interface address (page 2-11). You can manage the stack via any IP interface in the stack. In other words, the Master unit does not have to include an active port member of a VLAN interface used for management access.
  3. Any VLAN group can be assigned an IP interface address (page 2-11) for managing the stack. Also, note that the Master



unit does not have to include an active port member in the VLAN interface used for management access.

After configuring the switch's IP parameters, you can access the onboard configuration program from anywhere within the attached network. The onboard configuration program can be accessed using Telnet from any computer attached to the network. The switch can also be managed by any computer using a web browser (Internet Explorer 5.0 or above, or Netscape Navigator 6.2 or above), or from a network computer using SNMP network management software.

**Note:** The onboard program only provides access to basic configuration functions. To access the full range of SNMP management functions, you must use SNMP-based network management software.

## Stack Operations

Up to eight 24-port or 48-port Gigabit switches can be stacked together as described in the *Installation Guide*. One unit in the stack acts as the Master for configuration tasks and firmware upgrade. All of the other units function in Slave mode, but can automatically take over management of the stack if the Master unit fails.

To configure any unit in the stack, first verify the unit number from the front panel of the switch, and then select the appropriate unit number from the web or console management interface.

### Selecting the Stack Master

Note the following points about unit numbering:

- When the stack is initially powered on, the Master unit is selected based on the following rules:
  - If the Master/Slave push button is depressed on only one unit in the stack, that unit will serve as the stack Master.

- If Master/Slave push button is depressed on more than one unit, the system will select the unit with the lowest MAC address from those with the push button depressed as the stack Master.
- If Master/Slave push button is not depressed on any unit, the system will select the unit with the lowest MAC address as the stack Master.
- When the stack is initially powered on, the Master unit is designated as unit 1 for a ring topology. For a line topology, the stack is simply numbered from top to bottom, with the first unit in the stack designated as unit 1. This unit identification number appears on the Stack Unit ID LED on the front panel of the switch. It can also be selected on the front panel graphic of the web interface, or from the CLI.
- If the Master unit fails and another unit takes over control of the stack, the unit numbering will not change.
- If a unit in the stack fails or is removed from the stack, the unit numbers will not change. This means that when you replace a unit in the stack, the original configuration for the failed unit will be restored to the replacement unit.
- If a unit is removed from the stack and later reattached to the stack, it will retain the original unit number obtained during stacking.
- If a unit is removed from the stack, and powered up as a stand-alone unit, it will also retain the original unit number obtained during stacking.

### Selecting the Backup Unit

Once the Master unit finishes booting up, it continues to synchronize configuration information to all of the Slave units in the stack. If the Master unit fails or is powered off, a new master unit will be selected based on the election rules described in the preceding section. The backup unit elected to serve as the new stack Master will take control of the stack without any loss of configuration settings. To ensure a logical fail over to next unit down in the stack, place the Slave unit with the lowest MAC address directly beneath the Master unit in the stack.

## **Recovering from Stack Failure or Topology Change**

When a link or unit in the stack fails, a trap message is sent and a failure event is logged. The stack will be rebooted after any system failure or topology change. It takes two to three minutes for the stack to reboot. If the Master unit fails, the backup unit will take over operations as the new Master unit, reboot the stack, and then select another backup unit after the stack finishes rebooting. Also note that powering down a unit or inserting a new unit in the stack will cause the stack to reboot. If a unit is removed from the stack (due to a power down or failure) or a new unit added to the stack, the original unit IDs are not affected after rebooting, and a new unit is assigned the lowest available unit ID.

## **Broken Link for Line and Wrap-around Topologies**

All units in the stack must be connected via stacking cable. You can connect the units in a simple cascade configuration from the top to the bottom unit. Using this kind of line topology, if any link or unit in the stack fails, the stack will be broken in two. The Stack Link LED on the unit that is no longer receiving traffic from the next unit up or down in the stack will begin flashing to indicate that the stack link is broken.

When the stack fails, a Master unit is selected from the two stack segments, either the unit with the Master button depressed, or the unit with the lowest MAC address if the Master button is not depressed on any unit. The stack reboots and resumes operations. However, note that the IP address will be the same for any common VLANs (with active port connections) that appear in both of the new stack segments. To resolve the conflicting IP addresses, you should manually replace the failed link or unit as soon as possible. If you are using a wrap-around stack topology, a single point of failure in the stack will not cause the stack to fail. It would take two or more points of failure to break the stack apart.

**Note:** If a stack breaks apart, the IP address will be the same for any common VLANs (with active port connections) that appear in both stack segments.

### **Resilient IP Interface for Management Access**

The stack functions as one integral system for management and configuration purposes. You can therefore manage the stack through any IP interface configured on the stack. The Master unit does not even have to include an active port member in the VLAN interface used for management access. However, if the unit to which you normally connect for management access fails, and there are no active port members on the other units within this VLAN interface, then this IP address will no longer be available. To retain a constant IP address for management access across fail over events, you should include port members on several units within the primary VLAN used for stack management.

### **Resilient Configuration**

If a unit in the stack fails, the unit numbers will not change. This means that when you replace a unit in the stack, the original configuration for the failed unit will be restored to the replacement unit. This applies to both the Master and Slave units.

### **Renumbering the Stack**

The startup configuration file maps configuration settings to each switch in the stack based on the unit identification number. If the units are no longer numbered sequentially after several topology changes or failures, you can reset the unit numbers using the “Renumbering” command in the web interface or CLI. Just remember to save the new configuration settings to a startup configuration file prior to powering off the stack Master.

### **Ensuring Consistent Code is Used Across the Stack**

Consistent Runtime Code in Each Switch – The main board runtime firmware version for each unit in the stack must be the same as the Master unit’s runtime firmware. After Auto-ID assignment is completed, the Master unit checks the image versions for consistency. If the firmware versions (i.e., runtime code) configured for bootup on any slave units are

not the same as those on the Master Unit, the stack will operate in Special Stacking Mode in which all backup units are disabled as described below:

- The master unit starts normal operation mode in standalone mode.
- The master unit can see all units in the stack and maintain stack topology.
- None of the other units can function (all ports will be disabled).
- All user-initiated commands to configure the non-functioning units are dropped. The master unit, however, will be able to communicate the following information to the non-functioning units:
  - Image downloads
  - Stack topology information
  - System configuration information already stored on the master.

In Special Stacking mode, the master unit displays warning messages whenever you log into the system through the CLI that inform you that an image download is required.

You can use the CLI, web or SNMP to download the runtime image from a TFTP server to the master unit. The master unit stores the image as its “Next boot image” and downloads the image to those backup units that are running a different image version. For information on downloading firmware, see “Managing Firmware” on page 5-44 or “File Management Commands” on page 20-12.

## **Basic Configuration**

### **Console Connection**

The CLI program provides two different command levels — normal access level (Normal Exec) and privileged access level (Privileged Exec). The commands available at the Normal Exec level are a limited subset of those available at the Privileged Exec level and allow you to only display information and use basic utilities. To fully configure the switch parameters, you must access the CLI at the Privileged Exec level.

**Note:** You can only access the console interface through the Master unit in the stack.

Access to both CLI levels are controlled by user names and passwords. The switch has a default user name and password for each level. To log into the CLI at the Privileged Exec level using the default user name and password, perform these steps:

1. To initiate your console connection, press <Enter>. The “User Access Verification” procedure starts.
2. At the Username prompt, enter “admin.”
3. At the Password prompt, also enter “admin.” (The password characters are not displayed on the console screen.)
4. The session is opened and the CLI displays the “Console#” prompt indicating you have access at the Privileged Exec level.

### Setting Passwords

**Note:** If this is your first time to log into the CLI program, you should define new passwords for both default user names using the “username” command, record them and put them in a safe place.

Passwords can consist of up to 8 alphanumeric characters and are case sensitive. To prevent unauthorized access to the switch, set the passwords as follows:

1. Open the console interface with the default user name and password “admin” to access the Privileged Exec level.
2. Type “configure” and press <Enter>.
3. Type “username guest password 0 *password*,” for the Normal Exec level, where *password* is your new password. Press <Enter>.

4. Type “username admin password 0 *password*,” for the Privileged Exec level, where *password* is your new password. Press <Enter>.

```
Username: admin
Password:

CLI session with the TigerStackII 10/100/1000 is opened.
To end the CLI session, enter [Exit].

Console#configure                               19-3
Console(config)#username guest password 0 [password] 22-2
Console(config)#username admin password 0 [password]
Console(config)#
```

## Setting an IP Address

You must establish IP address information for the stack to obtain management access through the network. This can be done in either of the following ways:

**Manual** — You have to input the information, including IP address and subnet mask. If your management station is not in the same IP subnet as the stack’s master unit, you will also need to specify the default gateway router.

**Dynamic** — The switch sends IP configuration requests to BOOTP or DHCP address allocation servers on the network.

### Manual Configuration

You can manually assign an IP address to the switch. You may also need to specify a default gateway that resides between this device and management stations that exist on another network segment (if routing is not enabled on this switch). Valid IP addresses consist of four decimal numbers, 0 to 255, separated by periods. Anything outside this format will not be accepted by the CLI program.

**Note:** An IPv4 address for this switch is obtained via DHCP by default.

### *Assigning an IPv4 Address*

Before you can assign an IP address to the switch, you must obtain the following information from your network administrator:

- IP address for the switch
- Network mask for this network
- Default gateway for the network

To assign an IPv4 address to the switch, complete the following steps:

1. From the Global Configuration mode prompt, type “interface vlan 1” to access the interface-configuration mode. Press <Enter>.
2. Type “ip address *ip-address netmask*,” where “ip-address” is the switch IP address and “netmask” is the network mask for the network. Press <Enter>.
3. Type “exit” to return to the global configuration mode prompt. Press <Enter>.
4. To set the IP address of the default gateway for the network to which the switch belongs, type “ip default-gateway *gateway*,” where “gateway” is the IP address of the default gateway. Press <Enter>.

```
Console(config)#interface vlan 1                24-2
Console(config-if)#ip address 192.168.1.5 255.255.255.0 36-4
Console(config-if)#exit
Console(config)#ip default-gateway 192.168.1.254 36-6
Console(config)#
```

### *Assigning an IPv6 Address*

There are several ways to manually configure IPv6 addresses. This section describes how to configure a “link local” address for connectivity within the local subnet only, and another option that allows you to specify a “global unicast” address by first configuring a network prefix for use on a multi-segment network, and then configuring the host address portion of the address.

An IPv6 prefix or address must be formatted according to RFC 2373 “IPv6 Addressing Architecture,” using 8 colon-separated 16-bit hexadecimal values. One double colon may be used to indicate the



appropriate number of zeros required to fill the undefined fields. For detailed information on the other ways to assign IPv6 addresses, see “Setting the Switch’s IP Address (IP Version 6)” on page 5-29.

**Link Local Address** — All link-local addresses must be configured with a prefix of FE80. Remember that this address type makes the switch accessible over IPv6 for all devices attached to the same local subnet only. Also, if the switch detects that the address you configured conflicts with that in use by another device on the subnet, it will stop using the address in question, and automatically generate a link local address that does not conflict with any other devices on the local subnet.

To configure an IPv6 link local address for the switch, complete the following steps:

1. From the Global Configuration mode prompt, type “interface vlan 1” to access the interface-configuration mode. Press <Enter>.
2. Type “ipv6 address” followed by up to 8 colon-separated 16-bit hexadecimal values for the *ipv6-address* similar to that shown in the example, followed by the “link-local” command parameter. Then press <Enter>.

```

Console(config)#interface vlan 1                                24-2
Console(config-if)#ipv6 address FE80::260:3EFF:FE11:6700        36-14
  link-local
Console(config-if)#end
Console#show ipv6 interface                                    36-22
Vlan 1 is up
IPv6 is enable.
Link-local address:
  FE80::260:3EFF:FE11:6700/64
Global unicast address(es):
Joined group address(es):
  FF01::1/16
  FF02::1/16
  FF02::1:FE11:6700/104
MTU is 1500 bytes.
ND DAD is enabled, number of DAD attempts: 1.
ND retransmit interval is 1000 milliseconds
Console#

```

Address for Multi-segment Network — Before you can assign an IPv6 address to the switch that will be used to connect to a multi-segment network, you must obtain the following information from your network administrator:

- Prefix for this network
- IP address for the switch
- Default gateway for the network

For most networks that encompass several different subnets, it's easier to first define a network prefix, and then configure the host address for the switch. An IPv6 network prefix is composed of an IPv6-address and prefix length. The prefix length is the number of bits (from the left) of the prefix that form the network address, and is expressed as a decimal number. For example, all IPv6 address that start with the first byte of 73 (hexadecimal) could be expressed as 73:0:0:0:0:0:0/8 or 73::/8.

To generate an IPv6 global unicast address for the switch using a general network prefix, complete the following steps:

1. From the Global Configuration mode prompt, type “`ipv6 general prefix prefix-name ipv6-prefix/prefix-length`,” where the “`prefix-name`” is a label identifying the network segment, “`ipv6-prefix`” specifies the high-order bits of the network address, and “`prefix length`” indicates the actual number of bits used in the network prefix. Press <Enter>.
2. From the global configuration mode prompt, type “`interface vlan 1`” to access the interface-configuration mode. Press <Enter>.
3. From the interface prompt, type “`ipv6 address prefix-name ipv6-address/prefix-length`,” where “`prefix-length`” indicates the address bits used to form the network portion of the address. (The network address starts from the left of the general prefix and should encompass some of the `ipv6-address` bits.) The remaining bits are assigned to the host interface. Press <Enter>.
4. Type “`exit`” to return to the global configuration mode prompt. Press <Enter>.

- To set the IP address of the IPv6 default gateway for the network to which the switch belongs, type “`ipv6 default-gateway gateway`,” where “*gateway*” is the IPv6 address of the default gateway. Press <Enter>.

```

Console(config)#ipv6 general-prefix rd 2001:DB8:2222::/4836-12
Console(config)#interface vlan 124-2
Console(config-if)#ipv6 address rd 0:0:0:7272::72/6436-14
Console(config-if)#exit
Console(config)#ipv6 default-gateway
2001:DB8:2222:7272::25436-24
Console(config)#end
Console#show ipv6 interface36-22
Vlan 1 is up
IPv6 is enable.
Link-local address:
FE80::200:E8FF:FE90:0/64
Global unicast address(es):
2001:DB8:2222:7272::72, subnet is 2001:DB8:2222:7272::/64
Joined group address(es):
FF01::1/16
FF02::1/16
FF02::1:FF72:64/104
FF02::1:FF90:0/104
MTU is 1500 bytes.
ND DAD is enabled, number of DAD attempts: 1.
ND retransmit interval is 1000 milliseconds
Console#show ipv6 default-gateway36-25
ipv6 default gateway: 2001:DB8:2222:7272::254

```

## Dynamic Configuration

### *Obtaining an IPv4 Address*

If you select the “bootp” or “dhcp” option, IP will be enabled but will not function until a BOOTP or DHCP reply has been received. You therefore need to use the “`ip dhcp restart client`” command to start broadcasting service requests. Requests will be sent periodically in an effort to obtain IP configuration information. (BOOTP and DHCP values can include the IP address, subnet mask, and default gateway.)

If the “bootp” or “dhcp” option is saved to the startup-config file (step 6), then the switch will start broadcasting service requests as soon as it is powered on.

To automatically configure the switch by communicating with BOOTP or DHCP address allocation servers on the network, complete the following steps:

1. From the Global Configuration mode prompt, type “interface vlan 1” to access the interface-configuration mode. Press <Enter>.
2. At the interface-configuration mode prompt, use one of the following commands:
  - To obtain IP settings via DHCP, type “ip address dhcp” and press <Enter>.
  - To obtain IP settings via BOOTP, type “ip address bootp” and press <Enter>.
3. Type “end” to return to the Privileged Exec mode. Press <Enter>.
4. Type “ip dhcp restart client” to begin broadcasting service requests. Press <Enter>.
5. Wait a few minutes, and then check the IP configuration settings by typing the “show ip interface” command. Press <Enter>.
6. Then save your configuration changes by typing “copy running-config startup-config.” Enter the startup file name and press <Enter>.

```
Console(config)#interface vlan 1                24-2
Console(config-if)#ip address dhcp              36-4
Console(config-if)#end
Console#ip dhcp restart client                  36-7
Console#show ip interface                      36-8

Vlan 1 is up, addressing mode is User Defined
  Interface address is 192.168.0.113, mask is 255.255.255.0, Primary
  MTU is 1500 bytes
  Proxy ARP is disabled
  Split horizon is disabled
Console#copy running-config startup-config      20-13
Startup configuration file name [: startup
\Write to FLASH Programming.

\Write to FLASH finish.
Success.
```

*Obtaining an IPv6 Address*

**Link Local Address** — There are several ways to dynamically configure IPv6 addresses. The simplest method is to automatically generate a “link local” address (identified by an address prefix of FE80). This address type makes the switch accessible over IPv6 for all devices attached to the same local subnet.

To generate an IPv6 link local address for the switch, complete the following steps:

1. From the Global Configuration mode prompt, type “interface vlan 1” to access the interface-configuration mode. Press <Enter>.
2. Type “ipv6 enable” and press <Enter>.

```

Console(config)#interface vlan 1                                24-2
Console(config-if)#ipv6 enable                                  36-10
Console(config-if)#end
Console#show ipv6 interface                                    36-8
Vlan 1 is up
IPv6 is enable.
Link-local address:
  FE80::200:E8FF:FE90:0/64
Global unicast address(es):
Joined group address(es):
  FF01::1/16
  FF02::1/16
  FF02::1:FF90:0/104
MTU is 1500 bytes.
ND DAD is enabled, number of DAD attempts: 1.
ND retransmit interval is 1000 milliseconds
Console#

```

**Address for Multi-segment Network** — To generate an IPv6 address that can be used in a network containing more than one subnet, the switch can be configured to automatically generate a unique host address based on the local subnet address prefix received in router advertisement messages. (DHCP for IPv6 will also be supported in future software releases.)

To dynamically generate an IPv6 host address for the switch, complete the following steps:

1. From the Global Configuration mode prompt, type “interface vlan 1” to access the interface-configuration mode. Press <Enter>.

2. From the interface prompt, type “ipv6 address autoconfig” and press <Enter>.

```
Console(config)#interface vlan 1                24-2
Console(config-if)#ipv6 address autoconfig       36-16
Console(config-if)#end
Console#show ipv6 interface                    36-22
Vlan 1 is up
IPv6 is enable.
Link-local address:
    FE80::212:CFFF:FE0B:4600/64
Global unicast address(es):
    2005::212:CFFF:FE0B:4600, subnet is 2005:0:0:0::/64
    3FFE:501:FFFF:100:212:CFFF:FE0B:4600, subnet is
    3FFE:501:FFFF:100::/64
Joined group address(es):
    FF01::1/16
    FF02::1/16
    FF02::1:FF0B:4600/104
MTU is 1500 bytes.
ND DAD is enabled, number of DAD attempts: 1.
ND retransmit interval is 1000 milliseconds
Console#
```

## Enabling SNMP Management Access

The switch can be configured to accept management commands from Simple Network Management Protocol (SNMP) applications such as HP OpenView. You can configure the switch to (1) respond to SNMP requests or (2) generate SNMP traps.

When SNMP management stations send requests to the switch (either to return information or to set a parameter), the switch provides the requested data or sets the specified parameter. The switch can also be configured to send information to SNMP managers (without being requested by the managers) through trap messages, which inform the manager that certain events have occurred.

The switch includes an SNMP agent that supports SNMP version 1, 2c, and 3 clients. To provide management access for version 1 or 2c clients, you must specify a community string. The switch provides a default MIB View (i.e., an SNMPv3 construct) for the default “public” community string that provides read access to the entire MIB tree, and a default view for the “private” community string that provides read/write access to the

entire MIB tree. However, you may assign new views to version 1 or 2c community strings that suit your specific security requirements (see page 5-78).

### Community Strings (for SNMP version 1 and 2c clients)

Community strings are used to control management access to SNMP version 1 and 2c stations, as well as to authorize SNMP stations to receive trap messages from the switch. You therefore need to assign community strings to specified users, and set the access level.

The default strings are:

- **public** - with read-only access. Authorized management stations are only able to retrieve MIB objects.
- **private** - with read-write access. Authorized management stations are able to both retrieve and modify MIB objects.

To prevent unauthorized access to the switch from SNMP version 1 or 2c clients, it is recommended that you change the default community strings.

To configure a community string, complete the following steps:

1. From the Privileged Exec level global configuration mode prompt, type “snmp-server community *string mode*,” where “string” is the community access string and “mode” is **rw** (read/write) or **ro** (read only). Press <Enter>. (Note that the default mode is read only.)
2. To remove an existing string, simply type “no snmp-server community *string*,” where “string” is the community access string to remove. Press <Enter>.

<pre>Console(config)#snmp-server community admin rw Console(config)#snmp-server community private Console(config)#</pre>	21-4
--	------

**Note:** If you do not intend to support access to SNMP version 1 and 2c clients, we recommend that you delete both of the default community strings. If there are no community strings, then SNMP management access from SNMP v1 and v2c clients is disabled.

## Trap Receivers

You can also specify SNMP stations that are to receive traps from the switch. To configure a trap receiver, use the “snmp-server host” command. From the Privileged Exec level global configuration mode prompt, type:

```
“snmp-server host host-address community-string  
[version {1 | 2c | 3 {auth | noauth | priv}}]”
```

where “host-address” is the IP address for the trap receiver, “community-string” specifies access rights for a version 1/2c host, or is the user name of a version 3 host, “version” indicates the SNMP client version, and “auth | noauth | priv” means that authentication, no authentication, or authentication and privacy is used for v3 clients. Then press <Enter>. For a more detailed description of these parameters, see “snmp-server host” on page 21-6. The following example creates a trap host for each type of SNMP client.

```
Console(config)#snmp-server host 10.1.19.23 batman 21-6  
Console(config)#snmp-server host 10.1.19.98 robin version 2c  
Console(config)#snmp-server host 10.1.19.34 barbie version 3 auth  
Console(config)#
```

## Configuring Access for SNMP Version 3 Clients

To configure management access for SNMPv3 clients, you need to first create a view that defines the portions of MIB that the client can read or write, assign the view to a group, and then assign the user to a group. The following example creates one view called “mib-2” that includes the entire MIB-2 tree branch, and then another view that includes the IEEE 802.1d bridge MIB. It assigns these respective read and read/write views to a group call “r&d” and specifies group authentication via MD5 or SHA. In



the last step, it assigns a v3 user to this group, indicating that MD5 will be used for authentication, provides the password “greenpeace” for authentication, and the password “einstien” for encryption.

```

Console(config)#snmp-server view mib-2 1.3.6.1.2.1 included 21-13
Console(config)#snmp-server view 802.1d 1.3.6.1.2.1.17 included
Console(config)#snmp-server group r&d v3 auth mib-2 802.1d 21-15
Console(config)#snmp-server user steve group r&d v3 auth md5
greenpeace priv des56 einstien 21-18
Console(config)#

```

For a more detailed explanation on how to configure the switch for access from SNMP v3 clients, refer to “Simple Network Management Protocol” on page 5-63, or refer to the specific CLI commands for SNMP starting on page 21-1.

## Managing System Files

The switch’s flash memory supports three types of system files that can be managed by the CLI program, web interface, or SNMP. The switch’s file system allows files to be uploaded and downloaded, copied, deleted, and set as a start-up file.

The three types of files are:

- **Configuration** — This file type stores system configuration information and is created when configuration settings are saved. Saved configuration files can be selected as a system start-up file or can be uploaded via TFTP to a server for backup. The file named “Factory\_Default\_Config.cfg” contains all the system default settings and cannot be deleted from the system. If the system is booted with the factory default settings, the master unit will also create a file named “startup1.cfg” that contains system settings for stack initialization, including information about the unit identifier, MAC address, and installed module type for each unit the stack. The configuration settings from the factory defaults configuration file are copied to this file, which is then used to boot the stack. See “Saving or Restoring

Configuration Settings” on page 5-47 for more information. See “Saving or Restoring Configuration Settings” on page 5-47 for more information.

- **Operation Code** — System software that is executed after boot-up, also known as run-time code. This code runs the switch operations and provides the CLI and web management interfaces. See “Managing Firmware” on page 5-44 for more information.
- **Diagnostic Code** — Software that is run during system boot-up, also known as POST (Power On Self-Test).

Due to the size limit of the flash memory, the switch supports only two operation code files. However, you can have as many diagnostic code files and configuration files as available flash memory space allows. The switch has a total of 32 Mbytes of flash memory for system files.

In the system flash memory, one file of each type must be set as the start-up file. During a system boot, the diagnostic and operation code files set as the start-up file are run, and then the start-up configuration file is loaded.

Note that configuration files should be downloaded using a file name that reflects the contents or usage of the file settings. If you download directly to the running-config, the system will reboot, and the settings will have to be copied from the running-config to a permanent file.

### Saving Configuration Settings

Configuration commands only modify the running configuration file and are not saved when the switch is rebooted. To save all your configuration changes in nonvolatile storage, you must copy the running configuration file to the start-up configuration file using the “copy” command.

New startup configuration files must have a name specified. File names on the switch are case-sensitive, can be from 1 to 31 characters, must not contain slashes (\ or /), and the leading letter of the file name must not be a period (.). (Valid characters: A-Z, a-z, 0-9, “.”, “-”, “\_”)

There can be more than one user-defined configuration file saved in the switch's flash memory, but only one is designated as the "startup" file that is loaded when the switch boots. The **copy running-config startup-config** command always sets the new file as the startup file. To select a previously saved configuration file, use the **boot system config:<filename>** command.

The maximum number of saved configuration files depends on available flash memory, with each configuration file normally requiring less than 20 kbytes. The amount of available flash memory can be checked by using the **dir** command.

To save the current configuration settings, enter the following command:

1. From the Privileged Exec mode prompt, type "copy running-config startup-config" and press <Enter>.
2. Enter the name of the start-up file. Press <Enter>.

```
Console#copy running-config startup-config                20-13
Startup configuration file name []: startup
\Write to FLASH Programming.

\Write to FLASH finish.
Success.

Console#
```



# SECTION II

## SWITCH MANAGEMENT

---

This section describes the basic switch features, along with a detailed description of how to configure each feature via a web browser, and a brief example for the Command Line Interface.

Configuring the Switch .....	3-1
Basic Management Tasks .....	4-1
Simple Network Management Protocol .....	5-1
User Authentication .....	6-1
Access Control Lists .....	7-1
Port Configuration .....	8-1
Address Table Settings .....	9-1
Spanning Tree Algorithm .....	10-1
VLAN Configuration .....	11-1
Class of Service .....	12-1
Quality of Service .....	13-1
Multicast Filtering .....	14-1
Domain Name Service .....	15-1
Dynamic Host Configuration Protocol .....	16-1
IP Routing .....	17-1

## *SWITCH MANAGEMENT*

# CHAPTER 3

## CONFIGURING THE SWITCH

---

### Using the Web Interface

This switch provides an embedded HTTP web agent. Using a web browser you can configure the switch and view statistics to monitor network activity. The web agent can be accessed by any computer on the network using a standard web browser (Internet Explorer 5.0 or above, or Netscape Navigator 6.2 or above).

**Note:** You can also use the Command Line Interface (CLI) to manage the switch over a serial connection to the console port or via Telnet. For more information on using the CLI, refer to Chapter 18 “Overview of the Command Line Interface.”

Prior to accessing the switch from a web browser, be sure you have first performed the following tasks:

1. Configure the switch with a valid IP address, subnet mask, and default gateway using an out-of-band serial connection, BOOTP or DHCP protocol. (See “Setting an IP Address” on page 2-11.)
2. Set user names and passwords using an out-of-band serial connection. Access to the web agent is controlled by the same user names and passwords as the onboard configuration program. (See “Setting Passwords” on page 2-10.)
3. After you enter a user name and password, you will have access to the system configuration program.

- Notes:**
1. You are allowed three attempts to enter the correct password; on the third failed attempt the current connection is terminated.
  2. If you log into the web interface as guest (Normal Exec level), you can view the configuration settings or change the guest password. If you log in as “admin” (Privileged Exec level), you can change the settings on any page.
  3. If the path between your management station and this switch does not pass through any device that uses the Spanning Tree Algorithm, then you can set the switch port attached to your management station to fast forwarding (i.e., enable Admin Edge Port) to improve the switch’s response time to management commands issued through the web interface. See “Configuring Interface Settings” on page 10-17.



## Navigating the Web Browser Interface

To access the web-browser interface you must first enter a user name and password. The administrator has Read/Write access to all configuration parameters and statistics. The default user name and password “admin” is used for the administrator.

### Home Page

When your web browser connects with the switch’s web agent, the home page is displayed as shown below. The home page displays the Main Menu on the left side of the screen and System Information on the right side. The Main Menu links are used to navigate to other menus, and display configuration parameters and statistics.

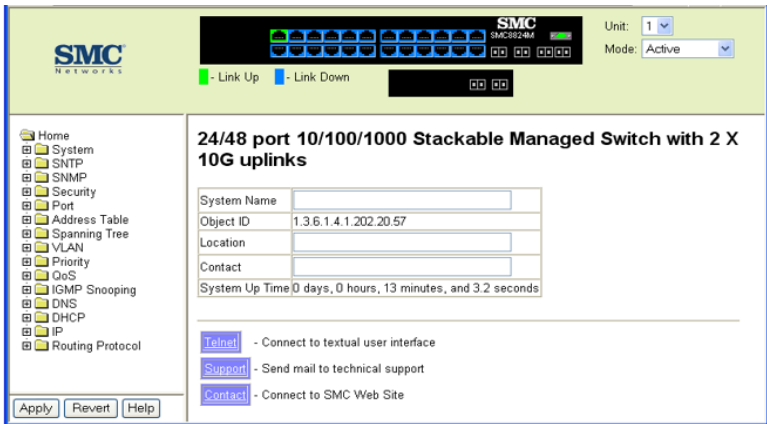


Figure 3-1 Home Page

**Note:** The examples in this chapter are based on the SMC8824M. Other than the number of fixed ports, there are no other differences between the SMC8824M and SMC8848M. The panel graphics for both switch types are shown on the following page.

## Configuration Options

Configurable parameters have a dialog box or a drop-down list. Once a configuration change has been made on a page, be sure to click on the Apply button to confirm the new setting. The following table summarizes the web page configuration buttons.

**Table 3-1 Web Page Configuration Buttons**

Button	Action
Apply	Sets specified values to the system.
Revert	Cancels specified values and restores current values prior to pressing “Apply.”
Help	Links directly to web help.

- Notes:**
1. To ensure proper screen refresh, be sure that Internet Explorer 5.x is configured as follows: Under the menu “Tools / Internet Options / General / Temporary Internet Files / Settings,” the setting for item “Check for newer versions of stored pages” should be “Every visit to the page.”
  2. When using Internet Explorer 5.0, you may have to manually refresh the screen after making configuration changes by pressing the browser’s refresh button.

## Panel Display

The web agent displays an image of the switch's ports. The Mode can be set to display different information for the ports, including Active (i.e., up or down), Duplex (i.e., half or full duplex), or Flow Control (i.e., with or without flow control). Clicking on the image of a port opens the Port Configuration page as described on page 8-4.

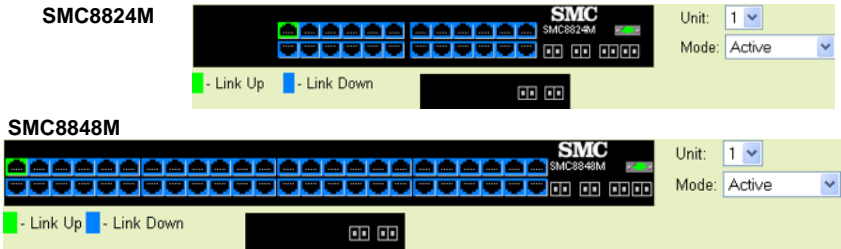


Figure 3-2 Front Panel Indicators

Main Menu

Using the onboard web agent, you can define system parameters, manage and control the switch, and all its ports, or monitor network conditions. The following table briefly describes the selections available from this program.

Table 3-2 Switch Main Menu

Menu	Description	Page
System		4-1
System Information	Provides basic system description, including contact information	4-1
Switch Information	Shows the number of ports, hardware/ firmware version numbers, and power status	4-4
Bridge Extension	Shows the bridge extension parameters	4-6
IPv6 Configuration	Configures IPv6 interface addresses and static neighbors	4-13
IPv6 Configuration	Configures IPv6 interface address and protocol settings	4-13
IPv6 General Prefix	Configures IPv6 general prefix for network portion of addresses	4-22
IPv6 Neighbor	Configures IPv6 neighbor discover protocol and static neighbors	4-24
Jumbo Frames	Enables support for jumbo frames	4-13
File Management		4-29
Copy Operation	Allows the transfer and copying files	4-30
Delete	Allows deletion of files from the flash memory	4-30
Set Startup	Sets the startup file	4-30
Line		4-36
Console	Sets console port connection parameters	4-36
Telnet	Sets Telnet connection parameters	4-38

**Table 3-2 Switch Main Menu (Continued)**

<b>Menu</b>	<b>Description</b>	<b>Page</b>
Log		4-41
Logs	Sends error messages to a logging process	4-45
System Logs	Stores and displays error messages	4-41
Remote Logs	Configures the logging of messages to a remote logging process	4-43
SMTP	Sends an SMTP client message to a participating server	4-46
Renumbering	Renumbers the units in the stack	4-48
Reset	Restarts the switch	4-49
SNTP		4-50
Configuration	Configures SNTP client settings, including a specified list of servers	4-50
Clock Time Zone	Sets the local time zone for the system clock	4-51
SNMP		5-1
Configuration	Configures community strings and related trap functions	5-4
Agent Status	Enables or disables SNMP	5-4
SNMPv3		5-10
Engine ID	Sets the SNMP v3 engine ID	5-10
Remote Engine ID	Sets the SNMP v3 engine ID on a remote device	5-11
Users	Configures SNMP v3 users	5-12
Remote Users	Configures SNMP v3 users on a remote device	5-15
Groups	Configures SNMP v3 groups	5-18
Views	Configures SNMP v3 views	5-24
Security		6-1
User Accounts	Configures user names, passwords, and access levels	6-1

**Table 3-2 Switch Main Menu (Continued)**

Menu	Description	Page
Authentication Settings	Configures authentication sequence, RADIUS and TACACS	6-3
HTTPS Settings	Configures secure HTTP settings	6-7
SSH		6-10
Settings	Configures Secure Shell server settings	6-16
Host-Key Settings	Generates the host key pair (public and private)	6-13
Port Security	Configures per port security, including status, response for security breach, and maximum allowed MAC addresses	6-18
802.1X	Port authentication	6-21
Information	Displays global configuration settings	6-22
Configuration	Configures global configuration parameters	6-23
Port Configuration	Sets the authentication mode for individual ports	6-24
Statistics	Displays protocol statistics for the selected port	6-27
ACL		7-1
Configuration	Configures packet filtering based on IP or MAC addresses	7-1
Port Binding	Binds a port to the specified ACL	7-13
IP Filter	Configures IP addresses that are allowed management access	6-29
Port		8-1
Port Information	Displays port connection status	8-1
Trunk Information	Displays trunk connection status	8-1
Port Configuration	Configures port connection settings	8-4
Trunk Configuration	Configures trunk connection settings	8-4
Trunk Membership	Specifies ports to group into static trunks	8-9

**Table 3-2 Switch Main Menu (Continued)**

Menu	Description	Page
LACP		8-11
Configuration	Allows ports to dynamically join trunks	8-11
Aggregation Port	Configures parameters for link aggregation group members	8-13
Port Counters Information	Displays statistics for LACP protocol messages	8-17
Port Internal Information	Displays settings and operational state for the local side	8-18
Port Neighbors Information	Displays settings and operational state for the remote side	8-21
Port Broadcast Control	Sets the broadcast storm threshold for each port	8-23
Trunk Broadcast Control	Sets the broadcast storm threshold for each trunk	8-23
Mirror Port Configuration	Sets the source and target ports for mirroring	8-25
Rate Limit		8-26
Input Port Configuration	Sets the input rate limit for each port	8-26
Input Trunk Configuration	Sets the input rate limit for each trunk	8-26
Output Port Configuration	Sets the output rate limit for each port	8-26
Output Trunk Configuration	Sets the output rate limit for each trunk	8-26
Port Statistics	Lists Ethernet and RMON port statistics	8-28
Address Table		9-1
Static Addresses	Displays entries for interface, address or VLAN	9-1
Dynamic Addresses	Displays or edits static entries in the Address Table	9-3

**Table 3-2 Switch Main Menu (Continued)**

Menu	Description	Page
Address Aging	Sets timeout for dynamically learned entries	9-5
Spanning Tree		10-1
STA		
Information	Displays STA values used for the bridge	10-4
Configuration	Configures global bridge settings for STP, RSTP and MSTP	10-8
Port Information	Displays individual port settings for STA	10-13
Trunk Information	Displays individual trunk settings for STA	10-13
Port Configuration	Configures individual port settings for STA	10-17
Trunk Configuration	Configures individual trunk settings for STA	10-17
MSTP		
VLAN Configuration	Configures priority and VLANs for a spanning tree instance	10-21
Port Information	Displays port settings for a specified MST instance	10-24
Trunk Information	Displays trunk settings for a specified MST instance	10-24
Port Configuration	Configures port settings for a specified MST instance	10-26
Trunk Configuration	Configures trunk settings for a specified MST instance	10-26
VLAN		11-1
802.1Q VLAN		11-1
GVRP Status	Enables GVRP VLAN registration protocol	11-5
Basic Information	Displays information on the VLAN type supported by this switch	11-6
Current Table	Shows the current port members of each VLAN and whether or not the port is tagged or untagged	11-7
Static List	Used to create or remove VLAN groups	11-8



**Table 3-2 Switch Main Menu (Continued)**

Menu	Description	Page
Static Table	Modifies the settings for an existing VLAN	11-10
Static Membership by Port	Configures membership type for interfaces, including tagged, untagged or forbidden	11-13
Port Configuration	Specifies default PVID and VLAN attributes	11-14
Trunk Configuration	Specifies default trunk VID and VLAN attributes	11-14
Private VLAN		11-17
Status	Enables or disables the private VLAN	11-17
Link Status	Configures the private VLAN	11-18
Protocol VLAN		11-19
Configuration	Creates a protocol group, specifying the supported protocols	11-19
Port Configuration	Maps a protocol group to a VLAN	11-20
Priority		12-1
Default Port Priority	Sets the default priority for each port	12-1
Default Trunk Priority	Sets the default priority for each trunk	12-1
Traffic Classes	Maps IEEE 802.1p priority tags to output queues	12-3
Traffic Classes Status	Enables/disables traffic class priorities (not implemented)	NA
Queue Mode	Sets queue mode to strict priority or Weighted Round-Robin	12-6
Queue Scheduling	Configures Weighted Round Robin queueing	12-7
IP Precedence/ DSCP Priority Status	Globally selects IP Precedence or DSCP Priority, or disables both.	12-8
IP Precedence Priority	Sets IP Type of Service priority, mapping the precedence tag to a class-of-service value	12-10
IP DSCP Priority	Sets IP Differentiated Services Code Point priority, mapping a DSCP tag to a class-of-service value	12-12

**Table 3-2 Switch Main Menu (Continued)**

Menu	Description	Page
IP Port Priority Status	Globally enables or disables IP Port Priority	12-14
IP Port Priority	Sets TCP/UDP port priority, defining the socket number and associated class-of-service value	12-10
QoS		13-1
DiffServ	Configure QoS classification criteria and service policies	13-2
Class Map	Creates a class map for a type of traffic	13-2
Policy Map	Creates a policy map for multiple interfaces	13-6
Service Policy	Applies a policy map defined to an ingress port	13-10
IGMP Snooping		14-2
IGMP Configuration	Enables multicast filtering; configures parameters for multicast query	14-2
Multicast Router Port Information	Displays the ports that are attached to a neighboring multicast router for each VLAN ID	14-5
Static Multicast Router Port Configuration	Assigns ports that are attached to a neighboring multicast router	14-6
IP Multicast Registration Table	Displays all multicast groups active on this switch, including multicast IP addresses and VLAN ID	14-7
IGMP Member Port Table	Indicates multicast addresses associated with the selected VLAN	14-9

**Table 3-2 Switch Main Menu (Continued)**

Menu	Description	Page
DNS		15-1
General Configuration	Enables DNS; configures domain name and domain list; and specifies IP address of name servers for dynamic lookup	15-1
Static Host Table	Configures static entries for domain name to address mapping	15-4
Cache	Displays cache entries discovered by designated name servers	15-6
DHCP		16-1
Relay Configuration	Specifies DHCP relay servers; enables or disables relay service	16-2
Server	Configures DHCP server parameters	16-4
General	Enables DHCP server; configures excluded address range	16-5
Pool Configuration	Configures address pools for network groups or a specific host	16-6
IP Binding	Displays addresses currently bound to DHCP clients	16-11
IP		17-1
General		17-5
Global Settings	Enables or disables routing, specifies the default gateway	17-5
Routing Interface	Configures the IP interface for the specified VLAN	17-7
ARP		17-9
General	Sets the protocol timeout, and enables or disables proxy ARP for the specified VLAN	17-11
Static Addresses	Statically maps a physical address to an IP address	17-13
Dynamic Addresses	Shows dynamically learned entries in the IP routing table	17-14

**Table 3-2 Switch Main Menu (Continued)**

Menu	Description	Page
Other Addresses	Shows internal addresses used by the switch	17-16
Statistics	Shows statistics on ARP requests sent and received	17-17
Statistics		17-19
IP	Shows statistics for IP traffic, including the amount of traffic, address errors, routing, fragmentation and reassembly	17-19
ICMP	Shows statistics for ICMP traffic, including the amount of traffic, protocol errors, and the number of echoes, timestamps, and address masks	17-21
UDP	Shows statistics for UDP, including the amount of traffic and errors	17-24
TCP	Shows statistics for TCP, including the amount of traffic and TCP connection activity	17-25
Routing		17-26
Static Routes	Configures and display static routing entries	17-26
Routing Table	Shows all routing entries, including local, static and dynamic routes	17-28
Routing Protocol		17-30
RIP		17-30
General Settings	Enables or disables RIP, sets the global RIP version and timer values	17-31
Network Addresses	Configures the network interfaces that will use RIP	17-34
Interface Settings	Configures RIP parameters for each interface, including send and receive versions, message loopback prevention, and authentication	17-35

**Table 3-2 Switch Main Menu** (Continued)

<b>Menu</b>	<b>Description</b>	<b>Page</b>
Redistribute Configuration	Imports external routing information from other routing domains into the autonomous system	17-39
Statistics	Displays general information on update time, route changes and number of queries, as well as a list of statistics for known interfaces and neighbors	17-41



# CHAPTER 4

## BASIC MANAGEMENT TASKS

---

This chapter describes the basic functions required to set up management access to the switch, display or upgrade operating software, or reset the system.

### Displaying System Information

You can easily identify the system by displaying the device name, location and contact information.

#### Field Attributes

- **System Name** – Name assigned to the switch system.
- **Object ID** – MIB II object ID for switch's network management subsystem.
- **Location** – Specifies the system location.
- **Contact** – Administrator responsible for the system.
- **System Up Time** – Length of time the management agent has been up.

These additional parameters are displayed for the CLI.

- **System Description** – Brief description of device type.
- **MAC Address** – The physical layer address for this switch.
- **Web Server** – Shows if management access via HTTP is enabled.
- **Web Server Port** – Shows the TCP port number used by the web interface.
- **Web Secure Server** – Shows if management access via HTTPS is enabled.

- **Web Secure Server Port** – Shows the TCP port used by the HTTPS interface.
- **Telnet Server** – Shows if management access via Telnet is enabled.
- **Telnet Server Port** – Shows the TCP port used by the Telnet interface.
- **Authentication Login** – Shows the user login authentication sequence.
- **Jumbo Frame** – Shows if jumbo frames are enabled.
- **POST Result** – Shows results of the power-on self-test

**Web** – Click System, System Information. Specify the system name, location, and contact information for the system administrator, then click Apply. (This page also includes a Telnet button that allows access to the Command Line Interface via Telnet.)

**24/48 port 10/100/1000 Stackable Managed Switch with 2 X 10G uplinks**

System Name	<input type="text"/>
Object ID	1.3.6.1.4.1.202.20.57
Location	<input type="text"/>
Contact	<input type="text"/>
System Up Time	0 days, 0 hours, 13 minutes, and 3.2 seconds

[Telnet](#) - Connect to textual user interface  
[Support](#) - Send mail to technical support  
[Contact](#) - Connect to SMC Web Site

Figure 4-1 System Information



**CLI** – Specify the hostname, location and contact information.

```

Console(config)#hostname R&D 5                                20-2
Console(config)#snmp-server location WC 9                    21-5
Console(config)#snmp-server contact Ted                      21-5
Console(config)#exit
Console#show system                                           20-8
System Description: 24/48 port 10/100/1000 Stackable Managed Switch
with 2 X 10
System OID String: 1.3.6.1.4.1.202.20.57
System Information
  System Up Time:          0 days, 1 hours, 28 minutes, and 0.51
seconds
  System Name:             R&D 5
  System Location:         WC 9
  System Contact:         Ted
  MAC Address (Unit1):    00-20-1A-DF-9C-A0
  MAC Address (Unit2):    00-20-1A-DF-9E-C0
  Web Server:             Enabled
  Web Server Port:        80
  Web Secure Server:      Enabled
  Web Secure Server Port: 443
  Telnet Server:          Enable
  Telnet Server Port:     23
  Authentication Login:   Local RADIUS None
  Jumbo Frame:            Disabled

  POST Result:
  DUMMY Test 1 ..... PASS
  DRAM Test ..... PASS
  Timer Test ..... PASS
  PCI Device 1 Test ..... PASS
  I2C Bus Initialization ..... PASS
  Switch Int Loopback Test ..... PASS
  Fan Speed Test ..... PASS

Done All Pass.
Console#

```

## Displaying Switch Hardware/Software Versions

Use the Switch Information page to display hardware/firmware version numbers for the main board and management software, as well as the power status of the system.

### Field Attributes

#### *Main Board*

- **Serial Number** – The serial number of the switch.
- **Number of Ports** – Number of built-in ports.
- **Hardware Version** – Hardware version of the main board.
- **Internal Power Status** – Displays the status of the internal power supply.

#### *Management Software*

- **EPLD Version** – Version number of EEPROM Programmable Logic Device.
- **Loader Version** – Version number of loader code.
- **Boot-ROM Version** – Version of Power-On Self-Test (POST) and boot code.
- **Operation Code Version** – Version number of runtime code.
- **Role** – Shows that this switch is operating as Master or Slave.

These additional parameters are displayed for the CLI.

- **Unit ID** – Unit number in stack.
- **Redundant Power Status** – Displays the status of the redundant power supply.

**Web** – Click System, Switch Information.

Switch Information	
<b>Main Board:</b>	
Serial Number	0000E8900000
Number of Ports	26
Hardware Version	R01
Internal Power Status	Active
<b>Management Software:</b>	
EPLD Version	0.03
Loader Version	1.0.0.1
Boot-ROM Version	1.0.0.1
Operation Code Version	3.30.7.54
Role	Master

**Figure 4-2 Switch Information**

**CLI** – Use the following command to display version information.

```
Console#show version 20-10
Unit 1
  Serial Number:      0000E8900000
  Hardware Version:   R01
  EPLD Version:       1.02
  Number of Ports:    26
  Main Power Status:  Up
  Redundant Power Status: Not present

Agent (master)
  Unit ID:            1
  Loader Version:     1.0.0.1
  Boot ROM Version:   1.0.0.1
  Operation Code Version: 3.30.7.54

Console#
```

## Displaying Bridge Extension Capabilities

The Bridge MIB includes extensions for managed devices that support Multicast Filtering, Traffic Classes, and Virtual LANs. You can access these extensions to display default settings for the key variables.

### Field Attributes

- **Extended Multicast Filtering Services** – This switch does not support the filtering of individual multicast addresses based on GMRP (GARP Multicast Registration Protocol).
- **Traffic Classes** – This switch provides mapping of user priorities to multiple traffic classes. (Refer to “Class of Service” on page 12-1.)
- **Static Entry Individual Port** – This switch allows static filtering for unicast and multicast addresses. (Refer to “Setting Static Addresses” on page 9-1.)
- **VLAN Learning** – This switch uses Independent VLAN Learning (IVL), where each port maintains its own filtering database.
- **Configurable PVID Tagging** – This switch allows you to override the default Port VLAN ID (PVID used in frame tags) and egress status (VLAN-Tagged or Untagged) on each port. (Refer to “VLAN Configuration” on page 11-1.)
- **Local VLAN Capable** – This switch does not support multiple local bridges outside of the scope of 802.1Q defined VLANs.
- **GMRP** – GARP Multicast Registration Protocol (GMRP) allows network devices to register endstations with multicast groups. This switch does not support GMRP; it uses the Internet Group Management Protocol (IGMP) to provide automatic multicast filtering.

**Web** – Click System, Bridge Extension.

### Bridge Extension Configuration

---

**Bridge Capability**

Extended Multicast Filtering Services	No
Traffic Classes	Enabled
Static Entry Individual Port	Yes
VLAN Learning	IVL
Configurable PVID Tagging	Yes
Local VLAN Capable	No

---

GMRP ☐ Enable

**Figure 4-3 Displaying Bridge Extension Configuration**

**CLI** – Enter the following command.

```

Console#show bridge-ext
Max support VLAN numbers:      256
Max support VLAN ID:          4093
Extended multicast filtering services: No
Static entry individual port:   Yes
VLAN learning:                 IVL
Configurable PVID tagging:     Yes
Local VLAN capable:            No
Traffic classes:                Enabled
Global GVRP status:            Disabled
GMRP:                          Disabled
Console#
    
```

30-3

## Setting the Switch's IP Address (IP Version 4)

This section describes how to configure an initial IPv4 interface for management access over the network. This switch supports both IPv4 and IPv6, and can be managed through either of these address types. For information on configuring the switch with an IPv6 address, see “Setting the Switch's IP Address (IP Version 6)” on page 4-13.

The IPv4 address for this stack is obtained via DHCP by default. To manually configure an address, you need to change the stack's default settings to values that are compatible with your network. You may also need to establish a default gateway between the stack and management stations that exist on another network segment (if routing is not enabled on this stack).

You can manually configure a specific IP address, or direct the device to obtain an address from a BOOTP or DHCP server. Valid IP addresses consist of four decimal numbers, 0 to 255, separated by periods. Anything outside this format will not be accepted by the CLI program.

### Command Usage

- This section describes how to configure a single local interface for initial access to the stack. To configure multiple IP interfaces on this stack, you must set up an IP interface for each VLAN (page 17-5).
- To enable routing between the different interfaces on this stack, you must enable IP routing (page 17-5).
- To enable routing between the interfaces defined on this stack and external network interfaces, you must configure static routes (page 17-26) or use dynamic routing; i.e., RIP (page 17-30).
- The precedence for configuring IP interfaces is the IP / General / Routing Interface menu (page 17-7), static routes (page 17-26), and then dynamic routing.

### **Command Attributes**

- **VLAN** – ID of the configured VLAN (1-4093). By default, all ports on the stack are members of VLAN 1. However, the management station can be attached to a port belonging to any VLAN, as long as that VLAN has been assigned an IP address.
- **IP Address Mode** – Specifies whether IP functionality is enabled via manual configuration (Static), Dynamic Host Configuration Protocol (DHCP), or Boot Protocol (BOOTP). If DHCP/BOOTP is enabled, IP will not function until a reply has been received from the server. Requests will be broadcast periodically by the switch for an IP address. (DHCP/BOOTP values can include the IP address, subnet mask, and default gateway.)
- **IP Address** – Address of the VLAN to which the management station is attached. (Note that you can manage the stack through any configured IP interface.) Valid IP addresses consist of four numbers, 0 to 255, separated by periods. (Default: 0.0.0.0)
- **Subnet Mask** – This mask identifies the host address bits used for routing to specific subnets. (Default: 255.0.0.0)
- **Gateway IP Address** – IP address of the gateway router between the stack and management stations that exist on other network segments. (Default: 0.0.0.0)
- **MAC Address** – The physical layer address for this switch.

## Manual Configuration

**Web** – Click IP, General, Routing Interface. Select the VLAN through which the management station is attached, set the IP Address Mode to “Static,” and specify a “Primary” interface. Enter the IP address, and subnet mask, then click Apply.

Routing Interface	
VLAN	1
IP Address Mode	Static Primary
IP Address	10.1.0.253
Subnet Mask	255.255.255.0
<input type="button" value="Set IP Configuration"/> <input type="button" value="Remove IP Address"/>	

**Figure 4-4 IPv4 Interface Configuration - Manual**

Click IP, Global Setting. If this stack and management stations exist on other network segments, then specify the default gateway, and click Apply.

Global Settings	
IP Routing Status	<input checked="" type="checkbox"/> Enabled
Default Gateway	10.1.0.254
<input type="button" value="Clear default gateway"/>	

**Figure 4-5 Default Gateway**



**CLI** – Specify the management interface, IP address and default gateway.

```
Console#config
Console(config)#interface vlan 1
Console(config-if)#ip address 10.1.0.253 255.255.255.0
Console(config-if)#exit
Console(config)#ip default-gateway 10.1.0.254
Console(config)#
```

## Using DHCP/BOOTP

If your network provides DHCP/BOOTP services, you can configure the stack to be dynamically configured by these services.

**Web** – Click IP, General, Routing Interface. Specify the VLAN to which the management station is attached, set the IP Address Mode to DHCP or BOOTP. Click Apply to save your changes. Then click Restart DHCP to immediately request a new address. Note that the stack will also broadcast a request for IP configuration settings on each power reset.

**Routing Interface**

VLAN	<input type="text" value="1"/>
IP Address Mode	<input type="text" value="DHCP"/> <input type="text" value="Primary"/>
IP Address	<input type="text" value="10.1.0.253"/>
Subnet Mask	<input type="text" value="255.255.255.0"/>

**Figure 4-6 IPv4 Interface Configuration - DHCP**

**Note:** If you lose your management connection, make a console connection to the Master unit and enter “show ip interface” to determine the new stack address.

**CLI** – Specify the management interface, and set the IP address mode to DHCP or BOOTP, and then enter the “ip dhcp restart client” command.

```
Console#config
Console(config)#interface vlan 1                                24-2
Console(config-if)#ip address dhcp                             36-4
Console(config-if)#end
Console#ip dhcp restart client                                  36-7
Console#show ip interface                                     36-8

Vlan 1 is up, addressing mode is DHCP
  Interface address is 192.168.1.253, mask is 255.255.255.0, Primary
  MTU is 1500 bytes
  Proxy ARP is disabled
  Split horizon is enabled
Console#
```

**Renewing DHCP** – DHCP may lease addresses to clients indefinitely or for a specific period of time. If the address expires or the stack is moved to another network segment, you will lose management access to the stack. In this case, you can reboot the stack or submit a client request to restart DHCP service via the CLI.

**Web** – If the address assigned by DHCP is no longer functioning, you will not be able to renew the IP settings via the web interface. You can only restart DHCP service via the web interface if the current address is still available.

**CLI** – Enter the following command to restart DHCP service.

```
Console#ip dhcp restart client                                36-7
Console#
```

## **Setting the Switch's IP Address (IP Version 6)**

This section describes how to configure an initial IPv6 interface for management access over the network. This switch supports both IPv4 and IPv6, and can be managed through either of these address types. For information on configuring the switch with an IPv4 address, see “Setting the Switch's IP Address (IP Version 4)” on page 4-8.

### **Configuring an IPv6 Address**

IPv6 includes two distinct address types – link-local unicast and global unicast. A link-local address makes the switch accessible over IPv6 for all devices attached to the same local subnet. Management traffic using this kind of address cannot be passed by any router outside of the subnet. A link-local address is easy to set up, and may be useful for simple networks or basic troubleshooting tasks. However, to connect to a larger network with multiple segments, the switch must be configured with a global unicast address. Both link-local and global unicast address types can either be manually configured or dynamically assigned.

### **Command Usage**

- This section describes how to configure a single local interface for initial access to the stack. To configure multiple IP interfaces on this stack, you must set up an IP interface for each VLAN (page 17-5).
- To enable routing between the different interfaces on this stack, you must enable IP routing (page 17-5).
- To enable routing between the interfaces defined on this stack and external network interfaces, you must configure static routes (page 17-26) or use dynamic routing; i.e., RIP (page 17-30).
- The precedence for configuring IP interfaces is the IP / General / Routing Interface menu (page 17-7), static routes (page 17-26), and then dynamic routing.

- All IPv6 addresses must be formatted according to RFC 2373 “IPv6 Addressing Architecture,” using 8 colon-separated 16-bit hexadecimal values. One double colon may be used in the address to indicate the appropriate number of zeros required to fill the undefined fields.
- The switch must always be configured with a link-local address. Therefore any configuration process that enables IPv6 functionality, or assigns a global unicast address to the switch, will also automatically generate a link-local unicast address. The prefix length for a link-local address is fixed at 64 bits, and the host portion of the default address is based on the modified EUI-64 (Extended Universal Identifier) form of the interface identifier (i.e., the physical MAC address). Alternatively, you can manually configure the link-local address by entering the full address with the network prefix FE80.
- To connect to a larger network with multiple subnets, you must configure a global unicast address. There are several alternatives to configuring this address type:
  - The global unicast address can be automatically configured by taking the network prefix from router advertisements observed on the local interface, and using the modified EUI-64 form of the interface identifier to automatically create the host portion of the address.
  - It can be manually configured by specifying the entire network prefix and prefix length, and using the EUI-64 form of the interface identifier to automatically create the low-order 64 bits in the host portion of the address.
  - You can also manually configure the global unicast address by entering the full address and prefix length.
  - Or you can include a general prefix for the network portion of the address (as described under “Configuring an IPv6 General Network Prefix” on page 4-22). When using this method, remember that the prefix length specified on the IPv6 Configuration page must include both the length of the general prefix and any contiguous bits (from the left of the specified address) that are added to the general prefix to form the extended network portion of the address.

- You can configure multiple IPv6 global unicast addresses per interface, but only one link-local address per interface.
- If a duplicate link-local address is detected on the local segment, this interface is disabled and a warning message displayed on the console. If a duplicate global unicast address is detected on the network, the address is disabled on this interface and a warning message displayed on the console.

### **Command Attributes**

- **VLAN** – ID of the configured VLAN (1-4093). By default, all ports on the stack are members of VLAN 1. However, the management station can be attached to a port belonging to any VLAN, as long as that VLAN has been assigned an IP address.
- **IPv6 Enabled** – Enables IPv6 on an interface. Note that when an explicit address is assigned to an interface, IPv6 is automatically enabled, and cannot be disabled until all assigned addresses have been removed.
- **IPv6 Default Gateway** – Sets the IPv6 address of the default next hop router to use when no other routing information is known about an IPv6 address.
  - The specified gateway is only valid if routing is disabled using the IP / General / Global Settings screen (see page 17-5) or no other routing information is known about the target address. If IP routing is disabled, you must define a gateway if the target device is located in a different subnet.
  - If routing is enabled, you can still define a static route using the IP / Routing / Static Routes screen (see page 17-26) to ensure that traffic to the designated address or subnet passes through a preferred gateway.
  - An IPv6 default gateway can only be successfully set when a network interface that directly connects to the gateway has been configured on the switch.

- **IPv6 MTU** – Sets the size of the maximum transmission unit (MTU) for IPv6 packets sent on an interface. (Range: 1280-65535 bytes, Default: 1500 bytes)
  - If a non-default value is configured, an MTU option is included in the router advertisements sent from this device. This option is provided to ensure that all nodes on a link use the same MTU value in cases where the link MTU is not otherwise well known.
  - IPv6 routers do not fragment IPv6 packets forwarded from other routers. However, traffic originating from an end-station connected to an IPv6 router may be fragmented.
  - All devices on the same physical medium must use the same MTU in order to operate correctly.
  - IPv6 must be enabled on an interface before the MTU can be set.

#### *IP Address*

- **Auto Configuration** – Enables stateless autoconfiguration of IPv6 addresses on an interface and enables IPv6 functionality on the interface. The network portion of the address is based on prefixes received in IPv6 router advertisement messages, and the host portion is automatically generated using the modified EUI-64 form of the interface identifier (i.e., the switch's MAC address).
  - If the router advertisements have the “other stateful configuration” flag set, the switch will attempt to acquire other non-address configuration information (such as a default gateway) from a DHCP for IPv6 server.
- **Manual Configuration** – Manually configures an IPv6 address.
  - **IPv6 Address** – An IPv6 address can be configured in any of these ways:
    - A link-local address can be manually configured by specifying the entire address in the IPv6 Address field, and selecting the Address Type “Link Local.” The network prefix length is fixed at 64 bits and cannot be changed.

- A global unicast address can be configured by specifying the network prefix and the length of the prefix (in the IPv6 Address and Prefix Length fields), and then selecting the Address Type “EUI-64” to automatically create the host portion of the address in the low order 64 bits based on the modified EUI-64 interface identifier.
- A global unicast address can be manually configured by specifying the full address and network prefix length (in the IP Address and Prefix Length fields), and selecting the Address Type “Global.”
- A global unicast address can also be set by selecting a preconfigured general prefix for the network portion of the address from the Based on General Prefix scroll-down list and marking the check box next to this field to enable your choice (see “Configuring an IPv6 General Network Prefix” on page 4-22), and then specifying the address (in the IPv6 Address field) and the full network prefix length which includes the general prefix and any contiguous bits from the left of the address that are appended to the network prefix (in the Prefix Length field).
- **Prefix Length** – A decimal value indicating how many contiguous bits (from the left) of the address comprise the prefix (i.e., the network portion of the address).

When used with a general network prefix to configure a global unicast address, this length includes both that specified by the general prefix and any contiguous prefix bits (from the left of the specified address) that exceed the length of the general prefix. If the prefix length specified by this parameter is shorter than the general prefix, then the length of the general prefix takes precedence.

- **Based on General Prefix** – Defines a general prefix for the network segment of the address (see “Configuring an IPv6 General Network Prefix” on page 4-22).

When configuring a global unicast address based on a general network prefix, the Prefix Length includes both that specified by the general prefix and any number of subsequent prefix bits that exceed the

length of the general prefix. Therefore, depending on the value specified by the Prefix Length, some of the address bits entered in the IPv6 Address field may be appended to the general prefix. However, if the Prefix Length is shorter than the general prefix, then the length of the general prefix takes precedence, and some of the address bits entered in the IPv6 Address field will be ignored.

- **Address Type** – Defines the address type configured for this interface.
- **Link Local** – Configures an IPv6 link-local address.
  - The address prefix must be FE80.
  - You can configure only one link-local address per interface.
  - The specified address replaces a link-local address that was automatically generated for the interface.
- **EUI-64** (Extended Universal Identifier) – Configures an IPv6 address for an interface using an EUI-64 interface ID in the low order 64 bits.
  - When using EUI-64 format for the low-order 64 bits in the host portion of the address, the value entered in the IPv6 Address field includes the network portion of the address, and the value in the Prefix Length field indicates how many contiguous bits (from the left) of the address comprise the prefix (i.e., the network portion of the address). Note that the value specified in the IPv6 Address field may include some of the high-order host bits if the specified prefix length is less than 64 bits. If the specified prefix length exceeds 64 bits, then the bits used in the network portion of the address will take precedence over the interface identifier.
  - IPv6 addresses are 16 bytes long, of which the bottom 8 bytes typically form a unique host identifier based on the device's MAC address. The EUI-64 specification is designed for devices that use an extended 8-byte MAC address. For devices that still use a 6-byte MAC address (also known as EUI-48 format), it must be



converted into EUI-64 format by inverting the universal/local bit in the address and inserting the hexadecimal number FFFE between the upper and lower three bytes of the MAC address.

For example, if a device had an EUI-48 address of 28-9F-18-1C-82-35, the global/local bit must first be inverted to meet EUI-64 requirements (i.e., 1 for globally defined addresses and 0 for locally defined addresses), changing 28 to 2A. Then the two bytes FFFE are inserted between the OUI (i.e., organizationally unique identifier, or company identifier) and the rest of the address, resulting in a modified EUI-64 interface identifier of 2A-9F-18-FF-FE-1C-82-35.

- This host addressing method allows the same interface identifier to be used on multiple IP interfaces of a single device, as long as those interfaces are attached to different subnets.
- **Global** – Configures an IPv6 global unicast address based on values entered in the IPv6 Address and Prefix Length fields.
- **Auto Detect** – System will automatically detect the address type according to the address/prefix entered in the IPv6 Address field.

#### *Current Address Table*

- **IPv6 Address** – IPv6 address assigned to this interface.

In addition to the unicast addresses assigned to an interface, a node is required to join the all-nodes multicast addresses FF01::1 and FF02::1 for all IPv6 nodes within scope 1 (interface-local) and scope 2 (link-local), respectively.

FF01::1/16 is the transient node-local multicast address for all attached IPv6 nodes, and FF02::1/16 is the link-local multicast address for all attached IPv6 nodes. The node-local multicast address is only used for loopback transmission of multicast traffic. Link-local multicast addresses cover the same types as used by link-local unicast addresses, including all nodes (FF02::1), all routers (FF02::2), and solicited nodes (FF02::1:FFXX:XXXX) as described below.

A node is also required to compute and join the associated solicited-node multicast addresses for every unicast and anycast address it is assigned. IPv6 addresses that differ only in the high-order bits, e.g. due to multiple high-order prefixes associated with different aggregations, will map to the same solicited-node address, thereby reducing the number of multicast addresses a node must join. In this example, FF02::1:FF90:0/104 is the solicited-node multicast address which is formed by taking the low-order 24 bits of the address and appending those bits to the prefix. Note that the solicited-node multicast address (link-local scope FF02) is used to resolve the MAC addresses for neighbor nodes since IPv6 does not support the broadcast method used by the Address Resolution Protocol in IPv4.

- **Prefix Length** – This field includes the prefix length, address type (Global, Link-local, Multicast), and configuration method if manually set.
- **Address Type** – Global, Link-local or Multicast.

**Web** – Click System, IPv6 Configuration, IPv6 Configuration. Set the IPv6 default gateway, specify the VLAN to configure, enable IPv6, and set the MTU. Then enter a global unicast or link-local address and click Add IPv6 Address.

### IPv6 Configuration

VLAN : 1

IPv6	<input checked="" type="checkbox"/> Enabled
<input checked="" type="checkbox"/> IPv6 Default Gateway	2009:DB9:2229::240
<input checked="" type="checkbox"/> IPv6 MTU	1280 bytes (1280 - 65535)

**IPv6 Address:**

☒ Auto Configuration

☐ Manual Configuration
 

☐ Based on General Prefix: rd

**Current Address Table:**

	IPv6 Address	Prefix Length	Address Type
<input type="checkbox"/>	2009:DB9:2229::79	64,Global,Manual	undefined
<input type="checkbox"/>	FE80::200:E8FF:FE90:0	64,Link-local,	undefined
<input type="checkbox"/>	FF02::1	16,Multicast,	undefined
<input type="checkbox"/>	FF02::1:FF00:79	104,Multicast,	undefined
<input type="checkbox"/>	FF02::1:FF90:0	104,Multicast,	undefined

Figure 4-7 IPv6 Interface Configuration

**CLI** – This example configures an IPv6 gateway, specifies the management interface, configures a global unicast address, and then sets the MTU.

```
Console#config
Console(config)ipv6 default-gateway 2009:DB9:2229::240      36-24
Console(config)#ipv6 general-prefix rd 2009:DB9:2229::/48    36-12
Console(config)#interface vlan 1                             24-2
Console(config-if)#ipv6 address rd 7279::79/64              36-14
Console(config-if)#ipv6 mtu 1280                             36-26
Console(config-if)#ipv6 enable                               36-10
Console(config-if)#end
Console#show ipv6 default-gateway                             36-25
ipv6 default gateway: 2009:DB9:2229::240
Console#show ipv6 interface                                   36-22
Vlan 1 is up
IPv6 is enable.
Link-local address:
FE80::200:E8FF:FE90:0/64
Global unicast address(es):
2009:DB9:2229::79, subnet is 2009:DB9:2229:0::/64
Joined group address(es):
FF01::1/16
FF02::1/16
FF02::1:FF00:79/104
FF02::1:FF90:0/104
MTU is 1280 bytes.
ND DAD is enabled, number of DAD attempts: 1.
ND retransmit interval is 1000 milliseconds
Console#show ipv6 mtu                                         36-27
MTU      Since      Destination Address
1400     00:04:21    5000:1::3
1280     00:04:50    FE80::203:A0FF:FED6:141D
Console#
```

## Configuring an IPv6 General Network Prefix

The IPv6 General Prefix page is used to configure general prefixes that are subsequently used on the IPv6 Configuration web page (see page 4-13) to specify the network address portion of an interface address.

### Command Usage

- Prefixes may contain zero-value fields or end in zeros.
- A general prefix holds a short prefix that indicates the high-order bits used in the network portion of the address. Longer, more specific, prefixes can be based on the general prefix to specify any number of

subnets. When the general prefix is changed, all of the more specific prefixes based on this prefix will also change.

### Command Attributes

- **General Prefix Name** – The label assigned to the general prefix.
- **Prefix Value** – The high-order bits of the network address segment assigned to the general prefix. The prefix must be formatted according to RFC 2373 “IPv6 Addressing Architecture,” using 8 colon-separated 16-bit hexadecimal values. One double colon may be used in the address to indicate the appropriate number of zeros required to fill the undefined fields.
- **Prefix Length** – A decimal value indicating how many of the contiguous bits (from the left) of the address comprise the prefix (i.e., the network portion of the address).

**Web** – Click System, IPv6 Configuration, IPv6 General Prefix. Click Add to open the editing fields for a prefix entry. Enter a name for the general prefix, the value for the general prefix, and the prefix length. Then click Add to enable the entry.

The figure consists of two screenshots from a web-based configuration interface. The top screenshot, titled "IPv6 General-prefix", shows a table with three columns: "General Prefix Name", "Prefix Value", and "Prefix Length". There is one entry in the table with the name "rd", the value "2009:DB9:2229::", and the length "64". Above the table are "Add" and "Delete" buttons. An arrow points from the "Add" button to the bottom screenshot. The bottom screenshot, titled "IPv6 General-prefix -- Add", shows a form with three input fields: "Prefix-Name:" with the value "tps", "IPv6-Prefix:" with the value "2009:DB9:2229:F1::", and "Prefix-length:" with the value "64". At the bottom right of the form are "Back" and "Add" buttons.

	General Prefix Name	Prefix Value	Prefix Length
<input type="checkbox"/>	rd	2009:DB9:2229::	64

Prefix-Name:	tps
IPv6-Prefix:	2009:DB9:2229:F1::
Prefix-length:	64

Figure 4-8 IPv6 General Prefix Configuration

**CLI** – This example creates a general network prefix of 2009:DB9:2229::/48.

```
Console(config)#ipv6 general-prefix rd 2009:DB9:2229::/48      36-12
Console(config)#end
Console#show ipv6 general-prefix                                36-13
IPv6 general prefix: rd
2009:DB9:2229::/48
Console#
```

## Configuring Neighbor Detection Protocol and Static Entries

IPv6 Neighbor Discovery Protocol supersedes IPv4 Address Resolution Protocol in IPv6 networks. IPv6 nodes on the same network segment use Neighbor Discovery to discover each other's presence, to determine each other's link-layer addresses, to find routers and to maintain reachability information about the paths to active neighbors. The key parameters used to facilitate this process are the number of attempts made to verify whether or not a duplicate address exists on the same network segment, and the interval between neighbor solicitations used to verify reachability information.

### Command Attributes

#### *Protocol Settings*

- **VLAN** – VLAN ID (Range: 1-4093)
- **IPv6 ND DAD Attempts** – The number of consecutive neighbor solicitation messages sent on an interface during duplicate address detection. (Range: 0-600, Default: 1)
  - Configuring a value of 0 disables duplicate address detection.
  - Duplicate address detection determines if a new unicast IPv6 address already exists on the network before it is assigned to an interface.
  - Duplicate address detection is stopped on any interface that has been suspended (see “Creating VLANs” on page 11-8). While an interface is suspended, all unicast IPv6 addresses assigned to that interface are placed in a “pending” state. Duplicate address detection is automatically restarted when the interface is administratively re-activated.

- An interface that is re-activated restarts duplicate address detection for all unicast IPv6 addresses on the interface. While duplicate address detection is performed on the interface's link-local address, the other IPv6 addresses remain in a "tentative" state. If no duplicate link-local address is found, duplicate address detection is started for the remaining IPv6 addresses.
- If a duplicate address is detected, it is set to "duplicate" state, and a warning message is sent to the console. If a duplicate link-local address is detected, IPv6 processes are disabled on the interface. If a duplicate global unicast address is detected, it is not used. All configuration commands associated with a duplicate address remain configured while the address is in "duplicate" state.
- If the link-local address for an interface is changed, duplicate address detection is performed on the new link-local address, but not for any of the IPv6 global unicast addresses already associated with the interface.

*Current Neighbor Cache Table*

- **IPv6 Address** – IPv6 address of neighbor device.
- **Age** – The time since the address was verified as reachable (in minutes). A static entry is indicated by the value "Permanent."
- **Link-layer Address** – Physical layer MAC address.
- **State** – The current state for an entry.

The following states are used for dynamic entries:

- **INCOMP (Incomplete)** - Address resolution is being carried out on the entry. A neighbor solicitation message has been sent to the multicast address of the target, but it has not yet returned a neighbor advertisement message.
- **REACH (Reachable)** - Positive confirmation was received within the last ReachableTime interval that the forward path to the neighbor was functioning. While in REACH state, the device takes no special action when sending packets.

- STALE - More than the ReachableTime interval has elapsed since the last positive confirmation was received that the forward path was functioning. While in STALE state, the device takes no action until a packet is sent.
- DELAY - More than the ReachableTime interval has elapsed since the last positive confirmation was received that the forward path was functioning. A packet was sent within the last DELAY\_FIRST\_PROBE\_TIME interval. If no reachability confirmation is received within this interval after entering the DELAY state, the switch will send a neighbor solicitation message and change the state to PROBE.
- PROBE - A reachability confirmation is actively sought by resending neighbor solicitation messages every RetransTimer interval until confirmation of reachability is received.
- ??? - Unknown state.

The following states are used for static entries:

- INCOMP (Incomplete) -The interface for this entry is down.
- REACH (Reachable) - The interface for this entry is up. Reachability detection is not applied to static entries in the IPv6 neighbor discovery cache.
- **VLAN** – VLAN interface from which the address was reached.

### *Adding Static Neighbors (IPv6 Neighbor -- Add)*

- **IPv6 Address** – The IPv6 address of a neighbor device that can be reached through one of the network interfaces configured on this switch. You can specify either a link-local or global unicast address formatted according to RFC 2373 “IPv6 Addressing Architecture,” using 8 colon-separated 16-bit hexadecimal values. One double colon may be used in the address to indicate the appropriate number of zeros required to fill the undefined fields.
- **VLAN** – VLAN ID (Range: 1-4093)
- **Hardware Address** – The 48-bit MAC layer address for the neighbor device. This address must be formatted as six hexadecimal pairs separated by hyphens.



**Web** – Click System, IPv6 Configuration, IPv6 ND Neighbor. To configure the Neighbor Detection protocol settings, select a VLAN interface, set the number of attempts allowed for duplicate address detection, set the interval for neighbor solicitation messages, and click Apply. To configure static neighbor entries, click Add, fill in the IPv6 address, VLAN interface and hardware address. Then click Add.

### IPv6 Neighbor

VLAN : 1

☒ IPv6 nd dad attempts 1 (0-600)

☒ IPv6 nd ns-interval 30000 (1000-3600000ms)

**Current Neighbor Cache Table:**

	IPv6 Address	Age	Link-layer Address	State	VLAN
<input type="checkbox"/>	2009:DB9::49B	Permanent	30-65-14-01-11-87	REACH	1

Add
Delete

### IPv6 neighbor --Add

IPv6 Address:
2009:0DB9::49B

VLAN:
1

Hardware Address:
30-65-14-01-11-87

Back Add

**Figure 4-9 IPv6 Neighbor Detection and Neighbor Cache**

**CLI** – This example maps a static entry for a global unicast address to a MAC address.

```

Console(config)#ipv6 general-prefix rd 2009:DB9:2229::/48 36-12
Console(config)#ipv6 neighbor 2009:0DB9::49A vlan 1
30-65-14-01-11-87 36-38
Console(config)#end
Console#show ipv6 neighbors 36-43
IPv6 Address      Age      Link-layer Addr  State  Vlan
2009:DB9:2229::77 Permanent  30-65-14-01-11-87 REACH  1
Console#

```

## Configuring Support for Jumbo Frames

The switch provides more efficient throughput for large sequential data transfers by supporting jumbo frames up to 9216 bytes. Compared to standard Ethernet frames that run only up to 1.5 KB, using jumbo frames significantly reduces the per-packet overhead required to process protocol encapsulation fields.

### Command Usage

To use jumbo frames, both the source and destination end nodes (such as a computer or server) must support this feature. Also, when the connection is operating at full duplex, all switches in the network between the two end nodes must be able to accept the extended frame size. And for half-duplex connections, all devices in the collision domain would need to support jumbo frames.

### Command Attributes

**Jumbo Packet Status** – Configures support for jumbo frames.  
(Default: Disabled)

**Web** – Click System, Jumbo Frames. Enable or disable support for jumbo frames, and click Apply.



The screenshot shows a web interface for configuring Jumbo Frames. At the top, the title "Jumbo Frames" is displayed. Below the title, there is a configuration field labeled "Jumbo Packet Status" with a dropdown menu currently set to "Enabled".

Figure 4-10 Configuring Support for Jumbo Frames

**CLI** – This example enables jumbo frames globally for the switch.

```
Console(config)#jumbo frame  
Console(config)#
```

20-11

## Managing Firmware

You can upload/download firmware to or from a TFTP server, or copy files to and from switch units in a stack. By saving runtime code to a file on a TFTP server, that file can later be downloaded to the switch to restore operation. You can also set the switch to use new firmware without overwriting the previous version. You must specify the method of file transfer, along with the file type and file names as required.

### Command Attributes

- **File Transfer Method** – The firmware copy operation includes these options:
  - file to file – Copies a file within the switch directory, assigning it a new name.
  - file to tftp – Copies a file from the switch to a TFTP server.
  - tftp to file – Copies a file from a TFTP server to the switch.
  - file to unit – Copies a file from this switch to another unit in the stack.
  - unit to file – Copies a file from another unit in the stack to this switch.
- **TFTP Server IP Address** – The IP address of a TFTP server.
- **File Type** – Specify opcode (operational code) to copy firmware.
- **File Name** – The file name should not contain slashes (\ or /), the leading letter of the file name should not be a period (.), and the maximum length for file names on the TFTP server is 127 characters or 31 characters for files on the switch. (Valid characters: A-Z, a-z, 0-9, “.”, “-”, “\_”)
- **Source/Destination Unit** – Stack unit. (Range: 1 - 8)

**Note:** Up to two copies of the system software (i.e., the runtime firmware) can be stored in the file directory on the switch. The currently designated startup version of this file cannot be deleted.

## Downloading System Software from a Server

When downloading runtime code, you can specify the destination file name to replace the current image, or first download the file using a different name from the current runtime code file, and then set the new file as the startup file.

**Web** – Click System, File Management, Copy Operation. Select “tftp to file” as the file transfer method, enter the IP address of the TFTP server, set the file type to “opcode,” enter the file name of the software to download, select a file on the switch to overwrite or specify a new file name, then click Apply. If you replaced the current firmware used for startup and want to start using the new operation code, reboot the system via the System/Reset menu.

### Copy

tftp to file

TFTP Server IP Address	192.168.0.110
File Type	opcode
Source File Name	V3.30.7.54
Destination File Name	<input type="radio"/> V1001 <input checked="" type="radio"/> V330754

Figure 4-11 Copy Firmware

If you download to a new destination file, go to the File Management, Set Start-Up menu, mark the operation code file used at startup, and click Apply. To start the new firmware, reboot the system via the System/Reset menu.

### Set Start-Up

---

Note: You can only change one file type at a time.

	Name	Type	Startup	Size(bytes)
<input type="radio"/>	Factory_Default_Config.cfg	Config_File	N	455
<input checked="" type="radio"/>	startup1.cfg	Config_File	Y	3649
<input type="radio"/>	V1001	Operation_Code	N	3866960
<input checked="" type="radio"/>	V330754	Operation_Code	Y	4408104

Figure 4-12 Setting the Startup Code

To delete a file select System, File Management, Delete. Select the file name from the given list by checking the tick box and click Apply. Note that the file currently designated as the startup code cannot be deleted.

### Delete

---

	Name	Type	Startup	Size (bytes)
<input type="checkbox"/>	Factory_Default_Config.cfg	Config_File	N	455
<input type="checkbox"/>	startup1.cfg	Config_File	Y	3649
<input checked="" type="checkbox"/>	V1001	Operation_Code	N	3866960
<input type="checkbox"/>	V330754	Operation_Code	Y	4408104

Figure 4-13 Deleting Files

**CLI** – To download new firmware form a TFTP server, enter the IP address of the TFTP server, select “config” as the file type, then enter the source and destination file names. When the file has finished downloading, set the new file to start up the system, and then restart the switch.

To start the new firmware, enter the “reload” command or reboot the system.

Console#copy tftp file	20-13
TFTP server ip address: 10.1.0.19	
Choose file type:	
1. config: 2. opcode: <1-2>: 2	
Source file name: V3.30.7.54.bix	
Destination file name: V311620	
\Write to FLASH Programming.	
-Write to FLASH finish.	
Success.	
Console#config	
Console(config)#boot system opcode:V330754	20-20
Console(config)#exit	
Console#reload	19-5

## Saving or Restoring Configuration Settings

You can upload/download configuration settings to/from a TFTP server, or copy files to and from switch units in a stack. The configuration file can be later downloaded to restore the switch’s settings.

### Command Attributes

- File Transfer Method – The configuration copy operation includes these options:
  - file to file – Copies a file within the switch directory, assigning it a new name.
  - file to running-config – Copies a file in the switch to the running configuration.
  - file to startup-config – Copies a file in the switch to the startup configuration.
  - file to tftp – Copies a file from the switch to a TFTP server.
  - running-config to file – Copies the running configuration to a file.

- running-config to startup-config – Copies the running config to the startup config.
- running-config to tftp – Copies the running configuration to a TFTP server.
- startup-config to file – Copies the startup configuration to a file on the switch.
- startup-config to running-config – Copies the startup config to the running config.
- startup-config to tftp – Copies the startup configuration to a TFTP server.
- tftp to file – Copies a file from a TFTP server to the switch.
- tftp to running-config – Copies a file from a TFTP server to the running config.
- tftp to startup-config – Copies a file from a TFTP server to the startup config.
- file to unit – Copies a file from this switch to another unit in the stack.
- unit to file – Copies a file from another unit in the stack to this switch.
- **TFTP Server IP Address** – The IP address of a TFTP server.
- **File Type** – Specify config (configuration) to copy configuration settings.
- **File Name** — The configuration file name should not contain slashes (\ or /), the leading letter of the file name should not be a period (.), and the maximum length for file names on the TFTP server is 127 characters or 31 characters for files on the switch. (Valid characters: A-Z, a-z, 0-9, “.”, “-”, “\_”)
- **Source/Destination Unit** – Stack unit. (Range: 1 - 8)

**Note:** The maximum number of user-defined configuration files is limited only by available flash memory space.

## Downloading Configuration Settings from a Server

You can download the configuration file under a new file name and then set it as the startup file, or you can specify the current startup configuration file as the destination file to directly replace it. Note that the file “Factory\_Default\_Config.cfg” can be copied to the TFTP server, but cannot be used as the destination on the switch.

**Web** – Click System, File Management, Copy Operation. Choose “tftp to startup-config” or “tftp to file,” and enter the IP address of the TFTP server. Specify the name of the file to download, select a file on the switch to overwrite or specify a new file name, and then click Apply.

Copy	
<div>tftp to startup-config ▼</div>	
TFTP Server IP Address	<div>192.168.1.19</div>
Source File Name	<div>config-startup</div>
Startup File Name	<div><input type="radio"/> Factory_Default_Config.cfg ▼ <input checked="" type="radio"/> startup</div>

Figure 4-14 Downloading Configuration Settings for Start-Up



If you download to a new file name using “tftp to startup-config” or “tftp to file,” the file is automatically set as the start-up configuration file. To use the new settings, reboot the system via the System/Reset menu. You can also select any configuration file as the start-up configuration by using the System/File Management/Set Start-Up page.

Set Start-Up				
Note: You can only change one file type at a time.				
	Name	Type	Startup	Size(bytes)
<input type="radio"/>	Factory_Default_Config.cfg	Config_File	N	455
<input checked="" type="radio"/>	startup	Config_File	Y	3649
<input type="radio"/>	startup1.cfg	Config_File	N	3649
<input type="radio"/>	V1001	Operation_Code	N	3866960
<input checked="" type="radio"/>	V330754	Operation_Code	Y	4408104

**Figure 4-15 Setting the Startup Configuration Settings**

**CLI** – Enter the IP address of the TFTP server, specify the source file on the server, set the startup file name on the switch, and then restart the switch.

```

Console#copy tftp startup-config
TFTP server ip address: 192.168.1.19
Source configuration file name: config-1
Startup configuration file name [] : startup
Write to FLASH Programming.
Write to FLASH finish.
Success.

Console#reload
    
```

To select another configuration file as the start-up configuration, use the **boot system** command and then restart the switch.

```

Console#config
Console(config)#boot system config: startup
Console(config)#exit
Console#reload
    
```

## Console Port Settings

You can access the onboard configuration program by attaching a VT100 compatible device to the switch's serial console port. Management access through the console port is controlled by various parameters, including a password, timeouts, and basic communication settings. These parameters can be configured via the web or CLI interface.

### Command Attributes

- **Login Timeout** – Sets the interval that the system waits for a user to log into the CLI. If a login attempt is not detected within the timeout interval, the connection is terminated for the session.  
(Range: 0 - 300 seconds; Default: 0)
- **Exec Timeout** – Sets the interval that the system waits until user input is detected. If user input is not detected within the timeout interval, the current session is terminated. (Range: 0 - 65535 seconds; Default: 0 seconds)
- **Password Threshold** – Sets the password intrusion threshold, which limits the number of failed logon attempts. When the logon attempt threshold is reached, the system interface becomes silent for a specified amount of time (set by the Silent Time parameter) before allowing the next logon attempt. (Range: 0-120; Default: 3 attempts)
- **Silent Time** – Sets the amount of time the management console is inaccessible after the number of unsuccessful logon attempts has been exceeded. (Range: 0-65535; Default: 0)
- **Data Bits** – Sets the number of data bits per character that are interpreted and generated by the console port. If parity is being generated, specify 7 data bits per character. If no parity is required, specify 8 data bits per character. (Default: 8 bits)
- **Parity** – Defines the generation of a parity bit. Communication protocols provided by some terminals can require a specific parity bit setting. Specify Even, Odd, or None. (Default: None)
- **Speed** – Sets the terminal line's baud rate for transmit (to terminal) and receive (from terminal). Set the speed to match the baud rate of the

device connected to the serial port. (Range: 9600, 19200, 38400, 57600, or 115200 baud, Auto; Default: Auto)

- **Stop Bits** – Sets the number of the stop bits transmitted per byte. (Range: 1-2; Default: 1 stop bit)
- **Password<sup>1</sup>** – Specifies a password for the line connection. When a connection is started on a line with password protection, the system prompts for the password. If you enter the correct password, the system shows a prompt. (Default: No password)
- **Login<sup>1</sup>** – Enables password checking at login. You can select authentication by a single global password as configured for the Password parameter, or by passwords set up for specific user-name accounts. (Default: Local)

**Web** – Click System, Line, Console. Specify the console port connection parameters as required, then click Apply.

### Console

Login Timeout (0-300)	<input type="text" value="0"/> secs (0 : Disabled)
Exec Timeout (0-65535)	<input type="text" value="0"/> secs (0 : Disabled)
Password Threshold (0-120)	<input type="text" value="3"/> (0 : Disabled)
Silent Time (0-65535)	<input type="text" value="0"/> secs (0 : Disabled)
Data Bits	<input type="text" value="8"/>
Parity	<input type="text" value="None"/>
Speed	<input type="text" value="Auto"/>
Stop Bits	<input type="text" value="1"/>

**Figure 4-16 Configuring the Console Port**

---

1. CLI only.

**CLI** – Enter Line Configuration mode for the console, then specify the connection parameters as required. To display the current console port settings, use the **show line** command from the Normal Exec level.

```
Console(config)#line console 20-22
Console(config-line)#login local 20-23
Console(config-line)#password 0 secret 20-24
Console(config-line)#timeout login response 0 20-25
Console(config-line)#exec-timeout 0 20-26
Console(config-line)#password-thresh 5 20-27
Console(config-line)#silent-time 60 20-28
Console(config-line)#databits 8 20-28
Console(config-line)#parity none 20-29
Console(config-line)#speed auto 20-30
Console(config-line)#stopbits 1 20-31
Console(config-line)#end
Console#show line console 20-32
Console configuration:
  Password threshold: 5 times
  Interactive timeout: Disabled
  Login timeout: Disabled
  Silent time: 60
  Baudrate: auto
  Databits: 8
  Parity: none
  Stopbits: 1
Console#
```

## Telnet Settings

You can access the onboard configuration program over the network using Telnet (i.e., a virtual terminal). Management access via Telnet can be enabled/disabled and other various parameters set, including the TCP port number, timeouts, and a password. These parameters can be configured via the web or CLI interface.

### Command Attributes

- **Telnet Status** – Enables or disables Telnet access to the switch.  
(Default: Enabled)
- **Telnet Port Number** – Sets the TCP port number for Telnet on the switch. (Default: 23)

- **Login Timeout** – Sets the interval that the system waits for a user to log into the CLI. If a login attempt is not detected within the timeout interval, the connection is terminated for the session.  
(Range: 0 - 300 seconds; Default: 300 seconds)
- **Exec Timeout** – Sets the interval that the system waits until user input is detected. If user input is not detected within the timeout interval, the current session is terminated. (Range: 0 - 65535 seconds; Default: 600 seconds)
- **Password Threshold** – Sets the password intrusion threshold, which limits the number of failed logon attempts. When the logon attempt threshold is reached, the system interface becomes silent for a specified amount of time (set by the Silent Time parameter) before allowing the next logon attempt. (Range: 0-120; Default: 3 attempts)
- **Password<sup>2</sup>** – Specifies a password for the line connection. When a connection is started on a line with password protection, the system prompts for the password. If you enter the correct password, the system shows a prompt. (Default: No password)
- **Login<sup>2</sup>** – Enables password checking at login. You can select authentication by a single global password as configured for the Password parameter, or by passwords set up for specific user-name accounts. (Default: Local)

---

2. CLI only.

**Web** – Click System, Line, Telnet. Specify the connection parameters for Telnet access, then click Apply.

Telnet

Telnet Status	<input checked="" type="checkbox"/> Enabled
Telnet Port Number	23
Login Timeout (0-300)	300 secs (0 : Disabled)
Exec Timeout (0-65535)	600 secs (0 : Disabled)
Password Threshold (0-120)	8 (0 : Disabled)

Figure 4-17 Configuring the Telnet Interface

**CLI** – Enter Line Configuration mode for a virtual terminal, then specify the connection parameters as required. To display the current virtual terminal settings, use the **show line** command from the Normal Exec level.

```
Console(config)#line vty                                20-22
Console(config-line)#login local                        20-23
Console(config-line)#password 0 secret                 20-24
Console(config-line)#timeout login response 300        20-25
Console(config-line)#exec-timeout 600                 20-26
Console(config-line)#password-thresh 3                20-27
Console(config-line)#end
Console#show line vty                                  20-32
VTY configuration:
  Password threshold: 3 times
  Interactive timeout: 600 sec
  Login timeout:      300 sec
Console#
```

## Configuring Event Logging

The switch allows you to control the logging of error messages, including the type of events that are recorded in switch memory, logging to a remote System Log (syslog) server, and displays a list of recent event messages.

### System Log Configuration

The system allows you to enable or disable event logging, and specify which levels are logged to RAM or flash memory.

Severe error messages that are logged to flash memory are permanently stored in the switch to assist in troubleshooting network problems. Up to 4096 log entries can be stored in the flash memory, with the oldest entries being overwritten first when the available log memory (256 kilobytes) has been exceeded.

The System Logs page allows you to configure and limit system messages that are logged to flash or RAM memory. The default is for event levels 0 to 3 to be logged to flash and levels 0 to 7 to be logged to RAM.

### Command Attributes

- **System Log Status** – Enables/disables the logging of debug or error messages to the logging process. (Default: Enabled)
- **Flash Level** – Limits log messages saved to the switch's permanent flash memory for all levels up to the specified level. For example, if level 3 is specified, all messages from level 0 to level 3 will be logged to flash. (Range: 0-7, Default: 3)

**Table 4-1 Logging Levels**

Level	Severity Name	Description
7	Debug	Debugging messages
6	Informational	Informational messages only
5	Notice	Normal but significant condition, such as cold start

Table 4-1 Logging Levels (Continued)

Level	Severity Name	Description
4	Warning	Warning conditions (e.g., return false, unexpected return)
3	Error	Error conditions (e.g., invalid input, default used)
2	Critical	Critical conditions (e.g., memory allocation, or free memory error - resource exhausted)
1	Alert	Immediate action needed
0	Emergency	System unusable

\* There are only Level 2, 5 and 6 error messages for the current firmware release.

- **RAM Level** – Limits log messages saved to the switch’s temporary RAM memory for all levels up to the specified level. For example, if level 7 is specified, all messages from level 0 to level 7 will be logged to RAM. (Range: 0-7, Default: 7)

**Note:**The Flash Level must be equal to or less than the RAM Level.

**Web** – Click System, Logs, System Logs. Specify System Log Status, set the level of event messages to be logged to RAM and flash memory, then click Apply.

System Logs

System Log Status

Disabled

Flash Level (0-7)

3

Ram Level (0-7)

7

Figure 4-18 System Logs



**CLI** – Enable system logging and then specify the level of messages to be logged to RAM and flash memory. Use the **show logging** command to display the current settings.

Console(config)#logging on	20-34
Console(config)#logging history ram 0	20-35
Console(config)#	
Console#show logging ram	20-40
Syslog logging:	Disabled
History logging in RAM: level emergencies	
Console#	

## Remote Log Configuration

The Remote Logs page allows you to configure the logging of messages that are sent to syslog servers or other management stations. You can also limit the event messages sent to only those messages at or above a specified level.

### Command Attributes

- **Remote Log Status** – Enables/disables the logging of debug or error messages to the remote logging process. (Default: Disabled)
- **Logging Facility** – Sets the facility type for remote logging of syslog messages. There are eight facility types specified by values of 16 to 23. The facility type is used by the syslog server to dispatch log messages to an appropriate service.

The attribute specifies the facility type tag sent in syslog messages. (See RFC 3164.) This type has no effect on the kind of messages reported by the switch. However, it may be used by the syslog server to process messages, such as sorting or storing messages in the corresponding database. (Range: 16-23, Default: 23)

- **Logging Trap** – Limits log messages that are sent to the remote syslog server for all levels up to the specified level. For example, if level 3 is specified, all messages from level 0 to level 3 will be sent to the remote server. (Range: 0-7, Default: 7)
- **Host IP List** – Displays the list of remote server IP addresses that will receive syslog messages. The maximum number of host IP addresses allowed is five.

- **Host IP Address** – Specifies a new server IP address to add to the Host IP List.

**Web** – Click System, Logs, Remote Logs. To add an IP address to the Host IP List, type the new IP address in the Host IP Address box, and then click Add. To delete an IP address, click the entry in the Host IP List, and then click Remove.

### Remote Logs

Remote Log Status	Disabled ▾
Logging Facility (16-23)	23
Logging Trap (0-7)	7

---

**Host IP Address:**

Current:  
Host IP List  
(none)

<< Add  
Remove

New:  
Host IP Address

Figure 4-19 Remote Logs

**CLI** – Enter the syslog server host IP address, choose the facility type and set the logging trap.

```


Console(config)#logging host 10.1.0.9                20-36
Console(config)#logging facility 23                  20-37
Console(config)#logging trap 4                       20-38
Console(config)#logging trap
Console(config)#exit
Console#show logging trap                            20-40
Syslog logging:                                     Enabled
REMOTELOG status:                                   Disabled
REMOTELOG facility type:                            local use 7
REMOTELOG level type:                               Warning conditions
REMOTELOG server ip address: 10.1.0.9
REMOTELOG server ip address: 0.0.0.0
REMOTELOG server ip address: 0.0.0.0
REMOTELOG server ip address: 0.0.0.0
REMOTELOG server ip address: 0.0.0.0
Console#

```

## Displaying Log Messages

Use the Logs page to scroll through the logged system and event messages. The switch can store up to 2048 log entries in temporary random access memory (RAM; i.e., memory flushed on power reset) and up to 4096 entries in permanent flash memory.

**Web** – Click System, Log, Logs.

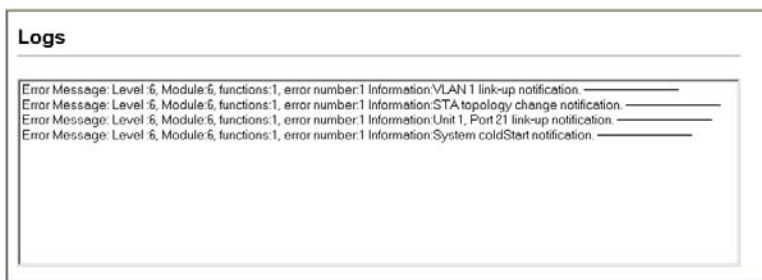

**Figure 4-20** Displaying Logs

**CLI** – This example shows the event message stored in RAM.

```
Console#show log ram20-40
[1] 00:01:30 2001-01-01
    "VLAN 1 link-up notification."
    level: 6, module: 5, function: 1, and event no.: 1
[0] 00:01:30 2001-01-01
    "Unit 1, Port 1 link-up notification."
    level: 6, module: 5, function: 1, and event no.: 1
Console#
```

### Sending Simple Mail Transfer Protocol Alerts

To alert system administrators of problems, the switch can use SMTP (Simple Mail Transfer Protocol) to send email messages when triggered by logging events of a specified level. The messages are sent to specified SMTP servers on the network and can be retrieved using POP or IMAP clients.

#### Command Attributes

- **Admin Status** – Enables/disables the SMTP function.  
(Default: Enabled)
- **Email Source Address** – Sets the email address used for the “From” field in alert messages. You may use a symbolic email address that identifies the switch, or the address of an administrator responsible for the switch.
- **Severity** – Sets the syslog severity threshold level (see table on page 4-41) used to trigger alert messages. All events at this level or higher will be sent to the configured email recipients. For example, using Level 7 will report all events from level 7 to level 0. (Default: Level 7)
- **SMTP Server List** – Specifies a list of up to three recipient SMTP servers. The switch attempts to connect to the other listed servers if the first fails. Use the New SMTP Server text field and the Add/Remove buttons to configure the list.
- **Email Destination Address List** – Specifies the email recipients of alert messages. You can specify up to five recipients. Use the New Email Destination Address text field and the Add/Remove buttons to configure the list.

**Web** – Click System, Log, SMTP. Enable SMTP, specify a source email address, and select the minimum severity level. To add an IP address to the SMTP Server List, type the new IP address in the SMTP Server field and click Add. To delete an IP address, click the entry in the SMTP Server List and click Remove. Specify up to five email addresses to receive the alert messages, and click Apply.

### SMTP

---

Admin Status	<input checked="" type="checkbox"/> Enabled
Email Source Address	pig-wheels@matel.com
Severity	4 - Warning

---

SMTP Server List:

192.168.1.4  
192.168.1.5

<< Add  
Remove

New:  
SMTP Server

---

Email Destination Address List:

chris@matel.com

<< Add  
Remove

New:  
Email Destination Address

**Figure 4-21 Enabling and Configuring SMTP Alerts**

**CLI** – Enter the IP address of at least one SMTP server, set the syslog severity level to trigger an email message, and specify the switch (source) and up to five recipient (destination) email addresses. Enable SMTP with the **logging sendmail** command to complete the configuration. Use the **show logging sendmail** command to display the current SMTP configuration.

```
Console(config)#logging sendmail host 192.168.1.4          20-43
Console(config)#logging sendmail level 3                   20-44
Console(config)#logging sendmail source-email              20-45
    big-wheels@matel.com
Console(config)#logging sendmail destination-email         20-45
    chris@matel.com
Console(config)#logging sendmail                           20-46
Console(config)#exit
Console#show logging sendmail                             20-47
SMTP servers
-----
    1. 192.168.1.4

SMTP minimum severity level: 4

SMTP destination email addresses
-----
    1. chris@matel.com

SMTP source email address: big-wheels@matel.com

SMTP status:                      Enabled
Console#
```

## Renumbering the Stack

If the units are no longer numbered sequentially after several topology changes or failures, you can reset the unit numbers using the “Renumbering” command. Just remember to save the new configuration settings to a startup configuration file prior to powering off the stack Master.

### Command Usage

- The startup configuration file maps configuration settings to each switch in the stack based on the unit identification number. You should

therefore remember to save the current configuration after renumbering the stack.

- For a line topology, the stack is numbered from top to bottom, with the first unit in the stack designated at unit 1. For a ring topology, the Master unit taken as the top of the stack and is numbered as unit 1, and all other units are numbered sequentially down through the ring.

**Web** – Click System, Renumbering.



**Figure 4-22 Renumbering the Stack**

**CLI** – This example renumbers all units in the stack.

```
Console#switch all renumber
Console#
```

20-3

## Resetting the System

**Web** – Click System, Reset. Click the Reset button to restart the switch. When prompted, confirm that you want reset the switch.



**Figure 4-23 Resetting the System**

**CLI** – Use the reload command to restart the switch.

```
Console#reload
System will be restarted, continue <y/n>?
```

19-5

**Note:**When restarting the system, it will always run the Power-On Self-Test.

## Setting the System Clock

Simple Network Time Protocol (SNTP) allows the switch to set its internal clock based on periodic updates from a time server (SNTP or NTP).

Maintaining an accurate time on the switch enables the system log to record meaningful dates and times for event entries. You can also manually set the clock using the CLI. (See “calendar set” on page 20-53.) If the clock is not set, the switch will only record the time from the factory default set at the last bootup.

When the SNTP client is enabled, the switch periodically sends a request for a time update to a configured time server. You can configure up to three time server IP addresses. The switch will attempt to poll each server in the configured sequence.

### Configuring SNTP

You can configure the switch to send time synchronization requests to time servers.

#### Command Attributes

- **SNTP Client** – Configures the switch to operate as an SNTP client. This requires at least one time server to be specified in the SNTP Server field. (Default: Disabled)
- **SNTP Poll Interval** – Sets the interval between sending requests for a time update from a time server. (Range: 16-16384 seconds; Default: 16 seconds)
- **SNTP Server** – Sets the IP address for up to three time servers. The switch attempts to update the time from the first server, if this fails it attempts an update from the next server in the sequence.



**Web** – Select SNTP, Configuration. Modify any of the required parameters, and click Apply.

SNTP Configuration			
SNTP Client	<input checked="" type="checkbox"/> Enabled		
SNTP Polling Interval (16-16384)	16		
SNTP Server	10.1.0.19	137.82.140.80	128.250.36.2

**Figure 4-24 SNTP Configuration**

**CLI** – This example configures the switch to operate as an SNTP client and then displays the current time and settings.

```

Console(config)#sntp client                                20-48
Console(config)#sntp poll 16                               20-50
Console(config)#sntp server 10.1.0.19 137.82.140.80
128.250.36.2                                              20-49
Console(config)#exit
Console#show sntp                                         20-51
Current time: Jan 6 14:56:05 2004
Poll interval: 60
Current mode: unicast
SNTP status : Enabled
SNTP server 10.1.0.19 137.82.140.80 128.250.36.2
Current server: 128.250.36.2
Console#
  
```

## Setting the Time Zone

SNTP uses Coordinated Universal Time (or UTC, formerly Greenwich Mean Time, or GMT) based on the time at the Earth's prime meridian, zero degrees longitude. To display a time corresponding to your local time, you must indicate the number of hours and minutes your time zone is east (before) or west (after) of UTC.

### Command Attributes

- **Current Time** – Displays the current time.
- **Name** – Assigns a name to the time zone. (Range: 1-29 characters)
- **Hours (0-13)** – The number of hours before/after UTC.

- **Minutes (0-59)** – The number of minutes before/after UTC.
- **Direction** – Configures the time zone to be before (east) or after (west) UTC.

**Web** – Select SNTP, Clock Time Zone. Set the offset for your time zone relative to the UTC, and click Apply.

**Clock Time Zone**

---

Note: The maximum value is 13:00

Current Time	Jan 1 00:20:15 2001
Name	<input type="text" value="Dhaka"/>
Hours (0-13)	<input type="text" value="6"/>
Minutes (0-59)	<input type="text" value="0"/>
Direction	<input type="radio"/> Before-UTC <input checked="" type="radio"/> After-UTC

**Figure 4-25 Clock Time Zone**

**CLI** - This example shows how to set the time zone for the system clock.

```
Console(config)#clock timezone Dhaka hours 6 minute 0
                    after-UTC
Console#
```

20-52

# CHAPTER 5

## SIMPLE NETWORK MANAGEMENT PROTOCOL

---

Simple Network Management Protocol (SNMP) is a communication protocol designed specifically for managing devices on a network. Equipment commonly managed with SNMP includes switches, routers and host computers. SNMP is typically used to configure these devices for proper operation in a network environment, as well as to monitor them to evaluate performance or detect potential problems.

Managed devices supporting SNMP contain software, which runs locally on the device and is referred to as an agent. A defined set of variables, known as managed objects, is maintained by the SNMP agent and used to manage the device. These objects are defined in a Management Information Base (MIB) that provides a standard presentation of the information controlled by the agent. SNMP defines both the format of the MIB specifications and the protocol used to access this information over the network.

The switch includes an onboard agent that supports SNMP versions 1, 2c, and 3. This agent continuously monitors the status of the switch hardware, as well as the traffic passing through its ports. A network management station can access this information using software such as HP OpenView. Access to the onboard agent from clients using SNMP v1 and v2c is controlled by community strings. To communicate with the switch, the management station must first submit a valid community string for authentication.

Access to the switch using from clients using SNMPv3 provides additional security features that cover message integrity, authentication, and encryption; as well as controlling user access to specific areas of the MIB tree.

The SNMPv3 security structure consists of security models, with each model having it's own security levels. There are three security models defined, SNMPv1, SNMPv2c, and SNMPv3. Users are assigned to “groups” that are defined by a security model and specified security levels. Each group also has a defined security access to set of MIB objects for reading and writing, which are known as “views.” The switch has a default view (all MIB objects) and default groups defined for security models v1 and v2c. The following table shows the security models and levels available and the system default settings.

**Table 5-1 SNMPv3 Security Models and Levels**

Model	Level	Group	Read View	Write View	Notify View	Security
v1	noAuthNoPriv	public (read only)	defaultview	none	none	Community string only
v1	noAuthNoPriv	private (read/write)	defaultview	defaultview	none	Community string only
v1	noAuthNoPriv	<i>user defined</i>	<i>user defined</i>	<i>user defined</i>	<i>user defined</i>	Community string only
v2c	noAuthNoPriv	public (read only)	defaultview	none	none	Community string only
v2c	noAuthNoPriv	private (read/write)	defaultview	defaultview	none	Community string only
v2c	noAuthNoPriv	<i>user defined</i>	<i>user defined</i>	<i>user defined</i>	<i>user defined</i>	Community string only
v3	noAuthNoPriv	<i>user defined</i>	<i>user defined</i>	<i>user defined</i>	<i>user defined</i>	A user name match only

**Table 5-1 SNMPv3 Security Models and Levels (Continued)**

Model	Level	Group	Read View	Write View	Notify View	Security
v3	AuthNoPriv	<i>user defined</i>	<i>user defined</i>	<i>user defined</i>	<i>user defined</i>	Provides user authentication via MD5 or SHA algorithms
v3	AuthPriv	<i>user defined</i>	<i>user defined</i>	<i>user defined</i>	<i>user defined</i>	Provides user authentication via MD5 or SHA algorithms and data privacy using DES 56-bit encryption

**Note:** The predefined default groups and view can be deleted from the system. You can then define customized groups and views for the SNMP clients that require access.

## Enabling the SNMP Agent

Enables SNMPv3 service for all management clients (i.e., versions 1, 2c, 3).

### Command Attributes

**SNMP Agent Status** – Enables SNMP on the switch.

**Web** – Click SNMP, Agent Status. Enable the SNMP Agent by marking the Enabled checkbox, and click Apply.

A screenshot of a web-based configuration window titled "SNMP Agent Status". Below the title is a horizontal line. Underneath the line is a label "Snmp Agent Status" followed by a checkbox that is checked and the word "Enabled".

SNMP Agent Status	
Snmp Agent Status	<input checked="" type="checkbox"/> Enabled

Figure 5-1 Enabling the SNMP Agent

**CLI** – The following example enables SNMP on the switch.

```
Console (config) #snmp-server  
Console (config) #
```

21-2

## Setting Community Access Strings

You may configure up to five community strings authorized for management access by clients using SNMP v1 and v2c. All community strings used for IP Trap Managers should be listed in this table. For security reasons, you should consider removing the default strings.

### Command Attributes

- **SNMP Community Capability** – The switch supports up to five community strings.
- **Current** – Displays a list of the community strings currently configured.

- **Community String** – A community string that acts like a password and permits access to the SNMP protocol.  
Default strings: “public” (read-only access), “private” (read/write access)  
Range: 1-32 characters, case sensitive
- **Access Mode** – Specifies the access rights for the community string:
  - **Read-Only** – Authorized management stations are only able to retrieve MIB objects.
  - **Read/Write** – Authorized management stations are able to both retrieve and modify MIB objects.

**Web** – Click SNMP, Configuration. Add new community strings as required, select the access rights from the Access Mode drop-down list, then click Add.

The image shows a web-based configuration window titled "SNMP Configuration". Inside, there is a section for "SNMP Community:" with a sub-section "SNMP Community Capability: 5". Below this, there are two columns: "Current:" and "New:". The "Current:" column contains a list box with "private RW" and "public RO". The "New:" column contains a "Community String" text box with "spiderman" and an "Access Mode" dropdown menu set to "Read/Write". Between the columns are buttons for "<< Add" and "Remove".

**Figure 5-2 Configuring SNMP Community Strings**

**CLI** – The following example adds the string “spiderman” with read/write access.

```
Console(config)#snmp-server community spiderman rw      21-4
Console(config)#
```

## Specifying Trap Managers and Trap Types

Traps indicating status changes are issued by the switch to specified trap managers. You must specify trap managers so that key events are reported by this switch to your management station (using network management platforms such as HP OpenView). You can specify up to five management stations that will receive authentication failure messages and other trap messages from the switch.

### Command Usage

- If you specify an SNMP Version 3 host, then the “Trap Manager Community String” is interpreted as an SNMP user name. If you use V3 authentication or encryption options (authNoPriv or authPriv), the user name must first be defined in the SNMPv3 Users page (page 5-12). Otherwise, the authentication password and/or privacy password will not exist, and the switch will not authorize SNMP access for the host. However, if you specify a V3 host with the no authentication (noAuth) option, an SNMP user account will be automatically generated, and the switch will authorize SNMP access for the host.
- Notifications are issued by the switch as trap messages by default. The recipient of a trap message does not send a response to the switch. Traps are therefore not as reliable as inform messages, which include a request for acknowledgement of receipt. Informs can be used to ensure that critical information is received by the host. However, note that informs consume more system resources because they must be kept in memory until a response is received. Informs also add to network traffic. You should consider these effects when deciding whether to issue notifications as traps or informs.

To send an inform to a SNMPv2c host, complete these steps:

1. Enable the SNMP agent (page 5-4).
2. Enable trap informs as described in the following pages.
3. Create a view with the required notification messages (page 5-24).
4. Create a group that includes the required notify view (page 5-18).



To send an inform to a SNMPv3 host, complete these steps:

1. Enable the SNMP agent (page 5-4).
2. Enable trap informs as described in the following pages.
3. Create a view with the required notification messages (page 5-24).
4. Create a group that includes the required notify view (page 5-18).
5. Specify a remote engine ID where the user resides (page 5-11).
6. Then configure a remote user (page 5-15).

### **Command Attributes**

- **Trap Manager Capability** – This switch supports up to five trap managers.
- **Current** – Displays a list of the trap managers currently configured.
- **Trap Manager IP Address** – IP address of a new management station to receive notification messages.
- **Trap Manager Community String** – Specifies a valid community string for the new trap manager entry. Though you can set this string in the Trap Managers table, we recommend that you define this string in the SNMP Configuration page (for Version 1 or 2c clients), or define a corresponding “User Name” in the SNMPv3 Users page (for Version 3 clients). (Range: 1-32 characters, case sensitive)
- **Trap UDP Port** – Specifies the UDP port number used by the trap manager.
- **Trap Version** – Indicates if the user is running SNMP v1, v2c, or v3. (Default: v1)
- **Trap Security Level** – When trap version 3 is selected, you must specify one of the following security levels. (Default: noAuthNoPriv)
  - **noAuthNoPriv** – There is no authentication or encryption used in SNMP communications.
  - **AuthNoPriv** – SNMP communications use authentication, but the data is not encrypted (only available for the SNMPv3 security model).
  - **AuthPriv** – SNMP communications use both authentication and encryption (only available for the SNMPv3 security model).

- **Trap Inform** – Notifications are sent as inform messages. Note that this option is only available for version 2c and 3 hosts. (Default: traps are used)
  - **Timeout** – The number of seconds to wait for an acknowledgment before resending an inform message. (Range: 0-2147483647 centiseconds; Default: 1500 centiseconds)
  - **Retry times** – The maximum number of times to resend an inform message if the recipient does not acknowledge receipt. (Range: 0-255; Default: 3)
- **Enable Authentication Traps**<sup>3</sup> – Issues a notification message to specified IP trap managers whenever authentication of an SNMP request fails. (Default: Enabled)
- **Enable Link-up and Link-down Traps**<sup>3</sup> – Issues a notification message whenever a port link is established or broken. (Default: Enabled)

---

3. These are legacy notifications and therefore when used for SNMP Version 3 hosts, they must be enabled in conjunction with the corresponding entries in the Notification View (page 5-18).

**Web** – Click SNMP, Configuration. Enter the IP address and community string for each management station that will receive trap messages, specify the UDP port, SNMP trap version, trap security level (for v3 clients), trap inform settings (for v2c/v3 clients), and then click Add. Select the trap types required using the check boxes for Authentication and Link-up/down traps, and then click Apply.

**Trap Managers:**

**Trap Manager Capability: 5**

Current: (none)    << Add    Remove

New:

Trap Manager IP Address	10.1.19.23
Trap Manager Community String	private
Trap UDP Port	160
Trap Version	2c
Trap Security Level	noAuthNoPriv
<input checked="" type="checkbox"/> Trap Inform	<div> <div>Timeout (0-2147483647)</div> <div></div> <div>(1/100 secs)</div> </div>
	<div> <div>Retry times (0-255)</div> <div></div> </div>

Enable Authentication Traps: ☒

Enable Link-up and Link-down Traps: ☐

**Figure 5-3 Configuring SNMP Trap Managers**

**CLI** – This example adds a trap manager and enables authentication traps.

```
Console(config)#snmp-server host 10.1.19.23 private version 2c
                        udp-port 162                                21-6
Console(config)#snmp-server enable traps authentication          21-9
```

## **Configuring SNMPv3 Management Access**

To configure SNMPv3 management access to the switch, follow these steps:

1. If you want to change the default engine ID, do so before configuring other SNMP parameters.
2. Specify read and write access views for the switch MIB tree.
3. Configure SNMP user groups with the required security model (i.e., SNMP v1, v2c or v3) and security level (i.e., authentication and privacy).
4. Assign SNMP users to groups, along with their specific authentication and privacy passwords.


### **Setting a Local Engine ID**

An SNMPv3 engine is an independent SNMP agent that resides on the switch. This engine protects against message replay, delay, and redirection. The engine ID is also used in combination with user passwords to generate the security keys for authenticating and encrypting SNMPv3 packets.

A local engine ID is automatically generated that is unique to the switch. This is referred to as the default engine ID. If the local engineID is deleted or changed, all SNMP users will be cleared. You will need to reconfigure all existing users.

A new engine ID can be specified by entering 1 to 26 hexadecimal characters. If less than 26 characters are specified, trailing zeroes are added to the value. For example, the value “1234” is equivalent to “1234” followed by 22 zeroes.

**Web** – Click SNMP, SNMPv3, Engine ID. Enter an ID of up to 26 hexadecimal characters and then click Save.

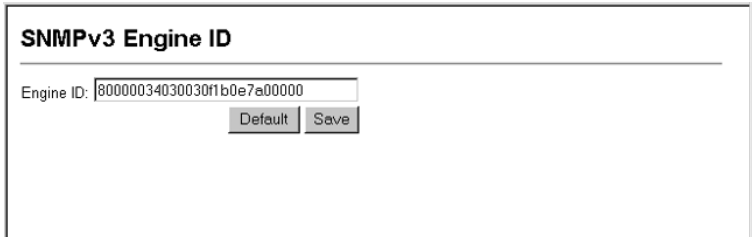

**Figure 5-4 Setting the SNMPv3 Engine ID**

**CLI** – This example sets an SNMPv3 engine ID.

```

Console(config)#snmp-server engine-id local 12345abcdef      21-10
Console(config)#exit
Console#show snmp engine-id                                21-12
Local SNMP engineID: 8000002a80000000000e8666672
Local SNMP engineBoots: 1
Console#
    
```

## Specifying a Remote Engine ID

To send inform messages to an SNMPv3 user on a remote device, you must first specify the engine identifier for the SNMP agent on the remote device where the user resides. The remote engine ID is used to compute the security digest for authenticating and encrypting packets sent to a user on the remote host.

SNMP passwords are localized using the engine ID of the authoritative agent. For informs, the authoritative SNMP agent is the remote agent. You therefore need to configure the remote agent's SNMP engine ID before you can send proxy requests or informs to it. (See “Specifying Trap Managers and Trap Types” on page 5-6 and “Configuring Remote SNMPv3 Users” on page 5-15.)

The engine ID can be specified by entering 1 to 26 hexadecimal characters. If less than 26 characters are specified, trailing zeroes are added to the value. For example, the value “1234” is equivalent to “1234” followed by 22 zeroes.

**Web** – Click SNMP, SNMPv3, Remote Engine ID. Enter an ID of up to 26 hexadecimal characters and then click Save.

**SNMPv3 Remote Engine ID**

Remote Engine ID	Remote IP Host	Action
80000000030004e2b316c54321	192.168.1.19	Remove
		Add

Figure 5-5 Setting an Engine ID

**CLI** – This example specifies a remote SNMPv3 engine ID.

```
Console(config)#snmp-server engine-id remote 54321 192.168.1.19      21-10
Console(config)#exit
Console#show snmp engine-id                                          21-12
Local SNMP engineID: 8000002a8000000000e8666672
Local SNMP engineBoots: 1

Remote SNMP engineID                                               IP address
80000000030004e2b316c54321                                       192.168.1.19
Console#
```

Configuring SNMPv3 Users

Each SNMPv3 user is defined by a unique name. Users must be configured with a specific security level and assigned to a group. The SNMPv3 group restricts users to a specific read, write, or notify view.

Command Attributes

- User Name** – The name of user connecting to the SNMP agent. (Range: 1-32 characters)
- Group Name** – The name of the SNMP group to which the user is assigned. (Range: 1-32 characters)
- Security Model** – The user security model; SNMP v1, v2c or v3.
- Security Level** – The security level used for the user:
  - noAuthNoPriv – There is no authentication or encryption used in SNMP communications. (This is the default for SNMPv3.)
  - AuthNoPriv – SNMP communications use authentication, but the data is not encrypted (only available for the SNMPv3 security model).

- AuthPriv – SNMP communications use both authentication and encryption (only available for the SNMPv3 security model).
- **Authentication Protocol** – The method used for user authentication. (Options: MD5, SHA; Default: MD5)
- **Authentication Password** – A minimum of eight plain text characters is required.
- **Privacy Protocol** – The encryption algorithm use for data privacy; only 56-bit DES is currently available.
- **Privacy Password** – A minimum of eight plain text characters is required.
- **Actions** – Enables the user to be assigned to another SNMPv3 group.

**Web** – Click SNMP, SNMPv3, Users. Click New to configure a user name. In the New User page, define a name and assign it to a group, then click Add to save the configuration and return to the User Name list. To delete a user, check the box next to the user name, then click Delete. To change the assigned group of a user, click Change Group in the Actions column of the users table and select the new group.

The screenshot displays the 'SNMPv3 Users' management interface. At the top, there are 'New' and 'Delete' buttons. Below them is a table listing existing users. An arrow points from the 'New' button to the 'SNMPv3 Users -- New' form. Another arrow points from the 'Change Group...' link in the table to the 'SNMPv3 Users -- Edit' form.

	User Name	Group Name	Model	Level	Authentication	Privacy	Actions
<input type="checkbox"/>	david	DefaultROGroup	V1	noAuthNoPriv	None	None	<a href="#">Change Group...</a>
<input type="checkbox"/>	chris	snmpv3users	V3	authPriv	MD5	DES56	<a href="#">Change Group...</a>
<input type="checkbox"/>	steve	snmpv3users	V3	authNoPriv	MD5	None	<a href="#">Change Group...</a>

**SNMPv3 Users -- New**

SNMPv3 User:

User Name:

Group Name: ☐ ☐  ☐ snmpv3users

Security Model:  V1

Security Level:  noAuthNoPriv

**User Authentication:**

Authentication Protocol:  MD5

Authentication Password:

**Data Privacy:**

Privacy Protocol:  DES56

Privacy Password:

**SNMPv3 Users -- Edit**

User Name: david

Group Name: ☐ ☐  ☐ DefaultROGroup

**Figure 5-6 Configuring SNMPv3 Users**



**CLI** – Use the **snmp-server user** command to configure a new user name and assign it to a group.

```

Console(config)#snmp-server user chris group r&d v3 auth md5
greenpeace priv des56 einstien                                21-18
Console(config)#exit
Console#show snmp user                                        21-20
EngineId: 80000034030001f488f5200000
User Name: chris
Authentication Protocol: md5
Privacy Protocol: des56
Storage Type: nonvolatile
Row Status: active

Console#
    
```

## Configuring Remote SNMPv3 Users

Each SNMPv3 user is defined by a unique name. Users must be configured with a specific security level and assigned to a group. The SNMPv3 group restricts users to a specific read and a write view.

To send inform messages to an SNMPv3 user on a remote device, you must first specify the engine identifier for the SNMP agent on the remote device where the user resides. The remote engine ID is used to compute the security digest for authenticating and encrypting packets sent to a user on the remote host. (See “Specifying Trap Managers and Trap Types” on page 5-6 and “Specifying a Remote Engine ID” on page 5-11.)

### Command Attributes

- **User Name** – The name of user connecting to the SNMP agent. (Range: 1-32 characters)
- **Group Name** – The name of the SNMP group to which the user is assigned. (Range: 1-32 characters)
- **Engine ID** – The engine identifier for the SNMP agent on the remote device where the remote user resides. Note that the remote engine identifier must be specified before you configure a remote user. (See “Specifying a Remote Engine ID” on page 5-11.)
- **Remote IP** – The Internet address of the remote device where the user resides.

- **Security Model** – The user security model; SNMP v1, v2c or v3.  
(Default: v1)
- **Security Level** – The security level used for the user:
  - noAuthNoPriv – There is no authentication or encryption used in SNMP communications. (This is the default for SNMPv3.)
  - AuthNoPriv – SNMP communications use authentication, but the data is not encrypted (only available for the SNMPv3 security model).
  - AuthPriv – SNMP communications use both authentication and encryption (only available for the SNMPv3 security model).
- **Authentication Protocol** – The method used for user authentication.  
(Options: MD5, SHA; Default: MD5)
- **Authentication Password** – A minimum of eight plain text characters is required.
- **Privacy Protocol** – The encryption algorithm use for data privacy; only 56-bit DES is currently available.
- **Privacy Password** – A minimum of eight plain text characters is required.

**Web** – Click SNMP, SNMPv3, Remote Users. Click New to configure a user name. In the New User page, define a name and assign it to a group, then click Add to save the configuration and return to the User Name list. To delete a user, check the box next to the user name, then click Delete.

SNMPv3 Remote Users

New..Delete

	User Name	Group Name	Engine ID	Model	Level	Authentication	Privacy
<input type="checkbox"/>	mark	r&d	80000000030004e2b316c54321	V3	noAuthNoPriv	None	None

SNMPv3 Remote Users -- New

SNMPV3 User:

User Name:

Group Name:

☒
☐ public

Remote IP:

192.168.1.19

Security Model:

V1

Security Level:

noAuthNoPriv

User Authentication:

Authentication Protocol:

MD5

Authentication Password:

Data Privacy:

Privacy Protocol:

DES56

Privacy Password:

Back

Add

Figure 5-7 Configuring Remote SNMPv3 Users

**CLI** – Use the **snmp-server user** command to configure a new user name and assign it to a group.

```
Console(config)#snmp-server user mark group r&d remote 192.168.1.19
v3 auth md5 greenpeace priv des56 einstien                21-18
Console(config)#exit
Console#show snmp user                                     21-20
No user exist.

SNMP remote user
EngineId: 80000000030004e2b316c54321
User Name: mark
Authentication Protocol: none
Privacy Protocol: none
Storage Type: nonvolatile
Row Status: active

Console#
```

## Configuring SNMPv3 Groups

An SNMPv3 group sets the access policy for its assigned users, restricting them to specific read, write, and notify views. You can use the pre-defined default groups or create new groups to map a set of SNMP users to SNMP views.

### Command Attributes

- **Group Name** – The name of the SNMP group. (Range: 1-32 characters)
- **Model** – The group security model; SNMP v1, v2c or v3.
- **Level** – The security level used for the group:
  - noAuthNoPriv – There is no authentication or encryption used in SNMP communications.
  - AuthNoPriv – SNMP communications use authentication, but the data is not encrypted (only available for the SNMPv3 security model).
  - AuthPriv – SNMP communications use both authentication and encryption (only available for the SNMPv3 security model).
- **Read View** – The configured view for read access. (Range: 1-64 characters)
- **Write View** – The configured view for write access. (Range: 1-64 characters)

- **Notify View** – The configured view for notifications. (Range: 1-64 characters)

**Table 5-2 Supported Notification Messages**

Object Label	Object ID	Description
<i>RFC 1493 Traps</i>		
newRoot	1.3.6.1.2.1.17.0.1	The newRoot trap indicates that the sending agent has become the new root of the Spanning Tree; the trap is sent by a bridge soon after its election as the new root, e.g., upon expiration of the Topology Change Timer immediately subsequent to its election.
topologyChange	1.3.6.1.2.1.17.0.2	A topologyChange trap is sent by a bridge when any of its configured ports transitions from the Learning state to the Forwarding state, or from the Forwarding state to the Discarding state. The trap is not sent if a newRoot trap is sent for the same transition.
<i>SNMPv2 Traps</i>		
coldStart	1.3.6.1.6.3.1.1.5.1	A coldStart trap signifies that the SNMPv2 entity, acting in an agent role, is reinitializing itself and that its configuration may have been altered.
warmStart	1.3.6.1.6.3.1.1.5.2	A warmStart trap signifies that the SNMPv2 entity, acting in an agent role, is reinitializing itself such that its configuration is unaltered.

**Table 5-2 Supported Notification Messages (Continued)**

<b>Object Label</b>	<b>Object ID</b>	<b>Description</b>
linkDown*	1.3.6.1.6.3.1.1.5.3	A linkDown trap signifies that the SNMP entity, acting in an agent role, has detected that the ifOperStatus object for one of its communication links is about to enter the down state from some other state (but not from the notPresent state). This other state is indicated by the included value of ifOperStatus.
linkUp*	1.3.6.1.6.3.1.1.5.4	A linkUp trap signifies that the SNMP entity, acting in an agent role, has detected that the ifOperStatus object for one of its communication links left the down state and transitioned into some other state (but not into the notPresent state). This other state is indicated by the included value of ifOperStatus.
authenticationFailure*	1.3.6.1.6.3.1.1.5.5	An authenticationFailure trap signifies that the SNMPv2 entity, acting in an agent role, has received a protocol message that is not properly authenticated. While all implementations of the SNMPv2 must be capable of generating this trap, the snmpEnableAuthenTraps object indicates whether this trap will be generated.

**Table 5-2 Supported Notification Messages (Continued)**

Object Label	Object ID	Description
<i>RMON Events (V2)</i>		
risingAlarm	1.3.6.1.2.1.16.0.1	The SNMP trap that is generated when an alarm entry crosses its rising threshold and generates an event that is configured for sending SNMP traps.
fallingAlarm	1.3.6.1.2.1.16.0.2	The SNMP trap that is generated when an alarm entry crosses its falling threshold and generates an event that is configured for sending SNMP traps.
<i>Private Traps -</i>		
swPowerStatusChangeTrap	1.3.6.1.4.1.202.20.57.84.2.1.0.1	This trap is sent when the power state changes.
swFanFailureTrap	1.3.6.1.4.1.202.20.57.84.2.1.0.17	This trap is sent when the fan fails.
swFanRecoverTrap	1.3.6.1.4.1.202.20.57.84.2.1.0.18	This trap is sent when the fan failure has recovered.
swIpFilterRejectTrap	1.3.6.1.4.1.202.20.57.84.2.1.0.40	This trap is sent when an incorrect IP address is rejected by the IP Filter.
swSmtppConnFailureTrap	1.3.6.1.4.1.202.20.57.84.2.1.0.41	This trap is triggered if the SMTP system cannot open a connection to the mail server successfully.
swMainBoardVerMismatchNotificaiton	1.3.6.1.4.1.202.20.57.84.2.1.0.56	This trap is sent when the slave board version is mismatched with the master board version. This trap binds two objects, the first object indicates the master version, whereas the second represents the slave version.
swModuleVerMismatchNotificaiton	1.3.6.1.4.1.202.20.57.84.2.1.0.57	This trap is sent when the slide-in module version is mismatched with the main board version.

**Table 5-2 Supported Notification Messages (Continued)**

<b>Object Label</b>	<b>Object ID</b>	<b>Description</b>
swThermalRising Notification	1.3.6.1.4.1.202.20.57.84.2.1.0.58	This trap is sent when the temperature exceeds the switchThermalActionRisingThreshold.
swThermalFalling Notification	1.3.6.1.4.1.202.20.57.84.2.1.0.59	This trap is sent when the temperature falls below the switchThermalActionFallingThreshold.
swModuleInsertion Notificaion	1.3.6.1.4.1.202.20.57.84.2.1.0.60	This trap is sent when a module is inserted.
swModuleRemoval Notificaion	1.3.6.1.4.1.202.20.57.84.2.1.0.61	This trap is sent when a module is removed.

\* These are legacy notifications and therefore must be enabled in conjunction with the corresponding traps on the SNMP Configuration menu (page 5-9).



**Web** – Click SNMP, SNMPv3, Groups. Click New to configure a new group. In the New Group page, define a name, assign a security model and level, and then select read, write, and notify views. Click Add to save the new group and return to the Groups list. To delete a group, check the box next to the group name, then click Delete.

**SNMPv3 Groups**

New... Delete

	Group Name	Model	Level	Read View	Write View	Notify View
<input type="checkbox"/>	public	V1	noAuthNoPriv	defaultview	none	none
<input type="checkbox"/>	public	V2C	noAuthNoPriv	defaultview	none	none
<input type="checkbox"/>	private	V1	noAuthNoPriv	defaultview	defaultview	none
<input type="checkbox"/>	private	V2C	noAuthNoPriv	defaultview	defaultview	none
<input type="checkbox"/>	secure-users	V3	authPriv	defaultview	defaultview	defaultview

**Group Properties:**

Group Name:

Security Model:

Security Level:

**SNMPv3 Views:**

Read View: ☒  ☐ defaultview

Write View: ☒  ☐ defaultview

Notify View: ☒  ☐ defaultview

Back Add

Figure 5-8 Configuring SNMPv3 Groups

**CLI** – Use the **snmp-server group** command to configure a new group, specifying the security model and level, and restricting MIB access to defined read and write views.

```
Console(config)#snmp-server group secure-users v3 priv read
    defaultview write defaultview notify defaultview      21-15
Console(config)#exit
Console#show snmp group                                  21-16
:
:
Group Name: secure-users
Security Model: v3
Read View: defaultview
Write View: defaultview
Notify View: defaultview
Storage Type: nonvolatile
Row Status: active

Console#
```

## Setting SNMPv3 Views

SNMPv3 views are used to restrict user access to specified portions of the MIB tree. The predefined view “defaultview” includes access to the entire MIB tree.

### Command Attributes

- **View Name** – The name of the SNMP view. (Range: 1-64 characters)
- **View OID Subtrees** – Shows the currently configured object identifiers of branches within the MIB tree that define the SNMP view.
- **Edit OID Subtrees** – Allows you to configure the object identifiers of branches within the MIB tree. Wild cards can be used to mask a specific portion of the OID string.
- **Type** – Indicates if the object identifier of a branch within the MIB tree is included or excluded from the SNMP view.

**Web** – Click SNMP, SNMPv3, Views. Click New to configure a new view. In the New View page, define a name and specify OID subtrees in the switch MIB to be included or excluded in the view. Click Back to save the new view and return to the SNMPv3 Views list. For a specific view, click on View OID Subtrees to display the current configuration, or click on Edit OID Subtrees to make changes to the view settings. To delete a view, check the box next to the view name, then click Delete.

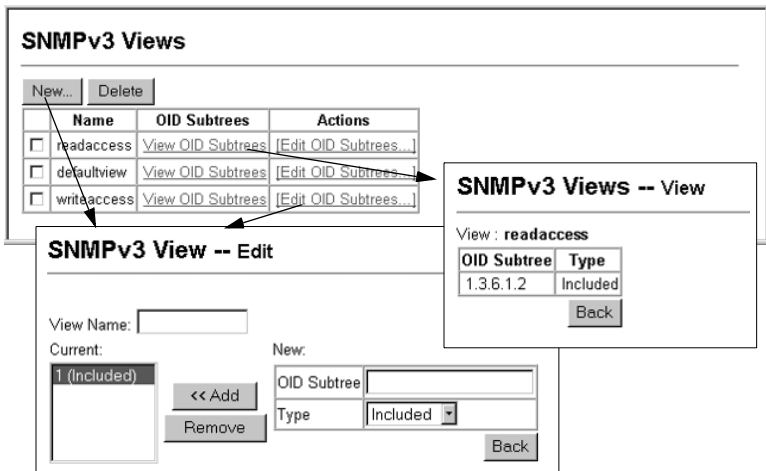


Figure 5-9 Configuring SNMPv3 Views

**CLI** – Use the **snmp-server view** command to configure a new view. This example view includes the MIB-2 interfaces table, and the wildcard mask selects all index entries.

```
Console(config)#snmp-server view ifEntry.a 1.3.6.1.2.1.2.2.1.1.*
    included                                                    21-13
Console(config)#exit
Console#show snmp view                                         21-14
View Name: ifEntry.a
Subtree OID: 1.3.6.1.2.1.2.2.1.1.*
View Type: included
Storage Type: nonvolatile
Row Status: active

View Name: readaccess
Subtree OID: 1.3.6.1.2
View Type: included
Storage Type: nonvolatile
Row Status: active

View Name: defaultview
Subtree OID: 1
View Type: included
Storage Type: nonvolatile
Row Status: active

Console#
```

# CHAPTER 6

## USER AUTHENTICATION

---

You can restrict management access to this switch and provide secure network access using the following options:

- User Accounts – Manually configure management access rights for users.
- Authentication Settings – Use remote authentication to configure access rights.
- HTTPS Settings – Provide a secure web connection.
- SSH Settings – Provide a secure shell (for secure Telnet access).
- Port Security – Configure secure addresses for individual ports.
- 802.1X – Use IEEE 802.1X port authentication to control access to specific ports.
- IP Filter – Filters management access to the web, SNMP or Telnet interface.

### Configuring User Accounts

The guest only has read access for most configuration parameters. However, the administrator has write access for all parameters governing the onboard agent. You should therefore assign a new administrator password as soon as possible, and store it in a safe place.

The default guest name is “guest” with the password “guest.” The default administrator name is “admin” with the password “admin.”

### Command Attributes

- **Account List** – Displays the current list of user accounts and associated access levels. (Defaults: admin, and guest)
- **New Account** – Displays configuration settings for a new account.
  - **User Name** – The name of the user.  
(Maximum length: 8 characters; maximum number of users: 16)
  - **Access Level** – Specifies the user level.  
(Options: Normal and Privileged)
  - **Password** – Specifies the user password.  
(Range: 0-8 characters plain text, case sensitive)
- **Change Password** – Sets a new password for the specified user.

**Web** – Click Security, User Accounts. To configure a new user account, enter the user name, access level, and password, then click Add. To change the password for a specific user, enter the user name and new password, confirm the password by entering it again, then click Apply.

### User Accounts

#### Account List

admin (Privileged)
guest (Normal)

<< Add

Remove

#### New Account

User Name	mike
Access Level	Normal
Password	XXXXXXXXXX
Confirm Password	XXXXXXXXXX

#### Change Password

User Name	
New Password	
Confirm Password	

Change

Figure 6-1 User Accounts

**CLI** – Assign a user name to access-level 15 (i.e., administrator), then specify the password.


```
Console(config)#username bob access-level 15
Console(config)#username bob password 0 smith
Console(config)#
```

22-2

## Configuring Local/Remote Logon Authentication

Use the Authentication Settings menu to restrict management access based on specified user names and passwords. You can manually configure access rights on the switch, or you can use a remote access authentication server based on RADIUS or TACACS+ protocols.

Remote Authentication  
Dial-in User Service  
(RADIUS) and Terminal  
Access Controller Access  
Control System Plus  
(TACACS+) are logon  
authentication protocols  
that use software running  
on a central server to

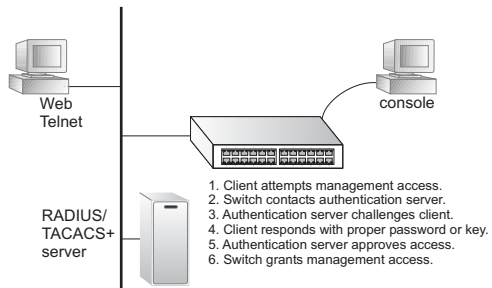

control access to RADIUS-aware or TACACS- aware devices on the network. An authentication server contains a database of multiple user name/password pairs with associated privilege levels for each user that requires management access to the switch.

RADIUS uses UDP while TACACS+ uses TCP. UDP only offers best effort delivery, while TCP offers a connection-oriented transport. Also, note that RADIUS encrypts only the password in the access-request packet from the client to the server, while TACACS+ encrypts the entire body of the packet.

### Command Usage

- By default, management access is always checked against the authentication database stored on the local switch. If a remote authentication server is used, you must specify the authentication sequence and the corresponding parameters for the remote authentication protocol. Local and remote logon authentication control management access via the console port, web browser, or Telnet.
- RADIUS and TACACS+ logon authentication assign a specific privilege level for each user name/password pair. The user name, password, and privilege level must be configured on the authentication server.
- You can specify up to three authentication methods for any user to indicate the authentication sequence. For example, if you select (1) RADIUS, (2) TACACS and (3) Local, the user name and password on the RADIUS server is verified first. If the RADIUS server is not available, then authentication is attempted using the TACACS+ server, and finally the local user name and password is checked.

### Command Attributes

- **Authentication** – Select the authentication, or authentication sequence required:
  - **Local** – User authentication is performed only locally by the switch.
  - **Radius** – User authentication is performed using a RADIUS server only.
  - **TACACS** – User authentication is performed using a TACACS+ server only.
  - [authentication sequence] – User authentication is performed by up to three authentication methods in the indicated sequence.
- **RADIUS Settings**
  - **Global** – Provides globally applicable RADIUS settings.
  - **ServerIndex** – Specifies one of five RADIUS servers that may be configured. The switch attempts authentication using the listed sequence of servers. The process ends when a server either approves or denies access to a user.



- **Server IP Address** – Address of authentication server.  
(Default: 10.1.0.1)
  - **Server Port Number** – Network (UDP) port of authentication server used for authentication messages. (Range: 1-65535; Default: 1812)
  - **Secret Text String** – Encryption key used to authenticate logon access for client. Do not use blank spaces in the string. (Maximum length: 48 characters)
  - **Number of Server Transmits** – Number of times the switch tries to authenticate logon access via the authentication server. (Range: 1-30; Default: 2)
  - **Timeout for a reply** – The number of seconds the switch waits for a reply from the RADIUS server before it resends the request.  
(Range: 1-65535; Default: 5)
  - **TACACS Settings**
    - **Server IP Address** – Address of the TACACS+ server.  
(Default: 10.11.12.13)
    - **Server Port Number** – Network (TCP) port of TACACS+ server used for authentication messages. (Range: 1-65535; Default: 49)
    - **Secret Text String** – Encryption key used to authenticate logon access for client. Do not use blank spaces in the string. (Maximum length: 48 characters)
- Note:** The local switch user database has to be set up by manually entering user names and passwords using the CLI. (See “username” on page 22-2.)

**Web** – Click Security, Authentication Settings. To configure local or remote authentication preferences, specify the authentication sequence (i.e., one to three methods), fill in the parameters for RADIUS or TACACS+ authentication if selected, and click Apply.

**Authentication Settings**

Authentication: Local

RADIUS Settings:

☒ Global | ServerIndex: 1 2 3 4 5

Server Port Number (1-65535): 181

Secret Text String: radius

Number of Server Transmits (1-30): 5

Timeout for a reply (1-65535): 10 (sec)

TACACS Settings:

Server IP Address: 10.11.12.13

Server Port Number (1-65535): 49

Secret Text String:

**Figure 6-2 Authentication Server Settings**

**CLI** – Specify all the required parameters to enable logon authentication.

```
Console(config)#authentication login radius                22-5
Console(config)#radius-server port 181                    22-10
Console(config)#radius-server key green                   22-10
Console(config)#radius-server retransmit 5                22-11
Console(config)#radius-server timeout 10                  22-11
Console(config)#radius-server 1 host 192.168.1.25          22-13
Console(config)#exit

Console#show radius-server                                22-12

Remote RADIUS server configuration:

Global settings:
Communication key with RADIUS server: *****
Server port number: 181
Retransmit times: 5
Request timeout: 10
```

```

Server 1:
  Server IP address: 192.168.1.25
  Communication key with RADIUS server: *****
  Server port number: 181
  Retransmit times: 5
  Request timeout: 10

Console#config
Console(config)#authentication login tacacs                22-5
Console(config)#tacacs-server host 10.20.30.40            22-13
Console(config)#tacacs-server port 200                    22-14
Console(config)#tacacs-server key green                  22-14
Console(config)#exit
Console#show tacacs-server                                22-15
Server IP address:                10.20.30.40
Communication key with tacacs server: *****
Server port number:                200
Console(config)#

```

## Configuring HTTPS

You can configure the switch to enable the Secure Hypertext Transfer Protocol (HTTPS) over the Secure Socket Layer (SSL), providing secure access (i.e., an encrypted connection) to the switch's web interface.

### Command Usage

- Both the HTTP and HTTPS service can be enabled independently on the switch. However, you cannot configure both services to use the same UDP port.
- If you enable HTTPS, you must indicate this in the URL that you specify in your browser: `https://device[:port_number]`
- When you start HTTPS, the connection is established in this way:
  - The client authenticates the server using the server's digital certificate.
  - The client and server negotiate a set of security protocols to use for the connection.
  - The client and server generate session keys for encrypting and decrypting data.
- The client and server establish a secure encrypted connection. A padlock icon should appear in the status bar for Internet Explorer 5.x or above and Netscape Navigator 6.2 or above.

- The following web browsers and operating systems currently support HTTPS:

Table 6-1 HTTPS System Support

Web Browser	Operating System
Internet Explorer 5.0 or later	Windows 98, Windows NT (with service pack 6a), Windows 2000, Windows XP
Netscape Navigator 6.2 or later	Windows 98, Windows NT (with service pack 6a), Windows 2000, Windows XP, Solaris 2.6

- To specify a secure-site certificate, see “Replacing the Default Secure-site Certificate” on page 6-9.

Command Attributes

- **HTTPS Status** – Allows you to enable/disable the HTTPS server feature on the switch. (Default: Enabled)
- **Change HTTPS Port Number** – Specifies the UDP port number used for HTTPS/SSL connection to the switch’s web interface. (Default: Port 443)

**Web** – Click Security, HTTPS Settings. Enable HTTPS and specify the port number, then click Apply.

HTTPS Settings

HTTPS Status

☒ Enabled

Change HTTPS Port Number (1-65535)

441

Figure 6-3 HTTPS Settings

**CLI** – This example enables the HTTP secure server and modifies the port number.

Console(config)#ip http secure-server	22-17
Console(config)#ip http secure-port 441	22-18
Console(config)#	

## Replacing the Default Secure-site Certificate

When you log onto the web interface using HTTPS (for secure access), a Secure Sockets Layer (SSL) certificate appears for the switch. By default, the certificate that Netscape and Internet Explorer display will be associated with a warning that the site is not recognized as a secure site. This is because the certificate has not been signed by an approved certification authority. If you want this warning to be replaced by a message confirming that the connection to the switch is secure, you must obtain a unique certificate and a private key and password from a recognized certification authority.

**Note:** For maximum security, we recommend you obtain a unique Secure Sockets Layer certificate at the earliest opportunity. This is because the default certificate for the switch is not unique to the hardware you have purchased.

When you have obtained these, place them on your TFTP server, and use the following command at the switch's command-line interface to replace the default (unrecognized) certificate with an authorized one:

```
Console#copy tftp https-certificate 20-13
TFTP server ip address: <server ip-address>
Source certificate file name: <certificate file name>
Source private file name: <private key file name>
Private password: <password for private key>
```

**Note:** The switch must be reset for the new certificate to be activated. To reset the switch, type “reload” at the command prompt:

```
Console#reload
```

## Configuring the Secure Shell

The Berkley-standard includes remote access tools originally designed for Unix systems. Some of these tools have also been implemented for Microsoft Windows and other environments. These tools, including commands such as *rlogin* (remote login), *rsh* (remote shell), and *rtp* (remote copy), are not secure from hostile attacks.

The Secure Shell (SSH) includes server/client applications intended as a secure replacement for the older Berkley remote access tools. SSH can also provide remote management access to this switch as a secure replacement for Telnet. When the client contacts the switch via the SSH protocol, the switch generates a public-key that the client uses along with a local user name and password for access authentication. SSH also encrypts all data transfers passing between the switch and SSH-enabled management station clients, and ensures that data traveling over the network arrives unaltered.

Note that you need to install an SSH client on the management station to access the switch for management via the SSH protocol.

**Note:** The switch supports both SSH Version 1.5 and 2.0 clients.

### Command Usage

The SSH server on this switch supports both password and public key authentication. If password authentication is specified by the SSH client, then the password can be authenticated either locally or via a RADIUS or TACACS+ remote authentication server, as specified on the **Authentication Settings** page (page 6-3). If public key authentication is specified by the client, then you must configure authentication keys on both the client and the switch as described in the following section. Note that regardless of whether you use public key or password authentication, you still have to generate authentication keys on the switch (SSH Host Key Settings) and enable the SSH server (Authentication Settings).

To use the SSH server, complete these steps:

1. *Generate a Host Key Pair* – On the SSH Host Key Settings page, create a host public/private key pair.
2. *Provide Host Public Key to Clients* – Many SSH client programs automatically import the host public key during the initial connection setup with the switch. Otherwise, you need to manually create a known hosts file on the management station and place the host public key in it. An entry for a public key in the known hosts file would appear similar to the following example:

```
10.1.0.54 1024 35 15684995401867669259333946775054617325313674890836547254
15020245593199868544358361651999923329781766065830956 10825913212890233
76546801726272571413428762941301196195566782 59566410486957427888146206
51941746772984865468615717739390164779355942303577413098022737087794545240839
71752646358058176716709574804776117
```

3. *Import Client's Public Key to the Switch* – Use the **copy tftp public-key** command (page 20-13) to copy a file containing the public key for all the SSH client's granted management access to the switch. (Note that these clients must be configured locally on the switch via the User Accounts page as described on page 6-1.) The clients are subsequently authenticated using these keys. The current firmware only accepts public key files based on standard UNIX format as shown in the following example for an RSA key:

```
1024 35 1341081685609893921040944920155425347631641921872958921143173880
05553616163105177594083868631109291232226828519254374603100937187721199696317
81366277414168985132049117204830339254324101637997592371449011938006090253948
40848271781943722884025331159521348610229029789827213532671316294325328189150
45306393916643 steve@192.168.1.19
```

4. *Set the Optional Parameters* – On the SSH Settings page, configure the optional parameters, including the authentication timeout, the number of retries, and the server key size.
5. *Enable SSH Service* – On the SSH Settings page, enable the SSH server on the switch.

6. *Authentication* – One of the following authentication methods is employed:

*Password Authentication (for SSH v1.5 or V2 Clients)*

- a. The client sends its password to the server.
- b. The switch compares the client's password to those stored in memory.
- c. If a match is found, the connection is allowed.

**Note:** To use SSH with only password authentication, the host public key must still be given to the client, either during initial connection or manually entered into the known host file. However, you do not need to configure the client's keys.

*Public Key Authentication* – When an SSH client attempts to contact the switch, the SSH server uses the host key pair to negotiate a session key and encryption method. Only clients that have a private key corresponding to the public keys stored on the switch can access it. The following exchanges take place during this process:

*Authenticating SSH v1.5 Clients*

- a. The client sends its RSA public key to the switch.
- b. The switch compares the client's public key to those stored in memory.
- c. If a match is found, the switch uses its secret key to generate a random 256-bit string as a challenge, encrypts this string with the user's public key, and sends it to the client.
- d. The client uses its private key to decrypt the challenge string, computes the MD5 checksum, and sends the checksum back to the switch.
- e. The switch compares the checksum sent from the client against that computed for the original string it sent. If the two checksums match, this means that the client's private key corresponds to an authorized public key, and the client is authenticated.



### *Authenticating SSH v2 Clients*

- a. The client first queries the switch to determine if DSA public key authentication using a preferred algorithm is acceptable.
- b. If the specified algorithm is supported by the switch, it notifies the client to proceed with the authentication process. Otherwise, it rejects the request.
- c. The client sends a signature generated using the private key to the switch.
- d. When the server receives this message, it checks whether the supplied key is acceptable for authentication, and if so, it then checks whether the signature is correct. If both checks succeed, the client is authenticated.

**Note:** The SSH server supports up to four client sessions. The maximum number of client sessions includes both current Telnet sessions and SSH sessions.

## Generating the Host Key Pair

A host public/private key pair is used to provide secure communications between an SSH client and the switch. After generating this key pair, you must provide the host public key to SSH clients and import the client's public key to the switch as described in the preceding section (Command Usage).

### Field Attributes

- **Public-Key of Host-Key** – The public key for the host.
  - RSA: The first field indicates the size of the host key (e.g., 1024), the second field is the encoded public exponent (e.g., 65537), and the last string is the encoded modulus.
  - DSA: The first field indicates that the encryption method used by SSH is based on the Digital Signature Standard (DSS). The last string is the encoded modulus.

- **Host-Key Type** – The key type used to generate the host key pair (i.e., public and private keys). (Range: RSA, DSA, Both; Default: Both)  
The SSH server uses RSA or DSA for key exchange when the client first establishes a connection with the switch, and then negotiates with the client to select either DES (56-bit) or 3DES (168-bit) for data encryption.

**Note:** The switch uses only RSA Version 1 for SSHv1.5 clients and DSA Version 2 for SSHv2 clients.

- **Save Host-Key from Memory to Flash** – Saves the host key from RAM (i.e., volatile memory to flash memory). Otherwise, the host key pair is stored to RAM by default. Note that you must select this item prior to generating the host-key pair.
- **Generate** – This button is used to generate the host key pair. Note that you must first generate the host key pair before you can enable the SSH server on the SSH Server Settings page.
- **Clear** – This button clears the host key from both volatile memory (RAM) and non-volatile memory (Flash).

**Web** – Click Security, SSH, Host-Key Settings. Select the host-key type from the drop-down box, select the option to save the host key from memory to flash (if required) prior to generating the key, and then click Generate.

**SSH Host-Key Settings**

**Public-Key of Host-Key**

**RSA**

```
1024 65537
1309178972674789616152111712764979196296211551642422768028072510384048338276358290698941935742267566
1853076228099531413921379002210394737439417368512447371756369962704297907046427111321882467751081589
0431586319348954200209463340676128115040594681146425925732650943840347858370753955264123928004845007
g11621891
```

**DSA**

```
ssh-dss
AAAAB3NzaC1kc3MAAACBAJBVdkEzjk1kEEBW3Ak1Fz72nOP8vP08BDqF2eZeNx17DQ/N4hYx/W427x1AwJ1/dEO41o8fchOdeHZUb
kQXO0BdqU9/IuvRMD+AEHx5nwoZDZrLWUyMjDowHOOpKvVSmVcZkIjz1FrQs6XTaC1r3ODUbovP0zc1ld+Jj3DC4tcXq1AAAAFCQy
PELSs2E3S03Q+P32+SfzpbFA+cQAAIAARYTgej1/ZfBvVhC9H/XuIVZApHEDY10forzpzEic8e8aIeE53gcHGuQzvRLGH+2ciVVld8
SVyYKHAWFOFpTKOGC9nhVGRjXb8Ez5oKPkI7n8t2Ct2K4z2R50tvyP5vCQaret3b1Ud1/eB2q7o3vnruck0Xv1QbWP501pJX5op
CwAAAI8B8H3JwH89BCT3d0XZHL4sqQ7bn70vSOVuxR6saY52ZHP5dby155vWenchoCaBpGc0J11VWHEmtcgeFZrAw503OT4IAR
qGqNc9p1vL4sVxhBdx9c2H1Wkjh880PFVH4Cw2FLHpfBBnPL3HhqvRTjNYBxJPaqVOZEK6knaGHQ=
```

Host-Key Type: **Both**

☒ Save Host-Key from Memory to Flash

**Generate** **Clear**

Figure 6-4 SSH Host-Key Settings

**CLI** – This example generates a host-key pair using both the RSA and DSA algorithms, stores the keys to flash memory, and then displays the host's public keys.

Console#ip ssh crypto host-key generate	22-28
Console#ip ssh save host-key	22-30
Console#show public-key host	22-32
Host:	
RSA:	
1024 65537	
127250922544926402131336514546131189679055192360076028653006761	
8240969094744832010252487896597759216832222558465238779154647980739	
6314033869257931051057652122430528078658854857892726029378660892368	
414232759121276032591968369705343933643844522335188287173896894511	
729290510813919642025190932104328579045764891	
DSA:	
ssh-dss AAAAB3NzaC1kc3MAAACBAN6zwIqCqDb3869jYVXlME1sHL0Ece/Re6hlas	
fEthIwmj hLY400jqJZpcEUgCfYlum0Y2uoLka+Py9ieGWQ8f2gobUZKIICuKg6v	
jO9XTs7XKc05xfzkBiKviDa+20rIz6UK+6vFOgvUDFedlnixYTVo+h5v8r0ea2rpn06	
DkZAAAAFQCNzn/x17dwpW8RrVDQnSWw4Qk+6QAAAIEAptkGeB6B5hwagH4gUOCY6i1	
TmrmsiJgfw09OqRPUMBkACC+uzxatOo7drnIZypMx+Sx5RUdMGgKS+9ywsalCwQHeF	
Y5ilc3lDCNBueeLykZzVS+RS+azTKIk/zrJh8GLG Nq375R55yRxFvmcGIn/Q7Iph	
PgyJ3o9MK8LFDfmJEAACAL8A6tESiswP2OFqX7VGoEbzVDSOIRTMFy3iUXtvGyQA0V	
Sy67Mfc3lmtgqPRUOYXDiwIBp5NXgilCg5z7VqbmRm28mWc5a//f8TUAgnPWKV6W	
0hqmqshQdotVzDRle+XKNTZj0uTwWfjO5KytDn4MdoTHgrbl/DMDAfjnte8MZzs=	
Console#	

## Configuring the SSH Server

The SSH server includes basic settings for authentication.

### Field Attributes

- **SSH Server Status** – Allows you to enable/disable the SSH server on the switch. (Default: Disabled)
- **Version** – The Secure Shell version number. Version 2.0 is displayed, but the switch supports management access via either SSH Version 1.5 or 2.0 clients.
- **SSH Authentication Timeout** – Specifies the time interval in seconds that the SSH server waits for a response from a client during an authentication attempt.  
(Range: 1 to 120 seconds; Default: 120 seconds)

- **SSH Authentication Retries** – Specifies the number of authentication attempts that a client is allowed before authentication fails and the client has to restart the authentication process. (Range: 1-5 times; Default: 3)
- **SSH Server-Key Size** – Specifies the SSH server key size.  
(Range: 512-896 bits; Default: 768)
  - The server key is a private key that is never shared outside the switch.
  - The host key is shared with the SSH client, and is fixed at 1024 bits.

**Web** – Click Security, SSH, Settings. Enable SSH and adjust the authentication parameters as required, then click Apply. Note that you must first generate the host key pair on the SSH Host-Key Settings page before you can enable the SSH server.

### SSH Server Settings

---

SSH Server Status	<input checked="" type="checkbox"/> Enabled
Version	2.0
SSH Authentication Timeout (1-120)	<input style="width: 80px;" type="text" value="100"/> seconds
SSH Authentication Retries (1-5)	<input style="width: 80px;" type="text" value="5"/>
SSH Server-Key Size (512-896)	<input style="width: 80px;" type="text" value="512"/>

**Figure 6-5 SSH Server Settings**

**CLI** – This example enables SSH, sets the authentication parameters, and displays the current configuration. It shows that the administrator has made a connection via SHH, and then disables this connection.

```
Console(config)#ip ssh server 22-24
Console(config)#ip ssh timeout 100 22-25
Console(config)#ip ssh authentication-retries 5 22-26
Console(config)#ip ssh server-key size 512 22-27
Console(config)#end
Console#show ip ssh 22-31
SSH Enabled - version 2.0
Negotiation timeout: 120 secs; Authentication retries: 3
Server key size: 768 bits
Console#show ssh 22-31
Information of secure shell
Session Username Version Encrypt method Negotiation state
-----
0 admin 2.0 cipher-3des session-started
Console#disconnect 0 20-31
Console#
```

# Configuring Port Security

Port security is a feature that allows you to configure a switch port with one or more device MAC addresses that are authorized to access the network through that port.

When port security is enabled on a port, the switch stops learning new MAC addresses on the specified port when it has reached a configured maximum number. Only incoming traffic with source addresses already stored in the dynamic or static address table will be accepted as authorized to access the network through that port. If a device with an unauthorized MAC address attempts to use the switch port, the intrusion will be detected and the switch can automatically take action by disabling the port and sending a trap message.

To use port security, specify a maximum number of addresses to allow on the port and then let the switch dynamically learn the <source MAC address, VLAN> pair for frames received on the port. Note that you can also manually add secure addresses to the port using the Static Address Table (page 9-1). When the port has reached the maximum number of

MAC addresses the selected port will stop learning. The MAC addresses already in the address table will be retained and will not age out. Any other device that attempts to use the port will be prevented from accessing the switch.

### **Command Usage**

- A secure port has the following restrictions:
  - It cannot be used as a member of a static or dynamic trunk.
  - It should not be connected to a network interconnection device.
- The default maximum number of MAC addresses allowed on a secure port is zero. You must configure a maximum address count from 1 - 1024 for the port to allow access.
- If a port is disabled (shut down) due to a security violation, it must be manually re-enabled from the Port/Port Configuration page (page 8-4).

### **Command Attributes**

- **Port** – Port number.
- **Name** – Descriptive text (page 24-3).
- **Action** – Indicates the action to be taken when a port security violation is detected:
  - **None**: No action should be taken. (This is the default.)
  - **Trap**: Send an SNMP trap message.
  - **Shutdown**: Disable the port.
  - **Trap and Shutdown**: Send an SNMP trap message and disable the port.
- **Security Status** – Enables or disables port security on the port. (Default: Disabled)
- **Max MAC Count** – The maximum number of MAC addresses that can be learned on a port. (Range: 0 - 1024, where 0 means disabled)
- **Trunk** – Trunk number if port is a member (page 8-9 and 8-11).

**Web** – Click Security, Port Security. Set the action to take when an invalid address is detected on a port, mark the checkbox in the Status column to enable security for a port, set the maximum number of MAC addresses allowed on a port, and click Apply.

Port Security

Configuration:

Port	Name	Action	Security Status	Max MAC Count (0-1024)	Trunk
1		None	<input type="checkbox"/> Enabled	0	
2		None	<input type="checkbox"/> Enabled	0	
3		None	<input type="checkbox"/> Enabled	0	
4		None	<input type="checkbox"/> Enabled	0	
5		Trap and Shutdown	<input checked="" type="checkbox"/> Enabled	20	
6		None	<input type="checkbox"/> Enabled	0	
7		None	<input type="checkbox"/> Enabled	0	
8		None	<input type="checkbox"/> Enabled	0	
9		None	<input type="checkbox"/> Enabled	0	
10		None	<input type="checkbox"/> Enabled	0	
11		None	<input type="checkbox"/> Enabled	0	
12		None	<input type="checkbox"/> Enabled	0	

Figure 6-6 Port Security

**CLI** – This example selects the target port, sets the port security action to send a trap and disable the port, specifies a maximum address count, and then enables port security for the port.

Console(config)#interface ethernet 1/5  
Console(config-if)#port security action trap-and-shutdown 22-35  
Console(config-if)#port security max-mac-count 20  
Console(config-if)#port security  
Console(config-if)#




## Configuring 802.1X Port Authentication

Network switches can provide open and easy access to network resources by simply attaching a client PC. Although this automatic configuration and access is a desirable feature, it also allows unauthorized personnel to easily intrude and possibly gain access to sensitive network data.

The IEEE 802.1X (dot1x) standard defines a port-based access control procedure that prevents unauthorized access to a network by requiring users to first submit credentials for authentication. Access to all switch ports in a network can be centrally controlled from a server, which means that authorized users can use the same credentials for authentication from any point within the network.

This switch uses the Extensible Authentication Protocol over LANs (EAPOL) to exchange authentication protocol messages with the client, and a

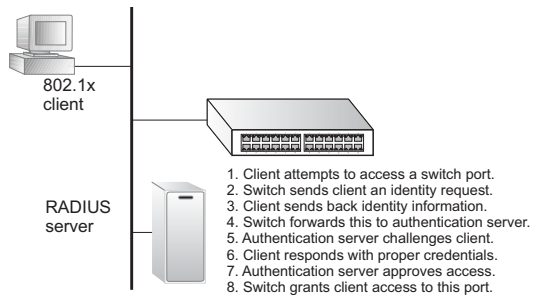

remote RADIUS authentication server to verify user identity and access rights. When a client (i.e., Supplicant) connects to a switch port, the switch (i.e., Authenticator) responds with an EAPOL identity request. The client provides its identity (such as a user name) in an EAPOL response to the switch, which it forwards to the RADIUS server. The RADIUS server verifies the client identity and sends an access challenge back to the client. The EAP packet from the RADIUS server contains not only the challenge, but the authentication method to be used. The client can reject the authentication method and request another, depending on the configuration of the client software and the RADIUS server. The authentication method must be MD5. (TLS, TTLS and PEAP will be supported in future releases.) The client responds to the appropriate

method with its credentials, such as a password or certificate. The RADIUS server verifies the client credentials and responds with an accept or reject packet. If authentication is successful, the switch allows the client to access the network. Otherwise, network access is denied and the port remains blocked.

The operation of dot1x on the switch requires the following:

- The switch must have an IP address assigned.
- The IP address of the RADIUS server must be specified.
- 802.1X must be enabled globally for the switch.
- Each switch port that will be used must be set to dot1x “Auto” mode.
- Each client that needs to be authenticated must have dot1x client software installed and properly configured.
- The RADIUS server and 802.1X client support EAP. (The switch only supports EAPOL in order to pass the EAP packets from the server to the client.)
- The RADIUS server and client also have to support the same EAP authentication type – MD5. (Some clients have native support in Windows, otherwise the dot1x client must support it.)

### Displaying 802.1X Global Settings

The 802.1X protocol provides port authentication.

#### Command Attributes

**802.1X System Authentication Control** – The global setting for 802.1X.

**Web** – Click Security, 802.1X, Information.

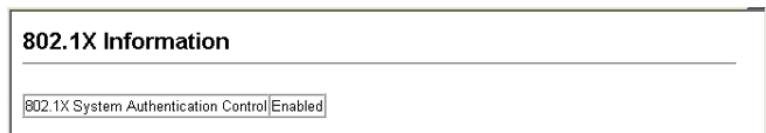


Figure 6-7 802.1X Global Information

**CLI** – This example shows the default global setting for 802.1X.

```

Console#show dot1x                                     22-44
Global 802.1X Parameters
  system-auth-control: enable

802.1X Port Summary

Port Name   Status      Operation Mode   Mode              Authorized
1/1         disabled    Single-Host      ForceAuthorized    n/a
1/2         disabled    Single-Host      ForceAuthorized    n/a
.
.
802.1X Port Details

802.1X is disabled on port 1/1
.
.
802.1X is disabled on port 26
Console#
    
```

## Configuring 802.1X Global Settings

The 802.1X protocol provides port authentication. The 802.1X protocol must be enabled globally for the switch system before port settings are active.

### Command Attributes

**802.1X System Authentication Control** – Sets the global setting for 802.1X. (Default: Disabled)

**Web** – Select Security, 802.1X, Configuration. Enable 802.1X globally for the switch, and click Apply.

### 802.1X Configuration

---

802.1X System Authentication Control
☒ Enabled

**Figure 6-8 802.1X Global Configuration**

**CLI** – This example enables 802.1X globally for the switch.

```

Console(config)#dot1x system-auth-control             22-38
Console(config)#
    
```

## Configuring Port Settings for 802.1X

When 802.1X is enabled, you need to configure the parameters for the authentication process that runs between the client and the switch (i.e., authenticator), as well as the client identity lookup process that runs between the switch and authentication server. These parameters are described in this section.

### Command Attributes

- **Status** – Indicates if authentication is enabled or disabled on the port. (Default: Disabled)
- **Operation Mode** – Allows single or multiple hosts (clients) to connect to an 802.1X-authorized port. (Range: Single-Host, Multi-Host; Default: Single-Host)
- **Max Count** – The maximum number of hosts that can connect to a port when the Multi-Host operation mode is selected. (Range: 1-1024; Default: 5)
- **Mode** – Sets the authentication mode to one of the following options:
  - **Auto** – Requires a dot1x-aware client to be authorized by the authentication server. Clients that are not dot1x-aware will be denied access.
  - **Force-Authorized** – Forces the port to grant access to all clients, either dot1x-aware or otherwise. (This is the default setting.)
  - **Force-Unauthorized** – Forces the port to deny access to all clients, either dot1x-aware or otherwise.
- **Re-authentication** – Sets the client to be re-authenticated after the interval specified by the Re-authentication Period. (Default: Disabled)
- **Max Request** – Sets the maximum number of times the switch port will retransmit an EAP request packet to the client before it times out the authentication session. (Range: 1-10; Default 2)
- **Quiet Period** – Sets the time that a switch port waits after the Max Request count has been exceeded before attempting to acquire a new client. (Range: 1-65535 seconds; Default: 60 seconds)

- **Re-authentication Period** – Sets the time period after which a connected client must be re-authenticated. (Range: 1-65535 seconds; Default: 3600 seconds)
- **TX Period** – Sets the time period during an authentication session that the switch waits before re-transmitting an EAP packet. (Range: 1-65535; Default: 30 seconds)
- **Authorized** –
  - **Yes** – Connected client is authorized.
  - **No** – Connected client is not authorized.
  - *Blank* – Displays nothing when dot1x is disabled on a port.
- **Supplicant** – Indicates the MAC address of a connected client.
- **Trunk** – Indicates if the port is configured as a trunk port.

**Web** – Click Security, 802.1X, Port Configuration. Modify the parameters required, and click Apply.

802.1X Port Configuration												
Port	Status	Operation Mode	Max Count (1-20)	Mode	Re-authen	Max-Req	Quiet/Period	Re-authen/Period	Tx Period	Authorized	Supplicant	Trunk
1	Disabled	Single-Host	5	Force-Unauthenticated	<input type="checkbox"/> Enable	2	60	3600	30	Yes	00-00-00-00-00-00	
2	Enabled	Single-Host	5	Force-Authenticated	<input type="checkbox"/> Enable	2	60	3600	30		00-00-00-00-00-00	
3	Disabled	Single-Host	5	Force-Authenticated	<input type="checkbox"/> Enable	2	60	3600	30		00-00-00-00-00-00	
4	Disabled	Single-Host	5	Force-Authenticated	<input type="checkbox"/> Enable	2	60	3600	30		00-00-00-00-00-00	
5	Disabled	Single-Host	5	Force-Authenticated	<input type="checkbox"/> Enable	2	60	3600	30		00-00-00-00-00-00	
6	Disabled	Single-Host	5	Force-Authenticated	<input type="checkbox"/> Enable	2	60	3600	30		00-00-00-00-00-00	

Figure 6-9 802.1X Port Configuration

**CLI** – This example sets the 802.1X parameters on port 2. For a description of the additional fields displayed in this example, see “show dot1x” on page 22-44.

```

Console(config)#interface ethernet 1/2                24-2
Console(config-if)#dot1x port-control auto            22-39
Console(config-if)#dot1x re-authentication            22-42
Console(config-if)#dot1x max-req 5                    22-39
Console(config-if)#dot1x timeout quiet-period 40      22-42
Console(config-if)#dot1x timeout re-authperiod 5      22-43
Console(config-if)#dot1x timeout tx-period 40         22-44
Console(config-if)#end
    
```

Console#show dot1x22-44

Global 802.1X Parameters

system-auth-control: enable

802.1X Port Summary

Port Name	Status	Operation Mode	Mode	Authorized
1/1	disabled	Single-Host	ForceAuthorized	yes
1/2	enabled	Single-Host	Auto	yes
:				
1/25	disabled	Single-Host	ForceAuthorized	n/a
1/26	disabled	Single-Host	ForceAuthorized	n/a

802.1X Port Details

802.1X is disabled on port 1/1

802.1X is enabled on port 1/2

reauth-enabled: Disable

reauth-period: 3600

quiet-period: 60

tx-period: 30

supplicant-timeout: 30

server-timeout: 10

reauth-max: 2

max-req: 2

Status Authorized

Operation mode Single-Host

Max count 5

Port-control Auto

Supplicant 00-e0-29-94-34-65

Current Identifier 7

Authenticator State Machine

State Authenticated

Reauth Count 0

Backend State Machine

State Idle

Request Count 0

Identifier(Server) 6

Reauthentication State Machine

State Initialize

:

:

802.1X is disabled on port 1/26

Console#

## Displaying 802.1X Statistics

This switch can display statistics for dot1x protocol exchanges for any port.

**Table 6-2 802.1X Statistics**

Parameter	Description
Rx EAPOL Start	The number of EAPOL Start frames that have been received by this Authenticator.
Rx EAPOL Logoff	The number of EAPOL Logoff frames that have been received by this Authenticator.
Rx EAPOL Invalid	The number of EAPOL frames that have been received by this Authenticator in which the frame type is not recognized.
Rx EAPOL Total	The number of valid EAPOL frames of any type that have been received by this Authenticator.
Rx EAP Resp/Id	The number of EAP Resp/Id frames that have been received by this Authenticator.
Rx EAP Resp/Oth	The number of valid EAP Response frames (other than Resp/Id frames) that have been received by this Authenticator.
Rx EAP LenError	The number of EAPOL frames that have been received by this Authenticator in which the Packet Body Length field is invalid.
Rx Last EAPOLVer	The protocol version number carried in the most recently received EAPOL frame.
Rx Last EAPOLSrc	The source MAC address carried in the most recently received EAPOL frame.
Tx EAPOL Total	The number of EAPOL frames of any type that have been transmitted by this Authenticator.
Tx EAP Req/Id	The number of EAP Req/Id frames that have been transmitted by this Authenticator.
Tx EAP Req/Oth	The number of EAP Request frames (other than Rq/Id frames) that have been transmitted by this Authenticator.

**Web** – Select Security, 802.1X, Statistics. Select the required port and then click Query. Click Refresh to update the statistics.


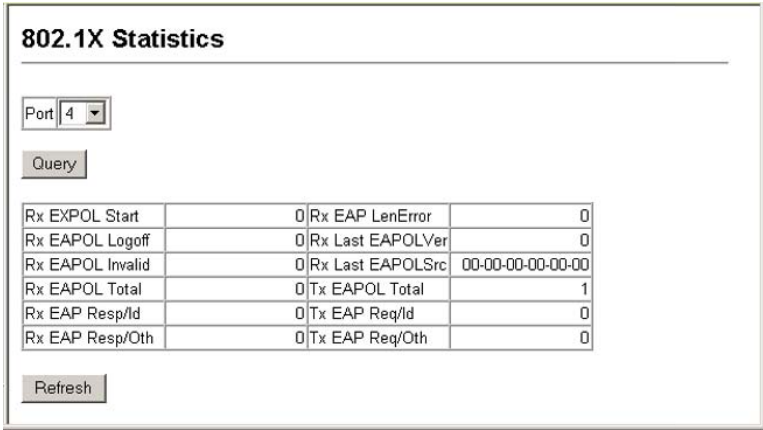


Figure 6-10 802.1X Port Statistics

**CLI** – This example displays the dot1x statistics for port 4.



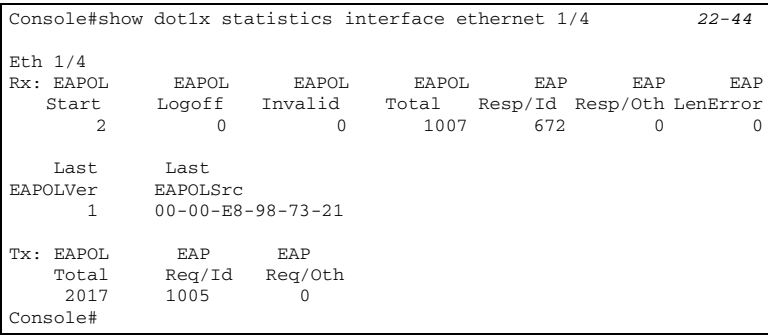

## Filtering IP Addresses for Management Access

You can create a list of up to 16 IP addresses or IP address groups that are allowed management access to the switch through the web interface, SNMP, or Telnet.

### Command Usage

- The management interfaces are open to all IP addresses by default. Once you add an entry to a filter list, access to that interface is restricted to the specified addresses.
- If anyone tries to access a management interface on the switch from an invalid address, the switch will reject the connection, enter an event message in the system log, and send a trap message to the trap manager.
- IP address can be configured for SNMP, web and Telnet access respectively. Each of these groups can include up to five different sets of addresses, either individual addresses or address ranges.
- When entering addresses for the same group (i.e., SNMP, web or Telnet), the switch will not accept overlapping address ranges. When entering addresses for different groups, the switch will accept overlapping address ranges.
- You cannot delete an individual address from a specified range. You must delete the entire range, and reenter the addresses.
- You can delete an address range just by specifying the start address, or by specifying both the start address and end address.

### Command Attributes

- **Web IP Filter** – Configures IP address(es) for the web group.
- **SNMP IP Filter** – Configures IP address(es) for the SNMP group.
- **Telnet IP Filter** – Configures IP address(es) for the Telnet group.
- **IP Filter List** – IP address which are allowed management access to this interface.
- **Start IP Address** – A single IP address, or the starting address of a range.

- **End IP Address** – The end address of a range.

**Web** – Click Security, IP Filter. Enter the IP addresses or range of addresses that are allowed management access to an interface, and click Add IP Filtering Entry.

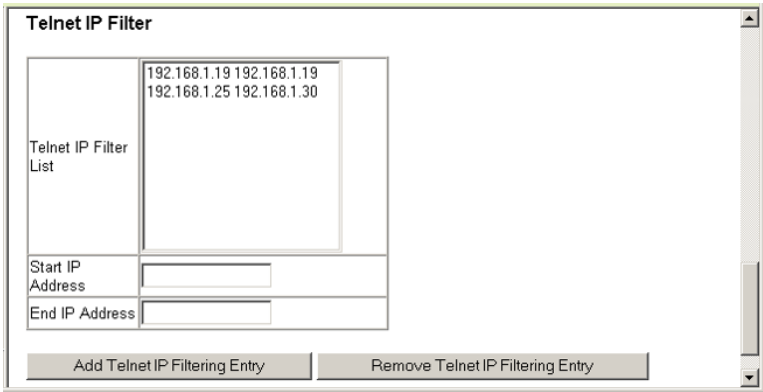


Figure 6-11 IP Filter

**CLI** – This example restricts management access for Telnet clients.

```
Console(config)#management telnet-client 192.168.1.19                22-48
Console(config)#management telnet-client 192.168.1.25 192.168.1.30
Console(config)#exit
Console#show management all-client                                   22-49
Management IP Filter
  HTTP-Client:
    Start IP address      End IP address
-----
  SNMP-Client:
    Start IP address      End IP address
-----
  TELNET-Client:
    Start IP address      End IP address
-----
1. 192.168.1.19           192.168.1.19
2. 192.168.1.25           192.168.1.30
Console#
```

# CHAPTER 7

## ACCESS CONTROL LISTS

---

Access Control Lists (ACL) provide packet filtering for IPv4 frames (based on address, protocol, Layer 4 protocol port number or TCP control code), IPv6 frames (based on address, next header type, or flow label), or any frames (based on MAC address or Ethernet type). To filter incoming packets, first create an access list, add the required rules, and then bind the list to a specific port.

### Configuring Access Control Lists

An ACL is a sequential list of permit or deny conditions that apply to IP addresses, MAC addresses, or other more specific criteria. This switch tests ingress packets against the conditions in an ACL one by one. A packet will be accepted as soon as it matches a permit rule, or dropped as soon as it matches a deny rule. If no rules match, the packet is accepted.

#### Command Usage

The following restrictions apply to ACLs:

- Each ACL can have up to 32 rules.
- The maximum number of ACLs is also 32.
- The maximum number of rules that can be bound to the ports is 96 for each of the following list types: MAC ACLs, IP ACLs (including Standard and Extended ACLs), IPv6 Standard ACLs, and IPv6 Extended ACLs. For the SMC8824M, all ports share this quota. For the SMC8848M, ports 1-24 share a quota of 96 rules, and ports 25-50 share another quota of 96 rules (since there are two switch chips in this system).

The order in which active ACLs are checked is as follows:

1. User-defined rules in IP and MAC ACLs for ingress ports are checked in parallel.
2. Rules within an ACL are checked in the configured order, from top to bottom.
3. If the result of checking an IP ACL is to permit a packet, but the result of a MAC ACL on the same packet is to deny it, the packet will be denied (because the decision to deny a packet has a higher priority for security reasons). A packet will also be denied if the IP ACL denies it and the MAC ACL accepts it.

### Setting the ACL Name and Type

Use the ACL Configuration page to designate the name and type of an ACL.

#### Command Attributes

- **Name** – Name of the ACL. (Maximum length: 16 characters)
- **Type** – There are three filtering modes:
  - **IP Standard:** IPv4 ACL mode that filters packets based on the source IPv4 address.
  - **IP Extended:** IPv4 ACL mode that filters packets based on source or destination IPv4 address, as well as protocol type and protocol port number. If the “TCP” protocol is specified, then you can also filter packets based on the TCP control code.
  - **IPv6 Standard:** IPv6 ACL mode that filters packets based on the source IPv6 address.
  - **IPv6 Extended:** IPv6 ACL mode that filters packets based on the destination IP address, as well as the type of the next header and the flow label (i.e., a request for special handling by IPv6 routers).
  - **MAC:** MAC ACL mode that filters packets based on the source or destination MAC address and the Ethernet frame type (RFC 1060).

**Web** – Click Security, ACL, Configuration. Enter an ACL name in the Name field, select the list type (IP Standard, IP Extended, MAC, IPv6 Standard, IPv6 Extended), and click Add to open the configuration page for the new list.

**Figure 7-1** Selecting ACL Type

**CLI** – This example creates a standard IP ACL named bill.

```
Console(config)#access-list ip standard bill
Console(config-std-acl)#
```

23-3

## Configuring a Standard IPv4 ACL

### Command Attributes

- **Action** – An ACL can contain any combination of permit or deny rules.
- **Address Type** – Specifies the source IP address. Use “Any” to include all possible addresses, “Host” to specify a specific host address in the Address field, or “IP” to specify a range of addresses with the Address and SubMask fields. (Options: Any, Host, IP; Default: Any)
- **IP Address** – Source IP address.
- **Subnet Mask** – A subnet mask containing four integers from 0 to 255, each separated by a period. The mask uses 1 bits to indicate “match” and 0 bits to indicate “ignore.” The mask is bitwise ANDed with the specified source IP address, and compared with the address for each IP packet entering the port(s) to which this ACL has been assigned.

**Web** – Specify the action (i.e., Permit or Deny). Select the address type (Any, Host, or IP). If you select “Host,” enter a specific address. If you select “IP,” enter a subnet address and the mask for an address range. Then click Add.

**Standard ACL**

**Name:** david

Action	IP Address	Subnet Mask	Remove
Permit	10.1.1.21	255.255.255.255	<button>Remove</button>

Action

Permit

Address Type

IP

IP Address

168.92.16.0

Subnet Mask

255.255.240.0

Add

Figure 7-2 ACL Configuration - Standard IPv4

**CLI** – This example configures one permit rule for the specific address 10.1.1.21 and another rule for the address range 168.92.16.x – 168.92.31.x using a bitmask.

```
Console(config-std-acl)#permit host 10.1.1.21
Console(config-std-acl)#permit 168.92.16.0 255.255.240.0
Console(config-std-acl)#
```

Configuring an Extended IPv4 ACL

Command Attributes

- **Action** – An ACL can contain any combination of permit or deny rules.
- **Source/Destination Address Type** – Specifies the source or destination IP address. Use “Any” to include all possible addresses, “Host” to specify a specific host address in the Address field, or “IP” to specify a range of addresses with the Address and SubMask fields. (Options: Any, Host, IP; Default: Any)

- **Source/Destination IP Address** – Source or destination IP address.
- **Source/Destination Subnet Mask** – Subnet mask for source or destination address. (See the description for SubMask on page 3.)
- **Service Type** – Packet priority settings based on the following criteria:
  - **Precedence** – IP precedence level. (Range: 0-7)
  - **TOS** – Type of Service level. (Range: 0-15)
  - **DSCP** – DSCP priority level. (Range: 0-63)
- **Protocol** – Specifies the protocol type to match as TCP, UDP or Others, where others indicates a specific protocol number (0-255). (Options: TCP, UDP, Others; Default: TCP)
- **Source/Destination Port** – Source/destination port number for the specified protocol type. (Range: 0-65535)
- **Source/Destination Port Bit Mask** – Decimal number representing the port bits to match. (Range: 0-65535)
- **Control Code** – Decimal number (representing a bit string) that specifies flag bits in byte 14 of the TCP header. (Range: 0-63)
- **Control Code Bit Mask** – Decimal number representing the code bits to match.

The control bitmask is a decimal number (for an equivalent binary bit mask) that is applied to the control code. Enter a decimal number, where the equivalent binary bit “1” means to match a bit and “0” means to ignore a bit. The following bits may be specified:

- 1 (fin) – Finish
- 2 (syn) – Synchronize
- 4 (rst) – Reset
- 8 (psh) – Push
- 16 (ack) – Acknowledgement
- 32 (urg) – Urgent pointer

For example, use the code value and mask below to catch packets with the following flags set:

- SYN flag valid, use control-code 2, control bitmask 2
- Both SYN and ACK valid, use control-code 18, control bitmask 18
- SYN valid and ACK invalid, use control-code 2, control bitmask 18

**Web** – Specify the action (i.e., Permit or Deny). Specify the source and/or destination addresses. Select the address type (Any, Host, or IP). If you select “Host,” enter a specific address. If you select “IP,” enter a subnet address and the mask for an address range. Set any other required criteria, such as service type, protocol type, or TCP control code. Then click Add.

Extended ACL

Name: mike

Action	Source IP Address	Source Subnet Mask	Destination IP Address	Destination Subnet Mask	TOS	Precedence	DSCP	Protocol	Source Port	Source Port Bitmask	Destination Port	Destination Port Bitmask	Control Code	Control Code Bitmask	Remove
Permit	10.7.1.0	255.255.255.255	Any	Any	Any	Any	Any	5	Any	Any	Any	Any	Any	Any	Remove
Permit	192.168.1.0	255.255.255.255	Any	Any	Any	Any	Any	6	Any	Any	80	65535	Any	Any	Remove

Action

Permit

Source Address Type

Any

Source IP Address

10.0.0.0

Source Subnet Mask

0.0.0.0

Destination Address Type

Any

Destination IP Address

0.0.0.0

Destination Subnet Mask

0.0.0.0

Service Type

☒ TOS (0-16)

Precedence (0-8)

☐ DSCP (0-64)

Protocol

☒ TCP (6)

☐ UDP (17)

☐ Others

Source Port (0-65535)

Source Port Bitmask (0-65535)

Destination Port (0-65535)

Destination Port Bitmask (0-65535)

Control Code (0-63)

Control Code Bitmask (0-63)

Add

Figure 7-3 ACL Configuration - Extended IPv4

**CLI** – This example adds three rules:

- 1. Accept any incoming packets if the source address is in subnet 10.7.1.x. For example, if the rule is matched; i.e., the rule (10.7.1.0 & 255.255.255.0) equals the masked address (10.7.1.2 & 255.255.255.0), the packet passes through.
- 2. Allow TCP packets from class C addresses 192.168.1.0 to any destination address when set for destination TCP port 80 (i.e., HTTP).



3. Permit all TCP packets from class C addresses 192.168.1.0 with the TCP control code set to “SYN.”

```

Console(config-ext-acl)#permit 10.7.1.1 255.255.255.0 any      23-5
Console(config-ext-acl)#permit tcp 192.168.1.0 255.255.255.0 any
destination-port 80
Console(config-ext-acl)#permit tcp 192.168.1.0 255.255.255.0 any
control-flag 2 2
Console(config-std-acl)#
    
```

## Configuring a MAC ACL

### Command Attributes

- **Action** – An ACL can contain any combination of permit or deny rules.
- **Source/Destination Address Type** – Use “Any” to include all possible addresses, “Host” to indicate a specific MAC address, or “MAC” to specify an address range with the Address and Bitmask fields. (Options: Any, Host, MAC; Default: Any)
- **Source/Destination MAC Address** – Source or destination MAC address.
- **Source/Destination MAC Bit Mask** – Hexidecimal mask for source or destination MAC address.
- **VID** – VLAN ID. (Range: 1-4093)
- **VID Bit Mask** – VLAN bitmask. (Range: 1-4093)
- **Ethernet Type** – This option can only be used to filter Ethernet II formatted packets. (Range: 600-fff hex.)  
A detailed listing of Ethernet protocol types can be found in RFC 1060. A few of the more common types include 0800 (IP), 0806 (ARP), 8137 (IPX).
- **Ethernet Type Bit Mask** – Protocol bitmask. (Range: 600-fff hex.)
- **Packet Format** – This attribute includes the following packet types:
  - **Any** – Any Ethernet packet type.
  - **Untagged-eth2** – Untagged Ethernet II packets.
  - **Untagged-802.3** – Untagged Ethernet 802.3 packets.
  - **Tagged-eth2** – Tagged Ethernet II packets.
  - **Tagged-802.3** – Tagged Ethernet 802.3 packets.

**Web** – Specify the action (i.e., Permit or Deny). Specify the source and/or destination addresses. Select the address type (Any, Host, or MAC). If you select “Host,” enter a specific address (e.g., 11-22-33-44-55-66). If you select “MAC,” enter a base address and a hexadecimal bitmask for an address range. Set any other required criteria, such as VID, Ethernet type, or packet format. Then click Add.

MAC ACL

Name: bob

Action	Source MAC Address	Source Bitmask	Destination MAC Address	Destination Bitmask	VID	VID Bitmask	Ethernet Type	Ethernet Type Bitmask	Packet Format	Remove
Permit	Any	Any	00-e0-29-94-34-de	ffffffff	Any	Any	2048	65535	Any	Remove

Action

Permit

Source Address Type

Any

Source MAC Address

00-00-00-00-00-00

Source Bitmask

00-00-00-00-00-00

Destination Address Type

Any

Destination MAC Address

00-00-00-00-00-00

Destination Bitmask

00-00-00-00-00-00

VID

VID Bitmask

Ethernet Type

Ethernet Type Bitmask

Packet Format

Any

Add

Figure 7-4 ACL Configuration - MAC

**CLI** – This rule permits packets from any source MAC address to the destination address 00-e0-29-94-34-de where the Ethernet type is 0800.

```
Console(config-mac-acl)#permit any host 00-e0-29-94-34-de
ethertype 0800
Console(config-mac-acl)#
```

23-18

## Configuring a Standard IPv6 ACL

### Command Attributes

- **Action** – An ACL can contain any combination of permit or deny rules.
- **Source Address Type** – Specifies the source IP address. Use “Any” to include all possible addresses, “Host” to specify a specific host address in the Address field, or “IPv6-prefix” to specify a range of addresses. (Options: Any, Host, IPv6-prefix; Default: Any)
- **Source IPv6 Address** – The address must be formatted according to RFC 2373 “IPv6 Addressing Architecture,” using 8 colon-separated 16-bit hexadecimal values. One double colon may be used in the address to indicate the appropriate number of zeros required to fill the undefined fields.
- **Source Prefix-Length** – A decimal value indicating how many contiguous bits (from the left) of the address comprise the prefix (i.e., the network portion of the address).

**Web** – Specify the action (i.e., Permit or Deny). Select the address type (Any, Host, or IPv6-prefix). If you select “Host,” enter a specific address. If you select “IPv6-prefix,” enter a subnet address and the prefix length. Then click Add.

### IPv6 Standard ACL

Name: david

Action	Source IPv6 Address	Source Prefix-Length	Remove
Permit	2009:DB9:2229::79		<button>Remove</button>
Permit	2009:DB9:2229:5::	64	<button>Remove</button>

Action

Permit

Source Address Type

Any

Source IPv6 Address

::

Source Prefix-Length

0

Add

Figure 7-5 ACL Configuration - Standard IPv6

**CLI** – This example configures one permit rule for the specific address 2009:DB9:2229::79 and another rule for addresses with the network prefix 2009:DB9:2229:5::/64.

```
Console(config-std-ipv6-acl)#permit host 2009:DB9:2229::79      23-11
Console(config-std-ipv6-acl)#permit 2009:DB9:2229:5::/64
Console(config-std-ipv6-acl)#
```

## Configuring an Extended IPv6 ACL

### Command Attributes

- **Action** – An ACL can contain any combination of permit or deny rules.
- **Destination Address Type** – Specifies the destination IP address. Use “Any” to include all possible addresses, or “IPv6-prefix” to specify a range of addresses. (Options: Any, IPv6-prefix; Default: Any)
- **Destination IP Address** – The address must be formatted according to RFC 2373 “IPv6 Addressing Architecture,” using 8 colon-separated 16-bit hexadecimal values. One double colon may be used in the address to indicate the appropriate number of zeros required to fill the undefined fields. (The switch only checks the first 64 bits of the destination address.)
- **Destination Prefix-Length** – A decimal value indicating how many contiguous bits (from the left) of the address comprise the prefix (i.e., the network portion of the address).
- **Next Header** – Identifies the type of header immediately following the IPv6 header. (Range: 0-255)

Optional internet-layer information is encoded in separate headers that may be placed between the IPv6 header and the upper-layer header in a packet. There are a small number of such extension headers, each identified by a distinct Next Header value. IPv6 supports the values defined for the IPv4 Protocol field in RFC 1700, and includes these commonly used headers:

0:	Hop-by-Hop Options	(RFC 2460)
6:	TCP Upper-layer Header	(RFC 1700)
17:	UDP Upper-layer Header	(RFC 1700)

43: Routing	(RFC 2460)
44: Fragment	(RFC 2460)
51: Authentication	(RFC 2402)
50: Encapsulating Security Payload	(RFC 2406)
60: Destination Options	(RFC 2460)

- **DSCP** – DSCP priority level. (Range: 0-63)
- **Flow Label** – A label for packets belonging to a particular traffic “flow” for which the sender requests special handling by IPv6 routers, such as non-default quality of service or “real-time” service (see RFC 2460). (Range: 0-16777215)

A flow label is assigned to a flow by the flow's source node. New flow labels must be chosen pseudo-randomly and uniformly from the range 1 to FFFFFF hexadecimal. The purpose of the random allocation is to make any set of bits within the Flow Label field suitable for use as a hash key by routers, for looking up the state associated with the flow.

A flow identifies a sequence of packets sent from a particular source to a particular (unicast or multicast) destination for which the source desires special handling by the intervening routers. The nature of that special handling might be conveyed to the routers by a control protocol, such as a resource reservation protocol, or by information within the flow's packets themselves, e.g., in a hop-by-hop option. A flow is uniquely identified by the combination of a source address and a non-zero flow label. Packets that do not belong to a flow carry a flow label of zero.

Hosts or routers that do not support the functions specified by the flow label must set the field to zero when originating a packet, pass the field on unchanged when forwarding a packet, and ignore the field when receiving a packet.

**Web** – Specify the action (i.e., Permit or Deny). Select the address type (Any or IPv6-prefix). If you select “IPv6-prefix,” enter a subnet address and prefix length. Set any other required criteria, such as next header, DSCP, or flow label. Then click Add.

**IPv6 Extended ACL**

Name: bill

Action	Destination IPv6 Address	Destination Prefix-Length	Next Header	DSCP	Flow Label	Remove
Permit	2009:DB9:2229::79	48	Any	Any	Any	<button>Remove</button>
Permit	Any		Any	5	Any	<button>Remove</button>
Permit	2009:DB9:2229::79	48	Any	Any	43	<button>Remove</button>

Action

Permit

Destination Address Type

IPv6-prefix

Destination IPv6 Address

Destination Prefix-Length

Next Header (0-255)

DSCP (0-63)

Flow Label (0-16777215)

Add

Figure 7-6 ACL Configuration - Extended IPv6

**CLI** – This example adds three rules:

1. Accepts any incoming packets for the destination 2009:DB9:2229::79/48.
2. Allows packets to any destination address when the DSCP value is 5.
3. Allows any packets sent to the destination 2009:DB9:2229::79/48 when the flow label is 43.

```
Console(config-ext-ipv6-acl)#permit 2009:DB9:2229::79/48      23-12
Console(config-ext-ipv6-acl)#permit any dscp 5
Console(config-ext-ipv6-acl)#permit 2009:DB9:2229::79/48
    flow-label 43
Console(config-ext-ipv6-acl)#
```

## Binding a Port to an Access Control List

After configuring the Access Control Lists (ACL), you should bind them to the ports that need to filter traffic. You can only bind a port to one ACL for each basic type – IPv4 ingress, MAC ingress, and IPv6 ingress.

### Command Usage

This switch supports ACLs for ingress filtering only.

### Command Attributes

- **Port** – Fixed port, SFP module, or XFP module. (Range: 1-26/50)
- **IP** – Specifies the IPv4 ACL to bind to a port.
- **MAC** – Specifies the MAC ACL to bind to a port.
- **IPv6** – Specifies the IPv6 ACL to bind to a port.
- **IN** – ACL for ingress packets.
- **OUT** – ACL for egress packets. (Egress filtering is not supported.)
- *ACL Name* – Name of the ACL.

**Web** – Click Security, ACL, Port Binding. Mark the Enable field for the port you want to bind to an ACL for ingress traffic, select the required ACL from the drop-down list, then click Apply.

Port	IP		MAC		IPv6	
	IN	OUT	IN	OUT	IN	OUT
1	<input checked="" type="checkbox"/> Enabled tom	<input type="checkbox"/> Enabled tom	<input checked="" type="checkbox"/> Enabled jerry	<input type="checkbox"/> Enabled jerry	<input type="checkbox"/> Enabled david	<input type="checkbox"/> Enabled david
2	<input checked="" type="checkbox"/> Enabled tom	<input type="checkbox"/> Enabled tom	<input type="checkbox"/> Enabled jerry	<input type="checkbox"/> Enabled jerry	<input type="checkbox"/> Enabled david	<input type="checkbox"/> Enabled david
3	<input type="checkbox"/> Enabled tom	<input type="checkbox"/> Enabled tom	<input type="checkbox"/> Enabled jerry	<input type="checkbox"/> Enabled jerry	<input type="checkbox"/> Enabled david	<input type="checkbox"/> Enabled david
4	<input type="checkbox"/> Enabled tom	<input type="checkbox"/> Enabled tom	<input type="checkbox"/> Enabled jerry	<input type="checkbox"/> Enabled jerry	<input type="checkbox"/> Enabled david	<input type="checkbox"/> Enabled david
5	<input type="checkbox"/> Enabled tom	<input type="checkbox"/> Enabled tom	<input type="checkbox"/> Enabled jerry	<input type="checkbox"/> Enabled jerry	<input type="checkbox"/> Enabled david	<input type="checkbox"/> Enabled david

Figure 7-7 ACL Port Binding

**CLI** – This examples assigns an IP and MAC ingress ACL to port 1, and an IP ingress ACL to port 2.

Console(config)#interface ethernet 1/1	24-2
Console(config-if)#ip access-group tom in	23-8
Console(config-if)#mac access-group jerry in	23-20
Console(config-if)#exit	
Console(config)#interface ethernet 1/2	
Console(config-if)#ip access-group tom in	
Console(config-if)#	



# CHAPTER 8

## PORT CONFIGURATION

---

### Displaying Connection Status

You can use the Port Information or Trunk Information pages to display the current connection status, including link state, speed/duplex mode, flow control, and auto-negotiation.

#### Field Attributes (Web)

- **Name** – Interface label.
- **Type** – Indicates the port type. (1000BASE-T, SFP, or 10G)
- **Admin Status** – Shows if the interface is enabled or disabled.
- **Oper Status** – Indicates if the link is Up or Down.
- **Speed Duplex Status** – Shows the current speed and duplex mode. (Auto, or fixed choice)
- **Flow Control Status** – Indicates the type of flow control currently in use. (IEEE 802.3x, Back-Pressure or None)
- **Autonegotiation** – Shows if auto-negotiation is enabled or disabled.
- **Media Type**<sup>4</sup> – Shows the forced/preferred port type to use for combination ports 21-24 (SMC8824M) or 45-48 (SMC8848M). (Copper-Forced, SFP-Forced, SFP-Preferred-Auto)
- **Trunk Member**<sup>4</sup> – Shows if port is a trunk member.
- **Creation**<sup>5</sup> – Shows if a trunk is manually configured or dynamically set via LACP.

---

4. Port Information only.

5. Trunk Information only.

**Web** – Click Port, Port Information or Trunk Information.

Port Information								
Port Name	Type	Admin Status	Oper Status	Speed Duplex Status	Flow Control Status	Autonegotiation	Media Type	Trunk Member
1	1000Base-TX	Enabled	Up	1000full	None	Enabled	None	
2	1000Base-TX	Enabled	Down	1000full	None	Enabled	None	
3	1000Base-TX	Enabled	Down	1000full	None	Enabled	None	
4	1000Base-TX	Enabled	Down	1000full	None	Enabled	None	
5	1000Base-TX	Enabled	Down	1000full	None	Enabled	None	
6	1000Base-TX	Enabled	Down	1000full	None	Enabled	None	
7	1000Base-TX	Enabled	Down	1000full	None	Enabled	None	
8	1000Base-TX	Enabled	Down	1000full	None	Enabled	None	
9	1000Base-TX	Enabled	Down	1000full	None	Enabled	None	
10	1000Base-TX	Enabled	Down	1000full	None	Enabled	None	
11	1000Base-TX	Enabled	Down	1000full	None	Enabled	None	
12	1000Base-TX	Enabled	Down	1000full	None	Enabled	None	

**Figure 8-1 Port - Port Information**

## Field Attributes (CLI)

*Basic information:*

- **Port type** – Indicates the port type. (1000BASE-T, SFP, or 10G)
- **MAC address** – The physical layer address for this port. (To access this item on the web, see “Setting the Switch’s IP Address (IP Version 4)” on page 4-8.)

*Configuration:*

- **Name** – Interface label.
- **Port admin** – Shows if the interface is enabled or disabled (i.e., up or down).
- **Speed-duplex** – Shows the current speed and duplex mode. (Auto, or fixed choice)
- **Capabilities** – Specifies the capabilities to be advertised for a port during auto-negotiation. (To access this item on the web, see “Configuring Interface Connections” on page 3-48.) The following capabilities are supported.
  - **10half** - Supports 10 Mbps half-duplex operation
  - **10full** - Supports 10 Mbps full-duplex operation
  - **100half** - Supports 100 Mbps half-duplex operation

- **100full** - Supports 100 Mbps full-duplex operation
- **1000full** - Supports 1000 Mbps full-duplex operation
- **10Gfull** - Supports 10 Gbps full-duplex operation
- **Sym** - Transmits and receives pause frames for flow control
- **FC** - Supports flow control
- **Broadcast storm** – Shows if broadcast storm control is enabled or disabled.
- **Broadcast storm limit** – Shows the broadcast storm threshold. (500 - 262143 packets per second)
- **Flow control** – Shows if flow control is enabled or disabled.
- **LACP** – Shows if LACP is enabled or disabled.
- **Port security** – Shows if port security is enabled or disabled.
- **Max MAC count** – Shows the maximum number of MAC address that can be learned by a port. (0 - 1024 addresses)
- **Port security action** – Shows the response to take when a security violation is detected. (shutdown, trap, trap-and-shutdown)
- **Media type** – Shows the forced/preferred port type to use for combination ports 21-24 (SMC8824M) or 45-48 (SMC8848M). (copper forced, SFP forced, SFP preferred auto)

*Current status:*

- **Link status** – Indicates if the link is up or down.
- **Port operation status** – Provides detailed information on port state. (Displayed only when the link is up.).
- **Operation speed-duplex** – Shows the current speed and duplex mode.
- **Flow control type** – Indicates the type of flow control currently in use. (IEEE 802.3x, Back-Pressure or none)

**CLI** – This example shows the connection status for Port 5.

```
Console#show interfaces status ethernet 1/5 24-12
Information of Eth 1/13
Basic information:
  Port type:          1000T
  Mac address:        00-30-F1-D4-73-A5
Configuration:
  Name:
  Port admin:         Up
  Speed-duplex:       Auto
  Capabilities:       10half, 10full, 100half, 100full, 1000full
  Broadcast storm:    Enabled
  Broadcast storm limit: 500 packets/second
  Flow control:       Disabled
  LACP:               Disabled
  Port security:      Disabled
  Max MAC count:      0
  Port security action: None
  Media type:         None
Current status:
  Link status:        Down
  Operation speed-duplex: 1000full
  Flow control type:  None
Console#
```

## Configuring Interface Connections

You can use the Port Configuration or Trunk Configuration page to enable/disable an interface, set auto-negotiation and the interface capabilities to advertise, or manually fix the speed and duplex mode, and flow control.

### Command Attributes

- **Name** – Allows you to label an interface. (Range: 1-64 characters)
- **Admin** – Allows you to manually disable an interface. You can disable an interface due to abnormal behavior (e.g., excessive collisions), and then reenable it after the problem has been resolved. You may also disable an interface for security reasons.
- **Speed/Duplex** – Allows you to manually set the port speed and duplex mode (i.e., with auto-negotiation disabled).

**Note:** The 1000BASE-T standard does not support forced mode.

Always use auto-negotiation to establish a connection over any 1000BASE-T port or trunk.

- **Flow Control** – Allows automatic or manual selection of flow control.
- **Autonegotiation** (Port Capabilities) – Allows auto-negotiation to be enabled/disabled. When auto-negotiation is enabled, you need to specify the capabilities to be advertised. When auto-negotiation is disabled, you can force the settings for speed, duplex mode, and flow control. The following capabilities are supported.
  - **10half** - Supports 10 Mbps half-duplex operation
  - **10full** - Supports 10 Mbps full-duplex operation
  - **100half** - Supports 100 Mbps half-duplex operation
  - **100full** - Supports 100 Mbps full-duplex operation
  - **1000full** - Supports 1 Gbps full-duplex operation
  - **10Gfull** - Supports 10 Gbps full-duplex operation
  - **Sym** (Gigabit only) - Check this item to transmit and receive pause frames, or clear it to auto-negotiate the sender and receiver for asymmetric pause frames. (*The current switch chip only supports symmetric pause frames.*)
  - **FC** - Supports flow control

Flow control can eliminate frame loss by “blocking” traffic from end stations or segments connected directly to the switch when its buffers fill. When enabled, back pressure is used for half-duplex operation and IEEE 802.3x for full-duplex operation. (Avoid using flow control on a port connected to a hub unless it is actually required to solve a problem. Otherwise back pressure jamming signals may degrade overall performance for the segment attached to the hub.)

(Default: Autonegotiation enabled; Advertised capabilities for RJ-45: 1000BASE-T – 10half, 10full, 100half, 100full, 1000full; SFP: 1000BASE-SX/LX/LH – 1000full; 10G Modules: 10GBASE-SR/LR/ER – 10Gfull)
- **Media Type** – Shows the forced/preferred port type to use for the combination ports. (SMC8824M: Ports 21-24; SMC8848M: Ports 45-48)
  - **Copper-Forced** - Always uses the built-in RJ-45 port.

- **SFP-Forced** - Always uses the SFP port (even if module is not installed).
- **SFP-Preferred-Auto** - Uses SFP port if both combination types are functioning and the SFP port has a valid link.
- **Trunk** – Indicates if a port is a member of a trunk. To create trunks and select port members, see “Creating Trunk Groups” on page 8-8.

**Note:** Auto-negotiation must be disabled before you can configure or force the interface to use the Speed/Duplex Mode or Flow Control options.

**Web** – Click Port, Port Configuration or Trunk Configuration. Modify the required interface settings, and click Apply.

Port Configuration											
Port	Name	Admin	Speed Duplex	Autonegotiation						Media Type	Trunk
1		<input checked="" type="checkbox"/> Enabled	100full	<input checked="" type="checkbox"/> Enabled	<input checked="" type="checkbox"/> 10h	<input checked="" type="checkbox"/> 100h	<input type="checkbox"/> 1000h	<input type="checkbox"/> 10Gh	<input type="checkbox"/> Sym	None	
				<input checked="" type="checkbox"/> 10f	<input checked="" type="checkbox"/> 100f	<input checked="" type="checkbox"/> 1000f	<input type="checkbox"/> 10Gf	<input type="checkbox"/> FC			
2		<input checked="" type="checkbox"/> Enabled	100full	<input checked="" type="checkbox"/> Enabled	<input checked="" type="checkbox"/> 10h	<input checked="" type="checkbox"/> 100h	<input type="checkbox"/> 1000h	<input type="checkbox"/> 10Gh	<input type="checkbox"/> Sym	None	
				<input checked="" type="checkbox"/> 10f	<input checked="" type="checkbox"/> 100f	<input checked="" type="checkbox"/> 1000f	<input type="checkbox"/> 10Gf	<input type="checkbox"/> FC			
3		<input checked="" type="checkbox"/> Enabled	100full	<input checked="" type="checkbox"/> Enabled	<input checked="" type="checkbox"/> 10h	<input checked="" type="checkbox"/> 100h	<input type="checkbox"/> 1000h	<input type="checkbox"/> 10Gh	<input type="checkbox"/> Sym	None	
				<input checked="" type="checkbox"/> 10f	<input checked="" type="checkbox"/> 100f	<input checked="" type="checkbox"/> 1000f	<input type="checkbox"/> 10Gf	<input type="checkbox"/> FC			
4		<input checked="" type="checkbox"/> Enabled	100full	<input checked="" type="checkbox"/> Enabled	<input checked="" type="checkbox"/> 10h	<input checked="" type="checkbox"/> 100h	<input type="checkbox"/> 1000h	<input type="checkbox"/> 10Gh	<input type="checkbox"/> Sym	None	
				<input checked="" type="checkbox"/> 10f	<input checked="" type="checkbox"/> 100f	<input checked="" type="checkbox"/> 1000f	<input type="checkbox"/> 10Gf	<input type="checkbox"/> FC			
5		<input checked="" type="checkbox"/> Enabled	100full	<input checked="" type="checkbox"/> Enabled	<input checked="" type="checkbox"/> 10h	<input checked="" type="checkbox"/> 100h	<input type="checkbox"/> 1000h	<input type="checkbox"/> 10Gh	<input type="checkbox"/> Sym	None	
				<input checked="" type="checkbox"/> 10f	<input checked="" type="checkbox"/> 100f	<input checked="" type="checkbox"/> 1000f	<input type="checkbox"/> 10Gf	<input checked="" type="checkbox"/> FC			
6		<input checked="" type="checkbox"/> Enabled	100full	<input checked="" type="checkbox"/> Enabled	<input checked="" type="checkbox"/> 10h	<input checked="" type="checkbox"/> 100h	<input type="checkbox"/> 1000h	<input type="checkbox"/> 10Gh	<input type="checkbox"/> Sym	None	
				<input checked="" type="checkbox"/> 10f	<input checked="" type="checkbox"/> 100f	<input checked="" type="checkbox"/> 1000f	<input type="checkbox"/> 10Gf	<input type="checkbox"/> FC			
7		<input checked="" type="checkbox"/> Enabled	100full	<input checked="" type="checkbox"/> Enabled	<input checked="" type="checkbox"/> 10h	<input checked="" type="checkbox"/> 100h	<input type="checkbox"/> 1000h	<input type="checkbox"/> 10Gh	<input type="checkbox"/> Sym	None	
				<input checked="" type="checkbox"/> 10f	<input checked="" type="checkbox"/> 100f	<input checked="" type="checkbox"/> 1000f	<input type="checkbox"/> 10Gf	<input type="checkbox"/> FC			
8		<input checked="" type="checkbox"/> Enabled	100full	<input checked="" type="checkbox"/> Enabled	<input checked="" type="checkbox"/> 10h	<input checked="" type="checkbox"/> 100h	<input type="checkbox"/> 1000h	<input type="checkbox"/> 10Gh	<input type="checkbox"/> Sym	None	
				<input checked="" type="checkbox"/> 10f	<input checked="" type="checkbox"/> 100f	<input checked="" type="checkbox"/> 1000f	<input type="checkbox"/> 10Gf	<input type="checkbox"/> FC			

**Figure 8-2 Port - Port Configuration**

**CLI** – Select the interface, and then enter the required settings.

Console(config)#interface ethernet 1/13	24-2
Console(config-if)#description RD SW#13	24-3
Console(config-if)#shutdown	24-9
.	
Console(config-if)#no shutdown	
Console(config-if)#no negotiation	24-5
Console(config-if)#speed-duplex 100half	24-3
.	
Console(config-if)#negotiation	
Console(config-if)#capabilities 100half	24-6
Console(config-if)#capabilities 100full	
Console(config-if)#capabilities flowcontrol	
Console(config-if)#exit	
Console(config)#interface ethernet 1/21	
Console(config-if)#media-type copper-forced	24-8
Console(config-if)#	

## Creating Trunk Groups

You can create multiple links between devices that work as one virtual, aggregate link. A port trunk offers a dramatic increase in bandwidth for network segments where bottlenecks exist, as well as providing a fault-tolerant link between two devices (i.e., single switch or a stack). You can create up to 32 trunks.

The switch supports both static trunking and dynamic Link Aggregation Control Protocol (LACP). Static trunks have to be manually configured at both ends of the link, and the switches must comply with the Cisco EtherChannel standard. On the other hand, LACP configured ports can automatically negotiate a trunked link with LACP-configured ports on another device. You can configure any number of ports on the switch as LACP, as long as they are not already configured as part of a static trunk. If ports on another device are also configured as LACP, the switch and the other device will negotiate a trunk link between them. If an LACP trunk consists of more than eight ports, all other ports will be placed in a standby mode. Should one link in the trunk fail, one of the standby ports will automatically be activated to replace it.

### Command Usage

Besides balancing the load across each port in the trunk, the other ports provide redundancy by taking over the load if a port in the trunk fails. However, before making any physical connections between devices, use the web interface or CLI to specify the trunk on the devices at both ends. When using a port trunk, take note of the following points:

- Finish configuring port trunks before you connect the corresponding network cables between switches to avoid creating a loop.
- You can create up to 32 trunks on a switch or stack, with up to eight Gigabit ports per trunk or up to four 10Gbps ports per trunk. Note that because the stack functions conceptually as a single system, you can include ports from different units in the same trunk. For example, you




could connect ports spread across several units that belong VLAN 2 into a common trunk.

- The ports at both ends of a connection must be configured as trunk ports.
- When configuring static trunks on switches of different types, they must be compatible with the Cisco EtherChannel standard.
- The ports at both ends of a trunk must be configured in an identical manner, including communication mode (i.e., speed, duplex mode and flow control), VLAN assignments, and CoS settings.
- Any of the Gigabit ports on the front panel can be trunked together, including ports of different media types.
- All the ports in a trunk have to be treated as a whole when moved from/to, added or deleted from a VLAN.
- STP, VLAN, and IGMP settings can only be made for the entire trunk.

## Statically Configuring a Trunk

### Command Usage

- When configuring static trunks, you may not be able to link switches of different types, depending on the manufacturer's implementation. However, note that the static trunks on this switch are Cisco EtherChannel compatible.
- To avoid creating a loop in the network, be sure you add a static trunk via the configuration interface before connecting the ports, and also disconnect the ports before removing a static trunk via the configuration interface.

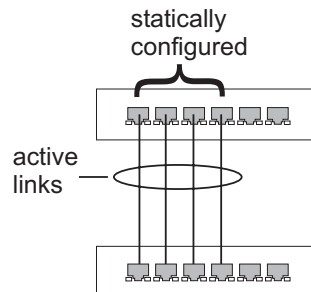

### Command Attributes

- **Member List** (Current) – Shows configured trunks (Trunk ID, Unit, Port).
- **New** – Includes entry fields for creating new trunks.
  - **Trunk** – Trunk identifier. (Range: 1-32)
  - **Unit** – Stack unit. (Range: 1-8)
  - **Port** – Port identifier. (Range: 1-25/49)

**Web** – Click Port, Trunk Membership. Enter a trunk ID of 1-32 in the Trunk field, select any of the switch ports from the scroll-down port list, and click Add. After you have completed adding ports to the member list, click Apply.

The screenshot shows a web interface titled "Trunk Membership". It is divided into two main sections: "Current:" and "New:". The "Current:" section contains a list box with two entries: "Trunk1, Unit1 Port9" and "Trunk1, Unit1 Port0". Below this list box are two buttons: "<<Add" and "Remove". The "New:" section contains three input fields: "Trunk (1-32)" with a text input, "Unit" with a dropdown menu showing "1", and "Port" with a dropdown menu showing "1".

Figure 8-3 Static Trunk Configuration

**CLI** – This example creates trunk 1 with ports 9 and 10. Just connect these ports to two static trunk ports on another switch to form a trunk.

```


Console(config)#interface port-channel 1                24-2
Console(config-if)#exit
Console(config)#interface ethernet 1/9                  24-2
Console(config-if)#channel-group 1                     25-3
Console(config-if)#exit
Console(config)#interface ethernet 1/10
Console(config-if)#channel-group 1
Console(config-if)#end
Console#show interfaces status port-channel 1           24-12
Information of Trunk 1
Basic information:
  Port type:          1000T
  Mac address:        00-30-F1-D4-73-A2
Configuration:
  Name:
  Port admin:         Up
  Speed-duplex:        Auto
  Capabilities:        10half, 10full, 100half, 100full, 1000full
  Flow control:        Disabled
  Port security:       Disabled
  Max MAC count:       0
Current status:
  Created by:          User
  Link status:         Up
  Port operation status: Up
  Operation speed-duplex: 1000full
  Flow control type:   None
  Member Ports:        Eth1/9, Eth1/10,
Console#

```

## Enabling LACP on Selected Ports

### Command Usage

- To avoid creating a loop in the network, be sure you enable LACP before connecting the ports, and also disconnect the ports before disabling LACP.
- If the target switch has also enabled LACP on the connected ports, the trunk will be activated automatically.

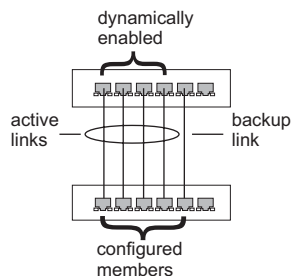

- A trunk formed with another switch using LACP will automatically be assigned the next available trunk ID.
- If more than eight ports attached to the same target switch have LACP enabled, the additional ports will be placed in standby mode, and will only be enabled if one of the active links fails.
- All ports on both ends of an LACP trunk must be configured for full duplex, either by forced mode or auto-negotiation.
- Trunks dynamically established through LACP will also be shown in the Member List on the Trunk Membership menu (see page 8-9).

### Command Attributes

- **Member List** (Current) – Shows configured trunks (Unit, Port).
- **New** – Includes entry fields for creating new trunks.
  - **Unit** – Stack unit. (Range: 1-8)
  - **Port** – Port identifier. (Range: 1-25/49)

**Web** – Click Port, LACP, Configuration. Select any of the switch ports from the scroll-down port list and click Add. After you have completed adding ports to the member list, click Apply.

**LACP Configuration**

**Member List:**

Current:

- Unit1 Port1
- Unit1 Port2
- Unit1 Port3
- Unit1 Port4
- Unit1 Port5
- Unit1 Port6

<<Add Remove

New:

Unit 1 Port 1

**Figure 8-4 LACP Trunk Configuration**

**CLI** – The following example enables LACP for ports 1 to 6. Just connect these ports to LACP-enabled trunk ports on another switch to form a trunk.

```

Console(config)#interface ethernet 1/1                24-2
Console(config-if)#lacp                               25-4
Console(config-if)#exit
:
Console(config)#interface ethernet 1/6
Console(config-if)#lacp
Console(config-if)#end
Console#show interfaces status port-channel 1          24-12
Information of Trunk 1
Basic information:
  Port type:                1000T
  Mac address:              00-30-F1-D4-73-A2
Configuration:
  Port admin:               Up
  Speed-duplex:             Auto
  Capabilities:             10half, 10full, 100half, 100full, 1000full
  Flow control:             Disabled
  Port security:            Disabled
  Max MAC count:            0
Current status:
  Created by:               LACP
  Link status:              Up
  Port operation status:    Up
  Operation speed-duplex:   1000full
  Flow control type:        None
  Member Ports: Eth1/1, Eth1/2, Eth1/3, Eth1/4, Eth1/5, Eth1/6,
Console#

```

## Configuring LACP Parameters

### Dynamically Creating a Port Channel –

Ports assigned to a common port channel must meet the following criteria:

- Ports must have the same LACP System Priority.
- Ports must have the same LACP port Admin Key.
- However, if the “port channel” Admin Key is set (page 4-142), then the port Admin Key must be set to the same value for a port to be allowed to join a channel group.

**Note:** **Note** – If the port channel admin key (lacp admin key, page 25-8) is not set (through the CLI) when a channel group is formed (i.e., it has a null value of 0), this key is set to the same value as the port admin key used by the interfaces that joined the group (lacp admin key, as described in this section and on page 25-7).


## Command Attributes

*Set Port Actor* – This menu sets the local side of an aggregate link; i.e., the ports on this switch.

- **Port** – Port number. (Range: 1-25/49)
- **System Priority** – LACP system priority is used to determine link aggregation group (LAG) membership, and to identify this device to other switches during LAG negotiations. (Range: 0-65535; Default: 32768)
  - Ports must be configured with the same system priority to join the same LAG.
  - System priority is combined with the switch's MAC address to form the LAG identifier. This identifier is used to indicate a specific LAG during LACP negotiations with other systems.
- **Admin Key** – The LACP administration key must be set to the same value for ports that belong to the same LAG. (Range: 0-65535; Default: 1)
- **Port Priority** – If a link goes down, LACP port priority is used to select a backup link. (Range: 0-65535; Default: 32768)

*Set Port Partner* – This menu sets the remote side of an aggregate link; i.e., the ports on the attached device. The command attributes have the same meaning as those used for the port actor. However, configuring LACP settings for the partner only applies to its administrative state, not its operational state, and will only take effect the next time an aggregate link is established with the partner.

**Web** – Click Port, LACP, Aggregation Port. Set the System Priority, Admin Key, and Port Priority for the Port Actor. You can optionally configure these settings for the Port Partner. (Be aware that these settings only affect the administrative state of the partner, and will not take effect until the next time an aggregate link is formed with this device.) After you have completed setting the port LACP parameters, click Apply.

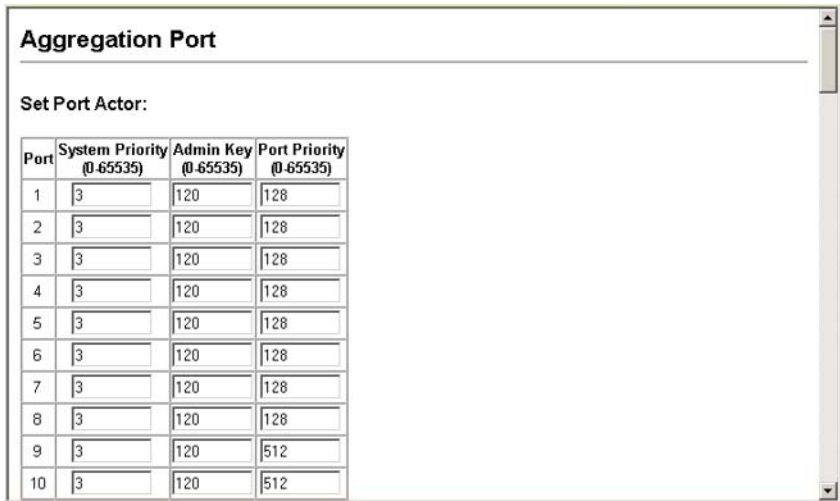

**Aggregation Port**

**Set Port Actor:**

Port	System Priority (0-65535)	Admin Key (0-65535)	Port Priority (0-65535)
1	3	120	128
2	3	120	128
3	3	120	128
4	3	120	128
5	3	120	128
6	3	120	128
7	3	120	128
8	3	120	128
9	3	120	512
10	3	120	512

Figure 8-5 LACP - Aggregation Port

**CLI** – The following example configures LACP parameters for ports 1-10. Ports 1-8 are used as active members of the LAG, ports 9 and 10 are set to backup mode.

```

Console(config)#interface ethernet 1/1                                24-2
Console(config-if)#lacp actor system-priority 3                     25-6
Console(config-if)#lacp actor admin-key 120                         25-7
Console(config-if)#lacp actor port-priority 128                     25-9
Console(config-if)#exit
:
Console(config)#interface ethernet 1/10
Console(config-if)#lacp actor system-priority 3
Console(config-if)#lacp actor admin-key 120
Console(config-if)#lacp actor port-priority 512
Console(config-if)#end
Console#show lacp sysid                                             25-10
Channel Group      System Priority      System MAC Address
-----
          1              3      00-00-E9-31-31-31
          2          32768      00-00-E9-31-31-31
          3          32768      00-00-E9-31-31-31
:
Console#show lacp 1 internal                                       25-10
Port channel: 1
-----
Oper Key:   120
Admin Key:  0
Eth 1/ 1
-----
LACPDUs Internal:    30 sec
LACP System Priority: 3
LACP Port Priority:   128
Admin Key:            120
Oper Key:             120
Admin State: defaulted, aggregation, long timeout, LACP-activity
Oper State:           distributing, collecting, synchronization,
                    aggregation, long timeout, LACP-activity
:

```



## Displaying LACP Port Counters

You can display statistics for LACP protocol messages.

**Table 8-1 LACP Port Counters**

Parameter	Description
LACPDUs Sent	Number of valid LACPDUs transmitted from this channel group.
LACPDUs Received	Number of valid LACPDUs received by this channel group.
Marker Sent	Number of valid Marker PDUs transmitted from this channel group.
Marker Received	Number of valid Marker PDUs received by this channel group.
Marker Unknown Pkts	Number of frames received that either (1) Carry the Slow Protocols Ethernet Type value, but contain an unknown PDU, or (2) are addressed to the Slow Protocols group MAC Address, but do not carry the Slow Protocols Ethernet Type.
Marker Illegal Pkts	Number of frames that carry the Slow Protocols Ethernet Type value, but contain a badly formed PDU or an illegal value of Protocol Subtype.

**Web** – Click Port, LACP, Port Counters Information. Select a member port to display the corresponding information.

**LACP Port Counters Information**

Interface Port 2

Trunk ID : 1

LACPDUs Sent	19	LACPDUs Receive	10
Marker Sent	0	Marker Receive	0
Marker Unknown Pkts	0	Marker Illegal Pkts	0

**Figure 8-6 LACP - Port Counters Information**

**CLI** – The following example displays LACP counters for port channel 1.

```
Console#show lacp 1 counters 25-10
Port channel: 1
-----
Eth 1/ 2
-----
  LACPDUs Sent:          19
  LACPDUs Receive:      10
  Marker Sent:           0
  Marker Receive:        0
  LACPDUs Unknown Pkts: 0
  LACPDUs Illegal Pkts: 0
  :
```

## Displaying LACP Settings and Status for the Local Side

You can display configuration settings and the operational state for the local side of an link aggregation.

**Table 8-2 LACP Internal Configuration Information**

Field	Description
Oper Key	Current operational value of the key for the aggregation port.
Admin Key	Current administrative value of the key for the aggregation port.
LACPDUs Internal	Number of seconds before invalidating received LACPDU information.
LACP System Priority	LACP system priority assigned to this port channel.
LACP Port Priority	LACP port priority assigned to this interface within the channel group.

**Table 8-2 LACP Internal Configuration Information** (Continued)

Field	Description
Admin State, Oper State	<p>Administrative or operational values of the actor's state parameters:</p> <ul style="list-style-type: none"> <li>• Expired – The actor's receive machine is in the expired state;</li> <li>• Defaulted – The actor's receive machine is using defaulted operational partner information, administratively configured for the partner.</li> <li>• Distributing – If false, distribution of outgoing frames on this link is disabled; i.e., distribution is currently disabled and is not expected to be enabled in the absence of administrative changes or changes in received protocol information.</li> <li>• Collecting – Collection of incoming frames on this link is enabled; i.e., collection is currently enabled and is not expected to be disabled in the absence of administrative changes or changes in received protocol information.</li> <li>• Synchronization – The System considers this link to be IN_SYNC; i.e., it has been allocated to the correct Link Aggregation Group, the group has been associated with a compatible Aggregator, and the identity of the Link Aggregation Group is consistent with the System ID and operational Key information transmitted.</li> <li>• Aggregation – The system considers this link to be aggregatable; i.e., a potential candidate for aggregation.</li> <li>• Long timeout – Periodic transmission of LACPDU's uses a slow transmission rate.</li> <li>• LACP-Activity – Activity control value with regard to this link. (0: Passive; 1: Active)</li> </ul>

**Web** – Click Port, LACP, Port Internal Information. Select a port channel to display the corresponding information.

**LACP Port Internal Information**

Interface Port 2

Trunk ID : 1

LACP System Priority	32768	LACP Port Priority	32768
Admin Key	3	Oper Key	3
LACPDUS Interval (secs)	30 seconds		
Admin State : Expired		Oper State : Expired	
Admin State : Defaulted	✓	Oper State : Defaulted	
Admin State : Distributing		Oper State : Distributing	✓
Admin State : Collecting		Oper State : Collecting	✓
Admin State : Synchronization		Oper State : Synchronization	✓
Admin State : Aggregation	✓	Oper State : Aggregation	✓
Admin State : Timeout	Long	Oper State : Timeout	Long
Admin State : LACP-Activity	✓	Oper State : LACP-Activity	✓

**Figure 8-7 LACP - Port Internal Information**

**CLI** – The following example displays the LACP configuration settings and operational state for the local side of port channel 1.

```

Console#show lacp 1 internal                                     25-10
Port channel: 1
-----
Oper Key: 3
Admin Key: 0
Eth 1/ 2
-----
LACPDUs Internal:      30 sec
LACP System Priority:  32768
LACP Port Priority:    32768
Admin Key:             3
Oper Key:              3
Admin State: defaulted, aggregation, long timeout, LACP-activity
Oper State:            distributing, collecting, synchronization,
                        aggregation, long timeout, LACP-activity
:

```

## Displaying LACP Settings and Status for the Remote Side

You can display configuration settings and the operational state for the remote side of an link aggregation.

**Table 8-3 LACP Neighbor Configuration Information**

Field	Description
Partner Admin System ID	LAG partner's system ID assigned by the user.
Partner Oper System ID	LAG partner's system ID assigned by the LACP protocol.
Partner Admin Port Number	Current administrative value of the port number for the protocol Partner.
Partner Oper Port Number	Operational port number assigned to this aggregation port by the port's protocol partner.
Port Admin Priority	Current administrative value of the port priority for the protocol partner.
Port Oper Priority	Priority value assigned to this aggregation port by the partner.
Admin Key	Current administrative value of the Key for the protocol partner.
Oper Key	Current operational value of the Key for the protocol partner.
Admin State	Administrative values of the partner's state parameters. (See preceding table.)
Oper State	Operational values of the partner's state parameters. (See preceding table.)

**Web** – Click Port, LACP, Port Neighbors Information. Select a port channel to display the corresponding information.

**LACP Port Neighbors Information**

Interface Port 2

Trunk ID : 1

Partner Admin System ID	32768, 00-00-00-00-00-00	Partner Oper System ID	32768, 00-01-F4-78-AE-C0
Partner Admin Port Number	2	Partner Oper Port Number	2
Port Admin Priority	32768	Port Oper Priority	32768
Admin Key	0	Oper Key	3
Admin State : Expired		Oper State : Expired	
Admin State : Defaulted	✔	Oper State : Defaulted	
Admin State : Distributing	✔	Oper State : Distributing	✔
Admin State : Collecting	✔	Oper State : Collecting	✔
Admin State : Synchronization	✔	Oper State : Synchronization	✔
Admin State : Aggregation		Oper State : Aggregation	✔
Admin State : Timeout	Long	Oper State : Timeout	Long
Admin State : LACP-Activity		Oper State : LACP-Activity	✔

**Figure 8-8 LACP - Port Neighbors Information**

**CLI** – The following example displays the LACP configuration settings and operational state for the remote side of port channel 1.

```
Console#show lacp 1 neighbors 25-10
Port channel 1 neighbors
-----
Eth 1/2
-----
Partner Admin System ID:  32768, 00-00-00-00-00-00
Partner Oper System ID:  32768, 00-01-F4-78-AE-C0
Partner Admin Port Number: 2
Partner Oper Port Number: 2
Port Admin Priority:      32768
Port Oper Priority:       32768
Admin Key:                0
Oper Key:                 3
Admin State:              defaulted, distributing, collecting,
                           synchronization, long timeout,
Oper State:               distributing, collecting, synchronization,
                           aggregation, long timeout, LACP-activity
:
:
```

## Setting Broadcast Storm Thresholds

Broadcast storms may occur when a device on your network is malfunctioning, or if application programs are not well designed or properly configured. If there is too much broadcast traffic on your network, performance can be severely degraded or everything can come to complete halt.

You can protect your network from broadcast storms by setting a threshold for broadcast traffic for each port. Any broadcast packets exceeding the specified threshold will then be dropped.

### Command Usage

- Broadcast control does not effect IP multicast traffic.
- The resolution is 1 packet per second (pps); i.e., any setting between 500-262143 is acceptable.

### Command Attributes

- **Port**<sup>6</sup> – Port number.
- **Trunk**<sup>7</sup> – Trunk number
- **Type** – Indicates the port type. (1000BASE-T, SFP, or 10G)
- **Protect Status** – Shows whether or not broadcast storm control has been enabled. (Default: Enabled)
- **Threshold** – Threshold as percentage of port bandwidth. (Options: 500-262143 packets per second; Default: 500 pps)
- **Trunk**<sup>6</sup> – Shows if port is a trunk member.

---

6. Port Broadcast Control

7. Trunk Broadcast Control

**Web** – Click Port, Port Broadcast Control or Trunk Broadcast Control. Check the Enabled box for any interface, set the threshold, and click Apply.

Port Broadcast Control					
Port	Type	Protect Status	Threshold (500-262143)		Trunk
1	1000Base-TX	<input type="checkbox"/> Enabled	500	(packets/sec)	
2	1000Base-TX	<input checked="" type="checkbox"/> Enabled	600	(packets/sec)	
3	1000Base-TX	<input checked="" type="checkbox"/> Enabled	500	(packets/sec)	
4	1000Base-TX	<input checked="" type="checkbox"/> Enabled	500	(packets/sec)	
5	1000Base-TX	<input checked="" type="checkbox"/> Enabled	500	(packets/sec)	
6	1000Base-TX	<input checked="" type="checkbox"/> Enabled	500	(packets/sec)	

**Figure 8-9 Port Broadcast Control**

**CLI** – Specify any interface, and then enter the threshold. The following disables broadcast storm control for port 1, and then sets broadcast suppression at 600 packets per second for port 2.

```


Console(config)#interface ethernet 1/1                               24-2
Console(config-if)#no switchport broadcast                          24-10
Console(config-if)#exit
Console(config)#interface ethernet 1/2
Console(config-if)#switchport broadcast packet-rate 600            24-10
Console(config-if)#end
Console#show interfaces switchport ethernet 1/2                     24-15
Information of Eth 1/2
Broadcast threshold:          Enabled, 600 packets/second
LACP status:                  Disabled
Ingress rate limit:           Disable, 1000M bits per second
Egress rate limit:            Disable, 1000M bits per second
VLAN membership mode:         Hybrid
Ingress rule:                 Disabled
Acceptable frame type:        All frames
Native VLAN:                  1
Priority for untagged traffic: 0
GVRP status:                  Disabled
Allowed VLAN:                 1(u),
Forbidden VLAN:
Console#

```



## Configuring Port Mirroring

You can mirror traffic from any source port to a target port for real-time analysis. You can then attach a logic analyzer or RMON probe to the target port and study the traffic crossing the source port in a completely unobtrusive manner.

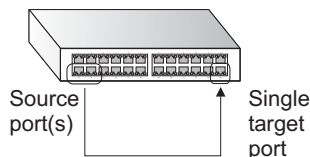

### Command Usage

- Monitor port speed should match or exceed source port speed, otherwise traffic may be dropped from the monitor port.
- All mirror sessions have to share the same destination port.
- When mirroring port traffic, the target port must be included in the same VLAN as the source port when using MSTP (see “Spanning Tree Algorithm” on page 10-1).

### Command Attributes

- **Mirror Sessions** – Displays a list of current mirror sessions.
- **Source Unit** – The unit whose port traffic will be monitored. (Range: 1-8)
- **Source Port** – The port whose traffic will be monitored. (Range: 1-26/50)
- **Type** – Allows you to select which traffic to mirror to the target port, Rx (receive), Tx (transmit), or Both. (Default: Rx)
- **Target Unit** – The unit whose port will "duplicate" or "mirror" the traffic on the source port. (Range: 1-8)
- **Target Port** – The port that will “mirror” the traffic from the source port. (Range: 1-26/50)

**Web** – Click Port, Mirror Port Configuration. Specify the source port, the traffic type to be mirrored, and the monitor port, then click Add.

**Figure 8-10 Mirror Port Configuration**

**CLI** – Use the interface command to select the monitor port, then use the port monitor command to specify the source port. Note that default mirroring under the CLI is for both received and transmitted packets.

Console(config)#interface ethernet 1/10	24-2
Console(config-if)#port monitor ethernet 1/13	26-1
Console(config-if)#	

## Configuring Rate Limits

This function allows the network manager to control the maximum rate for traffic transmitted or received on an interface. Rate limiting is configured on interfaces at the edge of a network to limit traffic into or out of the switch. Traffic that falls within the rate limit is transmitted, while packets that exceed the acceptable amount of traffic are dropped.

Rate limiting can be applied to individual ports or trunks. When an interface is configured with this feature, the traffic rate will be monitored by the hardware to verify conformity. Non-conforming traffic is dropped, conforming traffic is forwarded without any changes.

## Command Attribute

**Rate Limit** – Sets the output rate limit for an interface.

Default Status – Disabled

Default Rate – Gigabit Ethernet: 1000 Mbps

Range – Gigabit Ethernet: 1 - 1000 Mbps

**Note:** Rate limits are not supported for the 10 Gigabit Ethernet ports.

**Web** - Click Port, Rate Limit, Input/Output Port/Trunk Configuration. Set the Input Rate Limit Status or Output Rate Limit Status, then set the rate limit for the individual interfaces, and click Apply.

Port	Output Rate Limit Status	Output Rate Limit(Mbps)	Trunk
1	Enabled	600	
2	Disabled	1000	
3	Disabled	1000	
4	Disabled	1000	
5	Disabled	1000	
6	Disabled	1000	
7	Disabled	1000	
8	Disabled	1000	
9	Disabled	1000	
10	Disabled	1000	

**Figure 8-11 Rate Limit Configuration**

**CLI** - This example sets the rate limit for input and output traffic passing through port 1 to 600 Mbps.

```

Console(config)#interface ethernet 1/1      24-2
Console(config-if)#rate-limit input 600      27-1
Console(config-if)#rate-limit output 600
Console(config-if)#

```

## Showing Port Statistics

You can display standard statistics on network traffic from the Interfaces Group and Ethernet-like MIBs, as well as a detailed breakdown of traffic based on the RMON MIB. Interfaces and Ethernet-like statistics display errors on the traffic passing through each port. This information can be used to identify potential problems with the switch (such as a faulty port or unusually heavy loading). RMON statistics provide access to a broad range of statistics, including a total count of different frame types and sizes passing through each port. All values displayed have been accumulated since the last system reboot, and are shown as counts per second. Statistics are refreshed every 60 seconds by default.

**Note:** RMON groups 2, 3 and 9 can only be accessed using SNMP management software such as HP OpenView.

**Table 8-4 Port Statistics**

Parameter	Description
<i>Interface Statistics</i>	
Received Octets	The total number of octets received on the interface, including framing characters.
Received Unicast Packets	The number of subnetwork-unicast packets delivered to a higher-layer protocol.
Received Multicast Packets	The number of packets, delivered by this sub-layer to a higher (sub-)layer, which were addressed to a multicast address at this sub-layer.
Received Broadcast Packets	The number of packets, delivered by this sub-layer to a higher (sub-)layer, which were addressed to a broadcast address at this sub-layer.
Received Discarded Packets	The number of inbound packets which were chosen to be discarded even though no errors had been detected to prevent their being deliverable to a higher-layer protocol. One possible reason for discarding such a packet could be to free up buffer space.

**Table 8-4 Port Statistics (Continued)**

<b>Parameter</b>	<b>Description</b>
Received Unknown Packets	The number of packets received via the interface which were discarded because of an unknown or unsupported protocol.
Received Errors	The number of inbound packets that contained errors preventing them from being deliverable to a higher-layer protocol.
Transmit Octets	The total number of octets transmitted out of the interface, including framing characters.
Transmit Unicast Packets	The total number of packets that higher-level protocols requested be transmitted to a subnetwork-unicast address, including those that were discarded or not sent.
Transmit Multicast Packets	The total number of packets that higher-level protocols requested be transmitted, and which were addressed to a multicast address at this sub-layer, including those that were discarded or not sent.
Transmit Broadcast Packets	The total number of packets that higher-level protocols requested be transmitted, and which were addressed to a broadcast address at this sub-layer, including those that were discarded or not sent.
Transmit Discarded Packets	The number of outbound packets which were chosen to be discarded even though no errors had been detected to prevent their being transmitted. One possible reason for discarding such a packet could be to free up buffer space.
Transmit Errors	The number of outbound packets that could not be transmitted because of errors.
<i>Etherlike Statistics</i>	
Alignment Errors	The number of alignment errors (missynchronized data packets).
Late Collisions	The number of times that a collision is detected later than 512 bit-times into the transmission of a packet.

**Table 8-4 Port Statistics (Continued)**

Parameter	Description
FCS Errors	A count of frames received on a particular interface that are an integral number of octets in length but do not pass the FCS check. This count does not include frames received with frame-too-long or frame-too-short error.
Excessive Collisions	A count of frames for which transmission on a particular interface fails due to excessive collisions. This counter does not increment when the interface is operating in full-duplex mode.
Single Collision Frames	The number of successfully transmitted frames for which transmission is inhibited by exactly one collision.
Internal MAC Transmit Errors	A count of frames for which transmission on a particular interface fails due to an internal MAC sublayer transmit error.
Multiple Collision Frames	A count of successfully transmitted frames for which transmission is inhibited by more than one collision.
Carrier Sense Errors	The number of times that the carrier sense condition was lost or never asserted when attempting to transmit a frame.
SQE Test Errors	A count of times that the SQE TEST ERROR message is generated by the PLS sublayer for a particular interface.
Frames Too Long	A count of frames received on a particular interface that exceed the maximum permitted frame size.
Deferred Transmissions	A count of frames for which the first transmission attempt on a particular interface is delayed because the medium was busy.
Internal MAC Receive Errors	A count of frames for which reception on a particular interface fails due to an internal MAC sublayer receive error.

**Table 8-4 Port Statistics (Continued)**

Parameter	Description
<i>RMON Statistics</i>	
Drop Events	The total number of events in which packets were dropped due to lack of resources.
Jabbers	The total number of frames received that were longer than 1518 octets (excluding framing bits, but including FCS octets), and had either an FCS or alignment error.
Received Bytes	Total number of bytes of data received on the network. This statistic can be used as a reasonable indication of Ethernet utilization.
Collisions	The best estimate of the total number of collisions on this Ethernet segment.
Received Frames	The total number of frames (bad, broadcast and multicast) received.
Broadcast Frames	The total number of good frames received that were directed to the broadcast address. Note that this does not include multicast packets.
Multicast Frames	The total number of good frames received that were directed to this multicast address.
CRC/Alignment Errors	The number of CRC/alignment errors (FCS or alignment errors).
Undersize Frames	The total number of frames received that were less than 64 octets long (excluding framing bits, but including FCS octets) and were otherwise well formed.
Oversize Frames	The total number of frames received that were longer than 1518 octets (excluding framing bits, but including FCS octets) and were otherwise well formed.
Fragments	The total number of frames received that were less than 64 octets in length (excluding framing bits, but including FCS octets) and had either an FCS or alignment error.

**Table 8-4 Port Statistics (Continued)**

Parameter	Description
64 Bytes Frames	The total number of frames (including bad packets) received and transmitted that were 64 octets in length (excluding framing bits but including FCS octets).
65-127 Byte Frames 128-255 Byte Frames 256-511 Byte Frames 512-1023 Byte Frames 1024-1518 Byte Frames 1519-1536 Byte Frames	The total number of frames (including bad packets) received and transmitted where the number of octets fall within the specified range (excluding framing bits but including FCS octets).

**Web** – Click Port, Port Statistics. Select the required interface, and click Query. You can also use the Refresh button at the bottom of the page to update the screen.

### Port Statistics

Interface
Port 1
Trunk

Query

**Interface Statistics:**

Received Octets	15020	Received Unicast Packets	0
Received Multicast Packets	177	Received Broadcast Packets	0
Received Discarded Packets	0	Received Unknown Packets	0
Received Errors	0	Transmit Octets	168087
Transmit Unicast Packets	0	Transmit Multicast Packets	2420
Transmit Broadcast Packets	47	Transmit Discarded Packets	0
Transmit Errors	0		



<b>Etherlike Statistics:</b>			
Alignment Errors	0	Late Collisions	0
FCS Errors	0	Excessive Collisions	0
Single Collision Frames	0	Internal MAC Transmit Errors	0
Multiple Collision Frames	0	Carrier Sense Errors	0
SQE Test Errors	0	Frames Too Long	0
Deferred Transmissions	0	Internal MAC Receive Errors	0
<b>RMON Statistics:</b>			
Drop Events	0	Jabbers	0
Received Bytes	188155	Collisions	0
Received Frames	0	64 Bytes Frames	2249
Broadcast Frames	47	65-127 Bytes Frames	459
Multicast Frames	2672	128-255 Bytes Frames	11
CRC/Alignment Errors	0	256-511 Bytes Frames	0
Undersize Frames	0	512-1023 Bytes Frames	0
Oversize Frames	0	1024-1518 Bytes Frames	0
Fragments	0		
<input type="button" value="Refresh"/>			

Figure 8-12 Port Statistics

**CLI** – This example shows statistics for port 12.

```
Console#show interfaces counters ethernet 1/12 24-13
Ethernet 1/12
Iftable stats:
  Octets input: 868453, Octets output: 3492122
  Unicast input: 7315, Unitcast output: 6658
  Discard input: 0, Discard output: 0
  Error input: 0, Error output: 0
  Unknown protos input: 0, QLen output: 0
Extended iftable stats:
  Multi-cast input: 0, Multi-cast output: 17027
  Broadcast input: 231, Broadcast output: 7
Ether-like stats:
  Alignment errors: 0, FCS errors: 0
  Single Collision frames: 0, Multiple collision frames: 0
  SQE Test errors: 0, Deferred transmissions: 0
  Late collisions: 0, Excessive collisions: 0
  Internal mac transmit errors: 0, Internal mac receive errors: 0
  Frame too longs: 0, Carrier sense errors: 0
  Symbol errors: 0
RMON stats:
  Drop events: 0, Octets: 4422579, Packets: 31552
  Broadcast pkts: 238, Multi-cast pkts: 17033
  Undersize pkts: 0, Oversize pkts: 0
  Fragments: 0, Jabbers: 0
  CRC align errors: 0, Collisions: 0
  Packet size <= 64 octets: 25568, Packet size 65 to 127 octets: 1616
  Packet size 128 to 255 octets: 1249, Packet size 256 to 511 octets: 1449
  Packet size 512 to 1023 octets: 802, Packet size 1024 to 1518 octets: 871
Console#
```

# CHAPTER 9

## ADDRESS TABLE SETTINGS

---

Switches store the addresses for all known devices. This information is used to pass traffic directly between the inbound and outbound ports. All the addresses learned by monitoring traffic are stored in the dynamic address table. You can also manually configure static addresses that are bound to a specific port.

### Setting Static Addresses

A static address can be assigned to a specific interface on this switch. Static addresses are bound to the assigned interface and will not be moved. When a static address is seen on another interface, the address will be ignored and will not be written to the address table.

#### Command Attributes

- **Static Address Counts**<sup>8</sup> – The number of manually configured addresses.
- **Current Static Address Table** – Lists all the static addresses.
- **Interface** – Port or trunk associated with the device assigned a static address.
- **MAC Address** – Physical address of a device mapped to this interface.
- **VLAN** – ID of configured VLAN (1-4093).

---

8. Web Only.

**Web** – Click Address Table, Static Addresses. Specify the interface, the MAC address and VLAN, then click Add Static Address.

## Static Addresses

Static Address Counts	1	
Current Static Address Table	00-E0-29-94-34-DE, VLAN 1, Unit 1, Port 1, Permanent	
Interface	<input checked="" type="radio"/> Port 1	<input type="radio"/> Trunk
MAC Address (XX-XX-XX-XX-XX-XX)		
VLAN	1	

Add Static Address
Remove Static Address

**Figure 9-1 Static Addresses**

**CLI** – This example adds an address to the static address table, but sets it to be deleted when the switch is reset.

```

Console(config)#mac-address-table static 00-e0-29-94-34-de
interface ethernet 1/1 vlan 1 delete-on-reset
Console(config)#
  
```

28-2

## Displaying the Address Table

The Dynamic Address Table contains the MAC addresses learned by monitoring the source address for traffic entering the switch. When the destination address for inbound traffic is found in the database, the packets intended for that address are forwarded directly to the associated port. Otherwise, the traffic is flooded to all ports.

### Command Attributes

- **Interface** – Indicates a port or trunk.
- **MAC Address** – Physical address associated with this interface.
- **VLAN** – ID of configured VLAN (1-4093).
- **Address Table Sort Key** – You can sort the information displayed based on MAC address, VLAN or interface (port or trunk).
- **Dynamic Address Counts** – The number of addresses dynamically learned.
- **Current Dynamic Address Table** – Lists all the dynamic addresses.

**Web** – Click Address Table, Dynamic Addresses. Specify the search type (i.e., mark the Interface, MAC Address, or VLAN checkbox), select the method of sorting the displayed addresses, and then click Query.

**Dynamic Addresses**

**Query by:**

☒ Interface ☐ Port ☐ Trunk

☐ MAC Address

☐ VLAN

Address Table Sort Key: Address

**Dynamic Address Table**

Dynamic Address Counts: 1

Current Dynamic Address Table:

00-20-9C-23-CD-60, VLAN 2, Unit 1, Port 1, Dynamic
--

**Figure 9-2 Dynamic Addresses**

**CLI** – This example also displays the address table entries for port 1.

```

Console#show mac-address-table interface ethernet 1/1
Interface Mac Address      Vlan Type
-----
Eth 1/ 1  00-E0-29-94-34-DE  1 Permanent
Eth 1/ 1  00-20-9C-23-CD-60    2 Learned
Console#
  
```

## Changing the Aging Time

You can set the aging time for entries in the dynamic address table.

### Command Attributes

- **Aging Status** – Enables/disables the aging function.
- **Aging Time** – The time after which a learned entry is discarded.
- (Range: 10-1000000 seconds; Default: 300 seconds)

**Web** – Click Address Table, Address Aging. Specify the new aging time, click Apply.

Address Aging	
Aging Status	<input checked="" type="checkbox"/> Enabled
Aging Time (10-1000000):	<input type="text" value="400"/> seconds

**Figure 9-3 Address Aging**

**CLI** – This example sets the aging time to 400 seconds.

```
Console(config)#mac-address-table aging-time 400
Console(config)#
```

28-5





# CHAPTER 10

## SPANNING TREE ALGORITHM

---


The Spanning Tree Algorithm (STA) can be used to detect and disable network loops, and to provide backup links between switches, bridges or routers. This allows the switch to interact with other bridging devices (that is, an STA-compliant switch, bridge or router) in your network to ensure that only one route exists between any two stations on the network, and provide backup links which automatically take over when a primary link goes down.

The spanning tree algorithms supported by this switch include these versions:

- STP – Spanning Tree Protocol (IEEE 802.1D)
- RSTP – Rapid Spanning Tree Protocol (IEEE 802.1w)
- MSTP – Multiple Spanning Tree Protocol (IEEE 802.1s)

**STP** – STP uses a distributed algorithm to select a bridging device (STP-compliant switch, bridge or router) that serves as the root of the spanning tree network. It selects a root port on each bridging device (except for the root device) which incurs the lowest path cost when forwarding a packet from that device to the root device. Then it selects a designated bridging device from each LAN which incurs the lowest path cost when forwarding a packet from that LAN to the root device. All ports connected to designated bridging devices are assigned as designated ports. After determining the lowest cost spanning tree, it enables all root ports and designated ports, and disables all other ports. Network packets are therefore only forwarded between root ports and designated ports, eliminating any possible network loops.

## SPANNING TREE ALGORITHM

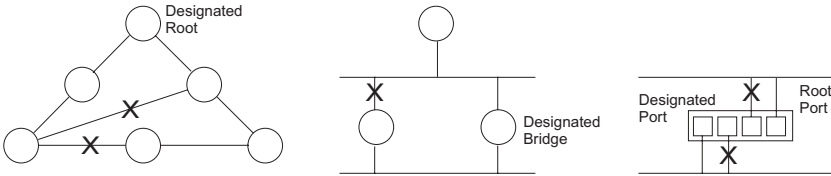


Once a stable network topology has been established, all bridges listen for Hello BPDUs (Bridge Protocol Data Units) transmitted from the Root Bridge. If a bridge does not get a Hello BPDU after a predefined interval (Maximum Age), the bridge assumes that the link to the Root Bridge is down. This bridge will then initiate negotiations with other bridges to reconfigure the network to reestablish a valid network topology.


**RSTP** – RSTP is designed as a general replacement for the slower, legacy STP. RSTP is also incorporated into MSTP. RSTP achieves much faster reconfiguration (i.e., around 1 to 3 seconds, compared to 30 seconds or more for STP) by reducing the number of state changes before active ports start learning, predefining an alternate route that can be used when a node or port fails, and retaining the forwarding database for ports insensitive to changes in the tree structure when reconfiguration occurs.

**MSTP** – When using STP or RSTP, it may be difficult to maintain a stable path between all VLAN members. Frequent changes in the tree structure can easily isolate some of the group members. MSTP (which is based on RSTP for fast convergence) is designed to support independent spanning trees based on VLAN groups. Using multiple spanning trees can provide multiple forwarding paths and enable load balancing. One or more VLANs can be grouped into a Multiple Spanning Tree Instance (MSTI). MSTP builds a separate Multiple Spanning Tree (MST) for each instance to

maintain connectivity among each of the assigned VLAN groups. MSTP then builds a Internal Spanning Tree (IST) for the Region containing all commonly configured MSTP bridges.

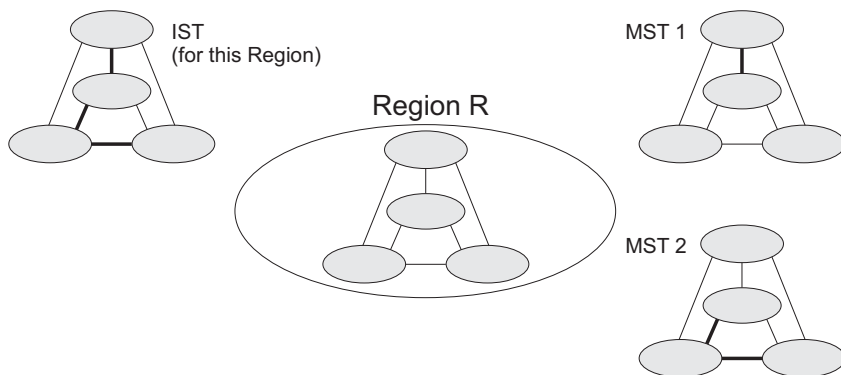

An MST Region consists of a group of interconnected bridges that have the same MST Configuration Identifiers (including the Region Name, Revision Level and Configuration Digest – see “Configuring Multiple Spanning Trees” on page 21). An MST Region may contain multiple MSTP Instances. An Internal Spanning Tree (IST) is used to connect all the MSTP switches within an MST region. A Common Spanning Tree (CST) interconnects all adjacent MST Regions, and acts as a virtual bridge node for communications with STP or RSTP nodes in the global network.

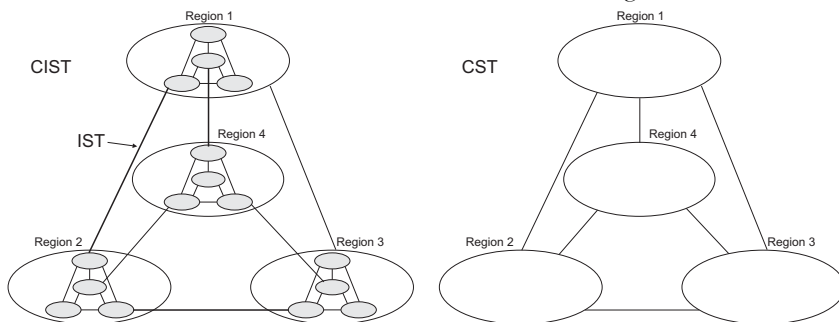

MSTP connects all bridges and LAN segments with a single Common and Internal Spanning Tree (CIST). The CIST is formed as a result of the running spanning tree algorithm between switches that support the STP, RSTP, MSTP protocols.

## Displaying Global Settings

You can display a summary of the current bridge STA information that applies to the entire switch using the STA Information screen.

### Field Attributes

- **Spanning Tree State** – Shows if the switch is enabled to participate in an STA-compliant network.
- **Bridge ID** – A unique identifier for this bridge, consisting of the bridge priority, the MST Instance ID 0 for the Common Spanning Tree when spanning tree mode is set to MSTP (page 10-8), and MAC address (where the address is taken from the switch system).
- **Max Age** – The maximum time (in seconds) a device can wait without receiving a configuration message before attempting to reconfigure. All device ports (except for designated ports) should receive configuration messages at regular intervals. Any port that ages out STA information (provided in the last configuration message) becomes the designated port for the attached LAN. If it is a root port, a new root port is selected from among the device ports attached to the network. (References to “ports” in this section mean “interfaces,” which includes both ports and trunks.)
- **Hello Time** – Interval (in seconds) at which the root device transmits a configuration message.
- **Forward Delay** – The maximum time (in seconds) the root device will wait before changing states (i.e., discarding to learning to forwarding). This delay is required because every device must receive information about topology changes before it starts to forward frames. In addition, each port needs time to listen for conflicting information that would

make it return to a discarding state; otherwise, temporary data loops might result.

- **Designated Root** – The priority and MAC address of the device in the Spanning Tree that this switch has accepted as the root device.
  - **Root Port** – The number of the port on this switch that is closest to the root. This switch communicates with the root device through this port. If there is no root port, then this switch has been accepted as the root device of the Spanning Tree network.
  - **Root Path Cost** – The path cost from the root port on this switch to the root device.
- **Configuration Changes** – The number of times the Spanning Tree has been reconfigured.
- **Last Topology Change** – Time since the Spanning Tree was last reconfigured.

These additional parameters are only displayed for the CLI:

- **Spanning tree mode** – Specifies the type of spanning tree used on this switch:
  - **STP**: Spanning Tree Protocol (IEEE 802.1D)
  - **RSTP**: Rapid Spanning Tree (IEEE 802.1w)
  - **MSTP**: Multiple Spanning Tree (IEEE 802.1s)
- **Instance** – Instance identifier of this spanning tree. (This is always 0 for the CIST.)
- **VLANs configuration** – VLANs assigned to the CIST.
- **Priority** – Bridge priority is used in selecting the root device, root port, and designated port. The device with the highest priority (i.e., lower numeric value) becomes the STA root device. However, if all devices have the same priority, the device with the lowest MAC address will then become the root device.
- **Root Hello Time** – Interval (in seconds) at which this device transmits a configuration message.
- **Root Maximum Age** – The maximum time (in seconds) this device can wait without receiving a configuration message before attempting to reconfigure. All device ports (except for designated ports) should receive

configuration messages at regular intervals. If the root port ages out STA information (provided in the last configuration message), a new root port is selected from among the device ports attached to the network.

(References to “ports” in this section means “interfaces,” which includes both ports and trunks.)

- **Root Forward Delay** – The maximum time (in seconds) this device will wait before changing states (i.e., discarding to learning to forwarding). This delay is required because every device must receive information about topology changes before it starts to forward frames. In addition, each port needs time to listen for conflicting information that would make it return to a discarding state; otherwise, temporary data loops might result.
- **Max hops** – The max number of hop counts for the MST region.
- **Remaining hops** – The remaining number of hop counts for the MST instance.
- **Transmission limit** – The minimum interval between the transmission of consecutive RSTP/MSTP BPDUs.
- **Path Cost Method** – The path cost is used to determine the best path between devices. The path cost method is used to determine the range of values that can be assigned to each interface.

**Web** – Click Spanning Tree, STA, Information.

STA Information			
Spanning Tree:			
Spanning Tree State	Enabled	Designated Root	32768.0000ABCD0000
Bridge ID	32768.0000ABCD0000	Root Port	0
Max Age	20	Root Path Cost	0
Hello Time	2	Configuration Changes	2
Forward Delay	15	Last Topology Change	0 d 0 h 0 min 35 s

**Figure 10-1 STA Information**

**CLI** – This command displays global STA settings, followed by settings for each port.

```

Console#show spanning-tree                                     29-25
Spanning-tree information
-----
Spanning tree mode:                MSTP
Spanning tree enable/disable:      enable
Instance:                          0
Vlans configuration:               1-4093
Priority:                          32768
Bridge Hello Time (sec.):          2
Bridge Max Age (sec.):             20
Bridge Forward Delay (sec.):       15
Root Hello Time (sec.):            2
Root Max Age (sec.):              20
Root Forward Delay (sec.):         15
Max hops:                         20
Remaining hops:                   20
Designated Root                   32768.0.0000ABCD0000
Current root port:                 1
Current root cost                  200000
Number of topology changes:       1
Last topology changes time (sec.): 13380
Transmission limit:               3
Path Cost Method:                 long
-----

Eth 1/ 1 information
-----
Admin status:                     enabled
Role:                             disable
State:                           discarding
External admin path cost:         10000
Internal admin cost:              10000
External oper path cost:          10000
Internal oper path cost:          10000
Priority:                         128
Designated cost:                  300000
Designated port:                  128.1
Designated root:                  32768.0000E8AAAA00
Designated bridge:                32768.0030F1D473A0
Fast forwarding:                  disabled
Forward transitions:              0
Admin edge port:                  disabled
Oper edge port:                   disabled
Admin Link type:                  auto
Oper Link type:                   point-to-point
Spanning Tree Status:             enabled
.
:

```

**Note:** The current root port and current root cost display as zero when this device is not connected to the network.

## Configuring Global Settings

Global settings apply to the entire switch.

### Command Usage

- **Spanning Tree Protocol<sup>9</sup>**  
Uses RSTP for the internal state machine, but sends only 802.1D BPDUs. This creates one spanning tree instance for the entire network. If multiple VLANs are implemented on a network, the path between specific VLAN members may be inadvertently disabled to prevent network loops, thus isolating group members. When operating multiple VLANs, we recommend selecting the MSTP option.
- **Rapid Spanning Tree Protocol<sup>9</sup>**  
RSTP supports connections to either STP or RSTP nodes by monitoring the incoming protocol messages and dynamically adjusting the type of protocol messages the RSTP node transmits, as described below:
  - **STP Mode** – If the switch receives an 802.1D BPDU (i.e., STP BPDU) after a port's migration delay timer expires, the switch assumes it is connected to an 802.1D bridge and starts using only 802.1D BPDUs.
  - **RSTP Mode** – If RSTP is using 802.1D BPDUs on a port and receives an RSTP BPDU after the migration delay expires, RSTP restarts the migration delay timer and begins using RSTP BPDUs on that port.
- **Multiple Spanning Tree Protocol**
  - To allow multiple spanning trees to operate over the network, you must configure a related set of bridges with the same MSTP configuration, allowing them to participate in a specific set of spanning tree instances.
  - A spanning tree instance can exist only on bridges that have compatible VLAN instance assignments.

---

9. STP and RSTP BPDUs are transmitted as untagged frames, and will cross any VLAN boundaries.



- Be careful when switching between spanning tree modes. Changing modes stops all spanning-tree instances for the previous mode and restarts the system in the new mode, temporarily disrupting user traffic.

## Command Attributes

### *Basic Configuration of Global Settings*

- **Spanning Tree State** – Enables/disables STA on this switch. (Default: Enabled)
- **Spanning Tree Type** – Specifies the type of spanning tree used on this switch:
  - **STP**: Spanning Tree Protocol (IEEE 802.1D); i.e., when this option is selected, the switch will use RSTP set to STP forced compatibility mode).
  - **RSTP**: Rapid Spanning Tree (IEEE 802.1w); RSTP is the default.
  - **MSTP**: Multiple Spanning Tree (IEEE 802.1s)
- **Priority** – Bridge priority is used in selecting the root device, root port, and designated port. The device with the highest priority becomes the STA root device. However, if all devices have the same priority, the device with the lowest MAC address will then become the root device. (Note that lower numeric values indicate higher priority.)
  - Default: 32768
  - Range: 0-61440, in steps of 4096
  - Options: 0, 4096, 8192, 12288, 16384, 20480, 24576, 28672, 32768, 36864, 40960, 45056, 49152, 53248, 57344, 61440

### *Root Device Configuration*

- **Hello Time** – Interval (in seconds) at which the root device transmits a configuration message.
  - Default: 2
  - Minimum: 1
  - Maximum: The lower of 10 or [(Max. Message Age / 2) -1]
- **Maximum Age** – The maximum time (in seconds) a device can wait without receiving a configuration message before attempting to

reconfigure. All device ports (except for designated ports) should receive configuration messages at regular intervals. Any port that ages out STA information (provided in the last configuration message) becomes the designated port for the attached LAN. If it is a root port, a new root port is selected from among the device ports attached to the network. (References to “ports” in this section mean “interfaces,” which includes both ports and trunks.)

- Default: 20
- Minimum: The higher of 6 or  $[2 \times (\text{Hello Time} + 1)]$ .
- Maximum: The lower of 40 or  $[2 \times (\text{Forward Delay} - 1)]$
- **Forward Delay** – The maximum time (in seconds) this device will wait before changing states (i.e., discarding to learning to forwarding). This delay is required because every device must receive information about topology changes before it starts to forward frames. In addition, each port needs time to listen for conflicting information that would make it return to a discarding state; otherwise, temporary data loops might result.
  - Default: 15
  - Minimum: The higher of 4 or  $[(\text{Max. Message Age} / 2) + 1]$
  - Maximum: 30

### *Configuration Settings for RSTP*

The following attributes apply to both RSTP and MSTP:

- **Path Cost Method** – The path cost is used to determine the best path between devices. The path cost method is used to determine the range of values that can be assigned to each interface.
  - Long: Specifies 32-bit based values that range from 1-200,000,000. (This is the default.)
  - Short: Specifies 16-bit based values that range from 1-65535.
- **Transmission Limit** – The maximum transmission rate for BPDUs is specified by setting the minimum interval between the transmission of consecutive protocol messages. (Range: 1-10; Default: 3)

*Configuration Settings for MSTP*

- **Max Instance Numbers** – The maximum number of MSTP instances to which this switch can be assigned. (Default: 65)
- **Configuration Digest** – An MD5 signature key that contains the VLAN ID to MST ID mapping table. In other words, this key is a mapping of all VLANs to the CIST.
- **Region Revision**<sup>10</sup> – The revision for this MSTI. (Range: 0-65535; Default: 0)
- **Region Name**<sup>10</sup> – The name for this MSTI. (Maximum length: 32 characters)
- **Max Hop Count** – The maximum number of hops allowed in the MST region before a BPDU is discarded. (Range: 1-40; Default: 20)

---

10. The MST name and revision number are both required to uniquely identify an MST region.

**Web** – Click Spanning Tree, STA, Configuration. Modify the required attributes, and click Apply.

### STA Configuration

---

**Switch:**

Spanning Tree State	<input checked="" type="checkbox"/> Enabled
Spanning Tree Type	MSTP
Priority (0-61440), in steps of 4096	32768

---

**When the Switch Becomes Root:**

Input Format:  $2 * (\text{hello time} + 1) \leq \text{max age} \leq 2 * (\text{forward delay} - 1)$

Hello Time (1-10)	2	seconds
Maximum Age (6-40)	20	seconds
Forward Delay (4-30)	15	seconds

---

**RSTP Configuration:**

Path Cost Method	Long
Transmission Limit (1-10)	3

---

**MSTP Configuration:**

Max Instance Numbers	65
Configuration Digest	0xAC36177F50283CD4B83821D8AB26DE62
Region Revision (0-65535)	0
Region Name	00 00 e8 aa aa 00
Max Hop Count (1-40)	20

Figure 10-2 STA Global Configuration

**CLI** – This example enables Spanning Tree Protocol, sets the mode to MST, and then configures the STA and MSTP parameters.

Console(config)#spanning-tree	29-3
Console(config)#spanning-tree mode mstp	29-4
Console(config)#spanning-tree priority 40000	29-8
Console(config)#spanning-tree hello-time 5	29-6
Console(config)#spanning-tree max-age 38	29-7
Console(config)#spanning-tree forward-time 20	29-5
Console(config)#spanning-tree pathcost method long	29-9
Console(config)#spanning-tree transmission-limit 4	29-10
Console(config)#spanning-tree mst-configuration	29-10
Console(config-mstp)#revision 1	29-14
Console(config-mstp)#name R&D	29-13
Console(config-mstp)#max-hops 30	29-14
Console(config-mstp)#	

## Displaying Interface Settings

The STA Port Information and STA Trunk Information pages display the current status of ports and trunks in the Spanning Tree.


### Field Attributes

- **Spanning Tree** – Shows if STA has been enabled on this interface.
- **STA Status** – Displays current state of this port within the Spanning Tree:
  - **Discarding** - Port receives STA configuration messages, but does not forward packets.
  - **Learning** - Port has transmitted configuration messages for an interval set by the Forward Delay parameter without receiving contradictory information. Port address table is cleared, and the port begins learning addresses.
  - **Forwarding** - Port forwards packets, and continues learning addresses.

The rules defining port status are:

- A port on a network segment with no other STA compliant bridging device is always forwarding.

- If two ports of a switch are connected to the same segment and there is no other STA device attached to this segment, the port with the smaller ID forwards packets and the other is discarding.
- All ports are discarding when the switch is booted, then some of them change state to learning, and then to forwarding.
- **Forward Transitions** – The number of times this port has transitioned from the Learning state to the Forwarding state.
- **Designated Cost** – The cost for a packet to travel from this port to the root in the current Spanning Tree configuration. The slower the media, the higher the cost.
- **Designated Bridge** – The bridge priority and MAC address of the device through which this port must communicate to reach the root of the Spanning Tree.
- **Designated Port** – The port priority and number of the port on the designated bridging device through which this switch must communicate with the root of the Spanning Tree.
- **Oper Path Cost** – The contribution of this port to the path cost of paths towards the spanning tree root which include this port.
- **Oper Link Type** – The operational point-to-point status of the LAN segment attached to this interface. This parameter is determined by manual configuration or by auto-detection, as described for Admin Link Type in STA Port Configuration on page 10-17.
- **Oper Edge Port** – This parameter is initialized to the setting for Admin Edge Port in STA Port Configuration on page 10-17 (i.e., true or false), but will be set to false if a BPDU is received, indicating that another bridge is attached to this port.
- **Port Role** – Roles are assigned according to whether the port is part of the active topology connecting the bridge to the root bridge (i.e., **root** port), connecting a LAN through the bridge to the root bridge (i.e., **designated** port), or is the MSTI regional root (i.e., **master** port); or is an **alternate** or **backup** port that may provide connectivity if other bridges, bridge ports, or LANs fail or are removed. The role is set to disabled (i.e., **disabled** port) if a port has no role within the spanning tree.

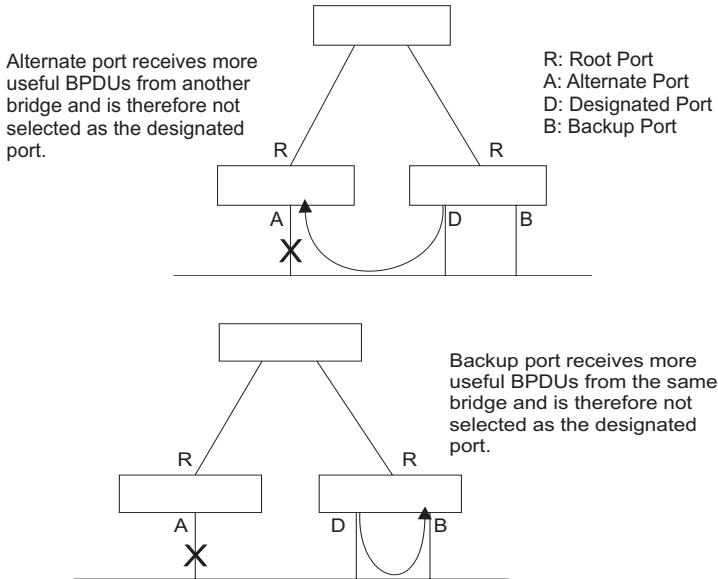

- **Trunk Member** – Indicates if a port is a member of a trunk.  
(STA Port Information only)

These additional parameters are only displayed for the CLI:

- **Admin status** – Shows if this interface is enabled.
- **External path cost** – The path cost for the IST. This parameter is used by the STA to determine the best path between devices. Therefore, lower values should be assigned to ports attached to faster media, and higher values assigned to ports with slower media. (Path cost takes precedence over port priority.)
- **Internal path cost** – The path cost for the MST. See the preceding item.
- **Priority** – Defines the priority used for this port in the Spanning Tree Algorithm. If the path cost for all ports on a switch is the same, the port with the highest priority (i.e., lowest value) will be configured as an active link in the Spanning Tree. This makes a port with higher priority less likely to be blocked if the Spanning Tree Algorithm is detecting network

loops. Where more than one port is assigned the highest priority, the port with the lowest numeric identifier will be enabled.

- **Designated root** – The priority and MAC address of the device in the Spanning Tree that this switch has accepted as the root device.
- **Fast forwarding** – This field provides the same information as Admin Edge port, and is only included for backward compatibility with earlier products.
- **Admin Edge Port** – You can enable this option if an interface is attached to a LAN segment that is at the end of a bridged LAN or to an end node. Since end nodes **cannot** cause forwarding loops, they can pass directly through to the spanning tree forwarding state. Specifying Edge Ports provides quicker convergence for devices such as workstations or servers, retains the current forwarding database to reduce the amount of frame flooding required to rebuild address tables during reconfiguration events, does not cause the spanning tree to reconfigure when the interface changes state, and also overcomes other STA-related timeout problems. However, remember that Edge Port should only be enabled for ports connected to an end-node device.
- **Admin Link Type** – The link type attached to this interface.
  - Point-to-Point – A connection to exactly one other bridge.
  - Shared – A connection to two or more bridges.
  - Auto – The switch automatically determines if the interface is attached to a point-to-point link or to shared media.

**Web** – Click Spanning Tree, STA, Port Information or STA Trunk Information.

Port	Spanning Tree	STA Status	Forward Transitions	Designated Cost	Designated Bridge	Designated Port	Oper Path Cost	Oper Link Type	Oper Edge Port	Port Role	Trunk Member
1	Enabled	Forwarding	1	0	32768.0000E8AAA00	128.4	10000	Point-to-Point	Disabled	Root	
2	Enabled	Discarding	0	10000	32768.0030F1D473A0	128.2	10000	Point-to-Point	Disabled	Disabled	
3	Enabled	Discarding	0	10000	32768.0030F1D473A0	128.3	10000	Point-to-Point	Disabled	Disabled	
4	Enabled	Discarding	0	10000	32768.0030F1D473A0	128.4	10000	Point-to-Point	Disabled	Disabled	
5	Enabled	Discarding	0	10000	32768.0030F1D473A0	128.5	10000	Point-to-Point	Disabled	Disabled	
6	Enabled	Discarding	0	10000	32768.0030F1D473A0	128.6	10000	Point-to-Point	Disabled	Disabled	
7	Enabled	Discarding	0	10000	32768.0030F1D473A0	128.7	10000	Point-to-Point	Disabled	Disabled	
8	Enabled	Discarding	0	10000	32768.0030F1D473A0	128.8	10000	Point-to-Point	Disabled	Disabled	
9	Enabled	Discarding	0	10000	32768.0030F1D473A0	128.9	10000	Point-to-Point	Disabled	Disabled	
10	Enabled	Discarding	0	10000	32768.0030F1D473A0	128.10	10000	Point-to-Point	Disabled	Disabled	

**Figure 10-3 STA Port Information**



**CLI** – This example shows the STA attributes for port 5.

```

Console#show spanning-tree ethernet 1/5
Eth 1/ 5 information
-----
Admin status:          enabled
Role:                  disable
State:                 discarding
External admin path cost: 10000
Internal admin cost:   10000
External oper path cost: 10000
Internal oper path cost: 10000
Priority:               128
Designated cost:       10000
Designated port:       128.1
Designated root:        32768.0.0000E8AAAA00
Designated bridge:      32768.0.0030F1D473A0
Fast forwarding:        disabled
Forward transitions:     2
Admin edge port:        disabled
Oper edge port:         disabled
Admin Link type:        auto
Oper Link type:         point-to-point
Spanning Tree Status:   enabled

Console#

```

## Configuring Interface Settings

You can configure RSTP and MSTP attributes for specific interfaces, including port priority, path cost, link type, and edge port. You may use a different priority or path cost for ports of the same media type to indicate the preferred path, link type to indicate a point-to-point connection or shared-media connection, and edge port to indicate if the attached device can support fast forwarding. (References to “ports” in this section means “interfaces,” which includes both ports and trunks.)

### Command Attributes

The following attributes are read-only and cannot be changed:

- **STA State** – Displays current state of this port within the Spanning Tree. (See Displaying Interface Settings on page 10-13 for additional information.)

- **Discarding** - Port receives STA configuration messages, but does not forward packets.
- **Learning** - Port has transmitted configuration messages for an interval set by the Forward Delay parameter without receiving contradictory information. Port address table is cleared, and the port begins learning addresses.
- **Forwarding** - Port forwards packets, and continues learning addresses.
- **Trunk**<sup>11</sup> – Indicates if a port is a member of a trunk.

The following interface attributes can be configured:

- **Spanning Tree** – Enables/disables STA on this interface. (Default: Enabled)
- **Priority** – Defines the priority used for this port in the Spanning Tree Protocol. If the path cost for all ports on a switch are the same, the port with the highest priority (i.e., lowest value) will be configured as an active link in the Spanning Tree. This makes a port with higher priority less likely to be blocked if the Spanning Tree Protocol is detecting network loops. Where more than one port is assigned the highest priority, the port with lowest numeric identifier will be enabled.
  - Default: 128
  - Range: 0-240, in steps of 16
- **Admin Path Cost** – This parameter is used by the STA to determine the best path between devices. Therefore, lower values should be assigned to ports attached to faster media, and higher values assigned to ports with slower media. (Path cost takes precedence over port priority.) Note that when the Path Cost Method is set to short (page 3-63), the maximum path cost is 65,535.

---

11. STA Port Configuration only

By default, the system automatically detects the speed and duplex mode used on each port, and configures the path cost according to the values shown below. Path cost “0” is used to indicate auto-configuration mode.

**Table 10-1 Recommended STA Path Cost Range**

Port Type	IEEE 802.1D-1998*	IEEE 802.1w-2001*
Gigabit Ethernet	3-10	2,000-200,000
10G Ethernet	1-5	200-20,000

\* Use the spanning-tree pathcost method command on page 29-9 to set the path cost method.

**Table 10-2 Default STA Path Costs**

Port Type	Link Type	IEEE 802.1D-1998*	IEEE 802.1w-2001*
Gigabit Ethernet	Full Duplex	4	10,000
	Trunk	4	5,000
10G Ethernet	Full Duplex	2	1000
	Trunk	2	500

\* Use the spanning-tree pathcost method command on page 29-9 to set the path cost method.

- **Admin Link Type** – The link type attached to this interface.
  - Point-to-Point – A connection to exactly one other bridge.
  - Shared – A connection to two or more bridges.
  - Auto – The switch automatically determines if the interface is attached to a point-to-point link or to shared media. (This is the default setting.)
- **Admin Edge Port** (Fast Forwarding) – You can enable this option if an interface is attached to a LAN segment that is at the end of a bridged LAN or to an end node. Since end nodes **cannot** cause forwarding loops, they can pass directly through to the spanning tree forwarding state. Specifying Edge Ports provides quicker convergence for devices such as workstations or servers, retains the current forwarding database to reduce the amount of frame flooding required to rebuild address tables during reconfiguration events, does not cause the spanning tree to

initiate reconfiguration when the interface changes state, and also overcomes other STA-related timeout problems. However, remember that Edge Port should only be enabled for ports connected to an end-node device. (Default: Disabled)

- **Migration** – If at any time the switch detects STP BPDUs, including Configuration or Topology Change Notification BPDUs, it will automatically set the selected interface to forced STP-compatible mode. However, you can also use the Protocol Migration button to manually re-check the appropriate BPDU format (RSTP or STP-compatible) to send on the selected interfaces. (Default: Disabled)

**Web** – Click Spanning Tree, STA, Port Configuration or Trunk Configuration. Modify the required attributes, then click Apply.

STA Port Configuration								
Port	Spanning Tree	STA State	Priority (0-240), in steps of 16	Admin Path Cost (1-200000000, 0:Auto)	Admin Link Type	Admin Edge Port (Fast Forwarding)	Migration	Trunk
1	<input checked="" type="checkbox"/> Enabled	Forwarding	128	0	Auto	<input type="checkbox"/> Enabled	<input type="checkbox"/> Enabled	
2	<input checked="" type="checkbox"/> Enabled	Discarding	128	0	Auto	<input type="checkbox"/> Enabled	<input type="checkbox"/> Enabled	
3	<input checked="" type="checkbox"/> Enabled	Discarding	128	0	Auto	<input type="checkbox"/> Enabled	<input type="checkbox"/> Enabled	
4	<input checked="" type="checkbox"/> Enabled	Discarding	128	0	Auto	<input type="checkbox"/> Enabled	<input type="checkbox"/> Enabled	
5	<input checked="" type="checkbox"/> Enabled	Discarding	128	0	Auto	<input type="checkbox"/> Enabled	<input type="checkbox"/> Enabled	
6	<input checked="" type="checkbox"/> Enabled	Discarding	128	0	Auto	<input type="checkbox"/> Enabled	<input type="checkbox"/> Enabled	
7	<input type="checkbox"/> Enabled	Discarding	0	50	Auto	<input checked="" type="checkbox"/> Enabled	<input checked="" type="checkbox"/> Enabled	

**Figure 10-4 STA Port Configuration**

**CLI** – This example sets STA attributes for port 7.

```

Console(config)#interface ethernet 1/7                24-2
Console(config-if)#no spanning-tree spanning-disabled 29-15
Console(config-if)#spanning-tree port-priority 0      29-18
Console(config-if)#spanning-tree cost 50              29-16
Console(config-if)#spanning-tree link-type auto       29-21
Console(config-if)#no spanning-tree edge-port         29-18
Console(config-if)#spanning-tree protocol-migration   29-24
Console(config-if)#

```

## Configuring Multiple Spanning Trees

MSTP generates a unique spanning tree for each instance. This provides multiple pathways across the network, thereby balancing the traffic load, preventing wide-scale disruption when a bridge node in a single instance fails, and allowing for faster convergence of a new topology for the failed instance.

By default all VLANs are assigned to the Internal Spanning Tree (MST Instance 0) that connects all bridges and LANs within the MST region. This switch supports up to 65 instances. You should try to group VLANs which cover the same general area of your network. However, remember that you must configure all bridges within the same MSTI Region (page 10-11) with the same set of instances, and the same instance (on each bridge) with the same set of VLANs. Also, note that RSTP treats each MSTI region as a single node, connecting all regions to the Common Spanning Tree.

To use multiple spanning trees:

1. Set the spanning tree type to MSTP (STA Configuration, page 10-8).
2. Enter the spanning tree priority for the selected MST instance (MSTP VLAN Configuration).
3. Add the VLANs that will share this MSTI (MSTP VLAN Configuration).

**Note:** All VLANs are automatically added to the IST (Instance 0).

To ensure that the MSTI maintains connectivity across the network, you must configure a related set of bridges with the same MSTI settings.

### Command Attributes

- **MST Instance** – Instance identifier of this spanning tree. (Default: 0)
- **Priority** – The priority of a spanning tree instance. (Range: 0-61440 in steps of 4096; Options: 0, 4096, 8192, 12288, 16384, 20480, 24576, 28672, 32768, 36864, 40960, 45056, 49152, 53248, 57344, 61440; Default: 32768)

- **VLANs in MST Instance** – VLANs assigned this instance.
- **MST ID** – Instance identifier to configure. (Range: 0-4094; Default: 0)
- **VLAN ID** – VLAN to assign to this selected MST instance.  
(Range: 1-4093)

The other global attributes are described under “Displaying Global Settings,” page 10-4. The attributes displayed by the CLI for individual interfaces are described under “Displaying Interface Settings,” page 10-13

**Web** – Click Spanning Tree, MSTP, VLAN Configuration. Select an instance identifier from the list, set the instance priority, and click Apply. To add the VLAN members to an MSTI instance, enter the instance identifier, the VLAN identifier, and click Add.

**MSTP VLAN Configuration**

MST Instance ID:

Spanning Tree State	Enabled	Designated Root	32768.1.0030F1D473A0
Bridge ID	32768.1.0030F1D473A0	Root Port	0
Max Age	20	Root Path Cost	0
Hello Time	2	Configuration Changes	1
Forward Delay	15	Last Topology Change	0 d 0 h 0 min 1 s

Priority (0-61440)

**MSTP VLAN Configuration:**

VLAN in MST Instance:

VLAN 1

Remove

MST ID (0-4094):  VLAN ID: 

Add

Figure 10-5 MSTP VLAN Configuration

**CLI** – This displays STA settings for instance 1, followed by settings for each port.

```

Console#show spanning-tree mst 1                                     29-25
Spanning-tree information
-----
Spanning tree mode:                MSTP
Spanning tree enabled/disabled:    enabled
Instance:                          1
VLANs configuration:               1
Priority:                           32768
Bridge Hello Time (sec.):           2
Bridge Max Age (sec.):              20
Bridge Forward Delay (sec.):        15
Root Hello Time (sec.):             2
Root Max Age (sec.):                20
Root Forward Delay (sec.):          15
Max hops:                           20
Remaining hops:                     20
Designated Root:                    32768.1.0030F1D473A0
Current root port:                   7
Current root cost:                   10000
Number of topology changes:          2
Last topology changes time (sec.): 85
Transmission limit:                  3
Path Cost Method:                     long
-----

Eth 1/ 7 information
-----
Admin status:                        enabled
Role:                                master
State:                               forwarding
External admin path cost: 10000
Internal admin path cost: 10000
External oper path cost:  10000
Internal oper path cost:  10000
Priority:                            128
Designated cost:                     0
Designated port:                     128.1
Designated root:                     32768.1.0030F1D473A0
Designated bridge:                   32768.1.0030F1D473A0
Fast forwarding:                     disabled
Forward transitions:                  1
Admin edge port:                     disabled
Oper edge port:                      disabled
Admin Link type:                     auto
Oper Link type:                      point-to-point
Spanning Tree Status:                enabled
:

```

**CLI** – This example sets the priority for MSTI 1, and adds VLANs 1-5 to this MSTI.

Console(config)#spanning-tree mst-configuration	29-10
Console(config-mst)#mst 1 priority 4096	29-12
Console(config-mst)#mst 1 vlan 1-5	29-11
Console(config-mst)#	

## Displaying Interface Settings for MSTP

The MSTP Port Information and MSTP Trunk Information pages display the current status of ports and trunks in the selected MST instance.

### Field Attributes

**MST Instance ID** – Instance identifier to configure. (Range: 0-4094; Default: 0)

**Note:** The other attributes are described under “Displaying Interface Settings,” page 10-13.

**Web** – Click Spanning Tree, MSTP, Port Information or Trunk Information. Select the required MST instance to display the current spanning tree values.

MSTP Port Information										
MST Instance ID: 0										
Port	STA Status	Forward Transitions	Designated Cost	Designated Bridge	Designated Port	Oper Path Cost	Oper Link Type	Oper Edge Port	Port Role	Trunk Member
1	Discarding	2	10000	32768.0.0030F1D473A0	128.1	10000	Point-to-Point	Disabled	Disabled	
2	Discarding	12	10000	32768.0.0030F1D473A0	128.2	100000	Point-to-Point	Disabled	Designated	
3	Discarding	0	10000	32768.0.0030F1D473A0	128.3	10000	Point-to-Point	Disabled	Disabled	
4	Discarding	9	10000	32768.0.0030F1D473A0	128.4	100000	Point-to-Point	Disabled	Designated	
5	Discarding	0	10000	32768.0.0030F1D473A0	128.5	10000	Point-to-Point	Disabled	Disabled	

Figure 10-6 MSTP Port Information



**CLI** – This displays STA settings for instance 0, followed by settings for each port. The settings for instance 0 are global settings that apply to the IST (page 10-4), the settings for other instances only apply to the local spanning tree.

```

Console#show spanning-tree mst 0
Spanning-tree information
-----
Spanning tree mode:           MSTP
Spanning tree enabled/disabled: enabled
Instance:                     0
VLANs configuration:          2-4093
Priority:                      32768
Bridge Hello Time (sec.):      2
Bridge Max Age (sec.):         20
Bridge Forward Delay (sec.):   15
Root Hello Time (sec.):        2
Root Max Age (sec.):           20
Root Forward Delay (sec.):      15
Max hops:                     20
Remaining hops:                20
Designated Root:               32768.0.0000E8AAAA00
Current root port:              1
Current root cost:              10000
Number of topology changes:     12
Last topology changes time (sec.): 303
Transmission limit:             3
Path Cost Method:               long
-----

Eth 1/ 1 information
-----
Admin status:                  enabled
Role:                          root
State:                         forwarding
External admin path cost:      10000
Internal admin path cost:      10000
External oper path cost:       10000
Internal oper path cost:       10000
Priority:                      128
Designated cost:               0
Designated port:               128.4
Designated root:               32768.0.0000E8AAAA00
Designated bridge:             32768.0.0000E8AAAA00
Fast forwarding:               disabled
Forward transitions:           2
Admin edge port:               disabled
Oper edge port:                disabled
Admin Link type:               auto
Oper Link type:                point-to-point
Spanning Tree Status:         enabled
:

```

## Configuring Interface Settings for MSTP

You can configure the STA interface settings for an MST Instance using the MSTP Port Configuration and MSTP Trunk Configuration pages.

### Field Attributes

The following attributes are read-only and cannot be changed:

- **STA State** – Displays current state of this port within the Spanning Tree. (See Displaying Interface Settings on page 10-13 for additional information.)
  - **Discarding** - Port receives STA configuration messages, but does not forward packets.
  - **Learning** - Port has transmitted configuration messages for an interval set by the Forward Delay parameter without receiving contradictory information. Port address table is cleared, and the port begins learning addresses.
  - **Forwarding** - Port forwards packets, and continues learning addresses.
- **Trunk** – Indicates if a port is a member of a trunk. (STA Port Configuration only)

The following interface attributes can be configured:

- **MST Instance ID** – Instance identifier to configure. (Range: 0-4094; Default: 0)
- **Priority** – Defines the priority used for this port in the Spanning Tree Protocol. If the path cost for all ports on a switch are the same, the port with the highest priority (i.e., lowest value) will be configured as an active link in the Spanning Tree. This makes a port with higher priority less likely to be blocked if the Spanning Tree Protocol is detecting network loops. Where more than one port is assigned the highest priority, the port with lowest numeric identifier will be enabled.
  - Default: 128
  - Range: 0-240, in steps of 16

- **Admin MST Path Cost** – This parameter is used by the MSTP to determine the best path between devices. Therefore, lower values should be assigned to ports attached to faster media, and higher values assigned to ports with slower media. (Path cost takes precedence over port priority.) Note that when the Path Cost Method is set to short (page 3-63), the maximum path cost is 65,535.

By default, the system automatically detects the speed and duplex mode used on each port, and configures the path cost according to the values shown below. Path cost “0” is used to indicate auto-configuration mode.

**Table 10-3 Recommended STA Path Cost Range**

Port Type	IEEE 802.1D-1998*	IEEE 802.1w-2001*
Gigabit Ethernet	3-10	2,000-200,000
10G Ethernet	1-5	200-20,000

\* Use the spanning-tree pathcost method command on page 29-9 to set the path cost method.

**Table 10-4 Default STA Path Costs**

Port Type	Link Type	IEEE 802.1D-1998*	IEEE 802.1w-2001*
Gigabit Ethernet	Full Duplex	4	10,000
	Trunk	4	5,000
10G Ethernet	Full Duplex	2	1000
	Trunk	2	500

\* Use the spanning-tree pathcost method command on page 29-9 to set the path cost method.

**Web** – Click Spanning Tree, MSTP, Port Configuration or Trunk Configuration. Enter the priority and path cost for an interface, and click Apply.

**MSTP Port Configuration**

MST Instance ID:

Port	STA State	Priority (0-240), in steps of 16	Admin MST Path Cost (1-2000000000, 0:Auto)	Trunk
1	Forwarding	<input type="text" value="128"/>	<input type="text" value="0"/>	<input type="checkbox"/>
2	Forwarding	<input type="text" value="128"/>	<input type="text" value="0"/>	<input type="checkbox"/>
3	Discarding	<input type="text" value="128"/>	<input type="text" value="0"/>	<input type="checkbox"/>
4	Discarding	<input type="text" value="0"/>	<input type="text" value="50"/>	<input type="checkbox"/>
5	Discarding	<input type="text" value="128"/>	<input type="text" value="0"/>	<input type="checkbox"/>

**Figure 10-7 MSTP Port Configuration**

**CLI** – This example sets the MSTP attributes for port 4.

Console(config)#interface ethernet 1/4	24-2
Console(config-if)#spanning-tree mst port-priority 0	29-23
Console(config-if)#spanning-tree mst cost 50	29-22
Console(config-if)	

# CHAPTER 11

## VLAN CONFIGURATION

---

### IEEE 802.1Q VLANs

In large networks, routers are used to isolate broadcast traffic for each subnet into separate domains. This switch provides a similar service at Layer 2 by using VLANs to organize any group of network nodes into separate broadcast domains. VLANs confine broadcast traffic to the originating group, and can eliminate broadcast storms in large networks. This also provides a more secure and cleaner network environment.

An IEEE 802.1Q VLAN is a group of ports that can be located anywhere in the network, but communicate as though they belong to the same physical segment.

VLANs help to simplify network management by allowing you to move devices to a new VLAN without having to change any physical connections. VLANs can be easily organized to reflect departmental groups (such as Marketing or R&D), usage groups (such as e-mail), or multicast groups (used for multimedia applications such as videoconferencing).

VLANs provide greater network efficiency by reducing broadcast traffic, and allow you to make network changes without having to update IP addresses or IP subnets. VLANs inherently provide a high level of network security since traffic must pass through a configured Layer 3 link to reach a different VLAN.

This switch supports the following VLAN features:


- Up to 255 VLANs based on the IEEE 802.1Q standard

- Distributed VLAN learning across multiple switches using explicit or implicit tagging and GVRP protocol
- Port overlapping, allowing a port to participate in multiple VLANs
- End stations can belong to multiple VLANs
- Passing traffic between VLAN-aware and VLAN-unaware devices
- Priority tagging

### Assigning Ports to VLANs

Before enabling VLANs for the switch, you must first assign each port to the VLAN group(s) in which it will participate. By default all ports are assigned to VLAN 1 as untagged ports. Add a port as a tagged port if you want it to carry traffic for one or more VLANs, and any intermediate network devices or the host at the other end of the connection supports VLANs. Then assign ports on the other VLAN-aware network devices along the path that will carry this traffic to the same VLAN(s), either manually or dynamically using GVRP. However, if you want a port on this switch to participate in one or more VLANs, but none of the intermediate network devices nor the host at the other end of the connection supports VLANs, then you should add this port to the VLAN as an untagged port.

**Note:** VLAN-tagged frames can pass through VLAN-aware or VLAN-unaware network interconnection devices, but the VLAN tags should be stripped off before passing it on to any end-node host that does not support VLAN tagging.

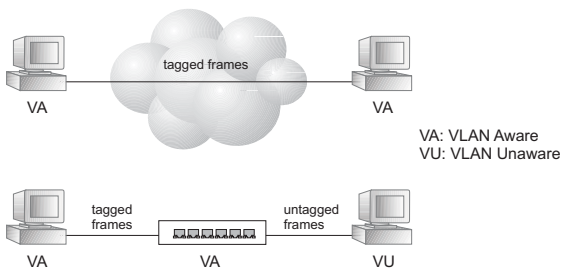

**VLAN Classification** – When the switch receives a frame, it classifies the frame in one of two ways. If the frame is untagged, the switch assigns the frame to an associated VLAN (based on the default VLAN ID of the receiving port). But if the frame is tagged, the switch uses the tagged VLAN ID to identify the port broadcast domain of the frame.


**Port Overlapping** – Port overlapping can be used to allow access to commonly shared network resources among different VLAN groups, such as file servers or printers. Note that if you implement VLANs which do not overlap, but still need to communicate, you can connect them by enabled routing on this switch.

**Untagged VLANs** – Untagged (or static) VLANs are typically used to reduce broadcast traffic and to increase security. A group of network users assigned to a VLAN form a broadcast domain that is separate from other VLANs configured on the switch. Packets are forwarded only between ports that are designated for the same VLAN. Untagged VLANs can be used to manually isolate user groups or subnets. However, you should use IEEE 802.3 tagged VLANs with GVRP whenever possible to fully automate VLAN registration.

**Automatic VLAN Registration** – GVRP (GARP VLAN Registration Protocol) defines a system whereby the switch can automatically learn the VLANs to which each end station should be assigned. If an end station (or its network adapter) supports the IEEE 802.1Q VLAN protocol, it can be configured to broadcast a message to your network indicating the VLAN groups it wants to join. When this switch receives these messages, it will automatically place the receiving port in the specified VLANs, and then forward the message to all other ports. When the message arrives at another switch that supports GVRP, it will also place the receiving port in the specified VLANs, and pass the message on to all other ports. VLAN requirements are propagated in this way throughout the network. This allows GVRP-compliant devices to be automatically configured for VLAN groups based solely on endstation requests.

To implement GVRP in a network, first add the host devices to the required VLANs (using the operating system or other application software), so that these VLANs can be propagated onto the network. For both the edge switches attached directly to these hosts, and core switches in the network, enable GVRP on the links between these devices. You should also determine security boundaries in the network and disable GVRP on the boundary ports to prevent advertisements from being propagated, or forbid those ports from joining restricted VLANs.

**Note:** If you have host devices that do not support GVRP, you should configure static or untagged VLANs for the switch ports connected to these devices (as described in “Adding Static Members to VLANs (VLAN Index)” on page 11-10). But you can still enable GVRP on these edge switches, as well as on the core switches in the network.

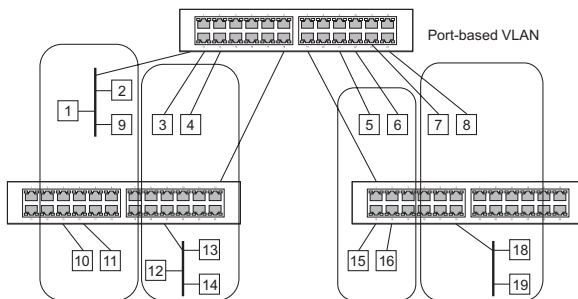

### Forwarding Tagged/Untagged Frames

If you want to create a small port-based VLAN for devices attached directly to a single switch, you can assign ports to the same untagged VLAN. However, to participate in a VLAN group that crosses several switches, you should create a VLAN for that group and enable tagging on all ports.

Ports can be assigned to multiple tagged or untagged VLANs. Each port on the switch is therefore capable of passing tagged or untagged frames. When forwarding a frame from this switch along a path that contains any VLAN-aware devices, the switch should include VLAN tags. When



forwarding a frame from this switch along a path that does not contain any VLAN-aware devices (including the destination host), the switch must first strip off the VLAN tag before forwarding the frame. When the switch receives a tagged frame, it will pass this frame onto the VLAN(s) indicated by the frame tag. However, when this switch receives an untagged frame from a VLAN-unaware device, it first decides where to forward the frame, and then inserts a VLAN tag reflecting the ingress port's default VID.

## Enabling or Disabling GVRP (Global Setting)

GARP VLAN Registration Protocol (GVRP) defines a way for switches to exchange VLAN information in order to register VLAN members on ports across the network. VLANs are dynamically configured based on join messages issued by host devices and propagated throughout the network. GVRP must be enabled to permit automatic VLAN registration, and to support VLANs which extend beyond the local switch. (Default: Disabled)

**Web** – Click VLAN, 802.1Q VLAN, GVRP Status. Enable or disable GVRP, click Apply



**GVRP Status**

---

☒ GVRP ☒ Enable

**Figure 11-1 Globally Enabling GVRP**

**CLI** – This example enables GVRP for the switch.

```
Console(config)#bridge-ext gvrp
Console(config)#
```

30-2

## Displaying Basic VLAN Information

The VLAN Basic Information page displays basic information on the VLAN type supported by the switch.

### Field Attributes

- **VLAN Version Number**<sup>12</sup> – The VLAN version used by this switch as specified in the IEEE 802.1Q standard.
- **Maximum VLAN ID** – Maximum VLAN ID recognized by this switch.
- **Maximum Number of Supported VLANs** – Maximum number of VLANs that can be configured on this switch.

**Web** – Click VLAN, 802.1Q VLAN, Basic Information.

VLAN Basic Information	
VLAN Version Number	1
Maximum VLAN ID	4093
Maximum Number of Supported VLANs	255

Figure 11-2 VLAN Basic Information

**CLI** – Enter the following command.

Console#show bridge-ext	30-3
Max support VLAN numbers:	256
Max support VLAN ID:	4093
Extended multicast filtering services:	No
Static entry individual port:	Yes
VLAN learning:	IVL
Configurable PVID tagging:	Yes
Local VLAN capable:	No
Traffic classes:	Enabled
Global GVRP status:	Disabled
GMRP:	Disabled
Console#	

12. Web Only.

## Displaying Current VLANs

The VLAN Current Table shows the current port members of each VLAN and whether or not the port supports VLAN tagging. Ports assigned to a large VLAN group that crosses several switches should use VLAN tagging. However, if you just want to create a small port-based VLAN for one or two switches, you can disable tagging.

### Command Attributes (Web)

- **VLAN ID** – ID of configured VLAN (1-4093).
- **Up Time at Creation** – Time this VLAN was created (i.e., System Up Time).
- **Status** – Shows how this VLAN was added to the switch.
  - **Dynamic GVRP**: Automatically learned via GVRP.
  - **Permanent**: Added as a static entry.
- **Egress Ports** – Shows all the VLAN port members.
- **Untagged Ports** – Shows the untagged VLAN port members.

**Web** – Click VLAN, 802.1Q VLAN, Current Table. Select any ID from the scroll-down list.

**VLAN Current Table**

VLAN ID:

Up Time at Creation: 0 d 0 h 0 min 7 s

Status:

Egress Ports	Untagged Ports
Unit1 Port1	Unit1 Port1
Unit1 Port2	Unit1 Port2
Unit1 Port3	Unit1 Port3
Unit1 Port4	Unit1 Port4
Unit1 Port6	Unit1 Port6
Unit1 Port7	Unit1 Port7
Unit1 Port8	Unit1 Port8
Unit1 Port9	Unit1 Port9

Figure 11-3 VLAN Current Table

### Command Attributes (CLI)

- **VLAN** – ID of configured VLAN (1-4093, no leading zeroes).
- **Type** – Shows how this VLAN was added to the switch.
  - **Dynamic**: Automatically learned via GVRP.
  - **Static**: Added as a static entry.
- **Name** – Name of the VLAN (1 to 32 characters).
- **Status** – Shows if this VLAN is enabled or disabled.
  - **Active**: VLAN is operational.
  - **Suspend**: VLAN is suspended; i.e., does not pass packets.
- **Ports / Channel groups** – Shows the VLAN interface members.

**CLI** – Current VLAN information can be displayed with the following command.

```
Console#show vlan id 130-16

VLAN ID:          1
Type:             Static
Name:             DefaultVlan
Status:           Active
Ports/Port Channels:  Eth1/ 1(S) Eth1/ 2(S) Eth1/ 3(S) Eth1/ 4(S) Eth1/ 5(S)
                     Eth1/ 6(S) Eth1/ 7(S) Eth1/ 8(S) Eth1/ 9(S) Eth1/10(S)
                     Eth1/11(S) Eth1/12(S) Eth1/13(S) Eth1/14(S) Eth1/15(S)
                     Eth1/16(S) Eth1/17(S) Eth1/18(S) Eth1/19(S) Eth1/20(S)
Console#          Eth1/21(S) Eth1/22(S) Eth1/23(S) Eth1/24(S)
```

## Creating VLANs

Use the VLAN Static List to create or remove VLAN groups. To propagate information about VLAN groups used on this switch to external network devices, you must specify a VLAN ID for each of these groups.

### Command Attributes

- **Current** – Lists all the current VLAN groups created for this system. Up to 255 VLAN groups can be defined. VLAN 1 is the default untagged VLAN.
- **New** – Allows you to specify the name and numeric identifier for a new VLAN group. (The VLAN name is only used for management on this system; it is not added to the VLAN tag.)

- **VLAN ID** – ID of configured VLAN (1-4093).
- **VLAN Name** – Name of the VLAN (1 to 32 characters).
- **Status (Web)** – Enables or disables the specified VLAN.
  - **Enable:** VLAN is operational.
  - **Disable:** VLAN is suspended; i.e., does not pass packets.
- **State (CLI)** – Enables or disables the specified VLAN.
  - **Active:** VLAN is operational.
  - **Suspend:** VLAN is suspended; i.e., does not pass packets.
- **Add** – Adds a new VLAN group to the current list.
- **Remove** – Removes a VLAN group from the current list. If any port is assigned to this group as untagged, it will be reassigned to VLAN group 1 as untagged.

**Web** – Click VLAN, 802.1Q VLAN, Static List. To create a new VLAN, enter the VLAN ID and VLAN name, mark the Enable checkbox to activate the VLAN, and then click Add.

VLAN Static List							
<b>Current:</b> <div>1, DefaultVlan, Enabled</div>	<b>New:</b> <table border="1"> <tr> <td>VLAN ID (1-4093)</td> <td>2</td> </tr> <tr> <td>VLAN Name</td> <td>R&amp;D</td> </tr> <tr> <td>Status</td> <td><input checked="" type="checkbox"/> Enabled</td> </tr> </table>	VLAN ID (1-4093)	2	VLAN Name	R&D	Status	<input checked="" type="checkbox"/> Enabled
VLAN ID (1-4093)	2						
VLAN Name	R&D						
Status	<input checked="" type="checkbox"/> Enabled						
<div> <div>&lt;&lt;Add</div> <div>Remove</div> </div>							

Figure 11-4 VLAN Static List - Creating VLANs

**CLI** – This example creates a new VLAN.

```
Console(config)#vlan database 30-7
Console(config-vlan)#vlan 2 name R&D media ethernet state active 30-8
Console(config-vlan)#end
Console#show vlan 30-16

VLAN ID: 1
Type: Static
Name: DefaultVlan
Status: Active
Ports/Port Channels: Eth1/ 1(S) Eth1/ 2(S) Eth1/ 3(S) Eth1/ 4(S) Eth1/ 5(S)
Eth1/ 6(S) Eth1/ 7(S) Eth1/ 8(S) Eth1/ 9(S) Eth1/10(S)
Eth1/11(S) Eth1/12(S) Eth1/13(S) Eth1/14(S) Eth1/15(S)
Eth1/16(S) Eth1/17(S) Eth1/18(S) Eth1/19(S) Eth1/20(S)
Eth1/21(S) Eth1/22(S) Eth1/23(S) Eth1/24(S)
:
:
VLAN ID: 2
Type: Static
Name: R&D
Status: Active
Ports/Port Channels:

Console#
```

### Adding Static Members to VLANs (VLAN Index)

Use the VLAN Static Table to configure port members for the selected VLAN index. Assign ports as tagged if they are connected to 802.1Q VLAN compliant devices, or untagged they are not connected to any VLAN-aware devices. Or configure a port as forbidden to prevent the switch from automatically adding it to a VLAN via the GVRP protocol.

- Notes:**
1. You can also use the VLAN Static Membership by Port page to configure VLAN groups based on the port index (page 13). However, note that this configuration page can only add ports to a VLAN as tagged members.
  2. VLAN 1 is the default untagged VLAN containing all ports on the switch, and can only be modified by first reassigning the default port VLAN ID as described under “Configuring VLAN Behavior for Interfaces” on page 11-14.

### Command Attributes

- **VLAN** – ID of configured VLAN (1-4093).
- **Name** – Name of the VLAN (1 to 32 characters).

- **Status** – Enables or disables the specified VLAN.
  - **Enable:** VLAN is operational.
  - **Disable:** VLAN is suspended; i.e., does not pass packets.
- **Port** – Port identifier.
- **Trunk** – Trunk identifier.
- **Membership Type** – Select VLAN membership for each interface by marking the appropriate radio button for a port or trunk:
  - **Tagged:** Interface is a member of the VLAN. All packets transmitted by the port will be tagged, that is, carry a tag and therefore carry VLAN or CoS information.
  - **Untagged:** Interface is a member of the VLAN. All packets transmitted by the port will be untagged, that is, not carry a tag and therefore not carry VLAN or CoS information. Note that an interface must be assigned to at least one group as an untagged port.
  - **Forbidden:** Interface is forbidden from automatically joining the VLAN via GVRP. For more information, see “Automatic VLAN Registration” on page 11-3.
  - **None:** Interface is not a member of the VLAN. Packets associated with this VLAN will not be transmitted by the interface.
- **Trunk Member** – Indicates if a port is a member of a trunk. To add a trunk to the selected VLAN, use the last table on the VLAN Static Table page.

**Web** – Click VLAN, 802.1Q VLAN, Static Table. Select a VLAN ID from the scroll-down list. Modify the VLAN name and status if required. Select the membership type by marking the appropriate radio button in the list of ports or trunks. Click Apply.

**VLAN Static Table**

VLAN: 2

NameR&D

Status☒ Enable

Port	Tagged	Untagged	Forbidden	None	Trunk Member
1	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	
2	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	
3	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	
4	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	
5	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	

Figure 11-5 VLAN Static Table - Adding Static Members

**CLI** – The following example adds tagged and untagged ports to VLAN 2.

```
Console(config)#interface ethernet 1/1                24-2
Console(config-if)#switchport allowed vlan add 2 tagged 30-14
Console(config-if)#exit
Console(config)#interface ethernet 1/2
Console(config-if)#switchport allowed vlan add 2 untagged
Console(config-if)#exit
Console(config)#interface ethernet 1/13
Console(config-if)#switchport allowed vlan add 2 tagged
Console(config-if)#
```



## Adding Static Members to VLANs (Port Index)

Use the VLAN Static Membership by Port menu to assign VLAN groups to the selected interface as a tagged member.

### Command Attributes

- **Interface** – Port or trunk identifier.
- **Member** – VLANs for which the selected interface is a tagged member.
- **Non-Member** – VLANs for which the selected interface is not a tagged member.

**Web** – Open VLAN, 802.1Q VLAN, Static Membership by Port. Select an interface from the scroll-down box (Port or Trunk). Click Query to display membership information for the interface. Select a VLAN ID, and then click Add to add the interface as a tagged member, or click Remove to remove the interface. After configuring VLAN membership for each interface, click Apply.

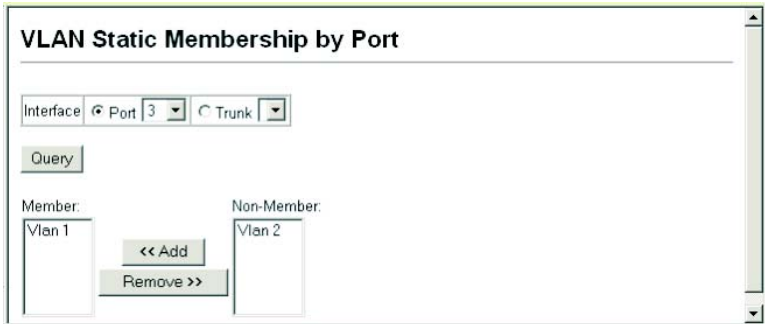


Figure 11-6 VLAN Static Membership by Port

**CLI** – This example adds Port 3 to VLAN 1 as a tagged port, and removes Port 3 from VLAN 2.

```
Console(config)#interface ethernet 1/3                24-2
Console(config-if)#switchport allowed vlan add 1 tagged 30-14
Console(config-if)#switchport allowed vlan remove 2
Console(config-if)#
```

### Configuring VLAN Behavior for Interfaces

You can configure VLAN behavior for specific interfaces, including the default VLAN identifier (PVID), accepted frame types, ingress filtering, GVRP status, and GARP timers.

#### Command Usage

- **GVRP** – GARP VLAN Registration Protocol defines a way for switches to exchange VLAN information in order to automatically register VLAN members on interfaces across the network.
- **GARP** – Group Address Registration Protocol is used by GVRP to register or deregister client attributes for client services within a bridged LAN. The default values for the GARP timers are independent of the media access method or data rate. These values should not be changed unless you are experiencing difficulties with GVRP registration/deregistration.

#### Command Attributes

- **PVID** – VLAN ID assigned to untagged frames received on the interface. (Default: 1)
  - If an interface is not a member of VLAN 1 and you assign its PVID to this VLAN, the interface will automatically be added to VLAN 1 as an untagged member. For all other VLANs, an interface must first be configured as an untagged member before you can assign its PVID to that group.
- **Acceptable Frame Type** – Sets the interface to accept all frame types, including tagged or untagged frames, or only tagged frames. When set to receive all frame types, any received frames that are untagged are assigned to the default VLAN. (Option: All, Tagged; Default: All)
- **Ingress Filtering** – Determines how to process frames tagged for VLANs for which the ingress port is not a member. (Default: Disabled)
  - Ingress filtering only affects tagged frames.

- If ingress filtering is disabled and a port receives frames tagged for VLANs for which it is not a member, these frames will be flooded to all other ports (except for those VLANs explicitly forbidden on this port).
- If ingress filtering is enabled and a port receives frames tagged for VLANs for which it is not a member, these frames will be discarded.
- Ingress filtering does not affect VLAN independent BPDU frames, such as GVRP or STP. However, they do affect VLAN dependent BPDU frames, such as GMRP.
- **GVRP Status** – Enables/disables GVRP for the interface. GVRP must be globally enabled for the switch before this setting can take effect. (See “Displaying Bridge Extension Capabilities” on page 4-6.) When disabled, any GVRP packets received on this port will be discarded and no GVRP registrations will be propagated from other ports. (Default: Disabled)
- **GARP Join Timer**<sup>13</sup> – The interval between transmitting requests/queries to participate in a VLAN group. (Range: 20-1000 centiseconds; Default: 20)
- **GARP Leave Timer**<sup>13</sup> – The interval a port waits before leaving a VLAN group. This time should be set to more than twice the join time. This ensures that after a Leave or LeaveAll message has been issued, the applicants can rejoin before the port actually leaves the group. (Range: 60-3000 centiseconds; Default: 60)
- **GARP LeaveAll Timer**<sup>13</sup> – The interval between sending out a LeaveAll query message for VLAN group participants and the port leaving the group. This interval should be considerably larger than the Leave Time to minimize the amount of traffic generated by nodes rejoining the group. (Range: 500-18000 centiseconds; Default: 1000)
- **Mode** – Indicates VLAN membership mode for an interface. (Default: Hybrid)
  - **1Q Trunk** – Specifies a port as an end-point for a VLAN trunk. A trunk is a direct link between two switches, so the port transmits tagged frames that identify the source VLAN. Note that frames

---

13. Timer settings must follow this rule: 2 x (join timer) < leave timer < leaveAll timer

belonging to the port's default VLAN (i.e., associated with the PVID) are also transmitted as tagged frames.

- **Hybrid** – Specifies a hybrid VLAN interface. The port may transmit tagged or untagged frames.
- **Trunk Member** – Indicates if a port is a member of a trunk. To add a trunk to the selected VLAN, use the last table on the VLAN Static Table page.

**Web** – Click VLAN, 802.1Q VLAN, Port Configuration or Trunk Configuration. Fill in the required settings for each interface, click Apply.

**VLAN Port Configuration**

Port	PVID	Acceptable Frame Type	Ingress Filtering	GVRP Status	GARP Join Timer (Centi Seconds) (20-1000)	GARP Leave Timer (Centi Seconds) (60-3000)	GARP LeaveAll Timer (Centi Seconds) (500-18000)	Mode	Trunk Member
1	1	ALL	<input type="checkbox"/> Enabled	<input type="checkbox"/> Enabled	20	60	1000	Hybrid	
2	1	ALL	<input type="checkbox"/> Enabled	<input type="checkbox"/> Enabled	20	60	1000	Hybrid	
3	3	Tagged	<input type="checkbox"/> Enabled	<input type="checkbox"/> Enabled	20	60	1000	Hybrid	
4	1	ALL	<input type="checkbox"/> Enabled	<input type="checkbox"/> Enabled	20	60	1000	Hybrid	
5	1	ALL	<input checked="" type="checkbox"/> Enabled	<input checked="" type="checkbox"/> Enabled	30	90	2000	Hybrid	
6	1	ALL	<input type="checkbox"/> Enabled	<input type="checkbox"/> Enabled	20	60	1000	Hybrid	

**Figure 11-7 VLAN Port Configuration**


**CLI** – This example sets port 3 to accept only tagged frames, assigns PVID 3 as the native VLAN ID, enables GVRP, sets the GARP timers, and then sets the switchport mode to hybrid.

```

Console(config)#interface ethernet 1/3      24-2
Console(config-if)#switchport acceptable-frame-types tagged  30-11
Console(config-if)#switchport ingress-filtering  30-12
Console(config-if)#switchport native vlan 3  30-13
Console(config-if)#switchport gvrp  30-4
Console(config-if)#garp timer join 20  30-5
Console(config-if)#garp timer leave 90
Console(config-if)#garp timer leaveall 2000
Console(config-if)#switchport mode hybrid  30-10
Console(config-if)#
    
```

## Configuring Private VLANs

Private VLANs provide port-based security and isolation between ports within the assigned VLAN. Data traffic on downlink ports can only be forwarded to, and from, uplink ports. (Note that private VLANs and normal VLANs can exist simultaneously within the same switch.)

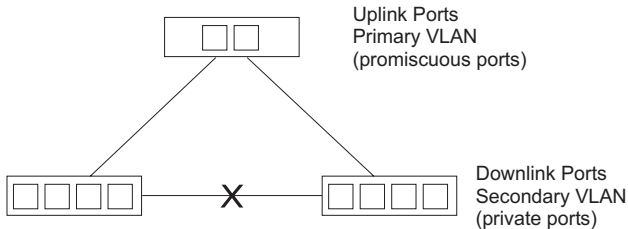

### Enabling Private VLANs

Use the Private VLAN Status page to enable/disable the Private VLAN function.

**Web** – Click VLAN, Private VLAN, Status. Select Enable or Disable from the scroll-down box, and click Apply.



Figure 11-8 Private VLAN Status

**CLI** – This example enables private VLANs.

```
Console(config) #pvlan
Console(config) #
```

30-17

## Configuring Uplink and Downlink Ports

Use the Private VLAN Link Status page to set ports as downlink or uplink ports. Ports designated as downlink ports can not communicate with any other ports on the switch except for the uplink ports. Uplink ports can communicate with any other ports on the switch and with any designated downlink ports.

**Web** – Click VLAN, Private VLAN, Link Status. Mark the ports that will serve as uplinks and downlinks for the private VLAN, then click Apply.



Port	Uplink	Downlink	None	Trunk Member
1	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	
2	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	
3	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	
4	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	
5	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	
6	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	
7	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	

Figure 11-9 Private VLAN Link Status

**CLI** – This configures port 3 as an uplink and port 5 and 6 as downlinks.

```
Console(config)#pvlan up-link ethernet 1/3 down-link
ethernet 1/5
Console(config)#pvlan up-link ethernet 1/3 down-link ethernet 1/6
Console(config)#end
Console#show pvlan
Private VLAN status: Enabled
Up-link port:
Ethernet 1/3
Down-link port:
Ethernet 1/5
Ethernet 1/6
Console#
```

## Configuring Protocol-Based VLANs

The network devices required to support multiple protocols cannot be easily grouped into a common VLAN. This may require non-standard devices to pass traffic between different VLANs in order to encompass all the devices participating in a specific protocol. This kind of configuration deprives users of the basic benefits of VLANs, including security and easy accessibility.

To avoid these problems, you can configure this switch with protocol-based VLANs that divide the physical network into logical VLAN groups for each required protocol. When a frame is received at a port, its VLAN membership can then be determined based on the protocol type being used by the inbound packets.

### Command Usage

To configure protocol-based VLANs, follow these steps:

1. First configure VLAN groups for the protocols you want to use (page 8). Although not mandatory, we suggest configuring a separate VLAN for each major protocol running on your network. Do not add port members at this time.
2. Create a protocol group for each of the protocols you want to assign to a VLAN using the Protocol VLAN Configuration page.
3. Then map the protocol for each interface to the appropriate VLAN using the Protocol VLAN Port Configuration page.

## Configuring Protocol Groups

Create a protocol group for one or more protocols.

### Command Attributes

- **Protocol Group ID** – Group identifier of this protocol group.  
(Range: 1-2147483647)

- **Frame Type**<sup>14</sup> – Frame type used by this protocol. (Options: Ethernet, RFC\_1042, LLC\_other)
- **Protocol Type** – The only option for the LLC\_other frame type is IPX\_raw. The options for all other frames types include: IP, IPv6, ARP, RARP, and user-defined (0801-FFFF hexadecimal).

**Web** – Click VLAN, Protocol VLAN, Configuration. Enter a protocol group ID, frame type and protocol type, then click Apply.

**Protocol VLAN Configuration**

**Current:**

Group 1, Ethernet.08 00  
Group 1, Ethernet.08 06

<<Add  
Remove

**New:**

Protocol Group ID (1-2147483647)

Frame Type: Ethernet

Protocol Type: ARP

☐ User-defined type (0801-FFFF, hexadecimal value)

Figure 11-10 Protocol VLAN Configuration

**CLI** – The following creates protocol group 1, and then specifies Ethernet frames with IP and ARP protocol types.

```
Console(config)#protocol-vlan protocol-group 1
add frame-type ethernet protocol-type ip
Console(config)#protocol-vlan protocol-group 1
add frame-type ethernet protocol-type arp
Console(config)#
```

30-20

Mapping Protocols to VLANs

Map a protocol group to a VLAN for each interface that will participate in the group.

Command Usage

- When creating a protocol-based VLAN, only assign interfaces using this configuration screen. If you assign interfaces using any of the other VLAN menus such as the VLAN Static Table (page 10) or VLAN Static

14. SNAP frame types are not supported by this switch due to hardware limitations.



Membership by Port menu (page 13), these interfaces will admit traffic of any protocol type into the associated VLAN.

- When a frame enters a port that has been assigned to a protocol VLAN, it is processed in the following manner:
  - If the frame is tagged, it will be processed according to the standard rules applied to tagged frames.
  - If the frame is untagged and the protocol type matches, the frame is forwarded to the appropriate VLAN.
  - If the frame is untagged but the protocol type does not match, the frame is forwarded to the default VLAN for this interface.

### Command Attributes

- **Interface** – Port or trunk identifier.
- **Protocol Group ID** – Group identifier of this protocol group.  
(Range: 1-2147483647)
- **VLAN ID** – VLAN to which matching protocol traffic is forwarded.  
(Range: 1-4093)

**Web** – Click VLAN, Protocol VLAN, Port Configuration. Select a port or trunk, enter a protocol group ID, the corresponding VLAN ID, and click Apply.

**Protocol Vlan Port Configuration**

Interface ☐ Port 1 ☐ Trunk

**Current:** Group 1, Vlan 3

**New:**

<<Add Remove

Protocol Group ID (1-2147483647)

Vlan ID

Figure 11-11 Protocol VLAN Port Configuration

## *VLAN CONFIGURATION*

**CLI** – The following maps the traffic entering Port 1 which matches the protocol type specified in protocol group 1 to VLAN 3.

```
Console(config)#interface ethernet 1/1  
Console(config-if)#protocol-vlan protocol-group 1 vlan 3      30-21  
Console(config-if)#
```

# CHAPTER 12

## CLASS OF SERVICE

---

Class of Service (CoS) allows you to specify which data packets have greater precedence when traffic is buffered in the switch due to congestion. This switch supports CoS with eight priority queues for each port. Data packets in a port's high-priority queue will be transmitted before those in the lower-priority queues. You can set the default priority for each interface, and configure the mapping of frame priority tags to the switch's priority queues.

### Layer 2 Queue Settings

#### Setting the Default Priority for Interfaces

You can specify the default port priority for each interface on the switch. All untagged packets entering the switch are tagged with the specified default port priority, and then sorted into the appropriate priority queue at the output port.

#### Command Usage

- This switch provides eight priority queues for each port. It uses Weighted Round Robin to prevent head-of-queue blockage.
- The default priority applies for an untagged frame received on a port set to accept all frame types (i.e., receives both untagged and tagged frames). This priority does not apply to IEEE 802.1Q VLAN tagged frames. If the incoming frame is an IEEE 802.1Q VLAN tagged frame, the IEEE 802.1p User Priority bits will be used.
- If the output port is an untagged member of the associated VLAN, these frames are stripped of all VLAN tags prior to transmission.

### Command Attributes

- **Default Priority**<sup>15</sup> – The priority that is assigned to untagged frames received on the specified interface. (Range: 0 - 7, Default: 0)
- **Number of Egress Traffic Classes** – The number of queue buffers provided for each port.

**Web** – Click Priority, Default Port Priority or Default Trunk Priority. Modify the default priority for any interface, then click Apply.

Port	Default Priority (0-7)	Number of Egress Traffic Classes	Trunk
1	0	8	
2	0	8	
3	5	8	
4	0	8	
5	0	8	
6	0	8	
7	0	8	
8	0	8	

Figure 12-1 Default Port Priority

15. CLI displays this information as “Priority for untagged traffic.”

**CLI** – This example assigns a default priority of 5 to port 3.

```

Console(config)#interface ethernet 1/3                24-2
Console(config-if)#switchport priority default 5      31-3
Console(config-if)#end
Console#show interfaces switchport ethernet 1/3       24-15
Information of Eth 1/3
Broadcast threshold:          Enabled, 500 packets/second
LACP status:                  Disabled
Ingress rate limit:           Disable, 1000M bits per second
Egress rate limit:            Disable, 1000M bits per second
VLAN membership mode:         Hybrid
Ingress rule:                 Disabled
Acceptable frame type:        All frames
Native VLAN:                  1
Priority for untagged traffic: 5
GVRP status:                  Disabled
Allowed VLAN:                 1(u),
Forbidden VLAN:
Console#

```

## Mapping CoS Values to Egress Queues

This switch processes Class of Service (CoS) priority tagged traffic by using eight priority queues for each port, with service schedules based on strict or Weighted Round Robin (WRR). Up to eight separate traffic priorities are defined in IEEE 802.1p. The default priority levels are assigned according to recommendations in the IEEE 802.1p standard as shown in the following table.

**Table 12-1 Mapping CoS Values to Egress Queues**

Priority	0	1	2	3	4	5	6	7
Queue	2	0	1	3	4	5	6	7

The priority levels recommended in the IEEE 802.1p standard for various network applications are shown in the following table. However, you can map the priority levels to the switch's output queues in any way that benefits application traffic for your own network.

**Table 12-2 CoS Priority Levels**

Priority Level	Traffic Type
1	Background
2	(Spare)
0 (default)	Best Effort
3	Excellent Effort
4	Controlled Load
5	Video, less than 100 milliseconds latency and jitter
6	Voice, less than 10 milliseconds latency and jitter
7	Network Control

**Command Attributes**

- **Priority** – CoS value. (Range: 0-7, where 7 is the highest priority)
- **Traffic Class**<sup>16</sup> – Output queue buffer. (Range: 0-7, where 7 is the highest CoS priority queue)

---

16. CLI shows Queue ID.

**Web** – Click Priority, Traffic Classes. Assign priorities to the traffic classes (i.e., output queues), then click Apply.

### Traffic Classes

---

Priority	Traffic Class
0	2 (0-7)
1	0 (0-7)
2	1 (0-7)
3	3 (0-7)
4	4 (0-7)
5	5 (0-7)
6	6 (0-7)
7	7 (0-7)

**Figure 12-2 Traffic Classes**

**CLI** – The following example shows how to change the CoS assignments to a one-to-one mapping.

```

Console(config)#interface ethernet 1/1                24-2
Console(config)#queue cos-map 0 0                    31-5
Console(config)#queue cos-map 1 1
Console(config)#queue cos-map 2 2
Console(config)#exit
Console#show queue cos-map                            31-8
Information of Eth 1/1
  CoS Value:      0 1 2 3 4 5 6 7
  Priority Queue: 0 1 2 3 4 5 6 7
Information of Eth 1/2
  CoS Value:      0 1 2 3 4 5 6 7
  Priority Queue: 0 1 2 3 4 5 6 7
:
:

```

\* Mapping specific values for CoS priorities is implemented as an interface configuration command, but any changes will apply to the all interfaces on the switch.

## Selecting the Queue Mode

You can set the switch to service the queues based on a strict rule that requires all traffic in a higher priority queue to be processed before lower priority queues are serviced, or use Weighted Round-Robin (WRR) queuing that specifies a relative weight of each queue. WRR uses a predefined relative weight for each queue that determines the percentage of service time the switch services each queue before moving on to the next queue. This prevents the head-of-line blocking that can occur with strict priority queuing.

### Command Attributes

- **WRR** - Weighted Round-Robin shares bandwidth at the egress ports by using scheduling weights 1, 2, 4, 6, 8, 10, 12, 14 for queues 0 through 7 respectively. (This is the default selection.)
- **Strict** - Services the egress queues in sequential order, transmitting all traffic in the higher priority queues before servicing lower priority queues.

**Web** – Click Priority, Queue Mode. Select Strict or WRR, then click Apply.



Figure 12-3 Queue Mode

**CLI** – The following sets the queue mode to strict priority service mode.

```
Console(config)#queue mode strict          31-2
Console(config)#exit
Console#show queue mode                    31-7

Queue mode: strict
Console#
```



## Setting the Service Weight for Traffic Classes

This switch uses the Weighted Round Robin (WRR) algorithm to determine the frequency at which it services each priority queue. As described in “Mapping CoS Values to Egress Queues” on page 3, the traffic classes are mapped to one of the eight egress queues provided for each port. You can assign a weight to each of these queues (and thereby to the corresponding traffic priorities). This weight sets the frequency at which each queue will be polled for service, and subsequently affects the response time for software applications assigned a specific priority value.

### Command Attributes

- **WRR Setting Table**<sup>17</sup> – Displays a list of weights for each traffic class (i.e., queue).
- **Weight Value** – Set a new weight for the selected traffic class. (Range: 1-15)

**Web** – Click Priority, Queue Scheduling. Select the interface, highlight a traffic class (i.e., output queue), enter a weight, then click Apply.

Queue Scheduling

Interface

☒ Port

1

☐ Trunk

Select

WRR Setting Table

Traffic Class 0 - weight 1

Traffic Class 1 - weight 2

Traffic Class 2 - weight 4

Traffic Class 3 - weight 6

Traffic Class 4 - weight 8

Weight Value

2

(1-15)

Figure 12-4 Queue Scheduling

17. CLI shows Queue ID.

**CLI** – The following example shows how to assign WRR weights to each of the priority queues.

```
Console(config)#queue bandwidth 1 3 5 7 9 11 13 15      31-4
Console(config)#exit
Console#show queue bandwidth                             31-7
Information of Eth 1/1
Queue ID  Weight
-----  -
0         1
1         3
2         5
3         7
4         9
5        11
6        13
7        15
Information of Eth 1/2
Queue ID  Weight
:
:
```

## Layer 3/4 Priority Settings

### Mapping Layer 3/4 Priorities to CoS Values

This switch supports several common methods of prioritizing layer 3/4 traffic to meet application requirements. Traffic priorities can be specified in the IP header of a frame, using the priority bits in the Type of Service (ToS) octet or the number of the TCP port. If priority bits are used, the ToS octet may contain three bits for IP Precedence or six bits for Differentiated Services Code Point (DSCP) service. When these services are enabled, the priorities are mapped to a Class of Service value by the switch, and the traffic then sent to the corresponding output queue.

Because different priority information may be contained in the traffic, this switch maps priority values to the output queues in the following manner:

- The precedence for priority mapping is IP Port Priority, IP Precedence or DSCP Priority, and then Default Port Priority.
- IP Precedence and DSCP Priority cannot both be enabled. Enabling one of these priority types will automatically disable the other.

## Selecting IP Precedence/DSCP Priority

The switch allows you to choose between using IP Precedence or DSCP priority. Select one of the methods or disable this feature.

### Command Attributes

- **Disabled** – Disables both priority services. (This is the default setting.)
- **IP Precedence** – Maps layer 3/4 priorities using IP Precedence.
- **IP DSCP** – Maps layer 3/4 priorities using Differentiated Services Code Point Mapping.

**Web** – Click Priority, IP Precedence/DSCP Priority Status. Select Disabled, IP Precedence or IP DSCP from the scroll-down menu, then click Apply.



**Figure 12-5 IP Precedence/DSCP Priority Status**

**CLI** – The following example enables IP Precedence service on the switch.

```
Console(config)#map ip precedence
Console(config)#
```

31-10

Mapping IP Precedence

The Type of Service (ToS) octet in the IPv4 header includes three precedence bits defining eight different priority levels ranging from highest priority for network control packets to lowest priority for routine traffic. The default IP Precedence values are mapped one-to-one to Class of Service values (i.e., Precedence value 0 maps to CoS value 0, and so forth). Bits 6 and 7 are used for network control, and the other bits for various application types. ToS bits are defined in the following table.

Table 12-3 Mapping IP Precedence

Priority Level	Traffic Type	Priority Level	Traffic Type
7	Network Control	3	Flash
6	Internetwork Control	2	Immediate
5	Critical	1	Priority
4	Flash Override	0	Routine

Command Attributes

- **IP Precedence Priority Table** – Shows the IP Precedence to CoS map.
- **Class of Service Value** – Maps a CoS value to the selected IP Precedence value. Note that “0” represents low priority and “7” represent high priority.

**Web** – Click Priority, IP Precedence Priority. Select an entry from the IP Precedence Priority Table, enter a value in the Class of Service Value field, and then click Apply.

**IP Precedence Priority**

IP Precedence Priority Table

- IP Precedence 0 - CoS 0
- IP Precedence 1 - CoS 1**
- IP Precedence 2 - CoS 2
- IP Precedence 3 - CoS 3
- IP Precedence 4 - CoS 4
- IP Precedence 5 - CoS 5
- IP Precedence 6 - CoS 6
- IP Precedence 7 - CoS 7

Class of Service Value (0-7)

[Restore Default](#)

**Figure 12-6 IP Precedence Priority**

**CLI** – The following example globally enables IP Precedence service on the switch, maps IP Precedence value 1 to CoS value 0 (on port 1), and then displays the IP Precedence settings.

```

Console(config)#map ip precedence                               31-10
Console(config)#interface ethernet 1/1                         24-2
Console(config-if)#map ip precedence 1 cos 0                   31-11
Console(config-if)#end
Console#show map ip precedence ethernet 1/1                    31-15
Precedence mapping status: disabled

Port      Precedence  COS
-----
Eth 1/ 1  0        0
Eth 1/ 1  1        0
Eth 1/ 1  2        2
Eth 1/ 1  3        3
Eth 1/ 1  4        4
Eth 1/ 1  5        5
Eth 1/ 1  6        6
Eth 1/ 1  7        7
Console#

```

\* Mapping specific values for IP Precedence is implemented as an interface configuration command, but any changes will apply to the all interfaces on the switch.

Mapping DSCP Priority

The DSCP is six bits wide, allowing coding for up to 64 different forwarding behaviors. The DSCP replaces the ToS bits, but it retains backward compatibility with the three precedence bits so that non-DSCP compliant, ToS-enabled devices, will not conflict with the DSCP mapping. Based on network policies, different kinds of traffic can be marked for different kinds of forwarding. The DSCP default values are defined in the following table. Note that all the DSCP values that are not specified are mapped to CoS value 0.

Table 12-4 Mapping DSCP Priority

IP DSCP Value	CoS Value
0	0
8	1
10, 12, 14, 16	2
18, 20, 22, 24	3
26, 28, 30, 32, 34, 36	4
38, 40, 42	5
48	6
46, 56	7

Command Attributes

- **DSCP Priority Table** – Shows the DSCP Priority to CoS map.
- **Class of Service Value** – Maps a CoS value to the selected DSCP Priority value. Note that “0” represents low priority and “7” represent high priority.

**Note:** IP DSCP settings apply to all interfaces.

**Web** – Click Priority, IP DSCP Priority. Select an entry from the DSCP table, enter a value in the Class of Service Value field, then click Apply.

**IP DSCP Priority**

DSCP Priority Table

DSCP 0 - CoS 0  
DSCP 1 - CoS 0  
DSCP 2 - CoS 0  
DSCP 3 - CoS 0  
DSCP 4 - CoS 0  
DSCP 5 - CoS 0  
DSCP 6 - CoS 0

Class of Service Value (0-7) 1

Restore Default

**Figure 12-7 IP DSCP Priority**

**CLI** – The following example globally enables DSCP Priority service on the switch, maps DSCP value 0 to CoS value 1 (on port 1), and then displays the DSCP Priority settings.

```

Console(config)#map ip dscp                                     31-12
Console(config)#interface ethernet 1/1                         24-2
Console(config-if)#map ip dscp 1 cos 0                         31-13
Console(config-if)#end
Console#show map ip dscp ethernet 1/1                          31-16
DSCP mapping status: disabled

Port          DSCP COS
-----
Eth 1/ 1      0    0
Eth 1/ 1      1    0
Eth 1/ 1      2    0
Eth 1/ 1      3    0
:
Eth 1/ 1      61   0
Eth 1/ 1      62   0
Eth 1/ 1      63   0
Console#
  
```

\* Mapping specific values for IP DSCP is implemented as an interface configuration command, but any changes will apply to the all interfaces on the switch.

## Mapping IP Port Priority

You can also map network applications to Class of Service values based on the IP port number (i.e., TCP/UDP port number) in the frame header. Some of the more common TCP service ports include: HTTP: 80, FTP: 21, Telnet: 23 and POP3: 110.

### Command Attributes

- **IP Port Priority Status** – Enables or disables the IP port priority.
- **IP Port Priority Table** – Shows the IP port to CoS map.
- **IP Port Number (TCP/UDP)** – Set a new IP port number.
- **Class of Service Value** – Sets a CoS value for a new IP port. Note that “0” represents low priority and “7” represent high priority.

**Note:** Up to 8 entries can be specified.

IP Port Priority settings apply to all interfaces.

**Web** – Click Priority, IP Port Priority Status. Set IP Port Priority Status to Enabled.



**IP Port Priority Status**

---

IP Port Priority Global Status ☐ Enabled

Figure 12-8 IP Port Priority Status



Click Priority, IP Port Priority. Enter the port number for a network application in the IP Port Number box and the new CoS value in the Class of Service box, and then click Apply.

**Figure 12-9 IP Port Priority**

**CLI** – The following example globally enables IP Port Priority service on the switch, maps HTTP traffic (on port 1) to CoS value 0, and then displays the IP Port Priority settings.

```

Console(config)#map ip port                                     31-9
Console(config)#interface ethernet 1/1                         24-2
Console(config-if)#map ip port 80 cos 0                       31-10
Console(config-if)#end
Console#show map ip port ethernet 1/5                         31-14
TCP port mapping status: disabled

  Port      Port no. COS
  -----
  Eth 1/ 1      80   0
Console#
    
```

\* Mapping specific values for IP Port Priority is implemented as an interface configuration command, but any changes will apply to the all interfaces on the switch.

## *CLASS OF SERVICE*

# CHAPTER 13

## QUALITY OF SERVICE

---

The commands described in this section are used to configure Quality of Service (QoS) classification criteria and service policies. Differentiated Services (DiffServ) provides policy-based management mechanisms used for prioritizing network resources to meet the requirements of specific traffic types on a per hop basis. Each packet is classified upon entry into the network based on access lists, IP Precedence, DSCP values, or VLAN lists. Using access lists allows you select traffic based on Layer 2, Layer 3, or Layer 4 information contained in each packet. Based on configured network policies, different kinds of traffic can be marked for different kinds of forwarding.

All switches or routers that access the Internet rely on class information to provide the same forwarding treatment to packets in the same class. Class information can be assigned by end hosts, or switches or routers along the path. Priority can then be assigned based on a general policy, or a detailed examination of the packet. However, note that detailed examination of packets should take place close to the network edge so that core switches and routers are not overloaded.

Switches and routers along the path can use class information to prioritize the resources allocated to different traffic classes. The manner in which an individual device handles traffic in the DiffServ architecture is called per-hop behavior. All devices along a path should be configured in a consistent manner to construct a consistent end-to-end QoS solution.

- Notes:**
1. You can configure up to 16 rules per Class Map. You can also include multiple classes in a Policy Map.
  2. You should create a Class Map before creating a Policy Map. Otherwise, you will not be able to select a Class Map from the Policy Rule Settings screen (see page 13-9).

## Configuring Quality of Service Parameters

To create a service policy for a specific category or ingress traffic, follow these steps:

1. Use the “Class Map” to designate a class name for a specific category of traffic.
2. Edit the rules for each class to specify a type of traffic based on an access list, a DSCP or IP Precedence value, or a VLAN.
3. Use the “Policy Map” to designate a policy name for a specific manner in which ingress traffic will be handled.
4. Add one or more classes to the Policy Map. Assign policy rules to each class by “setting” the QoS value to be assigned to the matching traffic class. The policy rule can also be configured to monitor the average flow and burst rate, and drop any traffic that exceeds the specified rate, or just reduce the DSCP service level for traffic exceeding the specified rate.
5. Use the “Service Policy” to assign a policy map to a specific interface.

### Configuring a Class Map

A class map is used for matching packets to a specified class.

#### Command Usage

- To configure a Class Map, follow these steps:
  - Open the Class Map page, and click Add Class.
  - When the Class Configuration page opens, fill in the “Class Name” field, and click Add.

- When the Match Class Settings page opens, specify type of traffic for this class based on an access list, a DSCP or IP Precedence value, or a VLAN, and click the Add button next to the field for the selected traffic criteria. You can specify up to 16 items to match when assigning ingress traffic to a class map.
- The class map is used with a policy map (page 13-6) to create a service policy (page 13-10) for a specific interface that defines packet classification, service tagging, and bandwidth policing. Note that one or more class maps can be assigned to a policy map.

## Command Attributes

### *Class Map*

- **Modify Name and Description** – Configures the name and a brief description of a class map. (Range: 1-16 characters for the name; 1-64 characters for the description)
- **Edit Rules** – Opens the “Match Class Settings” page for the selected class entry. Modify the criteria used to classify ingress traffic on this page.
- **Add Class** – Opens the “Class Configuration” page. Enter a class name and description on this page, and click Add to open the “Match Class Settings” page. Enter the criteria used to classify ingress traffic on this page.
- **Remove Class** – Removes the selected class.

### *Class Configuration*

- **Class Name** – Name of the class map. (Range: 1-16 characters)
- **Type** – Only one match command is permitted per class map, so the match-any field refers to the criteria specified by the lone match command.
- **Description** – A brief description of a class map. (Range: 1-64 characters)
- **Add** – Adds the specified class.
- **Back** – Returns to previous page with making any changes.

*Match Class Settings*

- **Class Name** – List of class maps.
- **ACL List** – Name of an access control list. Any type of ACL can be specified, including standard or extended IP ACLs and MAC ACLs. (Range: 1-16 characters)
- **IP DSCP** – A DSCP value. (Range: 0-63)
- **IP Precedence** – An IP Precedence value. (Range: 0-7)
- **VLAN** – A VLAN. (Range:1-4093)
- **Add** – Adds specified criteria to the class. Up to 16 items are permitted per class.
- **Remove** – Deletes the selected criteria from the class.

**Web** – Click QoS, DiffServ, then click Add Class to create a new class, or Edit Rules to change the rules of an existing class.

**Class Map**

Modify Name & Description			Edit Rules	Add Class	Remove Class
<input type="checkbox"/>	Class Name	Type	Description		
<input checked="" type="checkbox"/>	rd_class	match-any	R&D service for DSCP 3		

**Class Configuration**

Class Name: rd\_class

Type: match-any

Description: R&D service for DSCP 3

Add Back

**Match Class Settings**

Class Name : rd\_class

IP DSCP 3

Remove

ACL List	(none)	Add
IP DSCP (0-63)		Add
IP Precedence (0-7)		Add
VLAN (1-4093)		Add

**Figure 13-1 Configuring Class Maps**

**CLI** - This example creates a class map call “rd-class,” and sets it to match packets marked for DSCP service value 3.

```
Console(config) #class-map rd_class match-any      32-3
Console(config-cmap) #match ip dscp 3             32-4
Console(config-cmap) #
```

## Creating QoS Policies

This function creates a policy map that can be attached to multiple interfaces.

### Command Usage

- To configure a Policy Map, follow these steps:
  - Create a Class Map as described on page 13-2.
  - Open the Policy Map page, and click Add Policy.
  - When the Policy Configuration page opens, fill in the “Policy Name” field, and click Add.
  - When the Policy Rule Settings page opens, select a class name from the scroll-down list (Class Name field). Configure a policy for traffic that matches criteria defined in this class by setting the quality of service that an IP packet will receive (in the Action field), defining the maximum throughput and burst rate (in the Meter field), and the action that results from a policy violation (in the Exceed field). Then finally click Add to register the new policy.
- A policy map can contain multiple class statements that can be applied to the same interface with the Service Policy Settings (page 13-10). You can configure up to 64 policers (i.e., meters or class maps) for each of the following access list types: MAC ACL, IP ACL (including Standard ACL and Extended ACL), IPv6 Standard ACL, and IPv6 Extended ACL. This limitation applies to each switch chip (SMC8824M: ports 1-26, SMC8848M: ports 1-25, ports 26-50). Also, note that the maximum number of classes that can be applied to a policy map is 16. Policing is based on a token bucket, where bucket depth (i.e., the maximum burst before the bucket overflows) is by specified the “Burst” field, and the average rate tokens are removed from the bucket is by specified by the “Rate” option.
- After using the policy map to define packet classification, service tagging, and bandwidth policing, it must be assigned to a specific interface by a service policy (page 13-10) to take effect.



## Command Attributes

### *Policy Map*

- **Modify Name and Description** – Configures the name and a brief description of a policy map. (Range: 1-16 characters for the name; 1-64 characters for the description)
- **Edit Classes** – Opens the “Policy Rule Settings” page for the selected class entry. Modify the criteria used to service ingress traffic on this page.
- **Add Policy** – Opens the “Policy Configuration” page. Enter a policy name and description on this page, and click Add to open the “Policy Rule Settings” page. Enter the criteria used to service ingress traffic on this page.
- **Remove Policy** – Deletes a specified policy.

### *Policy Configuration*

- **Policy Name** — Name of policy map. (Range: 1-16 characters)
- **Description** – A brief description of a policy map. (Range: 1-64 characters)
- **Add** – Adds the specified policy.
- **Back** – Returns to previous page with making any changes.

### *Policy Rule Settings*

#### *- Class Settings -*

- **Class Name** – Name of class map.
- **Action** – Shows the service provided to ingress traffic by setting a CoS, DSCP, or IP Precedence value in a matching packet (as specified in Match Class Settings on page 13-2).
- **Meter** – The maximum throughput and burst rate.
  - **Rate (kbps)** – Rate in kilobits per second.
  - **Burst (byte)** – Burst in bytes.
- **Exceed Action** – Specifies whether the traffic that exceeds the specified rate will be dropped or the DSCP service level will be reduced.

- **Remove Class** – Deletes a class.

- *Policy Options* -

- **Class Name** – Name of class map.
- **Action** – Configures the service provided to ingress traffic by setting a CoS, DSCP, or IP Precedence value in a matching packet (as specified in Match Class Settings on page 13-2). (Range - CoS: 0-7, DSCP: 0-63, IP Precedence: 0-7, IPv6 DSCP: 0-63)
- **Meter** – Check this to define the maximum throughput, burst rate, and the action that results from a policy violation.
  - **Rate (kbps)** – Rate in kilobits per second. (Range: 1-100000 kbps or maximum port speed, whichever is lower)
  - **Burst (byte)** – Burst in bytes. (Range: 64-1522)
- **Exceed** – Specifies whether the traffic that exceeds the specified rate or burst will be dropped or the DSCP service level will be reduced.
  - **Set** – Decreases DSCP priority for out of conformance traffic. (Range: 0-63).
  - **Drop** – Drops out of conformance traffic.
- **Add** – Adds the specified criteria to the policy map.

**Web** – Click QoS, DiffServ, Policy Map to display the list of existing policy maps. To add a new policy map click Add Policy. To configure the policy rule settings click Edit Classes.

**Policy Map**

Modify Name & Description		Edit Classes	Add Policy	Remove Policy
<input type="checkbox"/>	Policy Name	Description		
<input type="checkbox"/>	rd_policy	R&D service for QoS		
<input type="checkbox"/>	rd_policy#2	R&D service for IP Precedence		

**Policy Configuration**

Policy Name:

Description:

**Policy Rule Settings**

Policy Name : rd\_policy#3

Class Name	Action	Meter		Exceed Action
		Rate (bps)	Burst (byte)	
<input type="text"/>				

Class Name:

Action:

☒ Meter

Rate (1-1000000):  bps

Burst (64-1522):  byte

Exceed:

**Figure 13-2 Configuring Policy Maps**

**CLI** – This example creates a policy map called “rd-policy,” sets the average bandwidth the 1 Mbps, the burst rate to 1522 bps, and the response to reduce the DSCP value for violating packets to 0.

Console(config)#policy-map rd_policy#3	32-5
Console(config-pmap)#class rd_class#3	32-6
Console(config-pmap-c)#set ip dscp 4	32-8
Console(config-pmap-c)#police 100000 1522 exceed-action set ip dscp 0	32-9
Console(config-pmap-c)#	

## Attaching a Policy Map to Ingress Queues

This function binds a policy map to the ingress queue of a particular interface.

### Command Usage

- You must first define a class map, then define a policy map, and finally bind the service policy to the required interface.
- You can only bind one policy map to an interface.
- The current firmware does not allow you to bind a policy map to an egress queue.

### Command Attributes

- **Ports** – Specifies a port.
- **Ingress** – Applies the rule to ingress traffic.
- **Enabled** – Check this to enable a policy map on the specified port.
- **Policy Map** – Select the appropriate policy map from the scroll-down box.

**Web** – Click QoS, DiffServ, Service Policy Settings. Check Enabled and choose a Policy Map for a port from the scroll-down box, then click Apply.

Ports	Ingress
1	<input type="checkbox"/> Enabled rd_policy
2	<input type="checkbox"/> Enabled rd_policy
3	<input type="checkbox"/> Enabled rd_policy
4	<input type="checkbox"/> Enabled rd_policy
5	<input checked="" type="checkbox"/> Enabled rd_policy#3
6	<input type="checkbox"/> Enabled rd_policy

**Figure 13-3 Service Policy Settings**

**CLI** - This example applies a service policy to an ingress interface.

Console(config)#interface ethernet 1/5	24-2
Console(config-if)#service-policy input rd_policy#3	32-10
Console(config-if)#	


## *QUALITY OF SERVICE*

# CHAPTER 14

## MULTICAST FILTERING

---

Multicasting is used to support real-time applications such as videoconferencing or streaming audio. A multicast server does not have to establish a separate connection with each client. It merely broadcasts its service to the network, and any hosts that want to receive the multicast register with their local multicast switch/router. Although this approach reduces the network overhead required by a multicast server, the broadcast traffic must be carefully pruned at every multicast switch/router it passes through to ensure that traffic is only passed on to the hosts which subscribed to this service.

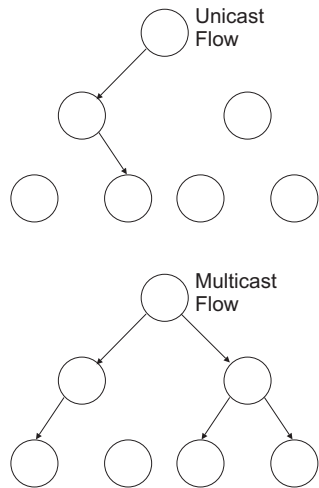

This switch can use Internet Group Management Protocol (IGMP) to filter multicast traffic. IGMP Snooping can be used to passively monitor or “snoop” on exchanges between attached hosts and an IGMP-enabled device, most commonly a multicast router. In this way, the switch can discover the ports that want to join a multicast group, and set its filters accordingly.

If there is no multicast router attached to the local subnet, multicast traffic and query messages may not be received by the switch. In this case (Layer 2) IGMP Query can be used to actively ask the attached hosts if they want to receive a specific multicast service. IGMP Query thereby identifies the ports containing hosts requesting to join the service and sends data out to

those ports only. It then propagates the service request up to any neighboring multicast switch/router to ensure that it will continue to receive the multicast service.

The purpose of IP multicast filtering is to optimize a switched network's performance, so multicast packets will only be forwarded to those ports containing multicast group hosts or multicast routers/switches, instead of flooding traffic to all ports in the subnet (VLAN).

## Layer 2 IGMP (Snooping and Query)

**IGMP Snooping and Query** – If multicast routing is not supported on other switches in your network, you can use IGMP Snooping and IGMP Query (page 14-2) to monitor IGMP service requests passing between multicast clients and servers, and dynamically configure the switch ports which need to forward multicast traffic.

**Static IGMP Router Interface** – If IGMP snooping cannot locate the IGMP querier, you can manually designate a known IGMP querier (i.e., a multicast router/switch) connected over the network to an interface on your switch (page 14-6). This interface will then join all the current multicast groups supported by the attached router/switch to ensure that multicast traffic is passed to all appropriate interfaces within the switch.

**Static IGMP Host Interface** – For multicast applications that you need to control more carefully, you can manually assign a multicast service to specific interfaces on the switch (page 14-9).

## Configuring IGMP Snooping and Query Parameters

You can configure the switch to forward multicast traffic intelligently. Based on the IGMP query and report messages, the switch forwards traffic only to the ports that request multicast traffic. This prevents the switch from broadcasting the traffic to all ports and possibly disrupting network performance.



## Command Usage

- **IGMP Snooping** — This switch can passively snoop on IGMP Query and Report packets transferred between IP multicast routers/switches and IP multicast host groups to identify the IP multicast group members. It simply monitors the IGMP packets passing through it, picks out the group registration information, and configures the multicast filters accordingly.
- **IGMP Querier** — A router, or multicast-enabled switch, can periodically ask their hosts if they want to receive multicast traffic. If there is more than one router/switch on the LAN performing IP multicasting, one of these devices is elected “querier” and assumes the role of querying the LAN for group members. It then propagates the service requests on to any upstream multicast switch/router to ensure that it will continue to receive the multicast service.

**Note:** Multicast routers use this information, along with a multicast routing protocol such as DVMRP or PIM, to support IP multicasting across the Internet.

## Command Attributes

- **IGMP Status** — When enabled, the switch will monitor network traffic to determine which hosts want to receive multicast traffic. This is also referred to as IGMP Snooping. (Default: Enabled)
- **Act as IGMP Querier** — When enabled, the switch can serve as the Querier, which is responsible for asking hosts if they want to receive multicast traffic. (Default: Disabled)
- **IGMP Query Count** — Sets the maximum number of queries issued for which there has been no response before the switch takes action to drop a client from the multicast group. (Range: 2-10, Default: 2)
- **IGMP Query Interval** — Sets the frequency at which the switch sends IGMP host-query messages. (Range: 60-125 seconds, Default: 125)
- **IGMP Report Delay** — Sets the time between receiving an IGMP Report for an IP multicast address on a port before the switch sends an

IGMP Query out of that port and removes the entry from its list. (Range: 5-25 seconds, Default: 10)

- **IGMP Query Timeout** — The time the switch waits after the previous querier stops before it considers the router port (i.e., the interface which had been receiving query packets) to have expired. (Range: 300-500 seconds, Default: 300)
- **IGMP Version** — Sets the protocol version for compatibility with other devices on the network. (Range: 1-2; Default: 2)

**Notes:** 1. All systems on the subnet must support the same version.  
2. Some attributes are only enabled for IGMPv2, including IGMP Report Delay and IGMP Query Timeout.

**Web** – Click IGMP Snooping, IGMP Configuration. Adjust the IGMP settings as required, and then click Apply. (The default settings are shown below.)

IGMP Configuration	
IGMP Status	<input checked="" type="checkbox"/> Enabled
Act as IGMP Querier	<input type="checkbox"/> Enabled
IGMP Query Count (2-10)	2
IGMP Query Interval (60-125)	125 seconds
IGMP Report Delay (5-25)	10 seconds
IGMP Query Timeout (300-500)	300 seconds
IGMP Version (1,2)	2

Figure 14-1 IGMP Configuration

**CLI** – This example modifies the settings for multicast filtering, and then displays the current status.

```
Console(config)#ip igmp snooping 33-2
Console(config)#ip igmp snooping querier 33-6
Console(config)#ip igmp snooping query-count 10 33-7
Console(config)#ip igmp snooping query-interval 100 33-8
Console(config)#ip igmp snooping query-max-response-time 20 33-9
Console(config)#ip igmp snooping router-port-expire-time 300 33-10
Console(config)#ip igmp snooping version 2 33-3
Console(config)#exit
Console#show ip igmp snooping 33-4
Service status: Enabled
Querier status: Enabled
Query count: 10
Query interval: 100 sec
Query max response time: 20 sec
Router port expire time: 300 sec
IGMP snooping version: Version 2
Console#
```

## Displaying Interfaces Attached to a Multicast Router

Multicast routers that are attached to ports on the switch use information obtained from IGMP, along with a multicast routing protocol such as DVMRP or PIM, to support IP multicasting across the Internet. These routers may be dynamically discovered by the switch or statically assigned to an interface on the switch.

You can use the Multicast Router Port Information page to display the ports on this switch attached to a neighboring multicast router/switch for each VLAN ID.

### Command Attributes

- **VLAN ID** – ID of configured VLAN (1-4093).
- **Multicast Router List** – Multicast routers dynamically discovered by this switch or those that are statically assigned to an interface on this switch.

**Web** – Click IGMP Snooping, Multicast Router Port Information. Select the required VLAN ID from the scroll-down list to display the associated multicast routers.

**Multicast Router Port Information**

VLAN ID: 1

Multicast Router List:

- Unit1 Port11, Static

**Figure 14-2 Multicast Router Port Information**

**CLI** – This example shows that Port 11 has been statically configured as a port attached to a multicast router.

```

Console#show ip igmp snooping mrouter vlan 1                               33-12
VLAN M'cast Router Port Type
-----
1                               Eth 1/11 Static
Console#

```

## Specifying Static Interfaces for a Multicast Router


Depending on your network connections, IGMP snooping may not always be able to locate the IGMP querier. Therefore, if the IGMP querier is a known multicast router/ switch connected over the network to an interface (port or trunk) on your switch, you can manually configure the interface (and a specified VLAN) to join all the current multicast groups supported by the attached router. This can ensure that multicast traffic is passed to all the appropriate interfaces within the switch.

### Command Attributes

- **Interface** – Activates the Port or Trunk scroll down list.
- **VLAN ID** – Selects the VLAN to propagate all multicast traffic coming from the attached multicast router.

- **Unit** – Stack unit. (Range: 1-8)
- **Port** or **Trunk** – Specifies the interface attached to a multicast router.

**Web** – Click IGMP Snooping, Static Multicast Router Port Configuration. Specify the interfaces attached to a multicast router, indicate the VLAN which will forward all the corresponding multicast traffic, and then click Add. After you have finished adding interfaces to the list, click Apply.

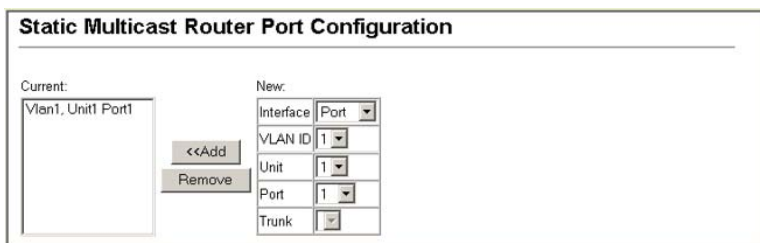

The image shows a web-based configuration window titled "Static Multicast Router Port Configuration". It is divided into two main sections: "Current:" and "New:". The "Current:" section contains a list box with the entry "Vlan1, Unit1 Port1". Below this list are two buttons: "<<Add" and "Remove". The "New:" section contains a form with several fields: "Interface" (a dropdown menu showing "Port"), "VLAN ID" (a dropdown menu showing "1"), "Unit" (a dropdown menu showing "1"), "Port" (a dropdown menu showing "1"), and "Trunk" (a checkbox that is currently unchecked).

Figure 14-3 Static Multicast Router Port Configuration

**CLI** – This example configures port 11 as a multicast router port within VLAN 1.

```
Console(config)#ip igmp snooping vlan 1 mrouter ethernet 1/11 33-11
Console(config)#exit
Console#show ip igmp snooping mrouter vlan 1                               33-12
VLAN M'cast Router Port Type
-----
    1                Eth 1/11  Static
Console#
```

## Displaying Port Members of Multicast Services

You can display the port members associated with a specified VLAN and multicast service.

### Command Attribute

- **VLAN ID** – Selects the VLAN for which to display port members.
- **Multicast IP Address** – The IP address for a specific multicast service.
- **Multicast Group Port List** – Shows the interfaces that have already been assigned to the selected VLAN to propagate a specific multicast service.

**Web** – Click IGMP Snooping, IP Multicast Registration Table. Select a VLAN ID and the IP address for a multicast service from the scroll-down lists. The switch will display all the interfaces that are propagating this multicast service.

IP Multicast Registration Table

VLAN ID:

1

Multicast IP Address:

224.1.1.12

Multicast Group Port List:

Unit1 Port1, User

Figure 14-4 IP Multicast Registration Table

**CLI** – This example displays all the known multicast services supported on VLAN 1, along with the ports propagating the corresponding services. The Type field shows if this entry was learned dynamically or was statically configured.

Console#show mac-address-table multicast vlan 1				33-5
VLAN	M'cast	IP addr.	Member ports	Type
-----				
1	224.1.1.12	Eth1/12	USER	
1	224.1.1.2.3	Eth1/12	IGMP	
Console#				

## Assigning Ports to Multicast Services

Multicast filtering can be dynamically configured using IGMP Snooping and IGMP Query messages as described in “Configuring IGMP Snooping and Query Parameters” on page 14-2. For certain applications that require tighter control, you may need to statically configure a multicast service on the switch. First add all the ports attached to participating hosts to a common VLAN, and then assign the multicast service to that VLAN group.

### Command Usage

- Static multicast addresses are never aged out.
- When a multicast address is assigned to an interface in a specific VLAN, the corresponding traffic can only be forwarded to ports within that VLAN.

### Command Attribute

- **Interface** – Activates the Port or Trunk scroll down list.
- **VLAN ID** – Selects the VLAN to propagate all multicast traffic coming from the attached multicast router/switch.
- **Multicast IP** – The IP address for a specific multicast service
- **Unit** – Stack unit. (Range: 1-8)
- **Port or Trunk** – Specifies the interface attached to a multicast router/switch.

**Web** – Click IGMP Snooping, IGMP Member Port Table. Specify the interface attached to a multicast service (via an IGMP-enabled switch or multicast router), indicate the VLAN that will propagate the multicast service, specify the multicast IP address, and click Add. After you have completed adding ports to the member list, click Apply.

**IGMP Member Port Table**

IGMP Member Port List:

VLAN 1, 224.1.1.12, Unit 1, Port 1

<<Add Remove

New Static IGMP Member Port:

Interface	Port
VLAN ID	1
Multicast IP	
Unit	1
Port	1
Trunk	

**Figure 14-5 IGMP Member Port Table**

**CLI** – This example assigns a multicast address to VLAN 1, and then displays all the known multicast services supported on VLAN 1.

```
Console(config)#ip igmp snooping vlan 1 static 224.1.1.12      33-3
 ethernet 1/12
Console(config)#exit
Console#show mac-address-table multicast vlan 1                 33-5
 VLAN M'cast IP addr. Member ports Type
-----
 1      224.1.1.12      Eth1/12      USER
 1      224.1.1.2.3     Eth1/12      IGMP
```



# CHAPTER 15

## DOMAIN NAME SERVICE

---

The Domain Naming System (DNS) service on this switch allows host names to be mapped to IP addresses using static table entries or by redirection to other name servers on the network. When a client device designates this switch as a DNS server, the client will attempt to resolve host names into IP addresses by forwarding DNS queries to the switch, and waiting for a response.

You can manually configure entries in the DNS table used for mapping domain names to IP addresses, configure default domain names, or specify one or more name servers to use for domain name to address translation.

### Configuring General DNS Service Parameters

#### Command Usage

- To enable DNS service on this switch, first configure one or more name servers, and then enable domain lookup status.
- To append domain names to incomplete host names received from a DNS client (i.e., not formatted with dotted notation), you can specify a default domain name or a list of domain names to be tried in sequential order.
- If there is no domain list, the default domain name is used. If there is a domain list, the default domain name is not used.
- When an incomplete host name is received by the DNS service on this switch and a domain name list has been specified, the switch will work through the domain list, appending each domain name in the list to the host name, and checking with the specified name servers for a match.

- When more than one name server is specified, the servers are queried in the specified sequence until a response is received, or the end of the list is reached with no response.
- Note that if all name servers are deleted, DNS will automatically be disabled.

### **Command Attributes**

- **Domain Lookup Status** – Enables DNS host name-to-address translation.
- **Default Domain Name**<sup>18</sup> – Defines the default domain name appended to incomplete host names. (Range: 1-64 alphanumeric characters)
- **Domain Name List**<sup>18</sup> – Defines a list of domain names that can be appended to incomplete host names. (Range: 1-64 alphanumeric characters. 1-5 names)
- **Name Server List** – Specifies the address of one or more domain name servers to use for name-to-address resolution. (Range: 1-6 IP addresses)

---

18. Do not include the initial dot that separates the host name from the domain name.

**Web** – Select DNS, General Configuration. Set the default domain name or list of domain names, specify one or more name servers to use to use for address resolution, enable domain lookup status, and click Apply.

### General Configuration

---

**Domain Lookup Status:** ☒ Enable

**Default Domain Name:**

**Domain Name List:**

Current:

sample.com.uk

sample.com.jp

<< Add

Remove

New:

Domain Name

**Name Server List:**

Current:

192.168.1.55

10.1.0.55

<< Add

Remove

New:

Name Server IP

Figure 15-1 DNS General Configuration

**CLI** - This example sets a default domain name and a domain list. However, remember that if a domain list is specified, the default domain name is not used.

```
Console(config)#ip domain-name sample.com 34-4
Console(config)#ip domain-list sample.com.uk 34-5
Console(config)#ip domain-list sample.com.jp
Console(config)#ip name-server 192.168.1.55 10.1.0.55 34-6
Console(config)#ip domain-lookup 34-7
Console#show dns 34-9
Domain Lookup Status:
  DNS enabled
Default Domain Name:
  .sample.com
Domain Name List:
  .sample.com.uk
  .sample.com.jp
Name Server List:
  192.168.1.55
  10.1.0.55
Console#
```

## Configuring Static DNS Host to Address Entries

You can manually configure static entries in the DNS table that are used to map domain names to IP addresses.

### Command Usage

- Static entries may be used for local devices connected directly to the attached network, or for commonly used resources located elsewhere on the network.
- Servers or other network devices may support one or more connections via multiple IP addresses. If more than one IP address is associated with a host name in the static table or via information returned from a name server, a DNS client can try each address in succession, until it establishes a connection with the target device.

### Field Attributes

- **Host Name** – Name of a host device that is mapped to one or more IP addresses. (Range: 1-64 characters)
- **IP Address** – Internet address(es) associated with a host name. (Range: 1-8 addresses)
- **Alias** – Displays the host names that are mapped to the same address(es) as a previously configured entry.

**Web** – Select DNS, Static Host Table. Enter a host name and one or more corresponding addresses, then click Apply.

Host Name	IP Address	Alias		
rd5	10.1.0.55 192.168.1.55	rd6	Delete	Edit

Clear

**Add Static Host:**

Host Name	
IP Address 1	
IP Address 2	
IP Address 3	
IP Address 4	
IP Address 5	
IP Address 6	
IP Address 7	
IP Address 8	

Add

Figure 15-2 DNS Static Host Table

**CLI** - This example maps two address to a host name, and then configures an alias host name for the same addresses.

```
Console(config)#ip host rd5 192.168.1.55 10.1.0.55      34-2
Console(config)#ip host rd6 10.1.0.55
Console#show hosts                                     34-8

Hostname
  rd5
Inet address
  10.1.0.55 192.168.1.55
Alias
  1.rd6
Console#
```

## Displaying the DNS Cache

You can display entries in the DNS cache that have been learned via the designated name servers.

### Field Attributes

- **No** – The entry number for each resource record.
- **Flag** – The flag is always “4” indicating a cache entry and therefore unreliable.
- **Type** – This field includes CNAME which specifies the canonical or primary name for the owner, and ALIAS which specifies multiple domain names which are mapped to the same IP address as an existing entry.
- **IP** – The IP address associated with this record.
- **TTL** – The time to live reported by the name server.
- **Domain** – The domain name associated with this record.

**Web** – Select DNS, Cache.

Cache					
No	Flag	Type	IP	TTL	Domain
0	4	CNAME	207.46.134.222	51	www.microsoft.akadns.net
1	4	CNAME	207.46.134.190	51	www.microsoft.akadns.net
2	4	CNAME	207.46.134.155	51	www.microsoft.akadns.net
3	4	CNAME	207.46.249.222	51	www.microsoft.akadns.net
4	4	CNAME	207.46.249.27	51	www.microsoft.akadns.net
5	4	ALIAS	POINTER TO:4	51	www.microsoft.com
6	4	CNAME	207.46.68.27	71964	msn.com.tw
7	4	ALIAS	POINTER TO:6	71964	www.msn.com.tw
8	4	CNAME	65.54.131.192	605	passportimages.com
9	4	ALIAS	POINTER TO:8	605	www.passportimages.com
10	4	CNAME	165.193.72.190	87	global.msads.net

**Figure 15-3 DNS Cache**

**CLI** - This example displays all the resource records learned from the designated name servers.

Console#show dns cache						34-9
NO	FLAG	TYPE	IP	TTL	DOMAIN	
0	4	CNAME	207.46.134.222	51	www.microsoft.akadns.net	
1	4	CNAME	207.46.134.190	51	www.microsoft.akadns.net	
2	4	CNAME	207.46.134.155	51	www.microsoft.akadns.net	
3	4	CNAME	207.46.249.222	51	www.microsoft.akadns.net	
4	4	CNAME	207.46.249.27	51	www.microsoft.akadns.net	
5	4	ALIAS	POINTER TO:4	51	www.microsoft.com	
6	4	CNAME	207.46.68.27	71964	msn.com.tw	
7	4	ALIAS	POINTER TO:6	71964	www.msn.com.tw	
8	4	CNAME	65.54.131.192	605	passportimages.com	
9	4	ALIAS	POINTER TO:8	605	www.passportimages.com	
10	4	CNAME	165.193.72.190	87	global.msads.net	
Console#						





# CHAPTER 16

## DYNAMIC HOST CONFIGURATION PROTOCOL


---

Dynamic Host Configuration Protocol (DHCP) can dynamically allocate an IP address and other configuration information to network clients when they boot up. If a subnet does not already include a BOOTP or DHCP server, you can relay DHCP client requests to a DHCP server on another subnet, or configure the DHCP server on this switch to support that subnet.

When configuring the DHCP server on this switch, you can configure an address pool for each unique IP interface, or manually assign a static IP address to clients based on their hardware address or client identifier. The DHCP server can provide the host's IP address, domain name, gateway router and DNS server, information about the host's boot image including the TFTP server to access for download and the name of the boot file, or boot information for NetBIOS Windows Internet Naming Service (WINS).

## Configuring DHCP Relay Service

This switch supports DHCP relay service for attached host devices. If DHCP relay is enabled, and this switch sees a DHCP request broadcast, it inserts its own IP address into the request

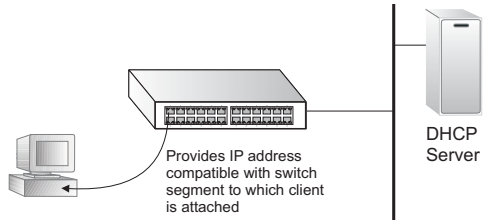

so that the DHCP server will know the subnet where the client is located. Then, the switch forwards the packet to the DHCP server. When the server receives the DHCP request, it allocates a free IP address for the DHCP client from its defined scope for the DHCP client's subnet, and sends a DHCP response back to the DHCP relay agent (i.e., this switch). This switch then broadcasts the DHCP response received from the server to the client.

### Command Usage

You must specify the IP address for at least one DHCP server. Otherwise, the switch's DHCP relay agent will not forward client requests to a DHCP server.

### Command Attributes

- **VLAN ID** – ID of configured VLAN.
- **VLAN Name** – Name of the VLAN.
- **Server IP Address** – Addresses of DHCP servers to be used by the switch's DHCP relay agent in order of preference.
- **Restart DHCP Relay** – Use this button to enable or re-initialize DHCP relay service.

**Web** – Click DHCP, Relay Configuration. Enter up to five IP addresses for any VLAN, then click Restart DHCP Relay to start the relay service.

### Relay Configuration

Note: DHCP relay configuration will be disabled if an active DHCP server is detected on the same network segment.

VLAN ID	VLAN Name	Server IP Address				
1	DefaultVlan	10.1.0.99	0.0.0.0	0.0.0.0	0.0.0.0	0.0.0.0

Restart DHCP Relay

**Figure 16-1 DHCP Relay Configuration**


**CLI** – This example specifies one DHCP relay server for VLAN 1, and enables the relay service.

Console(config)#interface vlan 1	24-2
Console(config-if)#ip dhcp relay server 10.1.0.99	35-5
Console(config-if)#ip dhcp restart relay	35-4
Console(config-if)#	

## Configuring the DHCP Server

This switch includes a Dynamic Host Configuration Protocol (DHCP) server that can assign temporary IP addresses to any attached host requesting service. It can also provide other network settings such as the domain name, default gateway, Domain Name Servers (DNS), Windows Internet Naming Service (WINS) name servers, or information on the bootup file for the host device to download.

Addresses can be assigned to clients from a common address pool configured for a specific IP interface on this switch, or fixed addresses can be assigned to hosts based on the client identifier code or MAC address.

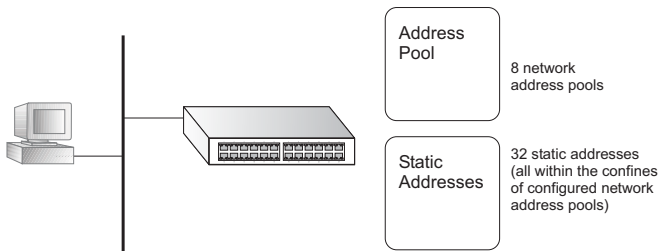

### Command Usage

- First configure any excluded addresses, including the address for this switch.
- Then configure address pools for the network interfaces. You can configure up to 8 network address pools. You can also manually bind an address to a specific client if required. However, any fixed addresses must fall within the range of an existing network address pool. You can configure up to 32 fixed host addresses (i.e., entering one address per pool).
- If the DHCP server is running, you must disable it and then reenable it to implement any configuration changes. This can be done on the DHCP, Server, General page.

## Enabling the Server, Setting Excluded Addresses

Enable the DHCP Server and specify the IP addresses that it should not be assigned to clients.

### Command Attributes

- **DHCP Server** – Enables or disables the DHCP server on this switch. (Default: Disabled)
- **Excluded Addresses** – Specifies IP addresses that the DHCP server should not assign to DHCP clients. You can specify a single address or an address range.
- **New** (Excluded Addresses) – New entries for excluded addresses can be specified as a single address or an address range.

**Note:** Be sure you exclude the address for this switch and other key network devices.

**Web** – Click DHCP, Server, General. Enter a single address or an address range, and click Add.

The screenshot shows the 'General' configuration page for the DHCP server. At the top, a note states: 'Note: If the DHCP server is running, you must restart it to implement any configuration changes.' Below this, the 'DHCP Server' status is 'Enabled (Restart)' with a checked checkbox. The 'Excluding Address' section contains a list box with the entry '10.1.0.250 ~ 10.1.0.254'. To the right of the list box are 'Add' and 'Remove' buttons. Further right is the 'New:' section, which includes 'Low:' and 'High:' input fields, with the 'High' field marked as '(optional)'. At the bottom left, the 'Entry Count' is displayed as '1'.

Figure 16-2 DHCP Server General Configuration

**CLI** – This example enables the DHCP and sets an excluded address range.

Console(config)#service dhcp	35-7
Console(config)#ip dhcp excluded-address 10.1.0.250 10.1.0.254	35-8
Console#	

## Configuring Address Pools

You must configure IP address pools for each IP interface that will provide addresses to attached clients via the DHCP server.

### Command Usage

- First configure address pools for the network interfaces. Then you can manually bind an address to a specific client if required. However, note that any static host address must fall within the range of an existing network address pool. You can configure up to 8 network address pools, and up to 32 manually bound host address pools (i.e., one address per host pool).
- When a client request is received, the switch first checks for a network address pool matching the gateway where the request originated (i.e., if the request was forwarded by a relay server). If there is no gateway in the client request (i.e., the request was not forwarded by a relay server), the switch searches for a network pool matching the interface through which the client request was received. It then searches for a manually configured host address that falls within the matching network pool. If no manually configured host address is found, it assigns an address from the matching network address pool. However, if no matching address pool is found the request is ignored.
- When searching for a manual binding, the switch compares the client identifier and then the hardware address for DHCP clients. Since BOOTP clients cannot transmit a client identifier, you must configure a hardware address for this host type. If no manual binding has been specified for a host entry with a hardware address or client identifier, the switch will assign an address from the first matching network pool.

- If the subnet mask is not specified for network or host address pools, the class A, B, or C natural mask is used (see page 17-34). The DHCP server assumes that all host addresses are available. You can exclude subsets of the address space by using the IP Excluded Address field on the DHCP Server General configuration page.

## Command Attributes

### *Creating a New Address Pool*

- **Pool Name** – A string or integer. (Range: 1-8 characters)

### *Setting the Network Parameters*

- **IP** – The IP address of the DHCP address pool.
- **Subnet Mask** – The bit combination that identifies the network (or subnet) and the host portion of the DHCP address pool.

### *Setting the Host Parameters*

- **IP** – The IP address of the DHCP address pool.
- **Subnet Mask** – Specifies the network mask of the client.
- **Hardware Address** – Specifies the MAC address and protocol used on the client. (Options: Ethernet, IEEE802, FDDI; Default: Ethernet)
- **Client-Identifier** – A unique designation for the client device, either a text string (1-15 characters) or hexadecimal value.

### *Setting the Optional Parameters*

- **Default Router** – The IP address of the primary and alternate gateway router. The IP address of the router should be on the same subnet as the client.
- **DNS Server** – The IP address of the primary and alternate DNS server. DNS servers must be configured for a DHCP client to map host names to IP addresses.
- **Nethios Server** – IP address of the primary and alternate NetBIOS Windows Internet Naming Service (WINS) name server used for Microsoft DHCP clients.

- **Netbios Type** – NetBIOS node type for Microsoft DHCP clients. (Options: Broadcast, Hybrid, Mixed, Peer to Peer; Default: Hybrid)
- **Domain Name** – The domain name of the client. (Range: 1-32 characters)
- **Bootfile** – The default boot image for a DHCP client. This file should be placed on the Trivial File Transfer Protocol (TFTP) server specified as the Next Server.
- **Next Server** – The IP address of the next server in the boot process, which is typically a Trivial File Transfer Protocol (TFTP) server.
- **Lease Time** – The duration that an IP address is assigned to a DHCP client. (Options: fixed period, Infinite; Default: 1 day)

## Examples

### *Creating a New Address Pool*

**Web** – Click DHCP, Server, Pool Configuration. Specify a pool name, then click Add.

**Pool Configuration**

---

Note: If the DHCP server is running, you must restart it to implement any configuration changes.

Pool Name:

Pool Name	Type	IP	Mask	Configure	Delete
tps	Network	10.1.0.0	255.255.255.0	<input type="button" value="Configure"/>	<input type="button" value="Delete"/>

Entry Count: 1

**Figure 16-3 DHCP Server Pool Configuration**

**CLI** – This example adds an address pool and enters DHCP pool configuration mode.

```
Console(config)#ip dhcp pool mgr
Console(config-dhcp)#
```

35-8



## Configuring a Network Address Pool

**Web** – Click DHCP, Server, Pool Configuration. Click the Configure button for any entry. Click the radio button for “Network.” Enter the IP address and subnet mask for the network pool. Configure the optional parameters such as gateway server and DNS server. Then click Apply.

Pool Name : tps >> [Go back to Pool Configure](#)

☒ Network

IP: 10.1.0.0  
Subnet Mask: 255.255.255.0

☐ Host

IP:   
Subnet Mask:   
Hardware Address: Ethernet   
Client-Identifier: Hex

<<Option>>

Default Router: 10.1.0.253  
DNS Server: 10.2.3.4  
Netbios Server: 10.1.0.33  
Netbios type: Hybrid  
Domain Name: example.com  
Bootfile: wme.bat  
Next Server: 10.1.0.21  
Lease time: ☐ day ☐ hour ☐ min  
☒ Infinite

**Figure 16-4 DHCP Server Pool - Network Configuration**

**CLI** – This example configures a network address pool.

```

Console(config)#ip dhcp pool tps 35-8
Console(config-dhcp)#network 10.1.0.0 255.255.255.0 35-9
Console(config-dhcp)#default-router 10.1.0.253 35-10
Console(config-dhcp)#dns-server 10.2.3.4 35-11
Console(config-dhcp)#netbios-name-server 10.1.0.33 35-13
Console(config-dhcp)#netbios-node-type hybrid 35-14
Console(config-dhcp)#domain-name example.com 35-11
Console(config-dhcp)#bootfile wme.bat 35-13
Console(config-dhcp)#next-server 10.1.0.21 35-12
Console(config-dhcp)#lease infinite 35-15
Console(config-dhcp)#

```

*Configuring a Host Address Pool*

**Web** – Click DHCP, Server, Pool Configuration. Click the Configure button for any entry. Click the radio button for “Host.” Enter the IP address, subnet mask, and hardware address for the client device. Configure the optional parameters such as gateway server and DNS server. Then click Apply.

Pool Name : mgr >>

[Go back to Pool Configure](#)

☐ Network

IP

Subnet Mask

☒ Host

IP10.1.0.19

Subnet Mask255.255.255.0

Hardware Address00-10-B5-51-69-F7

Ethernet

Client-IdentifierbearText

<<Option>>

Default Router10.1.0.253

DNS Server10.2.3.4

Netbios Server10.1.0.33

Netbios typeHybrid

Domain Nameexample.com

Bootfilepc9.bat

Next Server10.1.0.21

Lease timeInfinite

Default Router2

DNS Server2

Netbios Server2

(optional)

(optional)

(optional)

**Figure 16-5 DHCP Server Pool - Host Configuration**

**CLI** – This example configures a host address pool.

Console(config)#ip dhcp pool mgr	35-8
Console(config-dhcp)#host 10.1.0.19 255.255.255.0	35-16
Console(config-dhcp)#hardware-address 00-e0-29-94-34-28	
ethernet	35-18
Console(config-dhcp)#client-identifier text bear	35-17
Console(config-dhcp)#default-router 10.1.0.253	35-10
Console(config-dhcp)#dns-server 10.2.3.4	35-11
Console(config-dhcp)#netbios-name-server 10.1.0.33	35-13
Console(config-dhcp)#netbios-node-type hybrid	35-14
Console(config-dhcp)#domain-name example.com	35-11
Console(config-dhcp)#bootfile wme.bat	35-13
Console(config-dhcp)#next-server 10.1.0.21	35-12
Console(config-dhcp)#lease infinite	35-15
Console(config-dhcp)#	

## Displaying Address Bindings

You can display the host devices which have acquired an IP address from this switch's DHCP server.

### Command Attributes

- **IP Address** – IP address assigned to host.
- **Mac Address** – MAC address of host.
- **Lease time** – Duration that this IP address can be used by the host.
- **Start time** – Time this address was assigned by the switch.
- **Delete** – Clears this binding to the host. This command is normally used after modifying the address pool, or after moving DHCP service to another device.
- **Entry Count** – Number of hosts that have been given addresses by the switch.

**Note:** More than one DHCP server may respond to a service request by a host. In this case, the host generally accepts the first address assigned by any DHCP server.

**Web** – Click DHCP, Server, IP Binding. You may use the Delete button to clear an address from the DHCP server's database.

IP Binding				
IP Address	Mac Address	Lease time	Start time	Delete
10.1.0.20	00-00-E8-98-73-21	2147483647	63829031	Delete
Entry Count: 1				

**Figure 16-6 DHCP Server - IP Binding**

**CLI** – This example displays the current binding, and then clears all automatic binding.

```
Console#show ip dhcp binding 35-20
      IP                MAC                Lease Time      Start
-----
  10.1.0.20 00-00-e8-98-73-21      86400 Dec 25 08:01:57 2002
Console#clear ip dhcp binding * 35-19
Console#
```

# CHAPTER 17

## IP ROUTING

---


### Overview

This switch supports IP routing and routing path management via static routing definitions (page 17-26) and dynamic routing such as RIP (page 17-30). When IP routing is enabled (page 17-31), this switch acts as a wire-speed router, passing traffic between VLANs using different IP interfaces, and routing traffic to external IP networks. However, when the switch is first booted, no default routing is defined. As with all traditional routers, the routing functions must first be configured to work.

### Initial Configuration

In the default configuration, all ports belong to the same VLAN and the switch provides only Layer 2 functionality. Therefore, you should first create VLANs for each unique user group or application traffic (page 11-8), assign all ports that belong to the same group to these VLANs (page 11-10), and then assign an IP interface to each VLAN (page 17-7). By separating the network into different VLANs, it can be partitioned into subnetworks that are disconnected at Layer 2. Network traffic within the same subnet is still switched using Layer 2 switching. And the VLANs can now be interconnected (only as required) with Layer 3 switching.

Each VLAN represents a virtual interface to Layer 3. You just need to provide the network address for each virtual interface, and the traffic between different subnetworks will be routed by Layer 3 switching.

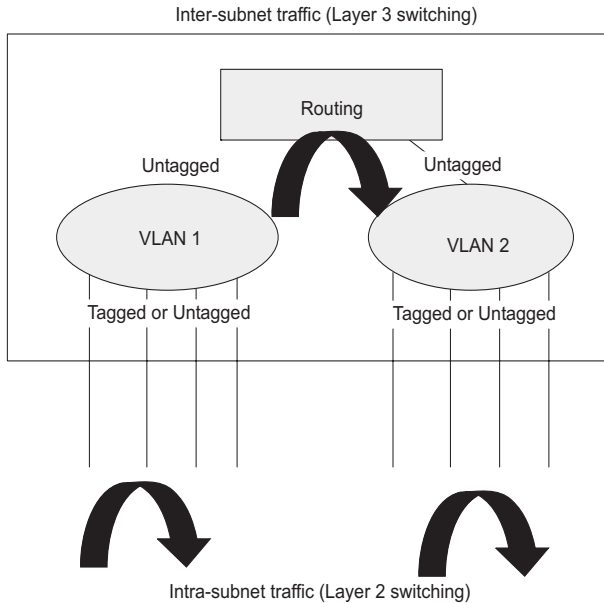

## IP Switching

IP Switching (or packet forwarding) encompasses tasks required to forward packets for both Layer 2 and Layer 3, as well as traditional routing. These functions include:

- Layer 2 forwarding (switching) based on the Layer 2 destination MAC address
- Layer 3 forwarding (routing):
  - Based on the Layer 3 destination address
  - Replacing destination/source MAC addresses for each hop
  - Incrementing the hop count
  - Decrementing the time-to-live
  - Verifying and recalculating the Layer 3 checksum

If the destination node is on the same subnetwork as the source network, then the packet can be transmitted directly without the help of a router. However, if the MAC address is not yet known to the switch, an Address Resolution Protocol (ARP) packet with the destination IP address is broadcast to get the destination MAC address from the destination node. The IP packet can then be sent directly with the destination MAC address.

If the destination belongs to a different subnet on this switch, the packet can be routed directly to the destination node. However, if the packet belongs to a subnet not included on this switch, then the packet should be sent to a router (with the MAC address of the router itself used as the destination MAC address, and the destination IP address of the destination node). The router will then forward the packet to the destination node via the correct path. The router can also use the ARP protocol to find out the MAC address of the destination node of the next router as necessary.

**Note:** In order to perform IP switching, the switch should be recognized by other network nodes as an IP router, either by setting it as the default gateway or by redirection from another router via the ICMP process.

When the switch receives an IP packet addressed to its own MAC address, the packet follows the Layer 3 routing process. The destination IP address is checked against the Layer 3 address table. If the address is not already there, the switch broadcasts an ARP packet to all the ports on the destination VLAN to find out the destination MAC address. After the MAC address is discovered, the packet is reformatted and sent out to the destination. The reformat process includes decreasing the Time-To-Live (TTL) field of the IP header, recalculating the IP header checksum, and replacing the destination MAC address with either the MAC address of the destination node or that of the next hop router.

When another packet destined to the same node arrives, the destination MAC can be retrieved directly from the Layer 3 address table; the packet is then reformatted and sent out the destination port. IP switching can be done at wire-speed when the destination address entry is already in the Layer 3 address table.

If the switch determines that a frame must be routed, the route is calculated only during setup. Once the route has been determined, all packets in the current flow are simply switched or forwarded across the chosen path. This takes advantage of the high throughput and low latency of switching by enabling the traffic to bypass the routing engine once the path calculation has been performed.

### Routing Path Management

Routing Path Management involves the determination and updating of all the routing information required for packet forwarding, including:

- Handling routing protocols
- Updating the routing table
- Updating the Layer 3 switching database

### Routing Protocols

The switch supports both static and dynamic routing.

- Static routing requires routing information to be stored in the switch either manually or when a connection is set up by an application outside the switch.
- Dynamic routing uses a routing protocol to exchange routing information, calculate routing tables, and respond to changes in the status or loading of the network.

The switch supports RIP and RIP-2 dynamic routing protocols.

#### *RIP and RIP-2 Dynamic Routing Protocols*

The RIP protocol is the most widely used routing protocol. RIP uses a distance-vector-based approach to routing. Routes are determined on the basis of minimizing the distance vector, or hop count, which serves as a rough estimate of transmission cost. Each router broadcasts its advertisement every 30 seconds, together with any updates to its routing table. This allows all routers on the network to learn consistent tables of next hop links which lead to relevant subnets.



*Non-IP Protocol Routing*

The switch supports IP routing only. Non-IP protocols such as IPX and Appletalk cannot be routed by this switch, and will be confined within their local VLAN group unless bridged by an external router.

To coexist with a network built on multilayer switches, the subnetworks for non-IP protocols must follow the same logical boundary as that of the IP subnetworks. A separate multi-protocol router can then be used to link the subnetworks by connecting to one port from each available VLAN on the network.

## Basic IP Interface Configuration

To allow routing between different IP subnets, you must enable IP Routing as described in this section. You also need to define a VLAN for each IP subnet that will be connected directly to this switch. Note that you must first create a VLAN as described under “Creating VLANs” on page 11-8 before configuring the corresponding subnet. Remember that if you need to manage the switch in-band then you must define the IP subnet address for at least one VLAN.

### Command Attributes

- **IP Routing Status** – Configures the switch to operate as a Layer 2 switch or as a multilayer routing switch. (Options: Disable this field to restrict operation to Layer 2 switching; enable it to allow multilayer operation at either Layer 2 or 3 as required.)
  - This command affects both static and dynamic unicast routing.
  - If IP routing is enabled, all IP packets are routed using either static routing or dynamic routing via RIP, and other packets for all non-IP protocols (e.g., NetBuei, NetWare or AppleTalk) are switched based on MAC addresses. If IP routing is disabled, all packets are switched, with filtering and forwarding decisions based strictly on MAC addresses.

- **Default Gateway** – The routing device to which the switch will pass packets for all unknown subnets; i.e., packets that do not match any routing table entry. (Valid IP addresses consist of four numbers, 0 to 255, separated by periods.)

**Web** - Click IP, General, Global Settings. Set IP Routing Status to Disabled to restrict operation to Layer 2, or Enabled to allow multilayer switching, specify the default gateway which will be forwarded packets for all unknown subnets, and click Apply.

**Global Settings**

---

IP Routing Status	<input checked="" type="checkbox"/> Enabled
Default Gateway	<input type="text" value="10.1.0.254"/>

---

Clear default gateway

**Figure 17-1 IP Global Settings**

**CLI** - This example enables IP routing, and sets the default gateway.

Console(config)#ip routing	37-2
Console(config)#ip route default 10.1.0.254	37-3

## Configuring IP Routing Interfaces

You can specify the IP subnets connected to this router by manually assigning an IP address to each VLAN, or by using the RIP dynamic routing protocol to identify routes that lead to other interfaces by exchanging protocol messages with other routers on the network.

### Command Usage

- If this router is directly connected to end node devices (or connected to end nodes via shared media) that will be assigned to a specific subnet, then you must create a router interface for each VLAN that will support routing. The router interface consists of an IP address and subnet mask. This interface address defines both the network number to which the router interface is attached and the router's host number on that network. In other words, a router interface address defines the network and subnetwork numbers of the segment that is connected to that interface, and allows you to send IP packets to or from the router.
- Before you configure any network interfaces on this router, you should first create a VLAN for each unique user group, or for each network application and its associated users. Then assign the ports associated with each of these VLANs.

### Command Attributes

- **VLAN** – ID of configured VLAN (1-4093).
- **IP Address Mode** – Specifies whether the IP address for this interface is statically assigned, or obtained from a network address server. (Options: Static, DHCP - Dynamic Host Configuration Protocol, BOOTP - Boot Protocol; Default: Static)
  - If Static address type is selected, then you must also specify whether the IP address is the primary IP address on the VLAN or a secondary IP address. An interface can have only one primary IP address, but can have multiple secondary IP addresses. In other words, you will need to specify secondary addresses if more than one IP subnet can be accessed via this interface.

- If DHCP/BOOTP is enabled, IP will not function until a reply has been received from the address server. Requests will be broadcast periodically by the router for an IP address. (DHCP/BOOTP values include the IP address and subnet mask.)
- **IP Address** – Address of the VLAN interface. Valid IP addresses consist of four numbers, 0 to 255, separated by periods.
- **Subnet Mask** – This mask identifies the host address bits used for routing to specific subnets.

**Web** - Click IP, General, Routing Interface. Specify an IP interface for each VLAN that will support routing to other subnets. First specify a primary address, and click Set IP Configuration. If you need to assign secondary addresses, enter these addresses one at a time, and click Set IP Configuration after entering each address.

### Routing Interface

VLAN	<input type="text" value="1"/>
IP Address Mode	<input type="text" value="Static"/> <input type="text" value="Primary"/>
IP Address	<input type="text" value="10.1.0.253"/>
Subnet Mask	<input type="text" value="255.255.255.0"/>

Figure 17-2 IP Routing Interface

**CLI** - This example sets a primary IP address for VLAN 1, and then adds a secondary IP address for a different subnet also attached to this router interface.

```
Console(config)#interface vlan 1
Console(config-if)#ip address 10.1.0.253 255.255.255.0          36-4
Console(config-if)#ip address 10.1.9.253 255.255.255.0 secondary
Console(config-if)#
```

## Address Resolution Protocol

If IP routing is enabled (page 17-5), the router uses its routing tables to make routing decisions, and uses Address Resolution Protocol (ARP) to forward traffic from one hop to the next. ARP is used to map an IP address to a physical layer (i.e., MAC) address. When an IP frame is received by this router (or any standards-based router), it first looks up the MAC address corresponding to the destination IP address in the ARP cache. If the address is found, the router writes the MAC address into the appropriate field in the frame header, and forwards the frame on to the next hop. IP traffic passes along the path to its final destination in this way, with each routing device mapping the destination IP address to the MAC address of the next hop toward the recipient, until the packet is delivered to the final destination.

If there is no entry for an IP address in the ARP cache, the router will broadcast an ARP request packet to all devices on the network. The ARP request contains the following fields similar to that shown in this example:


**Table 17-1 Address Resolution Protocol**

destination IP address	10.1.0.19
destination MAC address	?
source IP address	10.1.0.253
source MAC address	00-00-ab-cd-00-00

When devices receive this request, they discard it if their address does not match the destination IP address in the message. However, if it does match, they write their own hardware address into the destination MAC address field and send the message back to the source hardware address. When the source device receives a reply, it writes the destination IP address and corresponding MAC address into its cache, and forwards the IP traffic on to the next hop. As long as this entry has not timed out, the router will be able forward traffic directly to the next hop for this destination without having to broadcast another ARP request.

### Proxy ARP

When a node in the attached subnetwork does not have routing or a default gateway configured, Proxy ARP can be used to forward ARP requests to a remote subnetwork. When the router receives an ARP request for a remote network and Proxy ARP is enabled, it determines if it has the best route to the remote network, and then answers the ARP request by sending its own MAC address to the requesting node. That node then sends traffic to the router, which in turn uses its own routing table to forward the traffic to the remote destination.

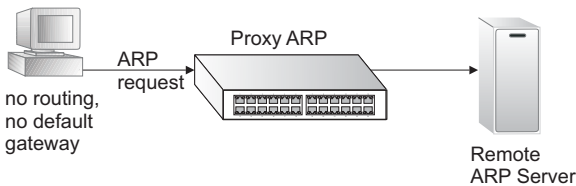

## Basic ARP Configuration

You can use the ARP General configuration menu to specify the timeout for ARP cache entries, or to enable Proxy ARP for specific VLAN interfaces.

### Command Usage

- The aging time determines how long dynamic entries remain the cache. If the timeout is too short, the router may tie up resources by repeating ARP requests for addresses recently flushed from the table.
- End stations that require Proxy ARP must view the entire network as a single network. These nodes must therefore use a smaller subnet mask than that used by the router or other relevant network devices.
- Extensive use of Proxy ARP can degrade router performance because it may lead to increased ARP traffic and increased search time for larger ARP address tables.

### Command Attributes

- **Timeout** – Sets the aging time for dynamic entries in the ARP cache. (Range: 300 - 86400 seconds; Default: 1200 seconds or 20 minutes)
- **Proxy ARP** – Enables or disables Proxy ARP for specified VLAN interfaces.

**Web** - Click IP, ARP, General. Set the timeout to a suitable value for the ARP cache, enable Proxy ARP for subnetworks that do not have routing or a default gateway, and click Apply.

**General**

---

Timeout	
Set Timeout (300 - 86400 sencodes)	<input type="text" value="900"/>
Proxy ARP	
VLAN	<input type="text" value="2"/>
Status	<input checked="" type="checkbox"/> Enabled

**Figure 17-3 ARP General**

**CLI** - This example sets the ARP cache timeout for 15 minutes (i.e., 900 seconds), and enables Proxy ARP for VLAN 3.

Console(config)#arp-timeout 900	36-46
Console(config)#interface vlan 3	24-2
Console(config-if)#ip proxy-arp	36-48
Console(config-if)#	



## Configuring Static ARP Addresses

For devices that do not respond to ARP requests, traffic will be dropped because the IP address cannot be mapped to a physical address. If this occurs, you can manually map an IP address to the corresponding physical address in the ARP.

### Command Usage

- You can define up to 128 static entries in the ARP cache.
- Static entries will not be aged out or deleted when power is reset. You can only remove a static entry via the configuration interface.

### Command Attributes

- **IP Address** – IP address statically mapped to a physical MAC address. (Valid IP addresses consist of four numbers, 0 to 255, separated by periods.)
- **MAC Address** – MAC address statically mapped to the corresponding IP address. (Valid MAC addresses are hexadecimal numbers in the format: xx-xx-xx-xx-xx-xx.)
- **Entry Count** – The number of static entries in the ARP cache.

**Web** - Click IP, ARP, Static Addresses. Enter the IP address, the corresponding MAC address, and click Apply.

**Static Addresses**

---

**Current:**

IP address, MAC address, Interface

10.1.0.11, 00-11-22-33-44-55, 1
---------------------------------

**New:**

IP Address	<input type="text"/>
MAC Address	<input type="text"/>

Entry Count: 1

Figure 17-4 ARP Static Addresses

**CLI** - This example sets a static entry for the ARP cache.

```
Console(config)#arp 10.1.0.11 00-11-22-33-44-55  
Console(config)#
```

36-45

## Displaying Dynamically Learned ARP Entries

The ARP cache contains entries that map IP addresses to the corresponding physical address. Most of these entries will be dynamically learned through replies to broadcast messages. You can display all of the dynamic entries in the ARP cache, change specific dynamic entries into static entries, or clear all dynamic entries from the cache.


### Command Attributes

- **IP Address** – IP address of a dynamic entry in the cache.
- **MAC Address** – MAC address mapped to the corresponding IP address.
- **Interface** – VLAN interface associated with the address entry.
- **Dynamic to Static**<sup>19</sup> – Changes a selected dynamic entry to a static entry.
- **Clear All**<sup>19</sup> – Deletes all dynamic entries from the ARP cache.
- **Entry Count** – The number of dynamic entries in the ARP cache.

---

19. These buttons take effect immediately. You are not prompted to confirm the action.

**Web** - Click IP, ARP, Dynamic Addresses. You can use the buttons provided to change a dynamic entry to a static entry, or to clear all dynamic entries in the cache.

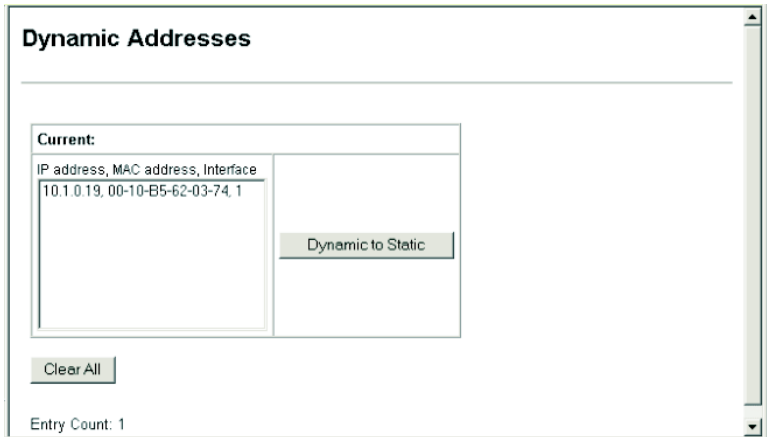

**Figure 17-5 ARP Dynamic Addresses**

**CLI** - This example shows all entries in the ARP cache.

```

Console#show arp                                     36-47
Arp cache timeout: 1200 (seconds)

  IP Address      MAC Address      Type      Interface
  -----
    10.1.0.0      ff-ff-ff-ff-ff-ff      other          1
    10.1.0.11      00-11-22-33-44-55      static         1
    10.1.0.12      01-02-03-04-05-06      static         1
    10.1.0.19      00-10-b5-62-03-74      dynamic         1
    10.1.0.253     00-00-ab-cd-00-00      other          1
    10.1.0.255     ff-ff-ff-ff-ff-ff      other          1

Total entry : 6
Console#clear arp-cache                             36-47
This operation will delete all the dynamic entries in ARP Cache.
Are you sure to continue this operation (y/n)?y
Console#

```

## Displaying Local ARP Entries

The ARP cache also contains entries for local interfaces, including subnet, host, and broadcast addresses.

### Command Attributes

- **IP Address** – IP address of a local entry in the cache.
- **MAC Address** – MAC address mapped to the corresponding IP address.
- **Interface** – VLAN interface associated with the address entry.
- **Entry Count** – The number of local entries in the ARP cache.

**Web** - Click IP, ARP, Other Addresses.



Figure 17-6 ARP Other Addresses

**CLI** - This router uses the Type specification “other” to indicate local cache entries in the ARP cache.

Console#show arp				36-47
Arp cache timeout: 1200 (seconds)				
IP Address	MAC Address	Type	Interface	
-----	-----	-----	-----	-----
10.1.0.0	ff-ff-ff-ff-ff-ff	other		1
10.1.0.11	00-11-22-33-44-55	static		1
10.1.0.12	01-02-03-04-05-06	static		1
10.1.0.19	00-10-b5-62-03-74	dynamic		1
10.1.0.253	00-00-ab-cd-00-00	other		1
10.1.0.255	ff-ff-ff-ff-ff-ff	other		1
Total entry : 6				
Console#				

## Displaying ARP Statistics

You can display statistics for ARP messages crossing all interfaces on this router.

**Table 17-2 ARP Statistics**

Parameter	Description
Received Request	Number of ARP Request packets received by the router.
Received Reply	Number of ARP Reply packets received by the router.
Sent Request	Number of ARP Request packets sent by the router.
Sent Reply	Number of ARP Reply packets sent by the router.

**Web** - Click IP, ARP, Statistics.

ARP Statistics	
Received	
Request	31
Reply	4
Sent	
Request	53
Reply	31

**Figure 17-7 ARP Statistics**

**CLI** - This example provides detailed statistics on common IP-related protocols.

```
Console#show ip traffic 37-7
IP statistics:
  Rcvd:  5 total, 5 local destination
         0 checksum errors
         0 unknown protocol, 0 not a gateway
  Frags: 0 reassembled, 0 timeouts
         0 fragmented, 0 couldn't fragment
  Sent:  9 generated
         0 no route
ICMP statistics:
  Rcvd: 0 checksum errors, 0 redirects, 0 unreachable, 0 echo
        5 echo reply, 0 mask requests, 0 mask replies, 0 quench
        0 parameter, 0 timestamp
  Sent: 0 redirects, 0 unreachable, 0 echo, 0 echo reply
        0 mask requests, 0 mask replies, 0 quench, 0 timestamp
        0 time exceeded, 0 parameter problem
UDP statistics:
  Rcvd: 0 total, 0 checksum errors, 0 no port
  Sent: 0 total
TCP statistics:
  Rcvd: 0 total, 0 checksum errors
  Sent: 0 total
ARP statistics:
  Rcvd: 0 requests, 1 replies
  Sent: 1 requests, 0 replies
Console#
```

# Displaying Statistics for IP Protocols

## IP Statistics

The Internet Protocol (IP) provides a mechanism for transmitting blocks of data (often called packets or frames) from a source to a destination, where these network devices (i.e., hosts) are identified by fixed length addresses. The Internet Protocol also provides for fragmentation and reassembly of long packets, if necessary, for transmission through “small packet” networks.

**Table 17-3 IP Statistics**


Parameter	Description
Packets Received	The total number of input datagrams received from interfaces, including those received in error.
Received Address Errors	The number of input datagrams discarded because the IP address in the header's destination field was not a valid address for this entity.
Received Packets Discarded	The number of input datagrams for which no problems were encountered to prevent their continued processing, but which were discarded (e.g., for lack of buffer space).
Output Requests	The total number of datagrams which local IP user-protocols (including ICMP) supplied to IP in requests for transmission.
Output Packet No Route	The number of datagrams discarded because no route could be found to transmit them to their destination. Note that this includes any datagrams which a host cannot route because all of its default gateways are down.
Datagrams Forwarded	The number of input datagrams for which this entity was not their final IP destination, as a result of which an attempt was made to find a route to forward them to that final destination.
Reassembly Required	The number of IP fragments received which needed to be reassembled at this entity.

**Table 17-3 IP Statistics (Continued)**

Parameter	Description
Reassembly Failures	The number of failures detected by the IP re-assembly algorithm (for whatever reason: timed out, errors, etc.).
Datagrams Failing Fragmentation	The number of datagrams that have been discarded because they needed to be fragmented at this entity but could not be, e.g., because their “Don't Fragment” flag was set.
Received Header Errors	The number of input datagrams discarded due to errors in their IP headers, including bad checksums, version number mismatch, other format errors, time-to-live exceeded, errors discovered in processing their IP options, etc.
Unknown Protocols Received	The number of locally-addressed datagrams received successfully but discarded because of an unknown or unsupported protocol.
Received Packets Delivered	The total number of input datagrams successfully delivered to IP user-protocols (including ICMP).
Discarded Output Packets	The number of output IP datagrams for which no problem was encountered to prevent their transmission to their destination, but which were discarded (e.g., for lack of buffer space).
Fragments Created	The number of datagram fragments that have been generated as a result of fragmentation at this entity.
Routing Discards	The number of routing entries which were chosen to be discarded even though they are valid. One possible reason for discarding such an entry could be to free-up buffer space for other routing entries.
Reassembly Successful	The number of datagrams successfully re-assembled.
Datagrams Successfully Fragmented	The number of IP datagrams that have been successfully fragmented at this entity.



**Web** - Click IP, Statistics, IP.

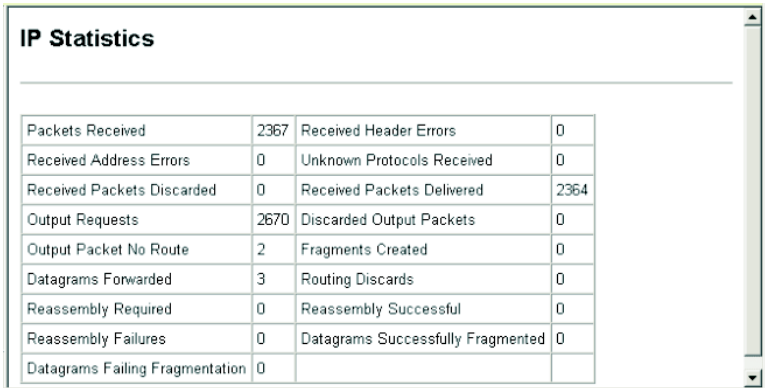

The screenshot shows a window titled "IP Statistics". Inside the window is a table with two columns. The table contains 14 rows of data. The first column lists various network statistics, and the second column shows their corresponding values. The values are: 2367, 0, 0, 2670, 2, 3, 0, 0, 0, 0, 0, 0, 0, and 0.

IP Statistics	
Packets Received	2367
Received Address Errors	0
Received Packets Discarded	0
Output Requests	2670
Output Packet No Route	2
Datagrams Forwarded	3
Reassembly Required	0
Reassembly Failures	0
Datagrams Failing Fragmentation	0
Received Header Errors	0
Unknown Protocols Received	0
Received Packets Delivered	2364
Discarded Output Packets	0
Fragments Created	0
Routing Discards	0
Reassembly Successful	0
Datagrams Successfully Fragmented	0

**Figure 17-8 IP Statistics**

**CLI** - See the example on page 17-17.


## ICMP Statistics

Internet Control Message Protocol (ICMP) is a network layer protocol that transmits message packets to report errors in processing IP packets. ICMP is therefore an integral part of the Internet Protocol. ICMP messages may be used to report various situations, such as when a datagram cannot reach its destination, when the gateway does not have the buffering capacity to forward a datagram, and when the gateway can direct the host to send traffic on a shorter route. ICMP is also used by routers to feed back information about more suitable routes (i.e., the next hop router) to use for a specific destination.

**Table 17-4 ICMP Statistics**

Parameter	Description
Messages	The total number of ICMP messages which the entity received/sent.
Errors	The number of ICMP messages which the entity received/sent but determined as having ICMP-specific errors (bad ICMP checksums, bad length, etc.).
Destination Unreachable	The number of ICMP Destination Unreachable messages received/sent.
Time Exceeded	The number of ICMP Time Exceeded messages received/sent.
Parameter Problems	The number of ICMP Parameter Problem messages received/sent.
Source Quenches	The number of ICMP Source Quench messages received/sent.
Redirects	The number of ICMP Redirect messages received/sent.
Echos	The number of ICMP Echo (request) messages received/sent.
Echo Replies	The number of ICMP Echo Reply messages received/sent.
Timestamps	The number of ICMP Timestamp (request) messages received/sent.
Timestamp Replies	The number of ICMP Timestamp Reply messages received/sent.
Address Masks	The number of ICMP Address Mask Request messages received/sent.
Address Mask Replies	The number of ICMP Address Mask Reply messages received/sent.

**Web** - Click IP, Statistics, ICMP.

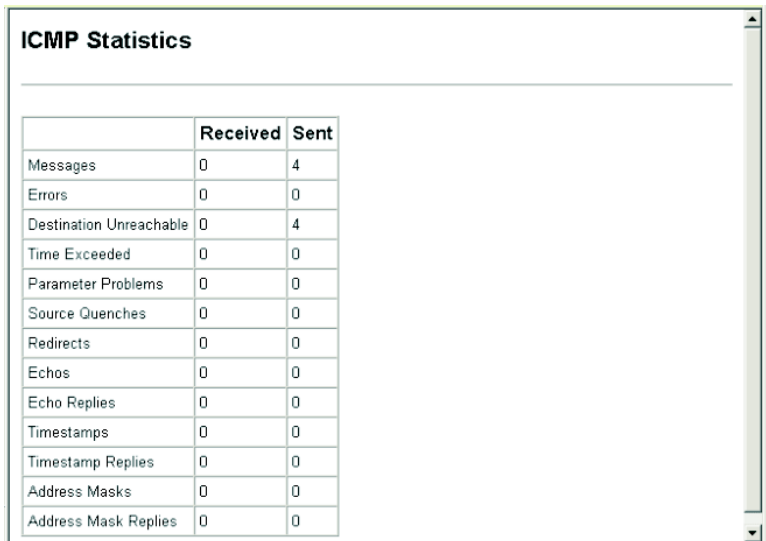

The screenshot shows a window titled "ICMP Statistics". Inside the window is a table with three columns: an unlabeled column for the type of message, a column labeled "Received", and a column labeled "Sent". The table contains 12 rows of data. The "Received" column has zeros for all entries, while the "Sent" column has a value of 4 for "Messages" and "Destination Unreachable", and 0 for all other entries. The window has a standard scrollbar on the right side.

	Received	Sent
Messages	0	4
Errors	0	0
Destination Unreachable	0	4
Time Exceeded	0	0
Parameter Problems	0	0
Source Quenches	0	0
Redirects	0	0
Echos	0	0
Echo Replies	0	0
Timestamps	0	0
Timestamp Replies	0	0
Address Masks	0	0
Address Mask Replies	0	0

**Figure 17-9 ICMP Statistics**

**CLI** - See the example on page 17-17.


## UDP Statistics

User Datagram Protocol (UDP) provides a datagram mode of packet-switched communications. It uses IP as the underlying transport mechanism, providing access to IP-like services. UDP packets are delivered just like IP packets – connection-less datagrams that may be discarded before reaching their targets. UDP is useful when TCP would be too complex, too slow, or just unnecessary.

**Table 17-5 USP Statistics**

Parameter	Description
Datagrams Received	The total number of UDP datagrams delivered to UDP users.
Datagrams Sent	The total number of UDP datagrams sent from this entity.
Receive Errors	The number of received UDP datagrams that could not be delivered for reasons other than the lack of an application at the destination port.
No Ports	The total number of received UDP datagrams for which there was no application at the destination port.

**Web** - Click IP, Statistics, UDP.

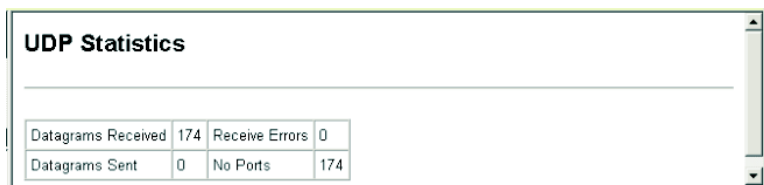

UDP Statistics			
Datagrams Received	174	Receive Errors	0
Datagrams Sent	0	No Ports	174

**Figure 17-10 UDP Statistics**

**CLI** - See the example on page 17-17.


## TCP Statistics

The Transmission Control Protocol (TCP) provides highly reliable host-to-host connections in packet-switched networks, and is used in conjunction with IP to support a wide variety of Internet protocols.

**Table 17-6 TCP Statistics**

Parameter	Description
Segments Received	The total number of segments received, including those received in error. This count includes segments received on currently established connections.
Segments Sent	The total number of segments sent, including those on current connections but excluding those containing only retransmitted octets.
Active Opens	The number of times TCP connections have made a direct transition to the SYN-SENT state from the CLOSED state.
Failed Connection Attempts	The number of times TCP connections have made a direct transition to the CLOSED state from either the SYN-SENT state or the SYN-RCVD state, plus the number of times TCP connections have made a direct transition to the LISTEN state from the SYN-RCVD state.
Current Connections	The number of TCP connections for which the current state is either ESTABLISHED or CLOSE-WAIT.
Receive Errors	The total number of segments received in error (e.g., bad TCP checksums).
Segments Retransmitted	The total number of segments retransmitted - that is, the number of TCP segments transmitted containing one or more previously transmitted octets.
Passive Opens	The number of times TCP connections have made a direct transition to the SYN-RCVD state from the LISTEN state.
Reset Connections	The number of times TCP connections have made a direct transition to the CLOSED state from either the ESTABLISHED state or the CLOSE-WAIT state.

**Web** - Click IP, Statistics, TCP.

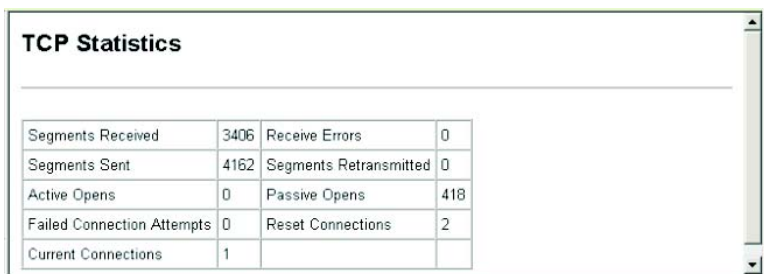

The screenshot shows a window titled "TCP Statistics". Inside the window is a table with the following data:

Segments Received	3406	Receive Errors	0
Segments Sent	4162	Segments Retransmitted	0
Active Opens	0	Passive Opens	418
Failed Connection Attempts	0	Reset Connections	2
Current Connections	1		

**Figure 17-11 TCP Statistics**

**CLI** - See the example on page 17-17.

## Configuring Static Routes

This router can dynamically configure routes to other network segments using dynamic routing protocols (i.e., RIP). However, you can also manually enter static routes in the routing table. Static routes may be required to access network segments where dynamic routing is not supported, or can be set to force the use of a specific route to a subnet, rather than using dynamic routing. Static routes do not automatically change in response to changes in network topology, so you should only configure a small number of stable routes to ensure network accessibility.

### Command Attributes

- **Interface** – Index number of the IP interface.
- **IP Address** – IP address of the destination network, subnetwork, or host.
- **Netmask** – Network mask for the associated IP subnet. This mask identifies the host address bits used for routing to specific subnets.
- **Gateway** – IP address of the gateway used for this route.

- **Metric** – Cost for this interface. This cost is only used if a route is imported by a dynamic routing protocol such as RIP. (Range: 1-5, default: 1)
- **Entry Count** – The number of table entries.

**Web** - Click IP, Routing, Static Routes.

### Static Routes

**Current:**

Interface, IPAddress, Netmask, Nexthop, Metric

1	0.0.0.0	0.0.0.0	10.1.0.254	1
---	---------	---------	------------	---

Entry Count: 1

**New:**

IP Address	<input type="text"/>
Netmask	<input type="text"/>
Nexthop	<input type="text"/>
Metric	<input type="text" value="1"/>

**Figure 17-12 IP Static Routes**

**CLI** - This example forwards all traffic for subnet 192.168.1.0 to the router 192.168.5.254, using the default metric of 1.

```

Console(config)#ip route 192.168.1.0 255.255.255.0
                  192.168.5.254
Console(config)#
    
```

37-3

## Displaying the Routing Table

You can display all the routes that can be accessed via the local network interfaces, via static routes, or via a dynamically learned route. If route information is available through more than one of these methods, the priority for route selection is local, static, and then dynamic. Also note that the route for a local interface is not enabled (i.e., listed in the routing table) unless there is at least one active link connected to that interface.

### Command Attributes

- **Interface** – Index number of the IP interface.
- **IP Address** – IP address of the destination network, subnetwork, or host. Note that the address 0.0.0.0 indicates the default gateway for this router.
- **Netmask** – Network mask for the associated IP subnet. This mask identifies the host address bits used for routing to specific subnets.
- **Next Hop** – The IP address of the next hop (or gateway) in this route.
- **Protocol** – The protocol which generated this route information.  
(Options: local, static, RIP)
- **Metric** – Cost for this interface.
- **Entry Count** – The number of table entries.



**Web** - Click IP, Routing, Routing Table.

### Routing Table

---

**Current:**

Interface	IP Address	Netmask	Next Hop	Protocol	Metric
1	0.0.0.0	0.0.0.0	10.1.0.254	static	1
1	10.1.0.0	255.255.255.0	10.1.0.253	local	1
1	10.1.1.0	255.255.255.0	10.1.0.254	RIP	2

Clear all dynamic routes

Entry Count: 3


**Figure 17-13 IP Routing Table**

**CLI** - This example shows routes obtained from various methods.

Console#show ip route						37-5
Ip Address	Netmask	Next Hop	Protocol	Metric	Interface	
0.0.0.0	0.0.0.0	10.1.0.254	static	1	1	
10.1.0.0	255.255.255.0	10.1.0.253	local	1	1	
10.1.1.0	255.255.255.0	10.1.0.254	RIP	2	1	
Total entries: 3						
Console#						

## Configuring the Routing Information Protocol

The RIP protocol is the most widely used routing protocol. The RIP protocol uses a distance-vector-based approach to routing. Routes are determined on the basis of minimizing the distance vector, or hop count, which serves as a rough estimate of transmission cost. Each router broadcasts its advertisement every 30 seconds, together with any updates to its routing table. This allows all routers on the network to learn consistent tables of next hop links which lead to relevant subnets.

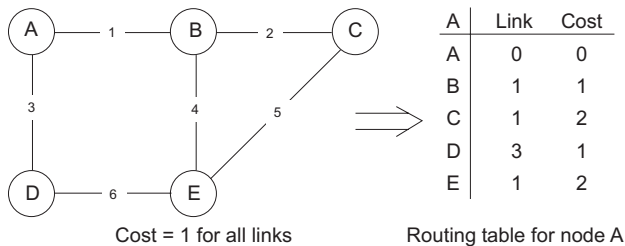

### Command Usage

- Just as Layer 2 switches use the Spanning Tree Algorithm to prevent loops, routers also use methods for preventing loops that would cause endless retransmission of data traffic. RIP utilizes the following three methods to prevent loops from occurring:
  - Split horizon – Never propagate routes back to an interface port from which they have been acquired.
  - Poison reverse – Propagate routes back to an interface port from which they have been acquired, but set the distance-vector metrics to infinity. (This provides faster convergence.)
  - Triggered updates – Whenever a route gets changed, broadcast an update message after waiting for a short random delay, but without waiting for the periodic cycle.
- RIP-2 is a compatible upgrade to RIP. RIP-2 adds useful capabilities for plain text authentication, multiple independent RIP domains, variable

length subnet masks, and multicast transmissions for route advertising (RFC 1723).

- There are several serious problems with RIP that you should consider. First of all, RIP (version 1) has no knowledge of subnets, both RIP versions can take a long time to converge on a new route after the failure of a link or router during which time routing loops may occur, and its small hop count limitation of 15 restricts its use to smaller networks. Moreover, RIP (version 1) wastes valuable network bandwidth by propagating routing information via broadcasts; it also considers too few network variables to make the best routing decision.

## Configuring General Protocol Settings

RIP is used to specify how routers exchange routing information. When RIP is enabled on this router, it sends RIP messages to all devices in the network every 30 seconds (by default), and updates its own routing table when RIP messages are received from other routers. To communicate properly with other routers using RIP, you need to specify the RIP version used globally by the router, as well as the RIP send and receive versions used on specific interfaces (page 17-35).

### Command Usage

- When you specify a Global RIP Version, any VLAN interface not previously set to a specific Receive or Send Version (page 17-35) is set to the following values:
  - RIP Version 1 configures previously unset interfaces to send RIPv1 compatible protocol messages and receive either RIPv1 or RIPv2 protocol messages.
  - RIP Version 2 configures previously unset interfaces to use RIPv2 for both sending and receiving protocol messages.
- The *update* timer is the fundamental timer used to control all basic RIP processes.
  - Setting the update timer to a short interval can cause the router to spend an excessive amount of time processing updates. On the other

hand, setting it to an excessively long time will make the routing protocol less sensitive to changes in the network configuration.

- The timers must be set to the same values for all routers in the network.

### Command Attributes

#### *Global Settings*

- **RIP Routing Process** – Enables RIP routing for all IP interfaces on the router. (Default: Disabled)
- **Global RIP Version** – Specifies a RIP version used globally by the router. (Default: RIP Version 1)

#### *Timer Settings*

- **Update** – Sets the rate at which updates are sent. This value will also set the timeout timer to 6 times the update time, and the garbage-collection timer to 4 times the update time. (Range: 15-60 seconds; Default: 30 seconds)
- **Timeout** – Sets the time after which there have been no update messages that a route is declared dead. The route is marked inaccessible (i.e., the metric set to infinite) and advertised as unreachable. However, packets are still forwarded on this route. (Default: 180 seconds)
- **Garbage Collection** – After the *timeout* interval expires, the router waits for an interval specified by the *garbage-collection* timer before removing this entry from the routing table. This timer allows neighbors to become aware of an invalid route prior to purging. (Default: 120 seconds)

**Web** - Click Routing Protocol, RIP, General Settings. Enable or disable RIP, set the RIP version used on previously unset interfaces to RIPv1 or RIPv2, set the basic update timer, and then click Apply.

Global	
RIP Routing Process	Enabled
Global RIP Version	RIPv2
Timer	
Update (15 - 60 seconds)	15
Timeout (Update x 6)	90
Garbage Collection (Update x 4)	60

**Figure 17-14 RIP General Settings**

**CLI** - This example sets the router to use RIP Version 2, and sets the basic timer to 15 seconds.

```
Console(config)#router rip          37-9
Console(config-router)#version 2    37-15
Console(config-router)#timers basic 15 37-11
Console(config-router)#end
Console#show rip globals            37-22

RIP Process: Enabled
Update Time in Seconds: 15
Number of Route Change: 0
Number of Queries: 1
Console#
```

## Specifying Network Interfaces for RIP

You must specify network interfaces that will be included in the RIP routing process.

### Command Usage

- RIP only sends updates to interfaces specified by this command.
- Subnet addresses are interpreted as class A, B or C, based on the first field in the specified address. In other words, if a subnet address `nnn.xxx.xxx.xxx` is entered, the first field (`nnn`) determines the class:
  - 0 - 127 is class A, and only the first field in the network address is used.
  - 128 - 191 is class B, and the first two fields in the network address are used.
  - 192 - 223 is class C, and the first three fields in the network address are used.

### Command Attributes

- **Subnet Address** – IP address of a network directly connected to this router.

**Web** - Click Routing Protocol, RIP, Network Addresses. Add all interfaces that will participate in RIP, and click Apply.

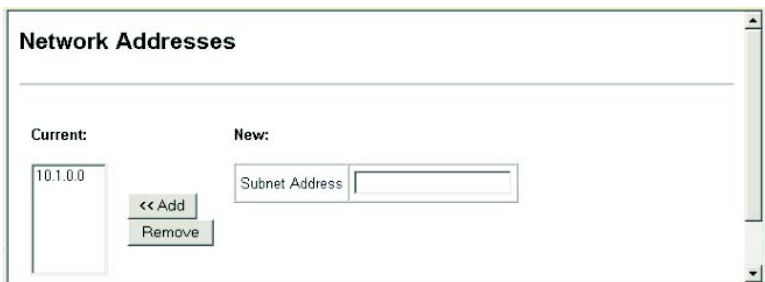


Figure 17-15 RIP Network Addresses

**CLI** - This example includes network interface 10.1.0.0 in the RIP routing process.

Console(config)#router-rip	37-9
Console(config-router)#network 10.1.0.0	37-12
Console(config-router)#end	
Console#show ip rip status	37-22

Peer	UpdateTime	Version	RcvBadPackets	RcvBadRoutes
-----	-----	-----	-----	-----
10.1.0.253		0	0	73
10.1.1.253		0	0	66

Console#

## Configuring Network Interfaces for RIP

For each interface that participates in the RIP routing process, you must specify the protocol message type accepted (i.e., RIP version) and the message type sent (i.e., RIP version or compatibility mode), the method for preventing loopback of protocol messages, and whether or not authentication is used (i.e., authentication only applies if RIPv2 messages are being sent or received).

### Command Usage

#### *Specifying Receive and Send Protocol Types*

- Setting the RIP Receive Version or Send Version for an interface overrides the global setting specified by the RIP / General Settings, Global RIP Version field.
- You can specify the Receive Version based on these options:
  - Use “RIPv1” or “RIPv2” if all routers in the local network are based on RIPv1 or RIPv2, respectively.
  - Use “RIPv1 or RIPv2” if some routers in the local network are using RIPv2, but there are still some older routers using RIPv1.
  - Use “Do Not Receive” if you do not want to add any dynamic entries to the routing table for an interface. (For example, you may only want to allow static routes for a specific interface.)

- You can specify the Send Version based on these options:
  - Use “RIPv1” or “RIPv2” if all routers in the local network are based on RIPv1 or RIPv2, respectively.
  - Use “RIPv1 Compatible” to propagate route information by broadcasting to other routers on the network using the RIPv2 advertisement list, instead of multicasting as normally required by RIPv2. (Using this mode allows RIPv1 routers to receive these protocol messages, but still allows RIPv2 routers to receive the additional information provided by RIPv2, including subnet mask, next hop and authentication information.)
  - Use “Do Not Send” to passively monitor route information advertised by other routers attached to the network.

### *Loopback Prevention*

Just as Layer 2 switches use the Spanning Tree Algorithm to prevent loops, routers also use methods for preventing loops that would cause endless retransmission of data traffic. When protocol packets are caught in a loop, links will be congested, and protocol packets may be lost. However, the network will slowly converge to the new state. RIP utilizes the following three methods that can provide faster convergence when the network topology changes and prevent most loops from occurring:

- Split Horizon – Never propagate routes back to an interface port from which they have been acquired.
- Poison Reverse – Propagate routes back to an interface port from which they have been acquired, but set the distance-vector metrics to infinity. (This provides faster convergence.)
- Triggered Updates – Whenever a route gets changed, broadcast an update message after waiting for a short random delay, but without waiting for the periodic cycle.

### *Protocol Message Authentication*

RIPv1 is not a secure protocol. Any device sending protocol messages from UDP port 520 will be considered a router by its neighbors. Malicious or unwanted protocol messages can be easily propagated throughout the network if no authentication is required. RIPv2 supports authentication via




a simple password. When a router is configured to exchange authentication messages, it will insert the password into all transmitted protocol packets, and check all received packets to ensure that they contain the authorized password. If any incoming protocol messages do not contain the correct password, they are simply dropped.

### **Command Attributes**

- **VLAN** – ID of configured VLAN (1-4093).
- **Receive Version** – The RIP version to receive on an interface.
  - **RIPv1**: Accepts only RIPv1 packets.
  - **RIPv2**: Accepts only RIPv2 packets.
  - **RIPv1 or RIPv2**: Accepts RIPv1 or RIPv2 packets. (Default)
  - **Do Not Receive**: Does not accept incoming RIP packets.  
(The default depends on the setting specified under RIP / General Settings, Global RIP Version: RIPv1 - RIPv1 or RIPv2 packets, RIPv2 - RIPv2 packets)
- **Send Version** – The RIP version to send on an interface.
  - **RIPv1**: Sends only RIPv1 packets.
  - **RIPv2**: Sends only RIPv2 packets.
  - **RIPv1 Compatible**: Route information is broadcast to other routers with RIPv2. (Default)
  - **Do Not Send**: Does not transmit RIP updates.  
(The default depends on the setting specified under RIP / General Settings, Global RIP Version: RIPv1 - RIPv1 Compatible, RIPv2 - RIPv2 packets)
- **Instability Preventing** – Specifies the method used to reduce the convergence time when the network topology changes, and to prevent RIP protocol messages from looping back to the source router.  
(Default: Split Horizon)
  - **None**: No method is used. If a loop occurs, the hop count for a route may be gradually incremented to infinity (i.e., 16) before the route is deemed unreachable.

- **Split Horizon:** This method never propagates routes back to an interface from which they have been acquired.
- **Poison Reverse:** This method propagates routes back to an interface port from which they have been acquired, but set the distance-vector metrics to infinity. (This provides faster convergence.)
- **Authentication Type** – Specifies whether or not authentication is required for exchanging protocol messages. (Default: No Authentication)
  - **No Authentication:** No authentication is required.
  - **Simple Password:** Requires the interface to exchange routing information with other routers based on an authorized password. (Note that authentication only applies to RIPv2.)
- **Authentication Key** – Specifies the key to use for authenticating RIPv2 packets. For authentication to function properly, both the sending and receiving interface must use the same password. (Range: 1-16 characters, case sensitive)

**Web** - Click Routing Protocol, RIP, Interface Settings. Select the RIP protocol message types that will be received and sent, the method used to provide faster convergence and prevent loopback (i.e., prevent instability in the network topology), and the authentication option and corresponding password. Then click Apply.

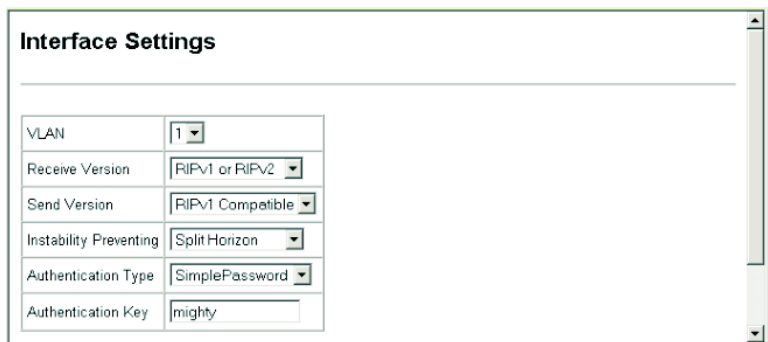

Interface Settings	
VLAN	1
Receive Version	RIPv1 or RIPv2
Send Version	RIPv1 Compatible
Instability Preventing	Split Horizon
Authentication Type	SimplePassword
Authentication Key	mighty

**Figure 17-16 RIP Interface Settings**

**CLI** - This example sets the receive version to accept both RIPv1 or RIPv2 messages, the send mode to RIPv1 compatible (i.e., called v2-broadcast in the CLI), sets the method of preventing instability in the network topology to Split Horizon, enables authentication via a simple password (i.e., called text mode in the CLI).

Console(config)#interface vlan 1	24-2
Console(config-if)#ip rip receive version 1 2	37-16
Console(config-if)#ip rip send version v2-broadcast	37-17
Console(config-if)#ip split-horizon	37-19
Console(config-if)#ip rip authentication mode text	37-21
Console(config-if)#ip rip authentication key mighty	37-20
Console#	

## Redistributing Routing Information from Other Domains

RIP can be configured to import external routing information from other routing domains (that is, protocols or static routes) into the autonomous system.

### Command Usage

- If a redistribution metric has not been configured for static routes, the **default-metric** command (page 37-9) sets the metric value to be used for all imported external routes.
- A route metric must be used to resolve the problem of redistributing external routes with incompatible metrics.
- It is advisable to use a low metric when redistributing routes from another protocol into RIP. Using a high metric limits the usefulness of external routes redistributed into RIP. For example, if a metric of 10 is defined for redistributed routes, these routes can only be advertised to routers up to 5 hops away, at which point the metric exceeds the maximum hop count of 15. By defining a low metric of 1, traffic can follow a imported route the maximum number of hops allowed within a RIP domain. However, using a low metric can increase the possibility of routing loops. For example, this can occur if there are multiple redistribution points and the router learns about the same external network with a better metric from a redistribution point other than that derived from the original source.

### Command Attributes

- Redistribute Protocol – Only static routes can be imported into this routing domain.
- Redistribute Metric – Metric value assigned to all external routes for the specified protocol. (Range: 1-15)
  - The default metric value is set by set by the **default-metric** command (see page 37-9).

**Web** - Click Routing Protocol, RIP, Redistribute Configuration. Enter the redistribution metric for static routes, and click Set.

### Redistribute Configuration

---

**Current Redistribute Protocol:**

Redistribute Protocol	Redistribute Metric	Remove
Static	3	<input type="checkbox"/>
Entry Count: 1		<button>Remove</button>

---

**Redistribute Settings:**

Redistribute Protocol	Static <input type="button" value="v"/>
Redistribute Metric (1-15)	<input type="text" value="1"/>
<button>Set</button>	

**Figure 17-17 RIP Redistribution Configuration**

**CLI** - This example redistributes static routes and sets the metric for all of these routes to a value of 3.

Console(config)#router rip	37-9
Console(config-router)#redistribute static metric 3	37-15
Console(config-router)#	

## Displaying RIP Information and Statistics

You can display basic information about the current global configuration settings for RIP, statistics about route changes and queries, information about the interfaces on this router that are using RIP, and information about known RIP peer devices.

**Table 17-7 RIP Information and Statistics**

Parameter	Description
<i>Globals</i>	
RIP Routing Process	Indicates if RIP has been enabled or disabled.
Update Time in Seconds	The interval at which RIP advertises known route information. (Default: 30 seconds)
Number of Route Changes	Number of times routing information has changed.
Number of Queries	Number of router database queries received by this router.
<i>Interface Information</i>	
Interface	IP address of the interface.
SendMode	RIP version sent on this interface (none, RIPv1, RIPv2, rip1Compatible).
ReceiveMode	RIP version received on this interface (none, RIPv1, RIPv2, RIPv1Orv2).
InstabilityPreventing	Shows if split-horizon, poison-reverse, or no instability prevention method is in use.
AuthType	Shows if authentication is set to simple password or none.
RcvBadPackets	Number of bad RIP packets received.
RcvBadRoutes	Number of bad routes received.
SendUpdates	Number of route changes.
<i>Peer Information</i>	
PeerAddress	IP address of a neighboring RIP router.
UpdateTime	Last time a route update was received from this peer.

**Table 17-7 RIP Information and Statistics (Continued)**

Parameter	Description
Version	Whether RIPv1 or RIPv2 packets were received from this peer.
RcvBadPackets	Number of bad RIP packets received from this peer.
RcvBadRoutes	Number of bad routes received from this peer.

**Web** - Click Routing Protocol, RIP, Statistics.

**RIP Statistics**

---

**Globals**

RIP Routing Process	Enabled
Update Time in Seconds	30
Number of Route Changes	4
Number of Queries	0

**Interface Information**

Interface, SendMode, ReceiveMode, InstabilityPreventing, AuthType, RcvBadPackets, RcvBadRoutes, SendUpdates

10.1.0.253, rip1 Compatible, RIPv1Orv2, SplitHorizon, noAuthentication, 0, 0, 60
10.1.1.253, rip1 Compatible, RIPv1Orv2, SplitHorizon, noAuthentication, 0, 0, 60

**Peer Information**

PeerAddress, UpdateTime, Version, RcvBadPackets, RcvBadRoutes

10.1.0.254, 4093, 2, 0, 14lu
10.1.1.254, 4093, 2, 0, 14lu

**Figure 17-18 RIP Statistics**

**CLI** - The information displayed by the RIP Statistics screen via the web interface can be accessed from the CLI using the following commands.

```

Console#show rip globals
RIP Process: Enabled
Update Time in Seconds: 30
Number of Route Change: 4
Number of Queries: 0
Console#show ip rip configuration
Interface          SendMode          ReceiveMode        Poison            Authentication
-----
10.1.0.253         rip1Compatible    RIPv1Orv2         SplitHorizon      noAuthentication
10.1.1.253         rip1Compatible    RIPv1Orv2         SplitHorizon      noAuthentication
Console#show ip rip status
Interface          RcvBadPackets     RcvBadRoutes       SendUpdates
-----
10.1.0.253         0                  0                   60
10.1.1.253         0                  0                   63
Console#show ip rip peer
Peer              UpdateTime        Version            RcvBadPackets     RcvBadRoutes
-----
10.1.0.254        4610              2                  0                  0
10.1.1.254        4610              2                  0                  0
Console#

```





# SECTION III

## COMMAND LINE INTERFACE

---

This section provides a detailed description of the Command Line Interface, along with examples for all of the commands.

Overview of the Command Line Interface .....	18-1
General Commands .....	19-1
System Management Commands .....	20-1
SNMP Commands .....	21-1
User Authentication Commands .....	22-1
Access Control List Commands .....	23-1
Interface Commands .....	24-1
Link Aggregation Commands .....	25-1
Mirror Port Commands .....	26-1
Rate Limit Commands .....	27-1
Address Table Commands .....	28-1
Spanning Tree Commands .....	29-1
VLAN Commands .....	30-1
Class of Service Commands .....	31-1
Quality of Service Commands .....	32-1
Multicast Filtering Commands .....	33-1
Domain Name Service Commands .....	34-1
DHCP Commands .....	35-1
IP Interface Commands .....	36-1
IP Routing Commands .....	37-1

## *COMMAND LINE INTERFACE*

# CHAPTER 18

## OVERVIEW OF THE COMMAND LINE INTERFACE

---

This chapter describes how to use the Command Line Interface (CLI).

**Note:** You can only access the console interface through the Master unit in the stack.

### Using the Command Line Interface

#### Accessing the CLI

When accessing the management interface for the switch over a direct connection to the server's console port, or via a Telnet connection, the switch can be managed by entering command keywords and parameters at the prompt. Using the switch's command-line interface (CLI) is very similar to entering commands on a UNIX system.

#### Console Connection

To access the switch through the console port, perform these steps:

1. At the console prompt, enter the user name and password. (The default user names are “admin” and “guest” with corresponding passwords of “admin” and “guest.”) When the administrator user name and password is entered, the CLI displays the “Console#” prompt and enters privileged access mode (i.e., Privileged Exec). But when the guest user name and password is entered, the CLI displays the “Console>” prompt and enters normal access mode (i.e., Normal Exec).

2. Enter the necessary commands to complete your desired tasks.
3. When finished, exit the session with the “quit” or “exit” command.

After connecting to the system through the console port, the login screen displays:

```
User Access Verification
Username: admin
Password:

  CLI session with the 24/48 L3 GE Switch is opened.

  To end the CLI session, enter [Exit].

Console#
```

### Telnet Connection

Telnet operates over the IP transport protocol. In this environment, your management station and any network device you want to manage over the network must have a valid IP address. Valid IP addresses consist of four numbers, 0 to 255, separated by periods. Each address consists of a network portion and host portion. For example, the IP address assigned to this switch, 10.1.0.1, consists of a network portion (10.1.0) and a host portion (1).

**Note:** The IP address for this switch is obtained via DHCP by default.

To access the stack through a Telnet session, you must first set the IP address for the Master unit, and set the default gateway if you are managing the switch from a different IP subnet. For example,

```
Console(config)#interface vlan 1
Console(config-if)#ip address 10.1.0.254 255.255.255.0
Console(config-if)#exit
Console(config)#ip default-gateway 10.1.0.254
```

If your corporate network is connected to another network outside your office or to the Internet, you need to apply for a registered IP address. However, if you are attached to an isolated network, then you can use any IP address that matches the network segment to which you are attached.

After you configure the switch with an IP address, you can open a Telnet session by performing these steps:

1. From the remote host, enter the Telnet command and the IP address of the device you want to access.
2. At the prompt, enter the user name and system password. The CLI will display the “Vty-*n*#” prompt for the administrator to show that you are using privileged access mode (i.e., Privileged Exec), or “Vty-*n*>” for the guest to show that you are using normal access mode (i.e., Normal Exec), where *n* indicates the number of the current Telnet session.
3. Enter the necessary commands to complete your desired tasks.
4. When finished, exit the session with the “quit” or “exit” command.

After entering the Telnet command, the login screen displays:

```
Username: admin
Password:

  CLI session with the 24/48 L3 GE Switch is opened.
  To end the CLI session, enter [Exit].

Vty-0#
```

**Note:** You can open up to four sessions to the device via Telnet.

## Entering Commands

This section describes how to enter CLI commands.

### Keywords and Arguments

A CLI command is a series of keywords and arguments. Keywords identify a command, and arguments specify configuration parameters. For example, in the command “show interfaces status ethernet 1/5,” **show** **interfaces** and **status** are keywords, **ethernet** is an argument that specifies the interface type, and **1/5** specifies the unit/port.

You can enter commands as follows:

- To enter a simple command, enter the command keyword.
- To enter multiple commands, enter each command in the required order. For example, to enable Privileged Exec command mode, and display the startup configuration, enter:

```
Console>enable  
Console#show startup-config
```

- To enter commands that require parameters, enter the required parameters after the command keyword. For example, to set a password for the administrator, enter:

```
Console(config)#username admin password 0 smith
```

### Minimum Abbreviation

The CLI will accept a minimum number of characters that uniquely identify a command. For example, the command “configure” can be entered as **con**. If an entry is ambiguous, the system will prompt for further input.

### Command Completion

If you terminate input with a Tab key, the CLI will print the remaining characters of a partial keyword up to the point of ambiguity. In the “logging history” example, typing **log** followed by a tab will result in printing the command up to “**logging**.”

### Getting Help on Commands

You can display a brief description of the help system by entering the **help** command. You can also display command syntax by using the “?” character to list keywords or parameters.

## Showing Commands

If you enter a “?” at the command prompt, the system will display the first level of keywords for the current command class (Normal Exec or Privileged Exec) or configuration class (Global, ACL, DHCP, Interface, Line, Router, VLAN Database, or MSTP). You can also display a list of valid keywords for a specific command. For example, the command “**show ?**” displays a list of possible show commands:

```

Console#show ?
  access-group      Access groups
  access-list       Access lists
  arp               Information of ARP cache
  bridge-ext        Bridge extend information
  calendar          Date information
  class-map         Display class maps
  dns              DNS information
  dot1x            Show 802.1x content
  garp             GARP property
  gvrp            Show GARP information of interface
  history          Information of history
  hosts           Host information
  interfaces       Information of interfaces
  ip              IP information
  ipv6            IPv6 information
  lacp            Show LACP statistic
  line           TTY line information
  log            Login records
  logging        Show the contents of logging buffers
  mac           MAC access lists
  mac-address-table Set configuration of the address table
  management     Show management IP filter
  map           Map priority
  policy-map     Display policy maps
  port          Characteristics of the port
  protocol-vlan Protocol-VLAN information
  public-key     Show information of public key
  pvlan         Information of private VLAN
  queue         Information of priority queue
  radius-server RADIUS server information
  rip           RIP
  router        Router
  running-config The system configuration of running
  snmp          SNMP statistics
  snmp          SNMP
  spanning-tree Specify spanning-tree
  ssh           Secure shell
  startup-config The system configuration of starting up
  system        Information of system
  tacacs-server Login by TACACS server
  users         Display information about terminal lines
  version       System hardware and software status
  vlan          Switch VLAN Virtual Interface
Console#show

```

The command “**show interfaces ?**” will display the following information:

```
Console#show interfaces ?
  counters      Information of interfaces counters
  protocol-vlan  Protocol-vlan information
  status        Information of interfaces status
  switchport    Information of interfaces switchport
Console#
```

### Partial Keyword Lookup

If you terminate a partial keyword with a question mark, alternatives that match the initial letters are provided. (Remember not to leave a space between the command and question mark.) For example “**s?**” shows all the keywords starting with “s.”

```
Console#show s?
snmp      sntp      spanning-tree  ssh
startup-config  system
Console#sh s
```

### Negating the Effect of Commands

For many configuration commands you can enter the prefix keyword “**no**” to cancel the effect of a command or reset the configuration to the default value. For example, the **logging** command will log system messages to a host server. To disable logging, specify the **no logging** command. This guide describes the negation effect for all applicable commands.

### Using Command History

The CLI maintains a history of commands that have been entered. You can scroll back through the history of commands by pressing the up arrow key. Any command displayed in the history list can be executed again, or first modified and then executed.

Using the **show history** command displays a longer list of recently executed commands.



## Understanding Command Modes

The command set is divided into Exec and Configuration classes. Exec commands generally display information on system status or clear statistical counters. Configuration commands, on the other hand, modify interface parameters or enable certain switching functions. These classes are further divided into different modes. Available commands depend on the selected mode. You can always enter a question mark “?” at the prompt to display a list of the commands available for the current mode. The command classes and associated modes are displayed in the following table:

**Table 18-1 General Command Modes**

Class	Mode	
Exec	Normal Privileged	
Configuration	Global*	Access Control List Class Map DHCP Interface Line Multiple Spanning Tree Policy Map Router VLAN Database

\* You must be in Privileged Exec mode to access the Global configuration mode. You must be in Global Configuration mode to access any of the other configuration modes.

## Exec Commands

When you open a new console session on the switch with the user name and password “guest,” the system enters the Normal Exec command mode (or guest mode), displaying the “Console>” command prompt. Only a limited number of the commands are available in this mode. You can access all commands only from the Privileged Exec command mode (or administrator mode). To access Privilege Exec mode, open a new

console session with the user name and password “admin.” The system will now display the “Console#” command prompt. You can also enter Privileged Exec mode from within Normal Exec mode, by entering the **enable** command, followed by the privileged level password “super” (page 22-4).

To enter Privileged Exec mode, enter the following user names and passwords:

```
Username: admin
Password: [admin login password]

  CLI session with the 24/48 L3 GE Switch is opened.
  To end the CLI session, enter [Exit].

Console#
```

```
Username: guest
Password: [guest login password]

  CLI session with the 24/48 L3 GE Switch is opened.
  To end the CLI session, enter [Exit].

Console>enable
Password: [privileged level password]
Console#
```

## Configuration Commands

Configuration commands are privileged level commands used to modify switch settings. These commands modify the running configuration only and are not saved when the switch is rebooted. To store the running configuration in non-volatile storage, use the **copy running-config startup-config** command.

The configuration commands are organized into different modes:

- Global Configuration - These commands modify the system level configuration, and include commands such as **hostname** and **snmp-server community**.
- Access Control List Configuration - These commands are used for packet filtering.

- Class Map Configuration - Creates a DiffServ class map for a specified traffic type.
- DHCP Configuration - These commands are used to configure the DHCP server.
- Interface Configuration - These commands modify the port configuration such as **speed-duplex** and **negotiation**.
- Line Configuration - These commands modify the console port and Telnet configuration, and include command such as **parity** and **databits**.
- Multiple Spanning Tree Configuration - These commands configure settings for the selected multiple spanning tree instance.
- Policy Map Configuration - Creates a DiffServ policy map for multiple interfaces.
- Router Configuration - These commands configure global settings for unicast routing protocols.
- VLAN Configuration - Includes the command to create VLAN groups.

To enter the Global Configuration mode, enter the command **configure** in Privileged Exec mode. The system prompt will change to “Console(config)#” which gives you access privilege to all Global Configuration commands.

```
Console#configure
Console(config)#
```

To enter the other modes, at the configuration prompt type one of the following commands. Use the **exit** or **end** command to return to the Privileged Exec mode.

Table 18-2 Configuration Command Modes

Mode	Command	Prompt	Page
Line	line {console   vty}	Console(config-line)#	20-22
Access Control List	access-list ip standard	Console(config-std-acl)	23-3
	access-list ip extended	Console(config-ext-acl)	23-3
	access-list mac	Console(config-mac-acl)	23-17
	access-list ipv6 standard	Console(config-std-ipv6-acl)	23-10
	access-list ipv6 extended	Console(config-ext-ipv6-acl)	23-10
Class Map	class map	Console(config-cmap)	32-3
DHCP	ip dhcp pool	Console(config-dhcp)	35-8
Interface	interface {ethernet <i>port</i>   port-channel <i>id</i>   vlan <i>id</i> }	Console(config-if)#	24-2
MSTP	spanning-tree mst-configuration	Console(config-mstp)#	29-10
Policy Map	policy map	Console(config-pmap)	32-5
Router	router rip	Console(config-router)	37-9
VLAN	vlan database	Console(config-vlan)	30-7

For example, you can use the following commands to enter interface configuration mode, and then return to Privileged Exec mode

```
Console(config)#interface ethernet 1/5
:
Console(config-if)#exit
Console(config)#
```

## Command Line Processing

Commands are not case sensitive. You can abbreviate commands and parameters as long as they contain enough letters to differentiate them from any other currently available commands or parameters. You can use the Tab key to complete partial commands, or enter a partial command followed by the “?” character to display a list of possible matches. You can also use the following editing keystrokes for command-line processing:

**Table 18-3 Keystroke Commands**

Keystroke	Function
Ctrl-A	Shifts cursor to start of command line.
Ctrl-B	Shifts cursor to the left one character.
Ctrl-C	Terminates the current task and displays the command prompt.
Ctrl-E	Shifts cursor to end of command line.
Ctrl-F	Shifts cursor to the right one character.
Ctrl-K	Deletes all characters from the cursor to the end of the line.
Ctrl-L	Repeats current command line on a new line.
Ctrl-N	Enters the next command line in the history buffer.
Ctrl-P	Enters the last command.
Ctrl-R	Repeats current command line on a new line.
Ctrl-U	Deletes from the cursor to the beginning of the line.
Ctrl-W	Deletes the last word typed.
Esc-B	Moves the cursor back one word.
Esc-D	Deletes from the cursor to the end of the word.
Esc-F	Moves the cursor forward one word.
Delete key or backspace key	Erases a mistake when entering a command.

# Command Groups

The system commands can be broken down into the functional groups shown below.

Table 18-4 Command Group Index

Command Group	Description	Page
General	Basic commands for entering privileged access mode, restarting the system, or quitting the CLI	19-1
System Management	Display and setting of system information, basic modes of operation, maximum frame size, file management, console port and telnet settings, system logs, SMTP alerts, and the system clock	20-1
Simple Network Management Protocol	Activates authentication failure traps; configures community access strings, and trap receivers	21-1
User Authentication	Configures user names and passwords, logon access using local or remote authentication, management access through the web server, Telnet server and Secure Shell; as well as port security, IEEE 802.1X port access control, and restricted access based on specified IP addresses	22-1
Access Control List	Provides filtering for IPv4 frames (based on address, protocol, TCP/UDP port number or TCP control code), IPv6 frames (based on destination address, next header type, or flow label), or non-IP frames (based on MAC address or Ethernet type)	23-1
Interface	Configures the connection parameters for all Ethernet ports, aggregated links, and VLANs	24-1
Link Aggregation	Statically groups multiple ports into a single logical trunk; configures Link Aggregation Control Protocol for port trunks	25-1
Mirror Port	Mirrors data to another port for analysis without affecting the data passing through or the performance of the monitored port	26-1

**Table 18-4 Command Group Index** (Continued)

<b>Command Group</b>	<b>Description</b>	<b>Page</b>
Rate Limit	Controls the maximum rate for traffic transmitted or received on a port	27-1
Address Table	Configures the address table for filtering specified addresses, displays current entries, clears the table, or sets the aging time	28-1
Spanning Tree	Configures Spanning Tree settings for the switch	29-1
VLANs	Configures VLAN settings, and defines port membership for VLAN groups; also enables or configures private VLANs and protocol VLANs	30-1
Class of Service	Sets port priority for untagged frames, selects strict priority or weighted round robin, relative weight for each priority queue, also sets priority for TCP/UDP traffic types, IP precedence, and DSCP	31-1
Quality of Service	Configures Differentiated Services	32-1
Multicast Filtering	Configures IGMP multicast filtering, query parameters, and specifies ports attached to a multicast router	33-1
Domain Name Service	Configures DNS services.	34-1
IP Interface	Configures IP address for the switch interfaces; also configures ARP parameters and static entries	36-1
IP Routing	Configures static and dynamic unicast routing	37-1

The access mode shown in the following tables is indicated by these abbreviations:

**ACL** (Access Control List Configuration)

**CM** (Class Map Configuration)

**DC** (DHCP Server Configuration)

**GC** (Global Configuration)

**IC** (Interface Configuration)

**LC** (Line Configuration)

**NE** (Normal Exec)

**MST** (Multiple Spanning Tree)

## *OVERVIEW OF THE COMMAND LINE INTERFACE*

**PE** (Privileged Exec)

**PM** (Policy Map Configuration)

**RC** (Router Configuration)

**VC** (VLAN Database Configuration)



# CHAPTER 19

## GENERAL COMMANDS

---

These commands are used to control the command access mode, configuration mode, and other basic functions.

**Table 19-1 General Commands**

Command	Function	Mode	Page
enable	Activates privileged mode	NE	19-2
disable	Returns to normal mode from privileged mode	PE	19-3
configure	Activates global configuration mode	PE	19-3
show history	Shows the command history buffer	NE, PE	19-4
reload	Restarts the system	PE	19-5
prompt	Customizes the CLI prompt	GC	19-6
end	Returns to Privileged Exec mode	any config. mode	19-6
exit	Returns to the previous configuration mode, or exits the CLI	any	19-7
quit	Exits a CLI session	NE, PE	19-7
help	Shows how to use help	any	NA
?	Shows options for command completion (context sensitive)	any	NA

## enable

This command activates Privileged Exec mode. In privileged mode, additional commands are available, and certain commands display additional information. See “Understanding Command Modes” on page 18-7.

### Syntax

**enable** [*level*]

*level* - Privilege level to log into the device.

The device has two predefined privilege levels: 0: Normal Exec, 15: Privileged Exec. Enter level 15 to access Privileged Exec mode.

### Default Setting

Level 15

### Command Mode

Normal Exec

### Command Usage

“super” is the default password required to change the command mode from Normal Exec to Privileged Exec. (To set this password, see the **enable password** command on page 22-4.)

The “#” character is appended to the end of the prompt to indicate that the system is in privileged access mode.

### Example

```
Console>enable
Password: [privileged level password]
Console#
```

### Related Commands

disable (19-3)

enable password (22-4)

## disable

This command returns to Normal Exec mode from privileged mode. In normal access mode, you can only display basic information on the switch's configuration or Ethernet statistics. To gain access to all commands, you must use the privileged mode. See “Understanding Command Modes” on page 18-7.

### Default Setting

None

### Command Mode

Privileged Exec

### Command Usage

The “>” character is appended to the end of the prompt to indicate that the system is in normal access mode.

### Example

```
Console#disable  
Console>
```

### Related Commands

enable (19-2)

## configure

This command activates Global Configuration mode. You must enter this mode to modify any settings on the switch. You must also enter Global Configuration mode prior to enabling some of the other configuration modes, including Interface Configuration, Line Configuration, VLAN Database Configuration, and Multiple Spanning Tree Configuration. See “Understanding Command Modes” on page 18-7.

### Default Setting

None

### Command Mode

Privileged Exec

### Example

```
Console#configure
Console(config)#
```

### Related Commands

end (19-6)

## show history

This command shows the contents of the command history buffer.

### Default Setting

None

### Command Mode

Normal Exec, Privileged Exec

### Command Usage

The history buffer size is fixed at 10 Execution commands and 10 Configuration commands.

### Example

In this example, the show history command lists the contents of the command history buffer:

```
Console#show history
Execution command history:
 2 config
 1 show history

Configuration command history:
 4 interface vlan 1
 3 exit
 2 interface vlan 1
 1 end

Console#
```

The **!** command repeats commands from the Execution command history buffer when you are in Normal Exec or Privileged Exec Mode, and commands from the Configuration command history buffer when you are in any of the configuration modes. In this example, the **!2** command repeats the second command in the Execution history buffer (**config**).

```
Console#!2
Console#config
Console(config)#
```

## reload

This command restarts the system.

**Note:** When the system is restarted, it will always run the Power-On Self-Test. It will also retain all configuration information stored in non-volatile memory by the **copy running-config startup-config** command.

### Default Setting

None

### Command Mode

Privileged Exec

### Command Usage

This command resets the entire system.

### Example

This example shows how to reset the switch:

```
Console#reload
System will be restarted, continue <y/n>? y
```

## prompt

This command customizes the CLI prompt. Use the **no** form to restore the default prompt.

### Syntax

**prompt** *string*

**no prompt**

*string* - Any alphanumeric string to use for the CLI prompt.  
(Maximum length: 255 characters)

### Default Setting

Console

### Command Mode

Global Configuration

### Example

```
Console(config)#prompt RD2
RD2(config)#
```

## end

This command returns to Privileged Exec mode.

### Default Setting

None

### Command Mode

Global Configuration, Interface Configuration, Line Configuration,  
VLAN Database Configuration, and Multiple Spanning Tree  
Configuration.

### Example

This example shows how to return to the Privileged Exec mode from the Interface Configuration mode:

```
Console(config-if)#end
Console#
```

## exit

This command returns to the previous configuration mode or exits the configuration program.

### Default Setting

None

### Command Mode

Any

### Example

This example shows how to return to the Privileged Exec mode from the Global Configuration mode, and then quit the CLI session:

```
Console(config)#exit
Console#exit

Press ENTER to start session
User Access Verification

Username:
```

## quit

This command exits the configuration program.

### Default Setting

None

### Command Mode

Normal Exec, Privileged Exec

### Command Usage

The **quit** and **exit** commands can both exit the configuration program.

### **Example**

This example shows how to quit a CLI session:

```
Console#quit  
  
Press ENTER to start session  
  
User Access Verification  
  
Username:
```



# CHAPTER 20

## SYSTEM MANAGEMENT

## COMMANDS

---

These commands are used to control system logs, passwords, user names, management options, and display or configure a variety of other system information.

**Table 20-1 System Management Commands**

Command Group	Function	Page
Device Designation	Configures information that uniquely identifies this switch	20-2
System Status	Displays system configuration, active managers, and version information	20-4
Frame Size	Enables support for jumbo frames	20-11
File Management	Manages code image or ECN330-switch configuration files	20-12
Line	Sets communication parameters for the serial port, including baud rate and console time-out	20-21
Event Logging	Controls logging of error messages	20-34
SMTP Alerts	Configures SMTP email alerts	20-43
Time (System Clock)	Sets the system clock automatically via NTP/SNTP server or manually	20-48

# Device Designation Commands

This section describes commands used to configure information that uniquely identifies the switch.

Table 20-2 Device Designation Commands

Command	Function	Mode	Page
hostname	Specifies the host name for the switch	GC	20-2
snmp-server contact	Sets the system contact string	GC	21-5
snmp-server location	Sets the system location string	GC	21-5
switch renumber	Renumbers stack units	PE	20-3

## hostname

This command specifies or modifies the host name for this device. Use the **no** form to restore the default host name.

### Syntax

**hostname** *name*

**no hostname**

*name* - The name of this host. (Maximum length: 255 characters)

### Default Setting

None

### Command Mode

Global Configuration

### Example

```
Console(config)#hostname RD#1
Console(config)#
```

## **switch renumber**

This command resets the switch unit identification numbers in the stack. All stack members are numbered sequentially starting from the top unit for a non-loop stack, or starting from the Master unit for a looped stack.

### **Syntax**

**switch all renumber**

### **Default Setting**

- For non-loop stacking, the top unit is unit 1.
- For loop stacking, the master unit is unit 1.

### **Command Mode**

Global Configuration

### **Example**

This example shows how to renumber all units.

```
Console#switch all renumber
Console#
```

## System Status Commands

This section describes commands used to display system information.

**Table 20-3 System Status Commands**

Command	Function	Mode	Page
show startup-config	Displays the contents of the configuration file (stored in flash memory) that is used to start up the system	PE	20-4
show running-config	Displays the configuration data currently in use	PE	20-6
show system	Displays system information	NE, PE	20-8
show users	Shows all active console and Telnet sessions, including user name, idle time, and IP address of Telnet clients	NE, PE	20-9
show version	Displays version information for the system	NE, PE	20-10

### show startup-config

This command displays the configuration file stored in non-volatile memory that is used to start up the system.

#### Default Setting

None

#### Command Mode

Privileged Exec

#### Command Usage

- Use this command in conjunction with the **show running-config** command to compare the information in running memory to the information stored in non-volatile memory.
- This command displays settings for key command modes. Each mode group is separated by “!” symbols, and includes the configuration

mode command, and corresponding commands. This command displays the following information:

- MAC address for each switch in the stack
- SNMP server settings
- SNMP community strings
- Users (names and access levels)
- VLAN database (VLAN ID, name and state)
- VLAN configuration settings for each interface
- Multiple spanning tree instances (name and interfaces)
- IP address configured for VLANs
- Layer 4 precedence settings
- Routing protocol configuration settings
- Spanning tree settings
- Any configured settings for the console port and Telnet

### Example

```
Console#show startup-config
building startup-config, please wait.....
!<stackingDB>0000000000000000</stackingDB>
!<stackingMac>01_00-20-1a-df-9c-a0_00</stackingMac>
!<stackingMac>02_00-20-1a-df-9e-c0_01</stackingMac>
!<stackingMac>00_00-00-00-00-00-00_00</stackingMac>
!<stackingMac>00_00-00-00-00-00-00_00</stackingMac>
!<stackingMac>00_00-00-00-00-00-00_00</stackingMac>
!<stackingMac>00_00-00-00-00-00-00_00</stackingMac>
!<stackingMac>00_00-00-00-00-00-00_00</stackingMac>
!<stackingMac>00_00-00-00-00-00-00_00</stackingMac>
!<stackingMac>00_00-00-00-00-00-00_00</stackingMac>
!
phymap 00-20-1a-df-9c-a0 00-20-1a-df-9e-c0 00-00-00-00-00-00
00-00-00-00-00-00 00-00-00-00-00-00 00-00-00-00-00-00
00-00-00-00-00-00 00-00-00-00-00-00
!
SNTP server 0.0.0.0 0.0.0.0 0.0.0.0
!
snmp-server community public ro
snmp-server community private rw!
!
username admin access-level 15
username admin password 7 21232f297a57a5a743894a0e4a801fc3
username guest access-level 0
username guest password 7 084e0343a0486ff05530df6c705c8bb4
enable password level 15 7 1b3231655cebb7a1f783eddf27d254ca
!
```

```
vlan database
vlan 1 name DefaultVlan media ethernet state active
!
spanning-tree MST configuration
!
interface ethernet 1/1
  switchport allowed vlan add 1 untagged
  switchport native vlan 1
:
interface vlan 1
  ip address dhcp
!
no map IP precedence
no map IP DSCP
!
line console
!
line VTY
!
end
Console#
```

### Related Commands

show running-config (20-6)

## show running-config

This command displays the configuration information currently in use.

### Default Setting

None

### Command Mode

Privileged Exec

### Command Usage

- Use this command in conjunction with the **show startup-config** command to compare the information in running memory to the information stored in non-volatile memory.
- This command displays settings for key command modes. Each mode group is separated by “!” symbols, and includes the configuration

mode command, and corresponding commands. This command displays the following information:

- MAC address for each switch in the stack
- SNTP server settings
- SNMP community strings
- Users (names, access levels, and encrypted passwords)
- VLAN database (VLAN ID, name and state)
- VLAN configuration settings for each interface
- Multiple spanning tree instances (name and interfaces)
- IP address configured for VLANs
- Layer 4 precedence settings
- Routing protocol configuration settings
- Spanning tree settings
- Any configured settings for the console port and Telnet

### **Example**

```
Console#show running-config
building running-config, please wait....
!<stackingDB>0000000000000000</stackingDB>
!<stackingMac>01_00-30-f1-d4-73-a0_00</stackingMac>
!<stackingMac>00_00-00-00-00-00-00_00</stackingMac>
!<stackingMac>00_00-00-00-00-00-00_00</stackingMac>
!<stackingMac>00_00-00-00-00-00-00_00</stackingMac>
!<stackingMac>00_00-00-00-00-00-00_00</stackingMac>
!<stackingMac>00_00-00-00-00-00-00_00</stackingMac>
!<stackingMac>00_00-00-00-00-00-00_00</stackingMac>
!<stackingMac>00_00-00-00-00-00-00_00</stackingMac>
!
phymap 00-30-f1-d4-73-a0 00-00-00-00-00-00 00-00-00-00-00-00
00-00-00-00-00-00 00-00-00-00-00-00 00-00-00-00-00-00
00-00-00-00-00-00 00-00-00-00-00-00
```

```
!  
SNTP server 0.0.0.0 0.0.0.0 0.0.0.0  
!  
snmp-server community private rw  
snmp-server community public ro  
!  
username admin access-level 15  
username admin password 7 21232f297a57a5a743894a0e4a801fc3  
username guest access-level 0  
username guest password 7 084e0343a0486ff05530df6c705c8bb4  
enable password level 15 7 1b3231655cebb7a1f783eddf27d254ca  
!  
vlan database  
  vlan 1 name DefaultVlan media ethernet state active  
!  
spanning-tree MST-configuration  
!  
interface ethernet 1/1  
  switchport allowed vlan add 1 untagged  
  switchport native vlan 1  
:  
:  
interface vlan 1  
  IP address DHCP  
!  
no map IP precedence  
no map IP DSCP  
!  
line console  
line vty  
!  
end  
Console#
```

### Related Commands

show startup-config (20-4)

## show system

This command displays system information.

### Default Setting

None

### Command Mode

Normal Exec, Privileged Exec

### Command Usage

- For a description of the items shown by this command, refer to “Displaying System Information” on page 4-19.



- The POST results should all display “PASS.” If any POST test indicates “FAIL,” contact your distributor for assistance.

**Example**

```
Console#show system
System Description: 24/48 port 10/100/1000 Stackable Managed Switch
with 2 X 10G
System OID String: 1.3.6.1.4.1.202.20.57
System information
System Up time: 0 days, 1 hours, 23 minutes, and 44.61 seconds
System Name           : [NONE]
System Location        : [NONE]
System Contact         : [NONE]
MAC Address (Unit1):   00-20-1A-DF-9C-A0
MAC Address (Unit2):   00-20-1A-DF-9E-C0
Web Server:            Enabled
Web Server Port:       80
Web Secure Server:     Enabled
Web Secure Server Port: 443
Telnet Server:         Enable
Telnet Server Port:    23
Jumbo Frame:           Disabled

POST Result:
DUMMY Test 1 ..... PASS
UART Loopback Test ..... PASS
DRAM Test ..... PASS
Timer Test ..... PASS
PCI Device 1 Test ..... PASS
I2C Bus Initialization ..... PASS
Switch Int Loopback Test ..... PASS
Fan Speed Test ..... PASS

Done All Pass.
Console#
```

**show users**

Shows all active console and Telnet sessions, including user name, idle time, and IP address of Telnet client.

**Default Setting**

None

**Command Mode**

Normal Exec, Privileged Exec

### Command Usage

The session used to execute this command is indicated by a “\*” symbol next to the Line (i.e., session) index number.

### Example

```
Console#show users
Username accounts:
Username Privilege Public-Key
-----
admin      15      None
guest      0      None
steve      15      RSA

Online users:
Line      Username Idle time (h:m:s) Remote IP addr.
-----
0 console admin 0:14:14
* 1 VTY 0 admin 0:00:00 192.168.1.19
2 SSH 1 steve 0:00:06 192.168.1.19

Web online users:
Line      Remote IP addr Username Idle time (h:m:s).
-----
1 HTTP 192.168.1.19 admin 0:00:00

Console#
```

### show version

This command displays hardware and software version information for the system.

### Default Setting

None

### Command Mode

Normal Exec, Privileged Exec

### Command Usage

See “Displaying Switch Hardware/Software Versions” on page 5-21 for detailed information on the items displayed by this command.

**Example**

```
Console#show version
Unit1
Serial Number:          0000E8900000
Hardware Version:       R01
EPLD Version:           1.02
Number of Ports:        26
Main Power Status:      Up
Redundant Power Status: Not present

Agent (master)
Unit ID:                1
Loader Version:         1.0.0.1
Boot ROM Version:       1.0.0.1
Operation Code Version: 3.30.7.54

Console#
```

**Frame Size Commands**

This section describes commands used to configure the Ethernet frame size on the switch.

**Table 20-4 Frame Size Commands**

Command	Function	Mode	Page
jumbo frame	Enables support for jumbo frames	GC	20-11

**jumbo frame**

This command enables support for jumbo frames. Use the **no** form to disable it.

**Syntax**

[no] jumbo frame

**Default Setting**

Disabled

**Command Mode**

Global Configuration

### Command Usage

- This switch provides more efficient throughput for large sequential data transfers by supporting jumbo frames up to 9216 bytes. Compared to standard Ethernet frames that run only up to 1.5 KB, using jumbo frames significantly reduces the per-packet overhead required to process protocol encapsulation fields.
- To use jumbo frames, both the source and destination end nodes (such as a computer or server) must support this feature. Also, when the connection is operating at full duplex, all switches in the network between the two end nodes must be able to accept the extended frame size. And for half-duplex connections, all devices in the collision domain would need to support jumbo frames.
- The current setting for jumbo frames can be displayed with the **show system** command (page 20-8).

### Example

```
Console(config)#jumbo frame
Console(config)#
```

### Related Commands

show ipv6 mtu (36-27)

## File Management Commands

### Managing Firmware

Firmware can be uploaded and downloaded to or from a TFTP server. By saving runtime code to a file on a TFTP server, that file can later be downloaded to the switch to restore operation. The switch can also be set to use new firmware without overwriting the previous version.

When downloading runtime code, the destination file name can be specified to replace the current image, or the file can be first downloaded using a different name from the current runtime code file, and then the new file set as the startup file.

### Saving or Restoring Configuration Settings

Configuration settings can be uploaded and downloaded to and from a TFTP server. The configuration file can be later downloaded to restore switch settings.

The configuration file can be downloaded under a new file name and then set as the startup file, or the current startup configuration file can be specified as the destination file to directly replace it. Note that the file “Factory\_Default\_Config.cfg” can be copied to the TFTP server, but cannot be used as the destination on the switch.

**Table 20-5 Flash/File Commands**

Command	Function	Mode	Page
copy	Copies a code image or a switch configuration to or from flash memory or a TFTP server	PE	20-13
delete	Deletes a file or code image	PE	20-17
dir	Displays a list of files in flash memory	PE	20-18
whichboot	Displays the files booted	PE	20-19
boot system	Specifies the file or image used to start up the system	GC	20-20

### copy

This command moves (upload/download) a code image or configuration file between the switch’s flash memory and a TFTP server. When you save the system code or configuration settings to a file on a TFTP server, that file can later be downloaded to the switch to restore system operation. The success of the file transfer depends on the accessibility of the TFTP server and the quality of the network connection.

#### Syntax

```
copy file {file | running-config | startup-config | tftp | unit}
copy running-config {file | startup-config | tftp}
copy startup-config {file | running-config | tftp}
copy tftp {file | running-config | startup-config |
https-certificate | public-key}
```

### copy unit file

- **file** - Keyword that allows you to copy to/from a file.
- **running-config** - Keyword that allows you to copy to/from the current running configuration.
- **startup-config** - The configuration used for system initialization.
- **tftp** - Keyword that allows you to copy to/from a TFTP server.
- **https-certificate** - Keyword that allows you to copy the HTTPS secure site certificate.
- **public-key** - Keyword that allows you to copy a SSH key from a TFTP server. (See “Secure Shell Commands” on page 22-21.)
- **unit** - Keyword that allows you to copy to/from a specific unit in the stack.

### Default Setting

None

### Command Mode

Privileged Exec

### Command Usage

- The system prompts for data required to complete the copy command.
- The destination file name should not contain slashes (\ or /), the leading letter of the file name should not be a period (.), and the maximum length for file names on the TFTP server is 127 characters or 31 characters for files on the switch. (Valid characters: A-Z, a-z, 0-9, “.”, “-”, “\_”)
- Due to the size limit of the flash memory, the switch supports only two operation code files.
- The maximum number of user-defined configuration files depends on available memory.
- You can use “Factory\_Default\_Config.cfg” as the source to copy from the factory default configuration file, but you cannot use it as the destination.
- To replace the startup configuration, you must use **startup-config** as the destination.

- Use the **copy file** unit command to copy a local file to another switch in the stack. Use the **copy unit file** command to copy a file from another switch in the stack.
- The Boot ROM and Loader cannot be uploaded or downloaded from the TFTP server. You must follow the instructions in the release notes for new firmware, or contact your distributor for help.
- For information on specifying an https-certificate, see “Replacing the Default Secure-site Certificate” on page 4-85. For information on configuring the switch to use HTTPS for a secure connection, see “ip http secure-server” on page 22-17.

### Example

The following example shows how to download new firmware from a TFTP server:

```
Console#copy tftp file
TFTP server ip address: 10.1.0.19
Choose file type:
  1. config:  2. opcode: <1-2>: 2
Source file name: V3.30.7.54.BIX
Destination file name: V330754
\Write to FLASH Programming.
-Write to FLASH finish.
Success.
Console#
```

The following example shows how to upload the configuration settings to a file on the TFTP server:

```
Console#copy file tftp
Choose file type:
  1. config:  2. opcode: <1-2>: 1
Source file name: startup
TFTP server ip address: 10.1.0.99
Destination file name: startup.01
TFTP completed.
Success.
Console#
```

The following example shows how to copy the running configuration to a startup file.

```
Console#copy running-config file
destination file name: startup
Write to FLASH Programming.
\Write to FLASH finish.
Success.

Console#
```

The following example shows how to download a configuration file:

```
Console#copy tftp startup-config
TFTP server ip address: 10.1.0.99
Source configuration file name: startup.01
Startup configuration file name [startup]:
Write to FLASH Programming.

\Write to FLASH finish.
Success.

Console#
```

This example shows how to copy a secure-site certificate from an TFTP server. It then reboots the switch to activate the certificate:

```
Console#copy tftp https-certificate
TFTP server ip address: 10.1.0.19
Source certificate file name: SS-certificate
Source private file name: SS-private
Private password: *****

Success.
Console#reload
System will be restarted, continue <y/n>? y
```

This example shows how to copy a public-key used by SSH from an TFTP server. Note that public key authentication via SSH is only supported for users configured locally on the switch.

```
Console#copy tftp public-key
TFTP server IP address: 192.168.1.19
Choose public key type:
  1. RSA:  2. DSA: <1-2>: 1
Source file name: steve.pub
Username: steve
TFTP Download
Success.
Write to FLASH Programming.
Success.

Console#
```



## delete

This command deletes a file or image.

### Syntax

**delete** [*unit*:] *filename*

- *filename* - Name of configuration file or code image.
- *unit* - Stack unit. (Range: 1-8)

### Default Setting

None

### Command Mode

Privileged Exec

### Command Usage

- If the file type is used for system startup, then this file cannot be deleted.
- “Factory\_Default\_Config.cfg” cannot be deleted.
- A colon (:) is required after the specified unit number.

### Example

This example shows how to delete the test2.cfg configuration file from flash memory.

```
Console#delete test2.cfg
Console#
```

### Related Commands

dir (20-18)

delete public-key (22-28)

## dir

This command displays a list of files in flash memory.

### Syntax

**dir** [*unit*:] {**boot-rom**: | **config**: | **opcode**:} [*filename*]

The type of file or image to display includes:

- **boot-rom** - Boot ROM (or diagnostic) image file.
- **config** - Switch configuration file.
- **opcode** - Run-time operation code image file.
- *filename* - Name of configuration file or code image. If this file exists but contains errors, information on this file cannot be shown.
- *unit* - Stack unit. (Range: 1-8)

### Default Setting

None

### Command Mode

Privileged Exec

### Command Usage

- If you enter the command **dir** without any parameters, the system displays all files.
- A colon (:) is required after the specified unit number.
- File information is shown below:

**Table 20-6 File Directory Information**

Column Heading	Description
file name	The name of the file.
file type	File types: Boot-Rom, Operation Code, and Config file.
startup	Shows if this file is used when the system is started.
size	The length of the file in bytes.

**Example**

The following example shows how to display all file information:

Console#dir				
(byte)	File name	File type	Startup	Size
-----				
Unit1:				
	D1001	Boot-Rom Image	Y	1531028
	V330754	Operation Code	Y	4408104
	Factory_Default_Config.cfg	Config File	N	455
	startup	Config File	Y	3649
	startup1.cfg	Config File	N	3649
-----				
		Total free space:	25690112	
Console#				

**whichboot**

This command displays which files were booted when the system powered up.

**Syntax**

**whichboot** [*unit*]

*unit* - Stack unit. (Range: 1-8)

**Default Setting**

None

**Command Mode**

Privileged Exec

**Example**

This example shows the information displayed by the **whichboot** command. See the table under the **dir** command for a description of the file information displayed by this command.

Console#whichboot				
	File name	File type	Startup	Size (byte)
-----				
Unit1:				
	D1001	Boot-Rom Image	Y	1531028
	V330754	Operation Code	Y	4408104
	startup	Config File	Y	3649
Console#				

## boot system

This command specifies the file or image used to start up the system.

### Syntax

**boot system** [*unit*:] {**boot-rom** | **config** | **opcode**}: *filename*

The type of file or image to set as a default includes:

- **boot-rom**\* - Boot ROM.
- **config**\* - Configuration file.
- **opcode**\* - Run-time operation code.
- *filename* - Name of configuration file or code image.
- *unit*\* - Stack unit. (Range: 1-8)

\* The colon (:) is required.

### Default Setting

None

### Command Mode

Global Configuration

### Command Usage

- A colon (:) is required after the specified unit number and file type.
- If the file contains an error, it cannot be set as the default file.

### Example

```
Console(config)#boot system config: startup
Console(config)#
```

### Related Commands

dir (20-18)

whichboot (20-19)

# Line Commands

You can access the onboard configuration program by attaching a VT100 compatible device to the server's serial port. These commands are used to set communication parameters for the serial port or Telnet (i.e., a virtual terminal).

**Table 20-7 Line Commands**

Command	Function	Mode	Page
line	Identifies a specific line for configuration and starts the line configuration mode	GC	20-22
login	Enables password checking at login	LC	20-23
password	Specifies a password on a line	LC	20-24
timeout login response	Sets the interval that the system waits for a login attempt	LC	20-25
exec-timeout	Sets the interval that the command interpreter waits until user input is detected	LC	20-26
password-thresh	Sets the password intrusion threshold, which limits the number of failed logon attempts	LC	20-27
silent-time*	Sets the amount of time the management console is inaccessible after the number of unsuccessful logon attempts exceeds the threshold set by the <b>password-thresh</b> command	LC	20-28
databits*	Sets the number of data bits per character that are interpreted and generated by hardware	LC	20-28
parity*	Defines the generation of a parity bit	LC	20-29
speed*	Sets the terminal baud rate	LC	20-30
stopbits*	Sets the number of the stop bits transmitted per byte	LC	20-31
disconnect	Terminates a line connection	PE	20-31
show line	Displays a terminal line's parameters	NE, PE	20-32

\* These commands only apply to the serial port.

## line

This command identifies a specific line for configuration, and to process subsequent line configuration commands.

### Syntax

**line** {**console** | **vty**}

- **console** - Console terminal line.
- **vty** - Virtual terminal for remote console access (i.e., Telnet).

### Default Setting

There is no default line.

### Command Mode

Global Configuration

### Command Usage

Telnet is considered a virtual terminal connection and will be shown as “VTY” in screen displays such as **show users**. However, the serial communication parameters (e.g., databits) do not affect Telnet connections.

### Example

To enter console line mode, enter the following command:

```
Console(config)#line console
Console(config-line)#
```

### Related Commands

show line (20-32)  
show users (20-9)

## login

This command enables password checking at login. Use the **no** form to disable password checking and allow connections without a password.

### Syntax

**login** [**local**]

**no login**

**local** - Selects local password checking. Authentication is based on the user name specified with the **username** command.

### Default Setting

login local

### Command Mode

Line Configuration

### Command Usage

- There are three authentication modes provided by the switch itself at login:
  - **login** selects authentication by a single global password as specified by the **password** line configuration command. When using this method, the management interface starts in Normal Exec (NE) mode.
  - **login local** selects authentication via the user name and password specified by the **username** command (i.e., default setting). When using this method, the management interface starts in Normal Exec (NE) or Privileged Exec (PE) mode, depending on the user's privilege level (0 or 15 respectively).
  - **no login** selects no authentication. When using this method, the management interface starts in Normal Exec (NE) mode.
- This command controls login authentication via the switch itself. To configure user names and passwords for remote authentication servers, you must use the RADIUS or TACACS software installed on those servers.

### Example

```
Console(config-line)#login local
Console(config-line)#
```

### Related Commands

username (22-2)

password (20-24)

## password

This command specifies the password for a line. Use the **no** form to remove the password.

### Syntax

**password** {0 | 7} *password*  
**no password**

- {0 | 7} - 0 means plain password, 7 means encrypted password
- *password* - Character string that specifies the line password.  
(Maximum length: 8 characters plain text, 32 encrypted, case sensitive)

### Default Setting

No password is specified.

### Command Mode

Line Configuration

### Command Usage

- When a connection is started on a line with password protection, the system prompts for the password. If you enter the correct password, the system shows a prompt. You can use the **password-thresh** command to set the number of times a user can enter an incorrect password before the system terminates the line connection and returns the terminal to the idle state.
- The encrypted password is required for compatibility with legacy password settings (i.e., plain text or encrypted) when reading the configuration file during system bootup or when downloading the



configuration file from a TFTP server. There is no need for you to manually configure encrypted passwords.

### Example

```
Console(config-line)#password 0 secret  
Console(config-line)#
```

### Related Commands

login (20-23)

password-thresh (20-27)

## timeout login response

This command sets the interval that the system waits for a user to log into the CLI. Use the **no** form to restore the default setting.

### Syntax

**timeout login response** [*seconds*]

**no timeout login response**

*seconds* - Integer that specifies the timeout interval.  
(Range: 0 - 300 seconds; 0: disabled)

### Default Setting

- CLI: Disabled (0 seconds)
- Telnet: 300 seconds

### Command Mode

Line Configuration

### Command Usage

- If a login attempt is not detected within the timeout interval, the connection is terminated for the session.
- This command applies to both the local console and Telnet connections.
- The timeout for Telnet cannot be disabled.
- Using the command without specifying a timeout restores the default setting.

### Example

To set the timeout to two minutes, enter this command:

```
Console(config-line)#timeout login response 120
Console(config-line)#
```

## exec-timeout

This command sets the interval that the system waits until user input is detected. Use the **no** form to restore the default.

### Syntax

**exec-timeout** [*seconds*]

**no exec-timeout**

*seconds* - Integer that specifies the timeout interval.

(Range: 0 - 65535 seconds; 0: no timeout)

### Default Setting

- CLI: No timeout
- Telnet: 10 minutes

### Command Mode

Line Configuration

### Command Usage

- If user input is detected within the timeout interval, the session is kept open; otherwise the session is terminated.
- This command applies to both the local console and Telnet connections.
- The timeout for Telnet cannot be disabled.
- Using the command without specifying a timeout restores the default setting.

### Example

To set the timeout to two minutes, enter this command:

```
Console(config-line)#exec-timeout 120
Console(config-line)#
```

## password-thresh

This command sets the password intrusion threshold which limits the number of failed logon attempts. Use the **no** form to remove the threshold value.

### Syntax

**password-thresh** [*threshold*]

**no password-thresh**

*threshold* - The number of allowed password attempts.  
(Range: 1-120; 0: no threshold)

### Default Setting

The default value is three attempts.

### Command Mode

Line Configuration

### Command Usage

When the logon attempt threshold is reached, the system interface becomes silent for a specified amount of time before allowing the next logon attempt. (Use the **silent-time** command to set this interval.)

When this threshold is reached for Telnet, the Telnet logon interface shuts down.

### Example

To set the password threshold to five attempts, enter this command:

```
Console(config-line) #password-thresh 5
Console(config-line) #
```

### Related Commands

silent-time (20-28)

## silent-time

This command sets the amount of time the management console is inaccessible after the number of unsuccessful logon attempts exceeds the threshold set by the **password-thresh** command. Use the **no** form to remove the silent time value.

### Syntax

**silent-time** [*seconds*]

**no silent-time**

*seconds* - The number of seconds to disable console response.  
(Range: 0-65535; 0: no silent-time)

### Default Setting

The default value is no silent-time.

### Command Mode

Line Configuration (console only)

### Example

To set the silent time to 60 seconds, enter this command:

```
Console(config-line)#silent-time 60
Console(config-line)#
```

### Related Commands

password-thresh (20-27)

## databits

This command sets the number of data bits per character that are interpreted and generated by the console port. Use the **no** form to restore the default value.

### Syntax

**databits** {**7** | **8**}

**no databits**

- 7 - Seven data bits per character.
- 8 - Eight data bits per character.

**Default Setting**

8 data bits per character

**Command Mode**

Line Configuration

**Command Usage**

The **databits** command can be used to mask the high bit on input from devices that generate 7 data bits with parity. If parity is being generated, specify 7 data bits per character. If no parity is required, specify 8 data bits per character.

**Example**

To specify 7 data bits, enter this command:

```
Console(config-line)#databits 7
Console(config-line)#
```

**Related Commands**

parity (20-29)

**parity**

This command defines the generation of a parity bit. Use the **no** form to restore the default setting.

**Syntax**

**parity** {**none** | **even** | **odd**}

**no parity**

- **none** - No parity
- **even** - Even parity
- **odd** - Odd parity

**Default Setting**

No parity

**Command Mode**

Line Configuration

### Command Usage

Communication protocols provided by devices such as terminals and modems often require a specific parity bit setting.

### Example

To specify no parity, enter this command:

```
Console(config-line)#parity none
Console(config-line)#
```

## speed

This command sets the terminal line's baud rate. This command sets both the transmit (to terminal) and receive (from terminal) speeds. Use the **no** form to restore the default setting.

### Syntax

**speed** *bps*

**no speed**

*bps* - Baud rate in bits per second.

(Options: 9600, 19200, 38400, 57600, 115200 bps, or auto)

### Default Setting

auto

### Command Mode

Line Configuration

### Command Usage

Set the speed to match the baud rate of the device connected to the serial port. Some baud rates available on devices connected to the port might not be supported. The system indicates if the speed you selected is not supported. If you select the “auto” option, the switch will automatically detect the baud rate configured on the attached terminal, and adjust the speed accordingly.

**Example**

To specify 57600 bps, enter this command:

```
Console(config-line)#speed 57600
Console(config-line)#
```

**stopbits**

This command sets the number of the stop bits transmitted per byte. Use the **no** form to restore the default setting.

**Syntax**

**stopbits** {1 | 2}

- 1 - One stop bit
- 2 - Two stop bits

**Default Setting**

1 stop bit

**Command Mode**

Line Configuration

**Example**

To specify 2 stop bits, enter this command:

```
Console(config-line)#stopbits 2
Console(config-line)#
```

**disconnect**

This command terminates an SSH, Telnet, or console connection.

**Syntax**

**disconnect** *session-id*

*session-id* – The session identifier for an SSH, Telnet or console connection. (Range: 0-4)

**Command Mode**

Privileged Exec

### Command Usage

Specifying session identifier “0” will disconnect the console connection. Specifying any other identifiers for an active session will disconnect an SSH or Telnet connection.

### Example

```
Console#disconnect 1
Console#
```

### Related Commands

show ssh (22-31)  
show users (20-9)

## show line

This command displays the terminal line’s parameters.

### Syntax

**show line** [**console** | **vty**]

- **console** - Console terminal line.
- **vty** - Virtual terminal for remote console access (i.e., Telnet).

### Default Setting

Shows all lines

### Command Mode

Normal Exec, Privileged Exec



**Example**

To show all lines, enter this command:

```
Console#show line
Console configuration:
  Password threshold: 3 times
  Interactive timeout: Disabled
  Login timeout: Disabled
  Silent time: Disabled
  Baudrate: auto
  Databits: 8
  Parity: none
  Stopbits: 1

VTY configuration:
  Password threshold: 3 times
  Interactive timeout: 600 sec
  Login timeout: 300 sec
Console#
```

# Event Logging Commands

This section describes commands used to configure event logging on the switch.

**Table 20-8 Event Logging Commands**

Command	Function	Mode	Page
logging on	Controls logging of error messages	GC	20-34
logging history	Limits syslog messages saved to switch memory based on severity	GC	20-35
logging host	Adds a syslog server host IP address that will receive logging messages	GC	20-36
logging facility	Sets the facility type for remote logging of syslog messages	GC	20-37
logging trap	Limits syslog messages saved to a remote server based on severity	GC	20-38
clear log	Clears messages from the logging buffer	PE	20-39
show logging	Displays the state of logging	PE	20-40
show log	Displays log messages	PE	20-42

## logging on

This command controls logging of error messages, sending debug or error messages to a logging process. The **no** form disables the logging process.

### Syntax

[no] **logging on**

### Default Setting

None

### Command Mode

Global Configuration

### Command Usage

The logging process controls error messages saved to switch memory or sent to remote syslog servers. You can use the **logging history**

command to control the type of error messages that are stored in memory. You can use the **logging trap** command to control the type of error messages that are sent to specified syslog servers.

### Example

```
Console(config)#logging on
Console(config)#
```

### Related Commands

logging history (20-35)  
 logging trap (20-38)  
 clear log (20-39)

## logging history

This command limits syslog messages saved to switch memory based on severity. The **no** form returns the logging of syslog messages to the default level.

### Syntax

**logging history {flash | ram} level**  
**no logging history {flash | ram}**

- **flash** - Event history stored in flash memory (i.e., permanent memory).
- **ram** - Event history stored in temporary RAM (i.e., memory flushed on power reset).
- **level** - One of the levels listed below. Messages sent include the selected level down to level 0. (Range: 0-7)

**Table 20-9 Logging Levels**

Level	Severity Name	Description
7	debugging	Debugging messages
6	informational	Informational messages only
5	notifications	Normal but significant condition, such as cold start

\* There are only Level 2, 5 and 6 error messages for the current firmware release.

**Table 20-9 Logging Levels (Continued)**

Level	Severity Name	Description
4	warnings	Warning conditions (e.g., return false, unexpected return)
3	errors	Error conditions (e.g., invalid input, default used)
2	critical	Critical conditions (e.g., memory allocation, or free memory error - resource exhausted)
1	alerts	Immediate action needed
0	emergencies	System unusable

\* There are only Level 2, 5 and 6 error messages for the current firmware release.

### Default Setting

- Flash: errors (level 3 - 0)
- RAM: warnings (level 7 - 0)

### Command Mode

Global Configuration

### Command Usage

The message level specified for flash memory must be a higher priority (i.e., numerically lower) than that specified for RAM.

### Example

```
Console(config)#logging history ram 0
Console(config)#
```

## logging host

This command adds a syslog server host IP address that will receive logging messages. Use the **no** form to remove a syslog server host.

### Syntax

**[no] logging host** *host\_ip\_address*

*host\_ip\_address* - The IP address of a syslog server.

**Default Setting**

None

**Command Mode**

Global Configuration

**Command Usage**

- Use this command more than once to build up a list of host IP addresses.
- The maximum number of host IP addresses allowed is five.

**Example**

```
Console(config)#logging host 10.1.0.3
Console(config)#
```

**logging facility**

This command sets the facility type for remote logging of syslog messages. Use the **no** form to return the type to the default.

**Syntax**

**[no] logging facility *type***

*type* - A number that indicates the facility used by the syslog server to dispatch log messages to an appropriate service. (Range: 16-23)

**Default Setting**

23

**Command Mode**

Global Configuration

**Command Usage**

The command specifies the facility type tag sent in syslog messages. (See RFC 3164.) This type has no effect on the kind of messages reported by the switch. However, it may be used by the syslog server to sort messages or to store messages in the corresponding database.

### Example

```
Console(config)#logging facility 19
Console(config)#
```

## logging trap

This command enables the logging of system messages to a remote server, or limits the syslog messages saved to a remote server based on severity. Use this command without a specified level to enable remote logging. Use the **no** form to disable remote logging.

### Syntax

**logging trap** [*level*]  
**no logging trap**

*level* - One of the syslog severity levels listed in the table on page 20-35. Messages sent include the selected level up through level 0.

### Default Setting

- Disabled
- Level 7 - 0

### Command Mode

Global Configuration

### Command Usage

- Using this command with a specified level enables remote logging and sets the minimum severity level to be saved.
- Using this command without a specified level also enables remote logging, but restores the minimum severity level to the default.

### Example

```
Console(config)#logging trap 4
Console(config)#
```

## **clear log**

This command clears messages from the log buffer.

### **Syntax**

**clear log** [**flash** | **ram**]

- **flash** - Event history stored in flash memory (i.e., permanent memory).
- **ram** - Event history stored in temporary RAM (i.e., memory flushed on power reset).

### **Default Setting**

Flash and RAM

### **Command Mode**

Privileged Exec

### **Example**

```
Console#clear log
Console#
```

### **Related Commands**

show log (20-42)

## show logging

This command displays the configuration settings for logging messages to local switch memory, to an SMTP event handler, or to a remote syslog server.

### Syntax

**show logging {flash | ram | sendmail | trap}**

- **flash** - Displays settings for storing event messages in flash memory (i.e., permanent memory).
- **ram** - Displays settings for storing event messages in temporary RAM (i.e., memory flushed on power reset).
- **sendmail** - Displays settings for the SMTP event handler (page 20-47).
- **trap** - Displays settings for the trap function.

### Default Setting

None

### Command Mode

Privileged Exec



### Example

The following example shows that system logging is enabled, the message level for flash memory is “errors” (i.e., default level 3 - 0), and the message level for RAM is “debugging” (i.e., default level 7 - 0).

```
Console#show logging flash
Syslog logging:      Enabled
History logging in FLASH: level errors
Console#show logging ram
Syslog logging:      Enabled
History logging in RAM: level debugging
Console#
```

**Table 20-10 show logging flash/ram - display description**

Field	Description
Syslog logging	Shows if system logging has been enabled via the <b>logging on</b> command.
History logging in FLASH	The message level(s) reported based on the <b>logging history</b> command.
History logging in RAM	The message level(s) reported based on the <b>logging history</b> command.

The following example displays settings for the trap function.

```
Console#show logging trap
Syslog logging: Enable
REMOTELOG status: disable
REMOTELOG facility type: local use 7
REMOTELOG level type:      Debugging messages
REMOTELOG server IP address: 1.2.3.4
REMOTELOG server IP address: 0.0.0.0
REMOTELOG server IP address: 0.0.0.0
REMOTELOG server IP address: 0.0.0.0
REMOTELOG server IP address: 0.0.0.0
Console#
```

**Table 20-11 show logging trap - display description**

Field	Description
Syslog logging	Shows if system logging has been enabled via the <b>logging on</b> command.
REMOTELOG status	Shows if remote logging has been enabled via the <b>logging trap</b> command.
REMOTELOG facility type	The facility type for remote logging of syslog messages as specified in the <b>logging facility</b> command.

Table 20-11 show logging trap - display description (Continued)

Field	Description
REMOTELOG level type	The severity threshold for syslog messages sent to a remote server as specified in the <b>logging trap</b> command.
REMOTELOG server IP address	The address of syslog servers as specified in the <b>logging host</b> command.

Related Commands

show logging sendmail (20-47)

show log

This command displays the log messages stored in local memory.

Syntax

show log {flash | ram}

- **flash** - Event history stored in flash memory (i.e., permanent memory).
- **ram** - Event history stored in temporary RAM (i.e., memory flushed on power reset).

Default Setting

None

Command Mode

Privileged Exec

Example

The following example shows the event message stored in RAM.

```
Console#show log ram
[1] 00:01:30 2001-01-01
    "VLAN 1 link-up notification."
    level: 6, module: 5, function: 1, and event no.: 1
[0] 00:01:30 2001-01-01
    "Unit 1, Port 1 link-up notification."
    level: 6, module: 5, function: 1, and event no.: 1
Console#
```

## SMTP Alert Commands

These commands configure SMTP event handling, and forwarding of alert messages to the specified SMTP servers and email recipients.

**Table 20-12 SMTP Alert Commands**

Command	Function	Mode	Page
logging sendmail host	SMTP servers to receive alert messages	GC	20-43
logging sendmail level	Severity threshold used to trigger alert messages	GC	20-44
logging sendmail source-email	Email address used for “From” field of alert messages	GC	20-45
logging sendmail destination-email	Email recipients of alert messages	GC	20-45
logging sendmail	Enables SMTP event handling	GC	20-46
show logging sendmail	Displays SMTP event handler settings	NE, PE	20-47

### logging sendmail host

This command specifies SMTP servers that will be sent alert messages. Use the **no** form to remove an SMTP server.

#### Syntax

**[no] logging sendmail host** *ip\_address*

*ip\_address* - IP address of an SMTP server that will be sent alert messages for event handling.

#### Default Setting

None

#### Command Mode

Global Configuration

#### Command Usage

- You can specify up to three SMTP servers for event handling. However, you must enter a separate command to specify each server.

- To send email alerts, the switch first opens a connection, sends all the email alerts waiting in the queue one by one, and finally closes the connection.
- To open a connection, the switch first selects the server that successfully sent mail during the last connection, or the first server configured by this command. If it fails to send mail, the switch selects the next server in the list and tries to send mail again. If it still fails, the system will repeat the process at a periodic interval. (A trap will be triggered if the switch cannot successfully open a connection.)

### Example

```
Console(config)#logging sendmail host 192.168.1.19
Console(config)#
```

## logging sendmail level

This command sets the severity threshold used to trigger alert messages.

### Syntax

**logging sendmail level** *level*

*level* - One of the system message levels (page 20-35). Messages sent include the selected level down to level 0. (Range: 0-7; Default: 7)

### Default Setting

Level 7

### Command Mode

Global Configuration

### Command Usage

The specified level indicates an event threshold. All events at this level or higher will be sent to the configured email recipients. (For example, using Level 7 will report all events from level 7 to level 0.)

### Example

This example will send email alerts for system errors from level 3 through 0.

```
Console(config)#logging sendmail level 3
Console(config)#
```

## logging sendmail source-email

This command sets the email address used for the “From” field in alert messages.

### Syntax

**logging sendmail source-email** *email-address*

*email-address* - The source email address used in alert messages.  
(Range: 1-41 characters)

### Default Setting

None

### Command Mode

Global Configuration

### Command Usage

You may use an symbolic email address that identifies the switch, or the address of an administrator responsible for the switch.

### Example

```
Console(config)#logging sendmail source-email bill@this-company.com  
Console(config)#
```

## logging sendmail destination-email

This command specifies the email recipients of alert messages. Use the **no** form to remove a recipient.

### Syntax

**[no] logging sendmail destination-email** *email-address*

*email-address* - The source email address used in alert messages.  
(Range: 1-41 characters)

### Default Setting

None

### Command Mode

Global Configuration

### Command Usage

You can specify up to five recipients for alert messages. However, you must enter a separate command to specify each recipient.

### Example

```
Console(config)#logging sendmail destination-email  
ted@this-company.com  
Console(config)#
```

## logging sendmail

This command enables SMTP event handling. Use the **no** form to disable this function.

### Syntax

[no] **logging sendmail**

### Default Setting

Enabled

### Command Mode

Global Configuration

### Example

```
Console(config)#logging sendmail  
Console(config)#
```

## **show logging sendmail**

This command displays the settings for the SMTP event handler.

### **Command Mode**

Normal Exec, Privileged Exec

### **Example**

```
Console#show logging sendmail
SMTP servers
-----
192.168.1.19

SMTP minimum severity level: 7

SMTP destination email addresses
-----
ted@this-company.com

SMTP source email address: bill@this-company.com

SMTP status: Enabled
Console#
```

## Time Commands

The system clock can be dynamically set by polling a set of specified time servers (NTP or SNTP). Maintaining an accurate time on the switch enables the system log to record meaningful dates and times for event entries. If the clock is not set, the switch will only record the time from the factory default set at the last bootup.

**Table 20-13 Time Commands**

Command	Function	Mode	Page
sntp client	Accepts time from specified time servers	GC	20-48
sntp server	Specifies one or more time servers	GC	20-49
sntp poll	Sets the interval at which the client polls for time	GC	20-50
show sntp	Shows current SNTP configuration settings	NE, PE	20-51
clock timezone	Sets the time zone for the switch's internal clock	GC	20-52
calendar set	Sets the system date and time	PE	20-53
show calendar	Displays the current date and time setting	NE, PE	20-53

### sntp client

This command enables SNTP client requests for time synchronization from NTP or SNTP time servers specified with the **sntp servers** command. Use the **no** form to disable SNTP client requests.

#### Syntax

[no] sntp client

#### Default Setting

Disabled

#### Command Mode

Global Configuration



## Command Usage

- The time acquired from time servers is used to record accurate dates and times for log events. Without SNTP, the switch only records the time starting from the factory default set at the last bootup (i.e., 00:00:00, Jan. 1, 2001).
- This command enables client time requests to time servers specified via the **sntp servers** command. It issues time synchronization requests based on the interval set via the **sntp poll** command.

## Example

```

Console(config)#sntp server 10.1.0.19
Console(config)#sntp poll 60
Console(config)#sntp client
Console(config)#end
Console#show sntp
Current time: Dec 23 02:52:44 2002
Poll interval: 60
Current mode: unicast
SNTP status : Enabled
SNTP server 137.92.140.80 0.0.0.0 0.0.0.0
Current server: 137.92.140.80
Console#

```

## Related Commands

sntp server (20-49)  
 sntp poll (20-50)  
 show sntp (20-51)

## sntp server

This command sets the IP address of the servers to which SNTP time requests are issued. Use the this command with no arguments to clear all time servers from the current list.

## Syntax

**sntp server** [*ip1* [*ip2* [*ip3*]]]

*ip* - IP address of an time server (NTP or SNTP).  
 (Range: 1 - 3 addresses)

## Default Setting

None

## Command Mode

Global Configuration

## Command Usage

This command specifies time servers from which the switch will poll for time updates when set to SNTP client mode. The client will poll the time servers in the order specified until a response is received. It issues time synchronization requests based on the interval set via the **sntp poll** command.

## Example

```
Console(config)#sntp server 10.1.0.19
Console#
```

## Related Commands

sntp client (20-48)

sntp poll (20-50)

show sntp (20-51)

## sntp poll

This command sets the interval between sending time requests when the switch is set to SNTP client mode. Use the **no** form to restore to the default.

## Syntax

**sntp poll** *seconds*

**no sntp poll**

*seconds* - Interval between time requests. (Range: 16-16384 seconds)

## Default Setting

16 seconds

## Command Mode

Global Configuration

## Example

```
Console(config)#sntp poll 60
Console#
```

**Related Commands**

sntp client (20-48)

**show sntp**

This command displays the current time and configuration settings for the SNTP client, and indicates whether or not the local time has been properly updated.

**Command Mode**

Normal Exec, Privileged Exec

**Command Usage**

This command displays the current time, the poll interval used for sending time synchronization requests, and the current SNTP mode (i.e., unicast).

**Example**

```
Console#show sntp
Current time:  Dec 23 05:13:28 2002
Poll interval: 16
Current mode:  unicast
SNTP status : Enabled
SNTP server 137.92.140.80 0.0.0.0 0.0.0.0
Current server: 137.92.140.80
Console#
```

## clock timezone

This command sets the time zone for the switch's internal clock.

### Syntax

**clock timezone** *name* **hour** *hours* **minute** *minutes* {**before-utc** | **after-utc**}

- *name* - Name of timezone, usually an acronym. (Range: 1-29 characters)
- *hours* - Number of hours before/after UTC. (Range: 0-13 hours)
- *minutes* - Number of minutes before/after UTC. (Range: 0-59 minutes)
- **before-utc** - Sets the local time zone before (east) of UTC.
- **after-utc** - Sets the local time zone after (west) of UTC.

### Default Setting

None

### Command Mode

Global Configuration

### Command Usage

This command sets the local time zone relative to the Coordinated Universal Time (UTC, formerly Greenwich Mean Time or GMT), based on the earth's prime meridian, zero degrees longitude. To display a time corresponding to your local time, you must indicate the number of hours and minutes your time zone is east (before) or west (after) of UTC.

### Example

```
Console(config)#clock timezone Japan hours 8 minute 0 after-UTC
Console(config)#
```

### Related Commands

show snmp (20-51)

## calendar set

This command sets the system clock. It may be used if there is no time server on your network, or if you have not configured the switch to receive signals from a time server.

### Syntax

**calendar set** *hour min sec {day month year | month day year}*

- *hour* - Hour in 24-hour format. (Range: 0 - 23)
- *min* - Minute. (Range: 0 - 59)
- *sec* - Second. (Range: 0 - 59)
- *day* - Day of month. (Range: 1 - 31)
- *month* - **january** | **february** | **march** | **april** | **may** | **june** | **july** | **august** | **september** | **october** | **november** | **december**
- *year* - Year (4-digit). (Range: 2001 - 2100)

### Default Setting

None

### Command Mode

Privileged Exec

### Example

This example shows how to set the system clock to 15:12:34, February 1st, 2002.

```
Console#calendar set 15:12:34 1 February 2002
Console#
```

## show calendar

This command displays the system clock.

### Default Setting

None

### Command Mode

Normal Exec, Privileged Exec

**Example**

```
Console#show calendar
 15:12:34 February 1 2002
Console#
```

# CHAPTER 21

## SNMP COMMANDS

---

Controls access to this switch from management stations using the Simple Network Management Protocol (SNMP), as well as the error types sent to trap managers.

SNMP Version 3 also provides security features that cover message integrity, authentication, and encryption; as well as controlling user access to specific areas of the MIB tree. To use SNMPv3, first set an SNMP engine ID (or accept the default), specify read and write access views for the MIB tree, configure SNMP user groups with the required security model (i.e., SNMP v1, v2c or v3) and security level (i.e., authentication and privacy), and then assign SNMP users to these groups, along with their specific authentication and privacy passwords.

**Table 21-1 SNMP Commands**

Command	Function	Mode	Page
snmp-server	Enables the SNMP agent	GC	21-2
show snmp	Displays the status of SNMP communications	NE, PE	21-2
snmp-server community	Sets up the community access string to permit access to SNMP commands	GC	21-4
snmp-server contact	Sets the system contact string	GC	21-5
snmp-server location	Sets the system location string	GC	21-5
snmp-server host	Specifies the recipient of an SNMP notification operation	GC	21-6
snmp-server enable traps	Enables the device to send SNMP traps (i.e., SNMP notifications)	GC	21-9
snmp-server engine-id	Sets the SNMP engine ID	GC	21-10
show snmp engine-id	Shows the SNMP engine ID	PE	21-12

**Table 21-1 SNMP Commands** (Continued)

Command	Function	Mode	Page
snmp-server view	Adds an SNMP view	GC	21-13
show snmp view	Shows the SNMP views	PE	21-14
snmp-server group	Adds an SNMP group, mapping users to views	GC	21-15
show snmp group	Shows the SNMP groups	PE	21-16
snmp-server user	Adds a user to an SNMP group	GC	21-18
show snmp user	Shows the SNMP users	PE	21-20

**snmp-server**

This command enables the SNMPv3 engine and services for all management clients (i.e., versions 1, 2c, 3). Use the **no** form to disable the server.

**Syntax**

[no] **snmp-server**

**Default Setting**

Enabled

**Command Mode**

Global Configuration

**Example**

```
Console(config)#snmp-server
Console(config)#
```

**show snmp**

This command can be used to check the status of SNMP communications.

**Default Setting**

None

**Command Mode**

Normal Exec, Privileged Exec



## Command Usage

This command provides information on the community access strings, counter information for SNMP input and output protocol data units, and whether or not SNMP logging has been enabled with the **snmp-server enable traps** command.

## Example

```
Console#show snmp

SNMP Agent: enabled

SNMP traps:
  Authentication: enable
    Link-up-down: enable

SNMP communities:
  1. private, and the privilege is read-write
  2. public, and the privilege is read-only

0 SNMP packets input
  0 Bad SNMP version errors
  0 Unknown community name
  0 Illegal operation for community name supplied
  0 Encoding errors
  0 Number of requested variables
  0 Number of altered variables
  0 Get-request PDUs
  0 Get-next PDUs
  0 Set-request PDUs
0 SNMP packets output
  0 Too big errors
  0 No such name errors
  0 Bad values errors
  0 General errors
  0 Response PDUs
  0 Trap PDUs

SNMP logging: disabled
Console#
```

## **snmp-server community**

This command defines the SNMP v1 and v2c community access string. Use the **no** form to remove the specified community string.

### **Syntax**

**snmp-server community** *string* [**ro** | **rw**]

**no snmp-server community** *string*

- *string* - Community string that acts like a password and permits access to the SNMP protocol. (Maximum length: 32 characters, case sensitive; Maximum number of strings: 5)
- **ro** - Specifies read-only access. Authorized management stations are only able to retrieve MIB objects.
- **rw** - Specifies read/write access. Authorized management stations are able to both retrieve and modify MIB objects.

### **Default Setting**

- **public** - Read-only access. Authorized management stations are only able to retrieve MIB objects.
- **private** - Read/write access. Authorized management stations are able to both retrieve and modify MIB objects.

### **Command Mode**

Global Configuration

### **Example**

```
Console(config)#snmp-server community alpha rw
Console(config)#
```

## snmp-server contact

This command sets the system contact string. Use the **no** form to remove the system contact information.

### Syntax

**snmp-server contact** *string*  
**no snmp-server contact**

*string* - String that describes the system contact information.  
(Maximum length: 255 characters)

### Default Setting

None

### Command Mode

Global Configuration

### Example

```
Console(config)#snmp-server contact Paul  
Console(config)#
```

### Related Commands

snmp-server location (21-5)

## snmp-server location

This command sets the system location string. Use the **no** form to remove the location string.

### Syntax

**snmp-server location** *text*  
**no snmp-server location**

*text* - String that describes the system location.  
(Maximum length: 255 characters)

### Default Setting

None

## Command Mode

Global Configuration

## Example

```
Console(config)#snmp-server location WC-19
Console(config)#
```

## Related Commands

snmp-server contact (21-5)

## snmp-server host

This command specifies the recipient of a Simple Network Management Protocol notification operation. Use the **no** form to remove the specified host.

### Syntax

```
snmp-server host host-addr [inform [retry retries | timeout seconds]]
community-string [version {1 | 2c | 3 {auth | noauth | priv}
[udp-port port]}]
```

```
no snmp-server host host-addr
```

- *host-addr* - Internet address of the host (the targeted recipient). (Maximum host addresses: 5 trap destination IP address entries)
- **inform** - Notifications are sent as inform messages. Note that this option is only available for version 2c and 3 hosts. (Default: traps are used)
  - *retries* - The maximum number of times to resend an inform message if the recipient does not acknowledge receipt. (Range: 0-255; Default: 3)
  - *seconds* - The number of seconds to wait for an acknowledgment before resending an inform message. (Range: 0-2147483647 centiseconds; Default: 1500 centiseconds)
- *community-string* - Password-like community string sent with the notification operation to SNMP V1 and V2c hosts. Although you can set this string using the **snmp-server host** command by itself, we recommend that you define this string using the **snmp-server**

**community** command prior to using the **snmp-server host** command. (Maximum length: 32 characters)

- **version** - Specifies whether to send notifications as SNMP Version 1, 2c or 3 traps. (Range: 1, 2c, 3; Default: 1)
- **auth** | **noauth** | **priv** - This group uses SNMPv3 with authentication, no authentication, or with authentication and privacy. See “Simple Network Management Protocol” on page 5-63 for further information about these authentication and encryption options.
- *port* - Host UDP port to use. (Range: 1-65535; Default: 162)

### Default Setting

- Host Address: None
- Notification Type: Traps
- SNMP Version: 1
- UDP Port: 162

### Command Mode

Global Configuration

### Command Usage

- If you do not enter an **snmp-server host** command, no notifications are sent. In order to configure the switch to send SNMP notifications, you must enter at least one **snmp-server host** command. In order to enable multiple hosts, you must issue a separate **snmp-server host** command for each host.
- The **snmp-server host** command is used in conjunction with the **snmp-server enable traps** command. Use the **snmp-server enable traps** command to enable the sending of traps or informs and to specify which SNMP notifications are sent globally. For a host to receive notifications, at least one **snmp-server enable traps** command and the **snmp-server host** command for that host must be enabled.
- Some notification types cannot be controlled with the **snmp-server enable traps** command. For example, some notification types are always enabled.

- Notifications are issued by the switch as trap messages by default. The recipient of a trap message does not send a response to the switch. Traps are therefore not as reliable as inform messages, which include a request for acknowledgement of receipt. Informs can be used to ensure that critical information is received by the host. However, note that informs consume more system resources because they must be kept in memory until a response is received. Informs also add to network traffic. You should consider these effects when deciding whether to issue notifications as traps or informs.

To send an inform to a SNMPv2c host, complete these steps:

1. Enable the SNMP agent (page 21-2).
2. Allow the switch to send SNMP traps; i.e., notifications (page 21-9).
3. Specify the target host that will receive inform messages with the **snmp-server host** command as described in this section.
4. Create a view with the required notification messages (page 21-13).
5. Create a group that includes the required notify view (page 21-15).

To send an inform to a SNMPv3 host, complete these steps:

1. Enable the SNMP agent (page 21-2).
  2. Allow the switch to send SNMP traps; i.e., notifications (page 21-9).
  3. Specify the target host that will receive inform messages with the **snmp-server host** command as described in this section.
  4. Create a view with the required notification messages (page 21-13).
  5. Create a group that includes the required notify view (page 21-15).
  6. Specify a remote engine ID where the user resides (page 21-10).
  7. Then configure a remote user (page 21-18).
- The switch can send SNMP Version 1, 2c or 3 notifications to a host IP address, depending on the SNMP version that the management station supports. If the **snmp-server host** command does not specify the SNMP version, the default is to send SNMP version 1 notifications.
  - If you specify an SNMP Version 3 host, then the community string is interpreted as an SNMP user name. If you use the V3 “auth” or “priv” options, the user name must first be defined with the **snmp-server**

**user** command. Otherwise, the authentication password and/or privacy password will not exist, and the switch will not authorize SNMP access for the host. However, if you specify a V3 host with the “noauth” option, an SNMP user account will be generated, and the switch will authorize SNMP access for the host.

### Example

```
Console(config)#snmp-server host 10.1.19.23 batman
Console(config)#
```

### Related Commands

snmp-server enable traps (21-9)

## snmp-server enable traps

This command enables this device to send Simple Network Management Protocol traps or informs (i.e., SNMP notifications). Use the **no** form to disable SNMP notifications.

### Syntax

[no] **snmp-server enable traps** [**authentication** | **link-up-down**]

- **authentication** - Keyword to issue authentication failure notifications.
- **link-up-down** - Keyword to issue link-up or link-down notifications.

### Default Setting

Issue authentication and link-up-down traps.

### Command Mode

Global Configuration

### Command Usage

- If you do not enter an **snmp-server enable traps** command, no notifications controlled by this command are sent. In order to configure this device to send SNMP notifications, you must enter at least one **snmp-server enable traps** command. If you enter the command with no keywords, both authentication and link-up-down

notifications are enabled. If you enter the command with a keyword, only the notification type related to that keyword is enabled.

- The **snmp-server enable traps** command is used in conjunction with the **snmp-server host** command. Use the **snmp-server host** command to specify which host or hosts receive SNMP notifications. In order to send notifications, you must configure at least one **snmp-server host** command.
- The authentication, link-up, and link-down traps are legacy notifications, and therefore when used for SNMP Version 3 hosts, they must be enabled in conjunction with the corresponding entries in the Notify View assigned by the **snmp-server group** command (page 21-15).

### Example

```
Console(config)#snmp-server enable traps link-up-down
Console(config)#
```

### Related Commands

snmp-server host (21-6)

## snmp-server engine-id

This command configures an identification string for the SNMPv3 engine. Use the **no** form to restore the default.

### Syntax

```
snmp-server engine-id {local | remote {ip-address}} engineid-string  
no snmp-server engine-id {local | remote {ip-address}}
```

- **local** - Specifies the SNMP engine on this switch.
- **remote** - Specifies an SNMP engine on a remote device.
- *ip-address* - The Internet address of the remote device.
- *engineid-string* - String identifying the engine ID.  
(Range: 1-26 hexadecimal characters)

### Default Setting

A unique engine ID is automatically generated by the switch based on its MAC address.



## Command Mode

### Global Configuration

## Command Usage

- An SNMP engine is an independent SNMP agent that resides either on this switch or on a remote device. This engine protects against message replay, delay, and redirection. The engine ID is also used in combination with user passwords to generate the security keys for authenticating and encrypting SNMPv3 packets.
- A remote engine ID is required when using SNMPv3 informs. (See **snmp-server host** on page 21-6.) The remote engine ID is used to compute the security digest for authenticating and encrypting packets sent to a user on the remote host. SNMP passwords are localized using the engine ID of the authoritative agent. For informs, the authoritative SNMP agent is the remote agent. You therefore need to configure the remote agent's SNMP engine ID before you can send proxy requests or informs to it.
- Trailing zeroes need not be entered to uniquely specify a engine ID. In other words, the value "1234" is equivalent to "1234" followed by 22 zeroes.
- A local engine ID is automatically generated that is unique to the switch. This is referred to as the default engine ID. If the local engine ID is deleted or changed, all SNMP users will be cleared. You will need to reconfigure all existing users (page 21-18).

## Example

```
Console(config)#snmp-server engine-id local 12345
Console(config)#snmp-server engineID remote 54321 192.168.1.19
Console(config)#
```

## Related Commands

snmp-server host (21-6)

show snmp engine-id

This command shows the SNMP engine ID.

Command Mode

Privileged Exec

Example

This example shows the default engine ID.

```
Console#show snmp engine-id
Local SNMP engineID: 8000002a8000000000e8666672
Local SNMP engineBoots: 1

Remote SNMP engineID                                IP
address
80000000030004e2b316c54321
192.168.1.19
Console#
```

Table 21-2 show snmp engine-id - display description

Field	Description
Local SNMP engineID	String identifying the engine ID.
Local SNMP engineBoots	The number of times that the engine has (re-)initialized since the snmp EngineID was last configured.
Remote SNMP engineID	String identifying an engine ID on a remote device.
IP address	IP address of the device containing the corresponding remote SNMP engine.

## snmp-server view

This command adds an SNMP view which controls user access to the MIB. Use the **no** form to remove an SNMP view.

### Syntax

**snmp-server view** *view-name oid-tree* {**included** | **excluded**}  
**no snmp-server view** *view-name*

- *view-name* - Name of an SNMP view. (Range: 1-64 characters)
- *oid-tree* - Object identifier of a branch within the MIB tree. Wild cards can be used to mask a specific portion of the OID string. (Refer to the examples.)
- **included** - Defines an included view.
- **excluded** - Defines an excluded view.

### Default Setting

defaultview (includes access to the entire MIB tree)

### Command Mode

Global Configuration

### Command Usage

- Views are used in the **snmp-server group** command to restrict user access to specified portions of the MIB tree.
- The predefined view “defaultview” includes access to the entire MIB tree.

### Examples

This view includes MIB-2.

```
Console(config)#snmp-server view mib-2 1.3.6.1.2.1 included
Console(config)#
```

This view includes the MIB-2 interfaces table, ifDescr. The wild card is used to select all the index values in this table.

```
Console(config)#snmp-server view ifEntry.2 1.3.6.1.2.1.2.2.1.*.2
included
Console(config)#
```

This view includes the MIB-2 interfaces table, and the mask selects all index entries.

```
Console(config)#snmp-server view ifEntry.a 1.3.6.1.2.1.2.2.1.1.*
included
Console(config)#
```

## **show snmp view**

This command shows information on the SNMP views.

### **Command Mode**

Privileged Exec

### **Example**

```
Console#show snmp view
View Name: mib-2
Subtree OID: 1.2.2.3.6.2.1
View Type: included
Storage Type: permanent
Row Status: active

View Name: defaultview
Subtree OID: 1
View Type: included
Storage Type: volatile
Row Status: active

Console#
```

**Table 21-3 show snmp view - display description**

Field	Description
View Name	Name of an SNMP view.
Subtree OID	A branch in the MIB tree.
View Type	Indicates if the view is included or excluded.
Storage Type	The storage type for this entry.
Row Status	The row status of this entry.

## snmp-server group

This command adds an SNMP group, mapping SNMP users to SNMP views. Use the **no** form to remove an SNMP group.

### Syntax

```
snmp-server group groupname {v1 | v2c | v3 {auth | noauth | priv}} [read readview] [write writeview] [notify notifyview]  
no snmp-server group groupname
```

- *groupname* - Name of an SNMP group. (Range: 1-32 characters)
- **v1** | **v2c** | **v3** - Use SNMP version 1, 2c or 3.
- **auth** | **noauth** | **priv** - This group uses SNMPv3 with authentication, no authentication, or with authentication and privacy. See “Simple Network Management Protocol” on page 5-63 for further information about these authentication and encryption options.
- *readview* - Defines the view for read access. (1-64 characters)
- *writeview* - Defines the view for write access. (1-64 characters)
- *notifyview* - Defines the view for notifications. (1-64 characters)

### Default Setting

- Default groups: public<sup>20</sup> (read only), private<sup>21</sup> (read/write)
- *readview* - Every object belonging to the Internet OID space (1.3.6.1).
- *writeview* - Nothing is defined.
- *notifyview* - Nothing is defined.

### Command Mode

Global Configuration

### Command Usage

- A group sets the access policy for the assigned users.
- When authentication is selected, the MD5 or SHA algorithm is used as specified in the **snmp-server user** command.

---

20. No view is defined.

21. Maps to the defaultview.

- When privacy is selected, the DES 56-bit algorithm is used for data encryption.
- For additional information on the notification messages supported by this switch, see “Supported Notification Messages” on page 5-75. Also, note that the authentication, link-up and link-down messages are legacy traps and must therefore be enabled in conjunction with the **snmp-server enable traps** command (page 21-9).

**Example**

```
Console(config)#snmp-server group r&d v3 auth write daily
Console(config)#
```

**show snmp group**

Four default groups are provided – SNMPv1 read-only access and read/write access, and SNMPv2c read-only access and read/write access.

**Command Mode**

Privileged Exec

**Example**

```
Console#show snmp group
Group Name: r&d
Security Model: v3
Read View: defaultview
Write View: daily
Notify View: none
Storage Type: permanent
Row Status: active

Group Name: public
Security Model: v1
Read View: defaultview
Write View: none
Notify View: none
Storage Type: volatile
Row Status: active
```

```

Group Name: public
Security Model: v2c
Read View: defaultview
Write View: none
Notify View: none
Storage Type: volatile
Row Status: active

Group Name: private
Security Model: v1
Read View: defaultview
Write View: defaultview
Notify View: none
Storage Type: volatile
Row Status: active

Group Name: private
Security Model: v2c
Read View: defaultview
Write View: defaultview
Notify View: none
Storage Type: volatile
Row Status: active

Console#

```

**Table 21-4 show snmp group - display description**

Field	Description
groupname	Name of an SNMP group.
security model	The SNMP version.
readview	The associated read view.
writeview	The associated write view.
notifyview	The associated notify view.
storage-type	The storage type for this entry.
Row Status	The row status of this entry.

## **snmp-server user**

This command adds a user to an SNMP group, restricting the user to a specific SNMP Read, Write, or Notify View. Use the **no** form to remove a user from an SNMP group.

### **Syntax**

```
snmp-server user username groupname [remote ip-address] {v1 | v2c |  
v3 [encrypted] [auth {md5 | sha}  
auth-password [priv des56 priv-password]}  
no snmp-server user username {v1 | v2c | v3 | remote}
```

- *username* - Name of user connecting to the SNMP agent.  
(Range: 1-32 characters)
- *groupname* - Name of an SNMP group to which the user is assigned.  
(Range: 1-32 characters)
- **remote** - Specifies an SNMP engine on a remote device.
- *ip-address* - The Internet address of the remote device.
- **v1** | **v2c** | **v3** - Use SNMP version 1, 2c or 3.
- **encrypted** - Accepts the password as encrypted input.
- **auth** - Uses SNMPv3 with authentication.
- **md5** | **sha** - Uses MD5 or SHA authentication.
- *auth-password* - Authentication password. Enter as plain text if the **encrypted** option is not used. Otherwise, enter an encrypted password. (A minimum of eight characters is required.)
- **priv des56** - Uses SNMPv3 with privacy with DES56 encryption.
- *priv-password* - Privacy password. Enter as plain text if the **encrypted** option is not used. Otherwise, enter an encrypted password.

### **Default Setting**

None

### **Command Mode**

Global Configuration



## Command Usage

- The SNMP engine ID is used to compute the authentication/privacy digests from the password. You should therefore configure the engine ID with the **snmp-server engine-id** command before using this configuration command.
- Before you configure a remote user, use the **snmp-server engine-id** command (page 21-10) to specify the engine ID for the remote device where the user resides. Then use the **snmp-server user** command to specify the user and the IP address for the remote device where the user resides. The remote agent's SNMP engine ID is used to compute authentication/privacy digests from the user's password. If the remote engine ID is not first configured, the **snmp-server user** command specifying a remote user will fail.
- SNMP passwords are localized using the engine ID of the authoritative agent. For informs, the authoritative SNMP agent is the remote agent. You therefore need to configure the remote agent's SNMP engine ID before you can send proxy requests or informs to it.

## Example

```
Console(config)#snmp-server user steve group r&d v3 auth md5
greenpeace priv des56 einstien
Console(config)#snmp-server user mark group r&d remote 192.168.1.19
v3 auth md5 greenpeace priv des56 einstien
Console(config)#
```

show snmp user

This command shows information on SNMP users.

Command Mode

Privileged Exec

Example

```
Console#show snmp user
EngineId: 800000ca030030f1df9ca00000
User Name: steve
Authentication Protocol: md5
Privacy Protocol: des56
Storage Type: nonvolatile
Row Status: active

SNMP remote user
EngineId: 80000000030004e2b316c54321
User Name: mark
Authentication Protocol: md5
Privacy Protocol: des56
Storage Type: nonvolatile
Row Status: active

Console#
```

Table 21-5 show snmp user - display description

Field	Description
EngineId	String identifying the engine ID.
User Name	Name of user connecting to the SNMP agent.
Authentication Protocol	The authentication protocol used with SNMPv3.
Privacy Protocol	The privacy protocol used with SNMPv3.
Storage Type	The storage type for this entry.
Row Status	The row status of this entry.
SNMP remote user	A user associated with an SNMP engine on a remote device.

# CHAPTER 22

## USER AUTHENTICATION

## COMMANDS

---

You can configure this switch to authenticate users logging into the system for management access using local or remote authentication methods. You can also enable port-based authentication for network client access using IEEE 802.1X.

**Table 22-1 Authentication Commands**

Command Group	Function	Page
User Accounts	Configures the basic user names and passwords for management access	22-2
Authentication Sequence	Defines logon authentication method and precedence	22-5
RADIUS Client	Configures settings for authentication via a RADIUS server	22-8
TACACS+ Client	Configures settings for authentication via a TACACS+ server	22-13
Web Server Settings	Enables management access via a web browser	22-15
Telnet Server Settings	Enables management access via Telnet	22-20
Secure Shell Settings	Provides secure replacement for Telnet	22-21
Port Security	Configures secure addresses for a port	22-34
Port Authentication	Configures host authentication on specific ports using 802.1X	22-37
IP Filter	Configures IP addresses that are allowed management access	22-48

# User Account Commands

The basic commands required for management access are listed in this section. This switch also includes other options for password checking via the console or a Telnet connection (page 20-21), user authentication via a remote authentication server (page 22-1), and host access authentication for specific ports (page 22-37).

Table 22-2 User Access Commands

Command	Function	Mode	Page
username	Establishes a user name-based authentication system at login	GC	22-2
enable password	Sets a password to control access to the Privileged Exec level	GC	22-4

## username

This command adds named users, requires authentication at login, specifies or changes a user's password (or specify that no password is required), or specifies or changes a user's access level. Use the **no** form to remove a user name.

### Syntax

**username** *name* {**access-level** *level* | **nopassword** |  
    **password** {**0** | **7**} *password*}  
**no username** *name*

- *name* - The name of the user.  
(Maximum length: 8 characters, case sensitive. Maximum users: 16)
- **access-level** *level* - Specifies the user level.  
The device has two predefined privilege levels:  
**0**: Normal Exec, **15**: Privileged Exec.
- **nopassword** - No password is required for this user to log in.
- {**0** | **7**} - **0** means plain password, **7** means encrypted password.

- **password** *password* - The authentication password for the user.  
(Maximum length: 8 characters plain text, 32 encrypted, case sensitive)

### Default Setting

The default access level is Normal Exec.

The factory defaults for the user names and passwords are:

**Table 22-3 Default Login Settings**

username	access-level	password
guest	0	guest
admin	15	admin

### Command Mode

Global Configuration

### Command Usage

The encrypted password is required for compatibility with legacy password settings (i.e., plain text or encrypted) when reading the configuration file during system bootup or when downloading the configuration file from a TFTP server. There is no need for you to manually configure encrypted passwords.

### Example

This example shows how to set the access level and password for a user.

```
Console(config)#username bob access-level 15
Console(config)#username bob password 0 smith
Console(config)#
```

## enable password

After initially logging onto the system, you should set the Privileged Exec password. Remember to record it in a safe place. This command controls access to the Privileged Exec level from the Normal Exec level. Use the **no** form to reset the default password.

### Syntax

**enable password** [*level level*] {**0** | **7**} *password*

**no enable password** [*level level*]

- **level level** - Level 15 for Privileged Exec. (Levels 0-14 are not used.)
- {**0** | **7**} - 0 means plain password, 7 means encrypted password.
- *password* - password for this privilege level.

(Maximum length: 8 characters plain text, 32 encrypted, case sensitive)

### Default Setting

- The default is level 15.
- The default password is “super”

### Command Mode

Global Configuration

### Command Usage

- You cannot set a null password. You will have to enter a password to change the command mode from Normal Exec to Privileged Exec with the **enable** command (page 19-2).
- The encrypted password is required for compatibility with legacy password settings (i.e., plain text or encrypted) when reading the configuration file during system bootup or when downloading the configuration file from a TFTP server. There is no need for you to manually configure encrypted passwords.

### Example

```
Console(config)#enable password level 15 0 admin
Console(config)#
```

**Related Commands**

enable (19-2)

authentication enable (22-7)

## Authentication Sequence

Three authentication methods can be specified to authenticate users logging into the system for management access. The commands in this section can be used to define the authentication method and sequence.

**Table 22-4 Authentication Sequence Commands**

Command	Function	Mode	Page
authentication login	Defines logon authentication method and precedence	GC	22-5
authentication enable	Defines the authentication method and precedence for command mode change	GC	22-7

### authentication login

This command defines the login authentication method and precedence. Use the **no** form to restore the default.

**Syntax****authentication login** {[local] [radius] [tacacs]}**no authentication login**

- **local** - Use local password.
- **radius** - Use RADIUS server password.
- **tacacs** - Use TACACS server password.

**Default Setting**

Local

**Command Mode**

Global Configuration

### Command Usage

- RADIUS uses UDP while TACACS+ uses TCP. UDP only offers best effort delivery, while TCP offers a connection-oriented transport. Also, note that RADIUS encrypts only the password in the access-request packet from the client to the server, while TACACS+ encrypts the entire body of the packet.
- RADIUS and TACACS+ logon authentication assigns a specific privilege level for each user name and password pair. The user name, password, and privilege level must be configured on the authentication server.
- You can specify three authentication methods in a single command to indicate the authentication sequence. For example, if you enter “**authentication login radius tacacs local**,” the user name and password on the RADIUS server is verified first. If the RADIUS server is not available, then authentication is attempted on the TACACS+ server. If the TACACS+ server is not available, the local user name and password is checked.

### Example

```
Console(config)#authentication login radius
Console(config)#
```

### Related Commands

username - for setting the local user names and passwords (22-2)



## **authentication enable**

This command defines the authentication method and precedence to use when changing from Exec command mode to Privileged Exec command mode with the **enable** command (see page 19-2). Use the **no** form to restore the default.

### **Syntax**

**authentication enable** {[local] [radius] [tacacs]}  
**no authentication enable**

- **local** - Use local password only.
- **radius** - Use RADIUS server password only.
- **tacacs** - Use TACACS server password.

### **Default Setting**

Local

### **Command Mode**

Global Configuration

### **Command Usage**

- RADIUS uses UDP while TACACS+ uses TCP. UDP only offers best effort delivery, while TCP offers a connection-oriented transport. Also, note that RADIUS encrypts only the password in the access-request packet from the client to the server, while TACACS+ encrypts the entire body of the packet.
- RADIUS and TACACS+ logon authentication assigns a specific privilege level for each user name and password pair. The user name, password, and privilege level must be configured on the authentication server.
- You can specify three authentication methods in a single command to indicate the authentication sequence. For example, if you enter “**authentication enable radius tacacs local**,” the user name and password on the RADIUS server is verified first. If the RADIUS server is not available, then authentication is attempted on the TACACS+ server. If the TACACS+ server is not available, the local user name and password is checked.

**Example**

Console(config)#authentication enable radius  
Console(config)#

**Related Commands**

enable password - sets the password for changing command modes  
(22-4)

**RADIUS Client**

Remote Authentication Dial-in User Service (RADIUS) is a logon authentication protocol that uses software running on a central server to control access to RADIUS-aware devices on the network. An authentication server contains a database of multiple user name/password pairs with associated privilege levels for each user or group that require management access to a switch.

**Table 22-5 RADIUS Client Commands**

Command	Function	Mode	Page
radius-server host	Specifies the RADIUS server	GC	22-9
radius-server port	Sets the RADIUS server network port	GC	22-10
radius-server key	Sets the RADIUS encryption key	GC	22-10
radius-server retransmit	Sets the number of retries	GC	22-11
radius-server timeout	Sets the interval between sending authentication requests	GC	22-11
show radius-server	Shows the current RADIUS settings	PE	22-12

## radius-server host

This command specifies primary and backup RADIUS servers and authentication parameters that apply to each server. Use the **no** form to restore the default values.

### Syntax

```
[no] radius-server index host {host_ip_address | host_alias}  
[auth-port auth_port] [timeout timeout] [retransmit retransmit]  
[key key]
```

- *index* - Allows you to specify up to five servers. These servers are queried in sequence until a server responds or the retransmit period expires.
- *host\_ip\_address* - IP address of server.
- *host\_alias* - Symbolic name of server. (Maximum length: 20 characters)
- *port\_number* - RADIUS server UDP port used for authentication messages. (Range: 1-65535)
- *timeout* - Number of seconds the switch waits for a reply before resending a request. (Range: 1-65535)
- *retransmit* - Number of times the switch will try to authenticate logon access via the RADIUS server. (Range: 1-30)
- *key* - Encryption key used to authenticate logon access for client. Do not use blank spaces in the string. (Maximum length: 48 characters)

### Default Setting

- **auth-port** - 1812
- **timeout** - 5 seconds
- **retransmit** - 2

### Command Mode

Global Configuration

### Example

```
Console(config)#radius-server 1 host 192.168.1.20 port 181 timeout  
10 retransmit 5 key green  
Console(config)#
```

## radius-server port

This command sets the RADIUS server network port. Use the **no** form to restore the default.

### Syntax

**radius-server port** *port\_number*  
**no radius-server port**

*port\_number* - RADIUS server UDP port used for authentication messages. (Range: 1-65535)

### Default Setting

1812

### Command Mode

Global Configuration

### Example

```
Console(config)#radius-server port 181
Console(config)#
```

## radius-server key

This command sets the RADIUS encryption key. Use the **no** form to restore the default.

### Syntax

**radius-server key** *key\_string*  
**no radius-server key**

*key\_string* - Encryption key used to authenticate logon access for client. Do not use blank spaces in the string. (Maximum length: 48 characters)

### Default Setting

None

### Command Mode

Global Configuration

**Example**

```
Console(config)#radius-server key green
Console(config)#
```

**radius-server retransmit**

This command sets the number of retries. Use the **no** form to restore the default.

**Syntax**

**radius-server retransmit** *number\_of\_retries*  
**no radius-server retransmit**

*number\_of\_retries* - Number of times the switch will try to authenticate logon access via the RADIUS server. (Range: 1 - 30)

**Default Setting**

2

**Command Mode**

Global Configuration

**Example**

```
Console(config)#radius-server retransmit 5
Console(config)#
```

**radius-server timeout**

This command sets the interval between transmitting authentication requests to the RADIUS server. Use the **no** form to restore the default.

**Syntax**

**radius-server timeout** *number\_of\_seconds*  
**no radius-server timeout**

*number\_of\_seconds* - Number of seconds the switch waits for a reply before resending a request. (Range: 1-65535)

**Default Setting**

5

### Command Mode

Global Configuration

### Example

```
Console(config)#radius-server timeout 10
Console(config)#
```

## show radius-server

This command displays the current settings for the RADIUS server.

### Default Setting

None

### Command Mode

Privileged Exec

### Example

```
Console#show radius-server

Remote RADIUS server configuration:

Global settings:
  Communication key with RADIUS server: *****
  Server port number: 1812
  Retransmit times: 2
  Request timeout: 5

Server 1:
  Server IP address: 192.168.1.1
  Communication key with RADIUS server: *****
  Server port number: 1812
  Retransmit times: 2
  Request timeout: 5

Console#
```

## TACACS+ Client

Terminal Access Controller Access Control System (TACACS+) is a logon authentication protocol that uses software running on a central server to control access to TACACS-aware devices on the network. An authentication server contains a database of multiple user name/password pairs with associated privilege levels for each user or group that require management access to a switch.

**Table 22-6 TACACS+ Client Commands**

Command	Function	Mode	Page
tacacs-server host	Specifies the TACACS+ server	GC	22-13
tacacs-server port	Specifies the TACACS+ server network port	GC	22-14
tacacs-server key	Sets the TACACS+ encryption key	GC	22-14
show tacacs-server	Shows the current TACACS+ settings	GC	22-15

### tacacs-server host

This command specifies the TACACS+ server. Use the **no** form to restore the default.

#### Syntax

**tacacs-server host** *host\_ip\_address*

**no tacacs-server host**

*host\_ip\_address* - IP address of a TACACS+ server.

#### Default Setting

10.11.12.13

#### Command Mode

Global Configuration

#### Example

```
Console(config)#tacacs-server host 192.168.1.25
Console(config)#
```

## **tacacs-server port**

This command specifies the TACACS+ server network port. Use the **no** form to restore the default.

### **Syntax**

**tacacs-server port** *port\_number*  
**no tacacs-server port**

*port\_number* - TACACS+ server TCP port used for authentication messages. (Range: 1-65535)

### **Default Setting**

49

### **Command Mode**

Global Configuration

### **Example**

```
Console(config)#tacacs-server port 181
Console(config)#
```

## **tacacs-server key**

This command sets the TACACS+ encryption key. Use the **no** form to restore the default.

### **Syntax**

**tacacs-server key** *key\_string*  
**no tacacs-server key**

*key\_string* - Encryption key used to authenticate logon access for the client. Do not use blank spaces in the string.  
(Maximum length: 48 characters)

### **Default Setting**

None

### **Command Mode**

Global Configuration



**Example**

```
Console(config)#tacacs-server key green
Console(config)#
```

**show tacacs-server**

This command displays the current settings for the TACACS+ server.

**Default Setting**

None

**Command Mode**

Privileged Exec

**Example**

```
Console#show tacacs-server
Remote TACACS server configuration:
Server IP address:          10.11.12.13
Communication key with TACACS server: *****
Server port number:        49
Console#
```

## Web Server Commands

This section describes commands used to configure web browser management access to the switch.

**Table 22-7 Web Server Commands**

Command	Function	Mode	Page
ip http port	Specifies the port to be used by the web browser interface	GC	22-16
ip http server	Allows the switch to be monitored or configured from a browser	GC	22-16
ip http secure-server	Enables HTTPS (HTTP/SSL) for encrypted communications	GC	22-17
ip http secure-port	Specifies the UDP port number for HTTPS	GC	22-18

## ip http port

This command specifies the TCP port number used by the web browser interface. Use the **no** form to use the default port.

### Syntax

**ip http port** *port-number*

**no ip http port**

*port-number* - The TCP port to be used by the browser interface.  
(Range: 1-65535)

### Default Setting

80

### Command Mode

Global Configuration

### Example

```
Console(config)#ip http port 769
Console(config)#
```

### Related Commands

ip http server (22-16)

## ip http server

This command allows this device to be monitored or configured from a browser. Use the **no** form to disable this function.

### Syntax

[no] **ip http server**

### Default Setting

Enabled

### Command Mode

Global Configuration

**Example**

```
Console(config)#ip http server
Console(config)#
```

**Related Commands**

ip http port (22-16)

**ip http secure-server**

This command enables the secure hypertext transfer protocol (HTTPS) over the Secure Socket Layer (SSL), providing secure access (i.e., an encrypted connection) to the switch's web interface. Use the **no** form to disable this function.

**Syntax**

[no] ip http secure-server

**Default Setting**

Enabled

**Command Mode**

Global Configuration

**Command Usage**

- Both HTTP and HTTPS service can be enabled independently on the switch. However, you cannot configure the HTTP and HTTPS servers to use the same UDP port.
- If you enable HTTPS, you must indicate this in the URL that you specify in your browser: **https://device[:port\_number]**
- When you start HTTPS, the connection is established in this way:
  - The client authenticates the server using the server's digital certificate.
  - The client and server negotiate a set of security protocols to use for the connection.
  - The client and server generate session keys for encrypting and decrypting data.

- The client and server establish a secure encrypted connection. A padlock icon should appear in the status bar for Internet Explorer 5.x and Netscape Navigator 6.2 or later versions.
- The following web browsers and operating systems currently support HTTPS:

**Table 22-8 HTTPS System Support**

Web Browser	Operating System
Internet Explorer 5.0 or later	Windows 98, Windows NT (with service pack 6a), Windows 2000, Windows XP
Netscape Navigator 6.2 or later	Windows 98, Windows NT (with service pack 6a), Windows 2000, Windows XP, Solaris 2.6

- To specify a secure-site certificate, see “Replacing the Default Secure-site Certificate” on page 4-85. Also refer to the **copy** command on page 20-13.

## Example

```
Console(config)#ip http secure-server
Console(config)#
```

## Related Commands

**ip http secure-port** (22-18)  
**copy tftp https-certificate** (20-13)

## ip http secure-port

This command specifies the UDP port number used for HTTPS connection to the switch’s web interface. Use the **no** form to restore the default port.

### Syntax

**ip http secure-port** *port\_number*  
**no ip http secure-port**

*port\_number* – The UDP port used for HTTPS.  
 (Range: 1-65535)

## Default Setting

443

## Command Mode

Global Configuration

## Command Usage

- You cannot configure the HTTP and HTTPS servers to use the same port.
- If you change the HTTPS port number, clients attempting to connect to the HTTPS server must specify the port number in the URL, in this format: **https://device:port\_number**

## Example

```
Console(config)#ip http secure-port 1000
Console(config)#
```

## Related Commands

ip http secure-server (22-17)

# Telnet Server Commands

This section describes commands used to configure Telnet management access to the switch.

Table 22-9 Telnet Server Commands

Command	Function	Mode	Page
ip telnet server	Allows the switch to be monitored or configured from Telnet; also specifies the port to be used by the Telnet interface	GC	22-16

## ip telnet server

This command allows this device to be monitored or configured from Telnet. It also specifies the TCP port number used by the Telnet interface. Use the **no** form without the “port” keyword to disable this function. Use the **no** from with the “port” keyword to use the default port.

### Syntax

**ip telnet server** [**port** *port-number*]  
**no telnet server** [**port**]

- **port** - The TCP port used by the Telnet interface.
- *port-number* - The TCP port number to be used by the browser interface. (Range: 1-65535)

### Default Setting

- Server: Enabled
- Server Port: 23

### Command Mode

Global Configuration

### Example

```
Console(config)#ip telnet server
Console(config)#ip telnet port 123
Console(config)#
```

## Secure Shell Commands

This section describes the commands used to configure the SSH server. Note that you also need to install a SSH client on the management station when using this protocol to configure the switch.

**Note:** The switch supports both SSH Version 1.5 and 2.0 clients.

**Table 22-10 Secure Shell Commands**

Command	Function	Mode	Page
ip ssh server	Enables the SSH server on the switch	GC	22-24
ip ssh timeout	Specifies the authentication timeout for the SSH server	GC	22-25
ip ssh authentication-retries	Specifies the number of retries allowed by a client	GC	22-26
ip ssh server-key size	Sets the SSH server key size	GC	22-27
copy tftp public-key	Copies the user's public key from a TFTP server to the switch	PE	20-13
delete public-key	Deletes the public key for the specified user	PE	22-28
ip ssh crypto host-key generate	Generates the host key	PE	22-28
ip ssh crypto zeroize	Clear the host key from RAM	PE	22-29
ip ssh save host-key	Saves the host key from RAM to flash memory	PE	22-30
disconnect	Terminates a line connection	PE	20-31
show ip ssh	Displays the status of the SSH server and the configured values for authentication timeout and retries	PE	22-31
show ssh	Displays the status of current SSH sessions	PE	22-31
show public-key	Shows the public key for the specified user or for the host	PE	22-32
show users	Shows SSH users, including privilege level and public key type	PE	20-9

### *Configuration Guidelines*

The SSH server on this switch supports both password and public key authentication. If password authentication is specified by the SSH client, then the password can be authenticated either locally or via a RADIUS or TACACS+ remote authentication server, as specified by the **authentication login** command on page 22-5. If public key authentication is specified by the client, then you must configure authentication keys on both the client and the switch as described in the following section. Note that regardless of whether you use public key or password authentication, you still have to generate authentication keys on the switch and enable the SSH server.

To use the SSH server, complete these steps:

1. Generate a Host Key Pair – Use the **ip ssh crypto host-key generate** command to create a host public/private key pair.
2. Provide Host Public Key to Clients – Many SSH client programs automatically import the host public key during the initial connection setup with the switch. Otherwise, you need to manually create a known hosts file on the management station and place the host public key in it. An entry for a public key in the known hosts file would appear similar to the following example:  

```
10.1.0.54 1024 35 15684995401867669259333946775054617325313674890836547254
15020245593199868544358361651999923329781766065830956 10825913212890233
76546801726272571413428762941301196195566782 59566410486957427888146206
519417467729848654686157177393901647793559423035774130980227370877945452408397
1752646358058176716709574804776117
```
3. Import Client's Public Key to the Switch – Use the **copy tftp public-key** command to copy a file containing the public key for all the SSH client's granted management access to the switch. (Note that these clients must be configured locally on the switch with the **username** command as described on page 22-2.) The clients are subsequently authenticated using these keys. The current firmware only accepts public key files based on standard UNIX format as shown in the following example for an RSA key:



```
1024 35 1341081685609893921040944920155425347631641921872958921143173880
055536161631051775940838686311092912322268285192543746031009371877211996963178
136627741416898513204911720483033925432410163799759237144901193800609025394840
848271781943722884025331159521348610229029789827213532671316294325328189150453
06393916643 steve@192.168.1.19
```

4. Set the Optional Parameters – Set other optional parameters, including the authentication timeout, the number of retries, and the server key size.
5. Enable SSH Service – Use the **ip ssh server** command to enable the SSH server on the switch.
6. *Authentication* – One of the following authentication methods is employed:

*Password Authentication (for SSH v1.5 or V2 Clients)*

- a. The client sends its password to the server.
- b. The switch compares the client's password to those stored in memory.
- c. If a match is found, the connection is allowed.

**Note:** To use SSH with only password authentication, the host public key must still be given to the client, either during initial connection or manually entered into the known host file. However, you do not need to configure the client's keys.

*Public Key Authentication* – When an SSH client attempts to contact the switch, the SSH server uses the host key pair to negotiate a session key and encryption method. Only clients that have a private key corresponding to the public keys stored on the switch can access it. The following exchanges take place during this process:

*Authenticating SSH v1.5 Clients*

- a. The client sends its RSA public key to the switch.
- b. The switch compares the client's public key to those stored in memory.

- c. If a match is found, the switch uses its secret key to generate a random 256-bit string as a challenge, encrypts this string with the user's public key, and sends it to the client.
- d. The client uses its private key to decrypt the challenge string, computes the MD5 checksum, and sends the checksum back to the switch.
- e. The switch compares the checksum sent from the client against that computed for the original string it sent. If the two checksums match, this means that the client's private key corresponds to an authorized public key, and the client is authenticated.

### *Authenticating SSH v2 Clients*

- a. The client first queries the switch to determine if DSA public key authentication using a preferred algorithm is acceptable.
- b. If the specified algorithm is supported by the switch, it notifies the client to proceed with the authentication process. Otherwise, it rejects the request.
- c. The client sends a signature generated using the private key to the switch.
- d. When the server receives this message, it checks whether the supplied key is acceptable for authentication, and if so, it then checks whether the signature is correct. If both checks succeed, the client is authenticated.

**Note:** The SSH server supports up to four client sessions. The maximum number of client sessions includes both current Telnet sessions and SSH sessions.

## **ip ssh server**

This command enables the Secure Shell (SSH) server on this switch. Use the **no** form to disable this service.

### **Syntax**

**[no] ip ssh server**

**Default Setting**

Disabled

**Command Mode**

Global Configuration

**Command Usage**

- The SSH server supports up to four client sessions. The maximum number of client sessions includes both current Telnet sessions and SSH sessions.
- The SSH server uses DSA or RSA for key exchange when the client first establishes a connection with the switch, and then negotiates with the client to select either DES (56-bit) or 3DES (168-bit) for data encryption.
- You must generate DSA and RSA host keys before enabling the SSH server.

**Example**

```
Console#ip ssh crypto host-key generate dsa
Console#configure
Console(config)#ip ssh server
Console(config)#
```

**Related Commands**

ip ssh crypto host-key generate (22-28)  
show ssh (22-31)

**ip ssh timeout**

This command configures the timeout for the SSH server. Use the **no** form to restore the default setting.

**Syntax**

**ip ssh timeout** *seconds*  
**no ip ssh timeout**

*seconds* – The timeout for client response during SSH negotiation.  
(Range: 1-120)

### Default Setting

10 seconds

### Command Mode

Global Configuration

### Command Usage

The **timeout** specifies the interval the switch will wait for a response from the client during the SSH negotiation phase. Once an SSH session has been established, the timeout for user input is controlled by the **exec-timeout** command for vty sessions.

### Example

```
Console(config)#ip ssh timeout 60
Console(config)#
```

### Related Commands

exec-timeout (20-26)

show ip ssh (22-31)

## ip ssh authentication-retries

This command configures the number of times the SSH server attempts to reauthenticate a user. Use the **no** form to restore the default setting.

### Syntax

**ip ssh authentication-retries** *count*

**no ip ssh authentication-retries**

*count* – The number of authentication attempts permitted after which the interface is reset. (Range: 1-5)

### Default Setting

3

### Command Mode

Global Configuration

**Example**

```
Console(config)#ip ssh authentication-retires 2
Console(config)#
```

**Related Commands**

show ip ssh (22-31)

**ip ssh server-key size**

This command sets the SSH server key size. Use the **no** form to restore the default setting.

**Syntax**

**ip ssh server-key size** *key-size*  
**no ip ssh server-key size**

*key-size* – The size of server key. (Range: 512-896 bits)

**Default Setting**

768 bits

**Command Mode**

Global Configuration

**Command Usage**

The server key is a private key that is never shared outside the switch.

The host key is shared with the SSH client, and is fixed at 1024 bits.

**Example**

```
Console(config)#ip ssh server-key size 512
Console(config)#
```

### delete public-key

This command deletes the specified user's public key.

#### Syntax

**delete public-key** *username* [**dsa** | **rsa**]

- *username* – Name of an SSH user. (Range: 1-8 characters)
- **dsa** – DSA public key type.
- **rsa** – RSA public key type.

#### Default Setting

Deletes both the DSA and RSA key.

#### Command Mode

Privileged Exec

#### Example

```
Console#delete public-key admin dsa
Console#
```

### ip ssh crypto host-key generate

This command generates the host key pair (i.e., public and private).

#### Syntax

**ip ssh crypto host-key generate** [**dsa** | **rsa**]

- **dsa** – DSA (Version 2) key type.
- **rsa** – RSA (Version 1) key type.

#### Default Setting

Generates both the DSA and RSA key pairs.

#### Command Mode

Privileged Exec

#### Command Usage

- The switch uses only RSA Version 1 for SSHv1.5 clients and DSA Version 2 for SSHv2 clients.

- This command stores the host key pair in memory (i.e., RAM). Use the **ip ssh save host-key** command to save the host key pair to flash memory.
- Some SSH client programs automatically add the public key to the known hosts file as part of the configuration process. Otherwise, you must manually create a known hosts file and place the host public key in it.
- The SSH server uses this host key to negotiate a session key and encryption method with the client trying to connect to it.

### Example

```
Console#ip ssh crypto host-key generate dsa
Console#
```

### Related Commands

ip ssh crypto zeroize (22-29)  
ip ssh save host-key (22-30)

## ip ssh crypto zeroize

This command clears the host key from memory (i.e. RAM).

### Syntax

**ip ssh crypto zeroize [dsa | rsa]**

- **dsa** – DSA key type.
- **rsa** – RSA key type.

### Default Setting

Clears both the DSA and RSA key.

### Command Mode

Privileged Exec

### Command Usage

- This command clears the host key from volatile memory (RAM). Use the **no ip ssh save host-key** command to clear the host key from flash memory.

- The SSH server must be disabled before you can execute this command.

### Example

```
Console#ip ssh crypto zeroize dsa
Console#
```

### Related Commands

ip ssh crypto host-key generate (22-28)  
ip ssh save host-key (22-30)  
no ip ssh server (22-24)

## ip ssh save host-key

This command saves the host key from RAM to flash memory.

### Syntax

**ip ssh save host-key [dsa | rsa]**

- **dsa** – DSA key type.
- **rsa** – RSA key type.

### Default Setting

Saves both the DSA and RSA key.

### Command Mode

Privileged Exec

### Example

```
Console#ip ssh save host-key dsa
Console#
```

### Related Commands

ip ssh crypto host-key generate (22-28)



## show ip ssh

This command displays the connection settings used when authenticating client access to the SSH server.

### Command Mode

Privileged Exec

### Example

```
Console#show ip ssh
SSH Enabled - version 2.0
Negotiation timeout: 120 secs; Authentication retries: 3
Server key size: 768 bits
Console#
```

## show ssh

This command displays the current SSH server connections.

### Command Mode

Privileged Exec

### Example

```
Console#show ssh
Connection Version State Username Encryption
0 2.0 Session-Started admin ctos aes128-cbc-hmac-md5
stoc aes128-cbc-hmac-md5
Console#
```

**Table 22-11 show ssh - display description**

Field	Description
Session	The session number. (Range: 0-3)
Version	The Secure Shell version number.
State	The authentication negotiation state. (Values: Negotiation-Started, Authentication-Started, Session-Started)
Username	The user name of the client.

**Table 22-11 show ssh - display description** (Continued)

Field	Description
Encryption	<p>The encryption method is automatically negotiated between the client and server.</p> <p>Options for SSHv1.5 include: DES, 3DES</p> <p>Options for SSHv2.0 can include different algorithms for the client-to-server (ctos) and server-to-client (stoc):</p> <p>aes128-cbc-hmac-sha1 aes192-cbc-hmac-sha1 aes256-cbc-hmac-sha1 3des-cbc-hmac-sha1 blowfish-cbc-hmac-sha1 aes128-cbc-hmac-md5 aes192-cbc-hmac-md5 aes256-cbc-hmac-md5 3des-cbc-hmac-md5 blowfish-cbc-hmac-md5</p> <p><i>Terminology:</i></p> <p>DES – Data Encryption Standard (56-bit key) 3DES – Triple-DES (Uses three iterations of DES, 112-bit key) aes – Advanced Encryption Standard (160 or 224-bit key) blowfish – Blowfish (32-448 bit key) cbc – cypher-block chaining sha1 – Secure Hash Algorithm 1 (160-bit hashes) md5 – Message Digest algorithm number 5 (128-bit hashes)</p>

**show public-key**

This command shows the public key for the specified user or for the host.

**Syntax**

**show public-key** [user *[username]*] | host]

*username* – Name of an SSH user. (Range: 1-8 characters)

**Default Setting**

Shows all public keys.

**Command Mode**

Privileged Exec

**Command Usage**

- If no parameters are entered, all keys are displayed. If the user keyword is entered, but no user name is specified, then the public keys for all users are displayed.
- When an RSA key is displayed, the first field indicates the size of the host key (e.g., 1024), the second field is the encoded public exponent (e.g., 35), and the last string is the encoded modulus. When a DSA key is displayed, the first field indicates that the encryption method used by SSH is based on the Digital Signature Standard (DSS), and the last string is the encoded modulus.

**Example**

```

Console#show public-key host
Host:
RSA:
1024 65537
13236940658254764031382795526536375927835525327972629521130241
0719421061655759424590939236096954050362775257556251003866130989393
8345231033280214988866192159556859887989191950588394018138744046890
8779160305837768185490002831341625008348718449522087429212255691665
6552963281635169640408315547660664151657116381
DSA:
ssh-dss AAB3NzaC1kc3MAAACBAPWKZTPbsRIB8ydEXcxM3dyV/yrDbKStIlnzD/
Dg0h2Hxc YV44sXZ2JXhamLK6P8bvuiyacWbUW/a4Patp1KMSdqsKeh3hKoA3vRRSy1
N2XFfAKx15fwFfvJlPdOkFgzLGMinvSNYQwiQXbktBH0Z4mUZpE85PWxDZMaCNBPjBr
RAAAAFQChb4vsdfQGNiJwbvwrNLaQ77isiwAAAIEAsy5YWDC99ebYHNRj5kh47wY4i8
cZvH+/p9cnrfwFTMU01VFDly3IR 2G395Nly5Qd7ZDxfA9mCOft/yyEfbbobMJZi8oG
CstSNOxrZZVnMqWrTYfdrKX7YKBw/Kjw6BmiFq70+jAhf1Dg451oAc27s6TLdtny1
wRq/ow2eTCD5nekAAACBAJ8rMccXTxHLFAczWS7EjOyDbsl0BfPuSAb4oAsyJkKX
VYNLQkTLZfcFRu41bS2KV5LAwecsigF/+DjKGWtPNIQqabKgYcW2o/dVzX4Gg+yqdTl
YmGA7fHGm8ARGeiG4ssFKy4Z6DmYPXFum1Yg0fhLwuHpOSKdxT3kk475S7 w0W
Console#

```

# Port Security Commands

These commands can be used to enable port security on a port. When using port security, the switch stops learning new MAC addresses on the specified port when it has reached a configured maximum number. Only incoming traffic with source addresses already stored in the dynamic or static address table for this port will be authorized to access the network. The port will drop any incoming frames with a source MAC address that is unknown or has been previously learned from another port. If a device with an unauthorized MAC address attempts to use the switch port, the intrusion will be detected and the switch can automatically take action by disabling the port and sending a trap message.

Table 22-12 Port Security Commands

Command	Function	Mode	Page
port security	Configures a secure port	IC	22-35
mac-address-table static	Maps a static address to a port in a VLAN	GC	28-2
show mac-address-table	Displays entries in the bridge-forwarding database	PE	28-4

## port security

This command enables or configures port security. Use the **no** form without any keywords to disable port security. Use the **no** form with the appropriate keyword to restore the default settings for a response to security violation or for the maximum number of allowed addresses.

### Syntax

```
port security [action {shutdown | trap | trap-and-shutdown}  
| max-mac-count address-count]  
no port security [action | max-mac-count]
```

- **action** - Response to take when port security is violated.
  - **shutdown** - Disable port only.
  - **trap** - Issue SNMP trap message only.
  - **trap-and-shutdown** - Issue SNMP trap message and disable port.
- **max-mac-count**
  - *address-count* - The maximum number of MAC addresses that can be learned on a port. (Range: 0 - 1024, where 0 means disabled)

### Default Setting

- Status: Disabled
- Action: None
- Maximum Addresses: 0

### Command Mode

Interface Configuration (Ethernet)

### Command Usage

- If you enable port security, the switch stops learning new MAC addresses on the specified port when it has reached a configured maximum number. Only incoming traffic with source addresses already stored in the dynamic or static address table will be accepted.
- First use the **port security max-mac-count** command to set the number of addresses, and then use the **port security** command to enable security on the port.
- Use the **no port security max-mac-count** command to disable port security and reset the maximum number of addresses to the default.

- You can also manually add secure addresses with the **mac-address-table static** command.
- A secure port has the following restrictions:
  - Cannot be connected to a network interconnection device.
  - Cannot be a trunk port.
- If a port is disabled due to a security violation, it must be manually re-enabled using the **no shutdown** command.

### Example

The following example enables port security for port 5, and sets the response to a security violation to issue a trap message:

```
Console(config)#interface ethernet 1/5  
Console(config-if)#port security action trap
```

### Related Commands

shutdown (24-9)

mac-address-table static (28-2)

## 802.1X Port Authentication

The switch supports IEEE 802.1X (dot1x) port-based access control that prevents unauthorized access to the network by requiring users to first submit credentials for authentication. Client authentication is controlled centrally by a RADIUS server using EAP (Extensible Authentication Protocol).

**Table 22-13 802.1X Port Authentication Commands**

Command	Function	Mode	Page
dot1x system-auth-control	Enables dot1x globally on the switch.	GC	22-38
dot1x default	Resets all dot1x parameters to their default values	GC	22-38
dot1x max-req	Sets the maximum number of times that the switch retransmits an EAP request/identity packet to the client before it times out the authentication session	IC	22-39
dot1x port-control	Sets dot1x mode for a port interface	IC	22-39
dot1x operation-mode	Allows single or multiple hosts on an dot1x port	IC	22-40
dot1x re-authenticate	Forces re-authentication on specific ports	PE	22-41
dot1x re-authentication	Enables re-authentication for all ports	IC	22-42
dot1x timeout quiet-period	Sets the time that a switch port waits after the Max Request Count has been exceeded before attempting to acquire a new client	IC	22-42
dot1x timeout re-authperiod	Sets the time period after which a connected client must be re-authenticated	IC	22-43

Table 22-13 802.1X Port Authentication Commands (Continued)

Command	Function	Mode	Page
dot1x timeout tx-period	Sets the time period during an authentication session that the switch waits before re-transmitting an EAP packet	IC	22-44
show dot1x	Shows all dot1x related information	PE	22-44

**dot1x system-auth-control**

This command enables IEEE 802.1X port authentication globally on the switch. Use the **no** form to restore the default.

**Syntax**

[no] dot1x system-auth-control

**Default Setting**

Disabled

**Command Mode**

Global Configuration

**Example**

```
Console(config)#dot1x system-auth-control
Console(config)#
```

**dot1x default**

This command sets all configurable dot1x global and port settings to their default values.

**Command Mode**

Global Configuration

**Example**

```
Console(config)#dot1x default
Console(config)#
```



## dot1x max-req

This command sets the maximum number of times the switch port will retransmit an EAP request/identity packet to the client before it times out the authentication session. Use the **no** form to restore the default.

### Syntax

**dot1x max-req** *count*

**no dot1x max-req**

*count* – The maximum number of requests (Range: 1-10)

### Default

2

### Command Mode

Interface Configuration

### Example

```
Console(config)#interface eth 1/2
Console(config-if)#dot1x max-req 2
Console(config-if)#
```

## dot1x port-control

This command sets the dot1x mode on a port interface. Use the **no** form to restore the default.

### Syntax

**dot1x port-control** {**auto** | **force-authorized** | **force-unauthorized**}

**no dot1x port-control**

- **auto** – Requires a dot1x-aware connected client to be authorized by the RADIUS server. Clients that are not dot1x-aware will be denied access.
- **force-authorized** – Configures the port to grant access to all clients, either dot1x-aware or otherwise.
- **force-unauthorized** – Configures the port to deny access to all clients, either dot1x-aware or otherwise.

### Default

force-authorized

### Command Mode

Interface Configuration

### Example

```
Console(config)#interface eth 1/2
Console(config-if)#dot1x port-control auto
Console(config-if)#
```

## dot1x operation-mode

This command allows single or multiple hosts (clients) to connect to an 802.1X-authorized port. Use the **no** form with no keywords to restore the default to single host. Use the **no** form with the **multi-host max-count** keywords to restore the default maximum count.

### Syntax

**dot1x operation-mode {single-host | multi-host [max-count  
count]}**

**no dot1x operation-mode [multi-host max-count]**

- **single-host** – Allows only a single host to connect to this port.
- **multi-host** – Allows multiple host to connect to this port.
- **max-count** – Keyword for the maximum number of hosts.
  - *count* – The maximum number of hosts that can connect to a port.  
(Range: 1-1024; Default: 5)

### Default

Single-host

### Command Mode

Interface Configuration

### Command Usage

- The “max-count” parameter specified by this command is only effective if the dot1x mode is set to “auto” by the dot1x port-control command (page 4-105).

- In “multi-host” mode, only one host connected to a port needs to pass authentication for all other hosts to be granted network access. Similarly, a port can become unauthorized for all hosts if one attached host fails re-authentication or sends an EAPOL logoff message.

### Example

```
Console(config)#interface eth 1/2
Console(config-if)#dot1x operation-mode multi-host max-count 10
Console(config-if)#
```

## dot1x re-authenticate

This command forces re-authentication on all ports or a specific interface.

### Syntax

**dot1x re-authenticate** [*interface*]

*interface*

**ethernet** *unit/port*

- *unit* - Stack unit. (Range: 1-8)
- *port* - Port number. (Range: 1-26/50)

### Command Mode

Privileged Exec

### Command Usage

The re-authentication process verifies the connected client’s user ID and password on the RADIUS server. During re-authentication, the client remains connected the network and the process is handled transparently by the dot1x client software. Only if re-authentication fails is the port blocked.

### Example

```
Console#dot1x re-authenticate
Console#
```

### dot1x re-authentication

This command enables periodic re-authentication for a specified port. Use the **no** form to disable re-authentication.

#### Syntax

[no] **dot1x re-authentication**

#### Command Mode

Interface Configuration

#### Command Usage

- The re-authentication process verifies the connected client's user ID and password on the RADIUS server. During re-authentication, the client remains connected the network and the process is handled transparently by the dot1x client software. Only if re-authentication fails is the port blocked.
- The connected client is re-authenticated after the interval specified by the **dot1x timeout re-authperiod** command. The default is 3600 seconds.

#### Example

```
Console(config)#interface eth 1/2
Console(config-if)#dot1x re-authentication
Console(config-if)#
```

#### Related Commands

**dot1x timeout re-authperiod** (22-43)

### dot1x timeout quiet-period

This command sets the time that a switch port waits after the Max Request Count has been exceeded before attempting to acquire a new client. Use the **no** form to reset the default.

#### Syntax

**dot1x timeout quiet-period** *seconds*  
**no dot1x timeout quiet-period**

*seconds* - The number of seconds. (Range: 1-65535)

**Default**

60 seconds

**Command Mode**

Interface Configuration

**Example**

```
Console(config)#interface eth 1/2
Console(config-if)#dot1x timeout quiet-period 350
Console(config-if)#
```

**dot1x timeout re-authperiod**

This command sets the time period after which a connected client must be re-authenticated.

**Syntax**

**dot1x timeout re-authperiod** *seconds*

**no dot1x timeout re-authperiod**

*seconds* - The number of seconds. (Range: 1-65535)

**Default**

3600 seconds

**Command Mode**

Interface Configuration

**Example**

```
Console(config)#interface eth 1/2
Console(config-if)#dot1x timeout re-authperiod 300
Console(config-if)#
```

## dot1x timeout tx-period

This command sets the time that an interface on the switch waits during an authentication session before re-transmitting an EAP packet. Use the **no** form to reset to the default value.

### Syntax

**dot1x timeout tx-period** *seconds*

**no dot1x timeout tx-period**

*seconds* - The number of seconds. (Range: 1-65535)

### Default

30 seconds

### Command Mode

Interface Configuration

### Example

```
Console(config)#interface eth 1/2
Console(config-if)#dot1x timeout tx-period 300
Console(config-if)#
```

## show dot1x

This command shows general port authentication related settings on the switch or a specific interface.

### Syntax

**show dot1x** [**statistics**] [**interface** *interface*]

- **statistics** - Displays dot1x status for each port.
- *interface*
  - **ethernet** *unit/port*
    - *unit* - Stack unit. (Range: 1-8)
    - *port* - Port number. (Range: 1-26/50)

### Command Mode

Privileged Exec

## Command Usage

This command displays the following information:

- *Global 802.1X Parameters* – Shows whether or not 802.1X port authentication is globally enabled on the switch.
- *802.1X Port Summary* – Displays the port access control parameters for each interface that has enabled 802.1X, including the following items:
  - Status – Administrative state for port access control.
  - Operation Mode – Allows single or multiple hosts (page 22-40).
  - Mode – Dot1x port control mode (page 22-39).
  - Authorized – Authorization status (yes or n/a - not authorized).
- *802.1X Port Details* – Displays the port access control parameters for each interface, including the following items:
  - reauth-enabled – Periodic re-authentication (page 22-42).
  - reauth-period – Time after which a connected client must be re-authenticated (page 22-43).
  - quiet-period – Time a port waits after Max Request Count is exceeded before attempting to acquire a new client (page 22-42).
  - tx-period – Time a port waits during authentication session before re-transmitting EAP packet (page 22-44).
  - supplicant-timeout – Supplicant timeout.
  - server-timeout – Server timeout.
  - reauth-max – Maximum number of reauthentication attempts.
  - max-req – Maximum number of times a port will retransmit an EAP request/identity packet to the client before it times out the authentication session (page 22-39).
  - Status – Authorization status (authorized or not).
  - Operation Mode – Shows if single or multiple hosts (clients) can connect to an 802.1X-authorized port.
  - Max Count – The maximum number of hosts allowed to access this port (page 22-40).

- Port-control      – Shows the dot1x mode on a port as auto, force-authorized, or force-unauthorized (page 22-39).
- Supplicant      – MAC address of authorized client.
- Current Identifier – The integer (0-255) used by the Authenticator to identify the current authentication session.
- *Authenticator State Machine*
  - State      – Current state (including initialize, disconnected, connecting, authenticating, authenticated, aborting, held, force\_authorized, force\_unauthorized).
  - Reauth Count      – Number of times connecting state is re-entered.
- *Backend State Machine*
  - State      – Current state (including request, response, success, fail, timeout, idle, initialize).
  - Request Count      – Number of EAP Request packets sent to the Supplicant without receiving a response.
  - Identifier(Server)      – Identifier carried in the most recent EAP Success, Failure or Request packet received from the Authentication Server.
- *Reauthentication State Machine*
  - State      – Current state (including initialize, reauthenticate).



**Example**

```

Console#show dot1x
Global 802.1X Parameters
  system-auth-control: enable

802.1X Port Summary

Port Name   Status      Operation Mode   Mode              Authorized
1/1         disabled    Single-Host      ForceAuthorized    n/a
1/2         disabled    Single-Host      ForceAuthorized    n/a
:
1/25        disabled    Single-Host      ForceAuthorized    yes
1/26        enabled     Single-Host      Auto               yes

802.1X Port Details

802.1X is enabled on port 1/1
:

802.1X is enabled on port 26
reauth-enabled:      Enable
reauth-period:       3600
quiet-period:        60
tx-period:           30
supplicant-timeout:  30
server-timeout:      10
reauth-max:          2
max-req:             2
Status               Authorized
Operation mode       Multi-Host
Max count            5
Port-control         Auto
Supplicant            00-e0-29-94-34-65
Current Identifier    3

Authenticator State Machine
State                Authenticated
Reauth Count         0

Backend State Machine
State                Idle
Request Count        0
Identifier(Server)    2

Reauthentication State Machine
State                Initialize

Console#

```

# IP Filter Commands

This section describes commands used to configure IP management access to the switch.

Table 22-14 IP Filter Commands

Command	Function	Mode	Page
management	Configures IP addresses that are allowed management access	GC	22-48
show management	Displays the switch to be monitored or configured from a browser	PE	22-49

## management

This command specifies the client IP addresses that are allowed management access to the switch through various protocols. Use the **no** form to restore the default setting.

### Syntax

[no] **management** {**all-client** | **http-client** | **snmp-client** | **telnet-client**} *start-address* [*end-address*]

- **all-client** - Adds IP address(es) to the SNMP, web and Telnet groups.
- **http-client** - Adds IP address(es) to the web group.
- **snmp-client** - Adds IP address(es) to the SNMP group.
- **telnet-client** - Adds IP address(es) to the Telnet group.
- *start-address* - A single IP address, or the starting address of a range.
- *end-address* - The end address of a range.

### Default Setting

All addresses

### Command Mode

Global Configuration

## Command Usage

- If anyone tries to access a management interface on the switch from an invalid address, the switch will reject the connection, enter an event message in the system log, and send a trap message to the trap manager.
- IP address can be configured for SNMP, web and Telnet access respectively. Each of these groups can include up to five different sets of addresses, either individual addresses or address ranges.
- When entering addresses for the same group (i.e., SNMP, web or Telnet), the switch will not accept overlapping address ranges. When entering addresses for different groups, the switch will accept overlapping address ranges.
- You cannot delete an individual address from a specified range. You must delete the entire range, and reenter the addresses.
- You can delete an address range just by specifying the start address, or by specifying both the start address and end address.

## Example

This example restricts management access to the indicated addresses.

```
Console(config)#management all-client 192.168.1.19
Console(config)#management all-client 192.168.1.25 192.168.1.30
Console#
```

## show management

This command displays the client IP addresses that are allowed management access to the switch through various protocols.

## Syntax

**show management {all-client | http-client | snmp-client | telnet-client}**

- **all-client** - Adds IP address(es) to the SNMP, web and Telnet groups.
- **http-client** - Adds IP address(es) to the web group.
- **snmp-client** - Adds IP address(es) to the SNMP group.
- **telnet-client** - Adds IP address(es) to the Telnet group.

## Command Mode

Privileged Exec

## Example

```
Console#show management all-client
Management Ip Filter
  HTTP-Client:
    Start IP address      End IP address
    -----
  1. 192.168.1.19         192.168.1.19
  2. 192.168.1.25         192.168.1.30

  SNMP-Client:
    Start IP address      End IP address
    -----
  1. 192.168.1.19         192.168.1.19
  2. 192.168.1.25         192.168.1.30

  TELNET-Client:
    Start IP address      End IP address
    -----
  1. 192.168.1.19         192.168.1.19
  2. 192.168.1.25         192.168.1.30

Console#
```

# CHAPTER 23

## ACCESS CONTROL LIST

### COMMANDS

---

Access Control Lists (ACL) provide packet filtering for IPv4 frames (based on address, protocol, Layer 4 protocol port number or TCP control code), IPv6 frames (based on address, next header type, or flow label), or any frames (based on MAC address or Ethernet type). To filter packets, first create an access list, add the required rules, and then bind the list to a specific port. This section describes the Access Control List commands.

**Table 23-1 Access Control List Commands**

Command Groups	Function	Page
IPv4 ACLs	Configures ACLs based on IPv4 addresses, TCP/UDP port number, protocol type, and TCP control code	23-2
IPv6 ACLs	Configures ACLs based on IPv6 addresses, next header type, and flow label	23-9
MAC ACLs	Configures ACLs based on hardware addresses, packet format, and Ethernet type	23-16
ACL Information	Displays ACLs and associated rules; shows ACLs assigned to each port	23-21

**IPv4 ACLs**

The commands in this section configure ACLs based on IPv4 addresses, TCP/UDP port number, protocol type, and TCP control code. To configure IPv4 ACLs, first create an access list containing the required permit or deny rules, and then bind the access list to one or more ports

**Table 23-2 IPv4 ACL Commands**

<b>Command</b>	<b>Function</b>	<b>Mode</b>	<b>Page</b>
access-list ip	Creates an IPv4 ACL and enters configuration mode for standard or extended IPv4 ACLs	GC	23-3
permit, deny	Filters packets matching a specified source IPv4 address	IPv4-STD-ACL	23-4
permit, deny	Filters packets meeting the specified criteria, including source and destination IPv4 address, TCP/UDP port number, protocol type, and TCP control code	IPv4-EXT-ACL	23-5
show ip access-list	Displays the rules for configured IPv4 ACLs	PE	23-7
ip access-group	Adds a port to an IPv4 ACL	IC	23-8
show ip access-group	Shows port assignments for IPv4 ACLs	PE	23-8

## access-list ip

This command adds an IP access list and enters configuration mode for standard or extended IPv4 ACLs. Use the **no** form to remove the specified ACL.

### Syntax

[no] **access-list ip** {**standard** | **extended**} *acl\_name*

- **standard** – Specifies an ACL that filters packets based on the source IP address.
- **extended** – Specifies an ACL that filters packets based on the source or destination IP address, and other more specific criteria.
- *acl\_name* – Name of the ACL. (Maximum length: 16 characters)

### Default Setting

None

### Command Mode

Global Configuration

### Command Usage

- When you create a new ACL or enter configuration mode for an existing ACL, use the **permit** or **deny** command to add new rules to the bottom of the list. To create an ACL, you must add at least one rule to the list.
- To remove a rule, use the **no permit** or **no deny** command followed by the exact text of a previously configured rule.

An ACL can contain up to 32 rules.

### Example

```
Console(config)#access-list ip standard david
Console(config-std-acl)#
```

### Related Commands

permit, deny (23-4)  
ip access-group (23-8)  
show ip access-list (23-7)

## permit, deny (Standard IPv4 ACL)

This command adds a rule to a Standard IPv4 ACL. The rule sets a filter condition for packets emanating from the specified source. Use the **no** form to remove a rule.

### Syntax

**[no] {permit | deny} {any | *source bitmask* | host *source*}**

- **any** – Any source IP address.
- *source* – Source IP address.
- *bitmask* – Decimal number representing the address bits to match.
- **host** – Keyword followed by a specific IP address.

### Default Setting

None

### Command Mode

Standard IPv4 ACL

### Command Usage

- New rules are appended to the end of the list.
- Address bitmasks are similar to a subnet mask, containing four integers from 0 to 255, each separated by a period. The binary mask uses 1 bits to indicate “match” and 0 bits to indicate “ignore.” The bitmask is bitwise ANDed with the specified source IP address, and then compared with the address for each IP packet entering the port(s) to which this ACL has been assigned.

### Example

This example configures one permit rule for the specific address 10.1.1.21 and another rule for the address range 168.92.16.x – 168.92.31.x using a bitmask.

```
Console(config-std-acl)#permit host 10.1.1.21
Console(config-std-acl)#permit 168.92.16.0 255.255.240.0
Console(config-std-acl)#
```

### Related Commands

access-list ip (23-3)



## permit, deny (Extended IPv4 ACL)

This command adds a rule to an Extended IPv4 ACL. The rule sets a filter condition for packets with specific source or destination IP addresses, protocol types, source or destination protocol ports, or TCP control codes. Use the **no** form to remove a rule.

### Syntax

```
[no] {permit | deny} [protocol-number | udp]
    {any | source address-bitmask | host source}
    {any | destination address-bitmask | host destination}
[precedence precedence] [tos tos] [dscp dscp]
[source-port sport [bitmask]] [destination-port dport [port-bitmask]]
```

```
[no] {permit | deny} tcp
    {any | source address-bitmask | host source}
    {any | destination address-bitmask | host destination}
[precedence precedence] [tos tos] [dscp dscp]
[source-port sport [bitmask]] [destination-port dport [port-bitmask]]
[control-flag control-flags flag-bitmask]
```

- *protocol-number* – A specific protocol number. (Range: 0-255)
- *source* – Source IP address.
- *destination* – Destination IP address.
- *address-bitmask* – Decimal number representing the address bits to match.
- **host** – Keyword followed by a specific IP address.
- *precedence* – IP precedence level. (Range: 0-7)
- *tos* – Type of Service level. (Range: 0-15)
- *dscp* – DSCP priority level. (Range: 0-63)
- *sport* – Protocol<sup>22</sup> source port number. (Range: 0-65535)
- *dport* – Protocol<sup>22</sup> destination port number. (Range: 0-65535)
- *port-bitmask* – Decimal number representing the port bits to match. (Range: 0-65535)

---

22. Includes TCP, UDP or other protocol types.

- *control-flags* – Decimal number (representing a bit string) that specifies flag bits in byte 14 of the TCP header. (Range: 0-63)
- *flag-bitmask* – Decimal number representing the code bits to match.

### Default Setting

None

### Command Mode

Extended IPv4 ACL

### Command Usage

- All new rules are appended to the end of the list.
- Address bitmasks are similar to a subnet mask, containing four integers from 0 to 255, each separated by a period. The binary mask uses 1 bits to indicate “match” and 0 bits to indicate “ignore.” The bitmask is bitwise ANDed with the specified source IP address, and then compared with the address for each IP packet entering the port(s) to which this ACL has been assigned.
- You can specify both Precedence and ToS in the same rule. However, if DSCP is used, then neither Precedence nor ToS can be specified.
- The control-code bitmask is a decimal number (representing an equivalent bit mask) that is applied to the control code. Enter a decimal number, where the equivalent binary bit “1” means to match a bit and “0” means to ignore a bit. The following bits may be specified:
  - 1 (fin) – Finish
  - 2 (syn) – Synchronize
  - 4 (rst) – Reset
  - 8 (psh) – Push
  - 16 (ack) – Acknowledgement
  - 32 (urg) – Urgent pointer

For example, use the code value and mask below to catch packets with the following flags set:

- SYN flag valid, use “control-code 2 2”
- Both SYN and ACK valid, use “control-code 18 18”
- SYN valid and ACK invalid, use “control-code 2 18”

**Example**

This example accepts any incoming packets if the source address is within subnet 10.7.1.x. For example, if the rule is matched; i.e., the rule (10.7.1.0 & 255.255.255.0) equals the masked address (10.7.1.2 & 255.255.255.0), the packet passes through.

```
Console(config-ext-acl)#permit 10.7.1.1 255.255.255.0 any
Console(config-ext-acl)#
```

This allows TCP packets from class C addresses 192.168.1.0 to any destination address when set for destination TCP port 80 (i.e., HTTP).

```
Console(config-ext-acl)#permit 192.168.1.0 255.255.255.0 any
destination-port 80
Console(config-ext-acl)#
```

This permits all TCP packets from class C addresses 192.168.1.0 with the TCP control code set to “SYN.”

```
Console(config-ext-acl)#permit tcp 192.168.1.0 255.255.255.0 any
control-flag 2 2
Console(config-ext-acl)#
```

**Related Commands**

access-list ip (23-3)

**show ip access-list**

This command displays the rules for configured IPv4 ACLs.

**Syntax**

**show ip access-list {standard | extended} [acl\_name]**

- **standard** – Specifies a standard IP ACL.
- **extended** – Specifies an extended IP ACL.
- *acl\_name* – Name of the ACL. (Maximum length: 16 characters)

**Command Mode**

Privileged Exec

### Example

```
Console#show ip access-list standard
IP standard access-list david:
  permit host 10.1.1.21
  permit 168.92.0.0 255.255.15.0
Console#
```

### Related Commands

permit, deny 23-4  
ip access-group (23-8)

## ip access-group

This command binds a port to an IPv4 ACL. Use the **no** form to remove the port.

### Syntax

[no] **ip access-group** *acl\_name* **in**

- *acl\_name* – Name of the ACL. (Maximum length: 16 characters)
- **in** – Indicates that this list applies to ingress packets.

### Default Setting

None

### Command Mode

Interface Configuration (Ethernet)

### Command Usage

- A port can only be bound to one ACL.
- If a port is already bound to an ACL and you bind it to a different ACL, the switch will replace the old binding with the new one.

### Example

```
Console(config)#int eth 1/2
Console(config-if)#ip access-group standard david in
Console(config-if)#
```

### Related Commands

show ip access-list (23-7)

## show ip access-group

This command shows the ports assigned to IPv4 ACLs.

### Command Mode

Privileged Exec

### Example

```
Console#show ip access-group
Interface ethernet 1/2
 IP standard access-list david
Console#
```

### Related Commands

ip access-group (23-8)

## IPv6 ACLs

The commands in this section configure ACLs based on IPv6 addresses, next header type, and flow label. To configure IPv6 ACLs, first create an access list containing the required permit or deny rules, and then bind the access list to one or more ports

**Table 23-3 IPv6 ACL Commands**

Command	Function	Mode	Page
access-list ipv6	Creates an IPv6 ACL and enters configuration mode for standard or extended IPv6 ACLs	GC	23-10
<b>permit, deny</b>	Filters packets matching a specified source IPv6 address	IPv6-STD-ACL	23-11
permit, deny	Filters packets meeting the specified criteria, including destination IPv6 address, next header type, and flow label	IPv6-EXT-ACL	23-12
show ipv6 access-list	Displays the rules for configured IPv6 ACLs	PE	23-14
ipv6 access-group	Adds a port to an IPv6 ACL	IC	23-15
show ipv6 access-group	Shows port assignments for IPv6 ACLs	PE	23-16

## access-list ipv6

This command adds an IP access list and enters configuration mode for standard or extended IPv6 ACLs. Use the **no** form to remove the specified ACL.

### Syntax

[no] **access-list ipv6** {**standard** | **extended**} *acl\_name*

- **standard** – Specifies an ACL that filters packets based on the source IP address.
- **extended** – Specifies an ACL that filters packets based on the destination IP address, and other more specific criteria.
- *acl\_name* – Name of the ACL. (Maximum length: 16 characters)

### Default Setting

None

### Command Mode

Global Configuration

### Command Usage

- When you create a new ACL or enter configuration mode for an existing ACL, use the **permit** or **deny** command to add new rules to the bottom of the list. To create an ACL, you must add at least one rule to the list.
- To remove a rule, use the **no permit** or **no deny** command followed by the exact text of a previously configured rule.
- An ACL can contain up to 32 rules.

### Example

```
Console(config)#access-list ipv6 standard david
Console(config-std-ipv6-acl)#
```

### Related Commands

permit, deny (23-11)  
ipv6 access-group (23-15)  
show ipv6 access-list (23-14)

## permit, deny (Standard IPv6 ACL)

This command adds a rule to a Standard IPv6 ACL. The rule sets a filter condition for packets emanating from the specified source. Use the **no** form to remove a rule.

### Syntax

**[no] {permit | deny} {any | *source-ipv6-address*[/*prefix-length*] | host *source-ipv6-address*}**

- **any** – Any source IP address.
- *source-ipv6-address* - An IPv6 source address. The address must be formatted according to RFC 2373 “IPv6 Addressing Architecture,” using 8 colon-separated 16-bit hexadecimal values. One double colon may be used in the address to indicate the appropriate number of zeros required to fill the undefined fields.
- *prefix-length* - A decimal value indicating how many contiguous bits (from the left) of the address comprise the prefix (i.e., the network portion of the address).
- **host** – Keyword followed by a specific IP address.

### Default Setting

None

### Command Mode

Standard IPv6 ACL

### Command Usage

New rules are appended to the end of the list.

### Example

This example configures one permit rule for the specific address 2009:DB9:2229::79 and another rule for the addresses with the network prefix 2009:DB9:2229:5::/64.

```
Console(config-std-ipv6-acl)#permit host 2009:DB9:2229::79
Console(config-std-ipv6-acl)#permit 2009:DB9:2229:5::/64
Console(config-std-ipv6-acl)#
```

### Related Commands

access-list ipv6 (23-10)

### permit, deny (Extended IPv6 ACL)

This command adds a rule to an Extended IPv6 ACL. The rule sets a filter condition for packets with specific destination IP addresses, next header type, or flow label. Use the **no** form to remove a rule.

### Syntax

```
[no] {permit | deny}  
    {any | destination-ipv6-address[/prefix-length]}  
    [next-header next-header] [dscp dscp] [flow-label flow-label]
```

- **any** – Keyword indicating any IPv6 destination address (an abbreviation for the IPv6 prefix ::/0).
- *destination-ipv6-address* - An IPv6 destination address. The address must be formatted according to RFC 2373 “IPv6 Addressing Architecture,” using 8 colon-separated 16-bit hexadecimal values. One double colon may be used in the address to indicate the appropriate number of zeros required to fill the undefined fields. (The switch only checks the first 64 bits of the destination address.)
- *prefix-length* - A decimal value indicating how many contiguous bits (from the left) of the address comprise the prefix (i.e., the network portion of the address).
- *dscp* – DSCP priority level. (Range: 0-63)
- *flow-label* – A label for packets belonging to a particular traffic “flow” for which the sender requests special handling by IPv6 routers, such as non-default quality of service or “real-time” service (see RFC 2460). (Range: 0-16777215)
- *next-header* – Identifies the type of header immediately following the IPv6 header. (Range: 0-255)

### Default Setting

None

### Command Mode

Extended IPv6 ACL



## Command Usage

- All new rules are appended to the end of the list.
- A flow label is assigned to a flow by the flow's source node. New flow labels must be chosen pseudo-randomly and uniformly from the range 1 to FFFFFF hexadecimal. The purpose of the random allocation is to make any set of bits within the Flow Label field suitable for use as a hash key by routers, for looking up the state associated with the flow.
- A flow identifies a sequence of packets sent from a particular source to a particular (unicast or multicast) destination for which the source desires special handling by the intervening routers. The nature of that special handling might be conveyed to the routers by a control protocol, such as a resource reservation protocol, or by information within the flow's packets themselves, e.g., in a hop-by-hop option. A flow is uniquely identified by the combination of a source address and a non-zero flow label. Packets that do not belong to a flow carry a flow label of zero.
- Hosts or routers that do not support the functions specified by the flow label must set the field to zero when originating a packet, pass the field on unchanged when forwarding a packet, and ignore the field when receiving a packet.
- Optional internet-layer information is encoded in separate headers that may be placed between the IPv6 header and the upper-layer header in a packet. There are a small number of such extension headers, each identified by a distinct Next Header value. IPv6 supports the values defined for the IPv4 Protocol field in RFC 1700, including these commonly used headers:
 

0	:	Hop-by-Hop Options	(RFC 2460)
6	:	TCP Upper-layer Header	(RFC 1700)
17	:	UDP Upper-layer Header	(RFC 1700)
43	:	Routing	(RFC 2460)
44	:	Fragment	(RFC 2460)
51	:	Authentication	(RFC 2402)
50	:	Encapsulating Security Payload	(RFC 2406)
60	:	Destination Options	(RFC 2460)

### Example

This example accepts any incoming packets if the destination address is 2009:DB9:2229::79/48.

```
Console(config-ext-ipv6-acl)#permit 2009:DB9:2229::79/48
Console(config-ext-ipv6-acl)#
```

This allows packets to any destination address when the DSCP value is 5.

```
Console(config-ext-ipv6-acl)#permit any dscp 5
Console(config-ext-ipv6-acl)#
```

This allows any packets sent to the destination 2009:DB9:2229::79/48 when the flow label is 43.”

```
Console(config-ext-ipv6-acl)#permit 2009:DB9:2229::79/48
    flow-label 43
Console(config-ext-ipv6-acl)#
```

### Related Commands

access-list ipv6 (23-10)

## show ipv6 access-list

This command displays the rules for configured IPv6 ACLs.

### Syntax

**show ip access-list {standard | extended} [acl\_name]**

- **standard** – Specifies a standard IPv6 ACL.
- **extended** – Specifies an extended IPv6 ACL.
- *acl\_name* – Name of the ACL. (Maximum length: 16 characters)

### Command Mode

Privileged Exec

### Example

```
Console#show ipv6 access-list standard
IPv6 standard access-list david:
    permit host 2009:DB9:2229::79
    permit 2009:DB9:2229:5::/64
Console#
```

**Related Commands**

permit, deny (23-11)

ipv6 access-group (23-15)

**ipv6 access-group**

This command binds a port to an IPv6 ACL. Use the **no** form to remove the port.

**Syntax****[no] ipv6 access-group *acl\_name* in**

- *acl\_name* – Name of the ACL. (Maximum length: 16 characters)
- **in** – Indicates that this list applies to ingress packets.

**Default Setting**

None

**Command Mode**

Interface Configuration (Ethernet)

**Command Usage**

- A port can only be bound to one ACL.
- If a port is already bound to an ACL and you bind it to a different ACL, the switch will replace the old binding with the new one.
- IPv6 ACLs can only be applied to ingress packets.

**Example**

```
Console(config)#int eth 1/2
Console(config-if)#ipv6 access-group standard david in
Console(config-if)#
```

**Related Commands**

show ipv6 access-list (23-14)

## show ipv6 access-group

This command shows the ports assigned to IPv6 ACLs.

### Command Mode

Privileged Exec

### Example

```
Console#show ip access-group
Interface ethernet 1/2
  IPv6 standard access-list david in
Console#
```

### Related Commands

ipv6 access-group (23-15)

## MAC ACLs

The commands in this section configure ACLs based on hardware addresses, packet format, and Ethernet type. To configure MAC ACLs, first create an access list containing the required permit or deny rules, and then bind the access list to one or more ports

**Table 23-4 MAC ACL Commands**

Command	Function	Mode	Page
access-list mac	Creates a MAC ACL and enters configuration mode	GC	23-17
permit, deny	Filters packets matching a specified source and destination address, packet format, and Ethernet type	MAC-ACL	23-18
show mac access-list	Displays the rules for configured MAC ACLs	PE	23-20
mac access-group	Adds a port to a MAC ACL	IC	23-20
show mac access-group	Shows port assignments for MAC ACLs	PE	23-21

## access-list mac

This command adds a MAC access list and enters MAC ACL configuration mode. Use the **no** form to remove the specified ACL.

### Syntax

**[no] access-list mac** *acl\_name*

*acl\_name* – Name of the ACL. (Maximum length: 16 characters)

### Default Setting

None

### Command Mode

Global Configuration

### Command Usage

- When you create a new ACL or enter configuration mode for an existing ACL, use the **permit** or **deny** command to add new rules to the bottom of the list. To create an ACL, you must add at least one rule to the list.
- To remove a rule, use the **no permit** or **no deny** command followed by the exact text of a previously configured rule.
- An ACL can contain up to 32 rules.

### Example

```
Console(config)#access-list mac jerry
Console(config-mac-acl)#
```

### Related Commands

permit, deny (23-18)  
mac access-group (23-20)  
show mac access-list (23-20)

**permit, deny (MAC ACL)**

This command adds a rule to a MAC ACL. The rule filters packets matching a specified MAC source or destination address (i.e., physical layer address), or Ethernet protocol type. Use the **no** form to remove a rule.

**Syntax**

```
[no] {permit | deny}
      {any | host source | source address-bitmask}
      {any | host destination | destination address-bitmask}
      [vid vid vid-bitmask] [ethertype protocol [protocol-bitmask]]
```

**Note:-** The default is for Ethernet II packets.

```
[no] {permit | deny} tagged-eth2
      {any | host source | source address-bitmask}
      {any | host destination | destination address-bitmask}
      [vid vid vid-bitmask] [ethertype protocol [protocol-bitmask]]
```

```
[no] {permit | deny} untagged-eth2
      {any | host source | source address-bitmask}
      {any | host destination | destination address-bitmask}
      [ethertype protocol [protocol-bitmask]]
```

```
[no] {permit | deny} tagged-802.3
      {any | host source | source address-bitmask}
      {any | host destination | destination address-bitmask}
      [vid vid vid-bitmask]
```

```
[no] {permit | deny} untagged-802.3
      {any | host source | source address-bitmask}
      {any | host destination | destination address-bitmask}
```

- **tagged-eth2** – Tagged Ethernet II packets.
- **untagged-eth2** – Untagged Ethernet II packets.
- **tagged-802.3** – Tagged Ethernet 802.3 packets.
- **untagged-802.3** – Untagged Ethernet 802.3 packets.
- **any** – Any MAC source or destination address.
- **host** – A specific MAC address.

- *source* – Source MAC address.
- *destination* – Destination MAC address range with bitmask.
- *address-bitmask*<sup>23</sup> – Bitmask for MAC address (in hexadecimal format).
- *vid* – VLAN ID. (Range: 1-4093)
- *vid-bitmask*<sup>23</sup> – VLAN bitmask. (Range: 1-4093)
- *protocol* – A specific Ethernet protocol number. (Range: 600-fff hex.)
- *protocol-bitmask*<sup>23</sup> – Protocol bitmask. (Range: 600-fff hex.)

### Default Setting

None

### Command Mode

MAC ACL

### Command Usage

- New rules are added to the end of the list.
- The **ethertype** option can only be used to filter Ethernet II formatted packets.
- A detailed listing of Ethernet protocol types can be found in RFC 1060. A few of the more common types include the following:
  - 0800 - IP
  - 0806 - ARP
  - 8137 - IPX

### Example

This rule permits packets from any source MAC address to the destination address 00-e0-29-94-34-de where the Ethernet type is 0800.

```
Console(config-mac-acl)#permit any host 00-e0-29-94-34-de ethertype
0800
Console(config-mac-acl)#
```

### Related Commands

access-list mac (23-17)

---

23. For all bitmasks, “1” means care and “0” means ignore.

### show mac access-list

This command displays the rules for configured MAC ACLs.

#### Syntax

**show mac access-list** [*acl\_name*]

*acl\_name* – Name of the ACL. (Maximum length: 16 characters)

#### Command Mode

Privileged Exec

#### Example

```
Console#show mac access-list
MAC access-list jerry:
  permit any 00-e0-29-94-34-de ethertype 0800
Console#
```

#### Related Commands

permit, deny 23-18  
mac access-group (23-20)

### mac access-group

This command binds a port to a MAC ACL. Use the **no** form to remove the port.

#### Syntax

**mac access-group** *acl\_name* **in**

- *acl\_name* – Name of the ACL. (Maximum length: 16 characters)
- **in** – Indicates that this list applies to ingress packets.

#### Default Setting

None

#### Command Mode

Interface Configuration (Ethernet)

#### Command Usage

- A port can only be bound to one ACL.



- If a port is already bound to an ACL and you bind it to a different ACL, the switch will replace the old binding with the new one.

### Example

```
Console(config)#interface ethernet 1/2
Console(config-if)#mac access-group jerry in
Console(config-if)#
```

### Related Commands

show mac access-list (23-20)

## show mac access-group

This command shows the ports assigned to MAC ACLs.

### Command Mode

Privileged Exec

### Example

```
Console#show mac access-group
Interface ethernet 1/5
MAC access-list M5 in
Console#
```

### Related Commands

mac access-group (23-20)

## ACL Information

This section describes commands used to display ACL information.

**Table 23-5 ACL Information Commands**

Command	Function	Mode	Page
show access-list	Show all IPv4 ACLs and associated rules	PE	23-22
show access-group	Shows the IPv4 ACLs assigned to each port	PE	23-22

### show access-list

This command shows all IPv4 ACLs and associated rules.

#### Command Mode

Privileged Exec

#### Example

```
Console#show access-list
IP standard access-list david:
  permit host 10.1.1.21
  permit 168.92.0.0 255.255.15.0
IP extended access-list bob:
  permit 10.7.1.1 255.255.255.0 any
  permit 192.168.1.0 255.255.255.0 any destination-port 80 80
  permit 192.168.1.0 255.255.255.0 any protocol tcp control-code 2 2
MAC access-list jerry:
  permit any host 00-30-29-94-34-de ethertype 800 800
IP extended access-list A6:
  deny tcp any any control-flag 2 2
  permit any any
Console#
```

### show access-group

This command shows the port assignments of IPv4 ACLs.

#### Command Mode

Privileged Executive

#### Example

```
Console#show access-group
Interface ethernet 1/2
  IP standard access-list david
  MAC access-list jerry
Console#
```

# CHAPTER 24

## INTERFACE COMMANDS

---

These commands are used to display or set communication parameters for an Ethernet port, aggregated link, or VLAN.

**Table 24-1 Interface Commands**

Command	Function	Mode	Page
interface	Configures an interface type and enters interface configuration mode	GC	24-2
description	Adds a description to an interface configuration	IC	24-3
speed-duplex	Configures the speed and duplex operation of a given interface when autonegotiation is disabled	IC	24-3
negotiation	Enables autonegotiation of a given interface	IC	24-5
capabilities	Advertises the capabilities of a given interface for use in autonegotiation	IC	24-6
flowcontrol	Enables flow control on a given interface	IC	24-7
media-type	Force port type selected for combination ports	IC	24-8
shutdown	Disables an interface	IC	24-9
switchport broadcast packet-rate	Configures the broadcast storm control threshold	IC	24-10
clear counters	Clears statistics on an interface	PE	24-11
show interfaces status	Displays status for the specified interface	NE, PE	24-12

**Table 24-1 Interface Commands (Continued)**

Command	Function	Mode	Page
show interfaces counters	Displays statistics for the specified interfaces	NE, PE	24-13
show interfaces switchport	Displays the administrative and operational status of an interface	NE, PE	24-15

## interface

This command configures an interface type and enter interface configuration mode. Use the **no** form to remove a trunk.

### Syntax

**interface** *interface*

**no interface port-channel** *channel-id*

- *interface*
  - **ethernet** *unit/port*
    - *unit* - Stack unit. (Range: 1-8)
    - *port* - Port number. (Range: 1-26/50)
  - **port-channel** *channel-id* (Range: 1-32)
  - **vlan** *vlan-id* (Range: 1-4093)

### Default Setting

None

### Command Mode

Global Configuration

### Example

To specify port 4, enter the following command:

```
Console(config)#interface ethernet 1/4
Console(config-if)#
```

## description

This command adds a description to an interface. Use the **no** form to remove the description.

### Syntax

**description** *string*

**no description**

*string* - Comment or a description to help you remember what is attached to this interface. (Range: 1-64 characters)

### Default Setting

None

### Command Mode

Interface Configuration (Ethernet, Port Channel)

### Example

The following example adds a description to port 4.

```
Console(config)#interface ethernet 1/4
Console(config-if)#description RD-SW#3
Console(config-if)#
```

## speed-duplex

This command configures the speed and duplex mode of a given interface when autonegotiation is disabled. Use the **no** form to restore the default.

### Syntax

**speed-duplex** {**10000full** | **1000full** | **100full** | **100half** | **10full** | **10half**}

**no speed-duplex**

- **10000full** - Forces 10 Gbps full-duplex operation
- **1000full** - Forces 1 Gbps full-duplex operation
- **100full** - Forces 100 Mbps full-duplex operation
- **100half** - Forces 100 Mbps half-duplex operation

- **10full** - Forces 10 Mbps full-duplex operation
- **10half** - Forces 10 Mbps half-duplex operation

### Default Setting

- Auto-negotiation is enabled by default.
- When auto-negotiation is disabled, the default speed-duplex setting is:
  - Gigabit Ethernet ports – **1000full** (1 Gbps full-duplex)
  - 10 Gigabit Ethernet ports – **10000full** (10 Gbps full-duplex)

### Command Mode

Interface Configuration (Ethernet, Port Channel)

### Command Usage

- To force operation to the speed and duplex mode specified in a **speed-duplex** command, use the **no negotiation** command to disable auto-negotiation on the selected interface.
- When using the **negotiation** command to enable auto-negotiation, the optimal settings will be determined by the **capabilities** command. To set the speed/duplex mode under auto-negotiation, the required mode must be specified in the capabilities list for an interface.
- The 1000BASE-T standard does not support forced mode. Auto-negotiation must always be used to establish a connection over any 1000BASE-T port or trunk.

### Example

The following example configures port 5 to 100 Mbps, half-duplex operation.

```
Console(config)#interface ethernet 1/5
Console(config-if)#speed-duplex 100half
Console(config-if)#no negotiation
Console(config-if)#
```

### Related Commands

negotiation (24-5)  
capabilities (24-6)

## negotiation

This command enables autonegotiation for a given interface. Use the **no** form to disable autonegotiation.

### Syntax

[no] **negotiation**

### Default Setting

Enabled

### Command Mode

Interface Configuration (Ethernet, Port Channel)

### Command Usage

- When auto-negotiation is enabled the switch will negotiate the best settings for a link based on the **capabilities** command. When auto-negotiation is disabled, you must manually specify the link attributes with the **speed-duplex** and **flowcontrol** commands.
- If autonegotiation is disabled, auto-MDI/MDI-X pin signal configuration will also be disabled for the RJ-45 ports.

### Example

The following example configures port 11 to use autonegotiation.

```
Console(config)#interface ethernet 1/11
Console(config-if)#negotiation
Console(config-if)#
```

### Related Commands

capabilities (24-6)

speed-duplex (24-3)

## capabilities

This command advertises the port capabilities of a given interface during autonegotiation. Use the **no** form with parameters to remove an advertised capability, or the **no** form without parameters to restore the default values.

### Syntax

[no] **capabilities** {**10000full** | **1000full** | **100full** | **100half** | **10full** | **10half** | **flowcontrol** | **symmetric**}

- **10000full** - Supports 10 Gbps full-duplex operation
- **1000full** - Supports 1 Gbps full-duplex operation
- **100full** - Supports 100 Mbps full-duplex operation
- **100half** - Supports 100 Mbps half-duplex operation
- **10full** - Supports 10 Mbps full-duplex operation
- **10half** - Supports 10 Mbps half-duplex operation
- **flowcontrol** - Supports flow control
- **symmetric** (Gigabit only) - When specified, the port transmits and receives pause frames; when not specified, the port will auto-negotiate to determine the sender and receiver for asymmetric pause frames. (*The current switch ASIC only supports symmetric pause frames.*)

### Default Setting

- 1000BASE-T: 10half, 10full, 100half, 100full, 1000full
- 1000BASE-SX/LX/LH (SFP): 1000full
- 10GBASE-SR/LR/ER (XFP): 10000full

### Command Mode

Interface Configuration (Ethernet, Port Channel)

### Command Usage

When auto-negotiation is enabled with the **negotiation** command, the switch will negotiate the best settings for a link based on the **capabilities** command. When auto-negotiation is disabled, you must manually specify the link attributes with the **speed-duplex** and **flowcontrol** commands.



### Example

The following example configures Ethernet port 5 capabilities to 100half and 100full.

```
Console(config)#interface ethernet 1/5
Console(config-if)#capabilities 100half
Console(config-if)#capabilities 100full
Console(config-if)#
```

### Related Commands

negotiation (24-5)  
speed-duplex (24-3)  
flowcontrol (24-7)

## flowcontrol

This command enables flow control. Use the **no** form to disable flow control.

### Syntax

[no] **flowcontrol**

### Default Setting

Disabled

### Command Mode

Interface Configuration (Ethernet, Port Channel)

### Command Usage

- Flow control can eliminate frame loss by “blocking” traffic from end stations or segments connected directly to the switch when its buffers fill. When enabled, back pressure is used for half-duplex operation and IEEE 802.3-2002 (formally IEEE 802.3x) for full-duplex operation.
- To force flow control on or off (with the **flowcontrol** or **no flowcontrol** command), use the **no negotiation** command to disable auto-negotiation on the selected interface.
- When using the **negotiation** command to enable auto-negotiation, the optimal settings will be determined by the **capabilities** command.

To enable flow control under auto-negotiation, “flowcontrol” must be included in the capabilities list for any port

- Avoid using flow control on a port connected to a hub unless it is actually required to solve a problem. Otherwise back pressure jamming signals may degrade overall performance for the segment attached to the hub.

### Example

The following example enables flow control on port 5.

```
Console(config)#interface ethernet 1/5
Console(config-if)#flowcontrol
Console(config-if)#no negotiation
Console(config-if)#
```

### Related Commands

negotiation (24-5)

capabilities (flowcontrol, symmetric) (24-6)

## media-type

This command forces the port type selected for combination ports 21-24/45-48. Use the **no** form to restore the default mode.

### Syntax

**media-type** *mode*

**no media-type**

*mode*

- **copper-forced** - Always uses the built-in RJ-45 port.
- **sfp-forced** - Always uses the SFP port (even if module not installed).
- **sfp-preferred-auto** - Uses SFP port if both combination types are functioning and the SFP port has a valid link.

### Default Setting

sfp-preferred-auto

### Command Mode

Interface Configuration (Ethernet)

**Example**

This forces the switch to use the built-in RJ-45 port for the combination port 48.

```
Console(config)#interface ethernet 1/48
Console(config-if)#media-type copper-forced
Console(config-if)#
```

**shutdown**

This command disables an interface. To restart a disabled interface, use the **no** form.

**Syntax**

**[no] shutdown**

**Default Setting**

All interfaces are enabled.

**Command Mode**

Interface Configuration (Ethernet, Port Channel)

**Command Usage**

This command allows you to disable a port due to abnormal behavior (e.g., excessive collisions), and then reenable it after the problem has been resolved. You may also want to disable a port for security reasons.

**Example**

The following example disables port 5.

```
Console(config)#interface ethernet 1/5
Console(config-if)#shutdown
Console(config-if)#
```

## **switchport broadcast packet-rate**

This command configures broadcast storm control. Use the **no** form to disable broadcast storm control.

### **Syntax**

**switchport broadcast packet-rate** *rate*  
**no switchport broadcast**

*rate* - Threshold level as a rate; i.e., packets per second.  
(Range: 500-262143)

### **Default Setting**

- Enabled for all ports
- Packet-rate limit: 500 pps

### **Command Mode**

Interface Configuration (Ethernet)

### **Command Usage**

- When broadcast traffic exceeds the specified threshold, packets above that threshold are dropped.
- Broadcast control does not effect IP multicast traffic.

### **Example**

The following shows how to configure broadcast storm control at 600 packets per second:

```
Console(config)#interface ethernet 1/5
Console(config-if)#switchport broadcast packet-rate 600
Console(config-if)#
```

## clear counters

This command clears statistics on an interface.

### Syntax

**clear counters** *interface*

*interface*

- **ethernet** *unit/port*
  - *unit* - Stack unit. (Range: 1-8)
  - *port* - Port number. (Range: 1-26/50)
- **port-channel** *channel-id* (Range: 1-32)

### Default Setting

None

### Command Mode

Privileged Exec

### Command Usage

Statistics are only initialized for a power reset. This command sets the base value for displayed statistics to zero for the current management session. However, if you log out and back into the management interface, the statistics displayed will show the absolute value accumulated since the last power reset.

### Example

The following example clears statistics on port 5.

```
Console#clear counters ethernet 1/5
Console#
```

### show interfaces status

This command displays the status for an interface.

#### Syntax

**show interfaces status** [*interface*]

*interface*

- **ethernet** *unit/port*
  - *unit* - Stack unit. (Range: 1-8)
  - *port* - Port number. (Range: 1-26/50)
- **port-channel** *channel-id* (Range: 1-32)
- **vlan** *vlan-id* (Range: 1-4093)

#### Default Setting

Shows the status for all interfaces.

#### Command Mode

Normal Exec, Privileged Exec

#### Command Usage

If no interface is specified, information on all interfaces is displayed.  
For a description of the items displayed by this command, see  
“Displaying Connection Status” on page 4-113.

## Example

```

Console#show interfaces status ethernet 1/5
Information of Eth 1/5
Basic information:
  Port type:          1000T
  Mac address:        00-30-F1-D4-73-A5
Configuration:
  Name:
  Port admin:         Up
  Speed-duplex:       Auto
  Capabilities:       10half, 10full, 100half, 100full, 1000full
  Broadcast storm:    Enabled
  Broadcast storm limit: 500 packets/second
  Flow control:       Disabled
  LACP:               Disabled
  Port security:      Disabled
  Max MAC count:      0
  Port security action: None
  Media type:         None
Current status:
  Link status:        Up
  Port operation status: Up
  Operation speed-duplex: 1000full
  Flow control type:  None
Console#show interfaces status vlan 1
Information of VLAN 1
MAC address:          00-00-AB-CD-00-00
Console#

```

## show interfaces counters

This command displays interface statistics.

### Syntax

**show interfaces counters** [*interface*]

*interface*

- **ethernet** *unit/port*
  - *unit* - Stack unit. (Range: 1-8)
  - *port* - Port number. (Range: 1-26/50)
- **port-channel** *channel-id* (Range: 1-32)

### Default Setting

Shows the counters for all interfaces.

**Command Mode**

Normal Exec, Privileged Exec

**Command Usage**

If no interface is specified, information on all interfaces is displayed.

For a description of the items displayed by this command, see “Showing Port Statistics” on page 4-133.

**Example**

```
Console#show interfaces counters ethernet 1/7
Ethernet 1/7
  Iftable stats:
    Octets input: 30658, Octets output: 196550
    Unicast input: 6, Unicast output: 5
    Discard input: 0, Discard output: 0
    Error input: 0, Error output: 0
    Unknown protos input: 0, QLen output: 0
  Extended iftable stats:
    Multi-cast input: 0, Multi-cast output: 3064
    Broadcast input: 262, Broadcast output: 1
  Ether-like stats:
    Alignment errors: 0, FCS errors: 0
    Single Collision frames: 0, Multiple collision frames: 0
    SQE Test errors: 0, Deferred transmissions: 0
    Late collisions: 0, Excessive collisions: 0
    Internal mac transmit errors: 0, Internal mac receive errors: 0
    Frame too longs: 0, Carrier sense errors: 0
    Symbol errors: 0
  RMON stats:
    Drop events: 0, Octets: 227208, Packets: 3338
    Broadcast pkts: 263, Multi-cast pkts: 3064
    Undersize pkts: 0, Oversize pkts: 0
    Fragments: 0, Jabbers: 0
    CRC align errors: 0, Collisions: 0
    Packet size <= 64 octets: 3150, Packet size 65 to 127 octets: 139
    Packet size 128 to 255 octets: 49, Packet size 256 to 511 octets: 0
    Packet size 512 to 1023 octets: 0, Packet size 1024 to 1518 octets: 0
Console#
```



## show interfaces switchport

This command displays the administrative and operational status of the specified interfaces.

### Syntax

**show interfaces switchport** [*interface*]

*interface*

- **ethernet** *unit/port*
  - *unit* - Stack unit. (Range: 1-8)
  - *port* - Port number. (Range: 1-26/50)
- **port-channel** *channel-id* (Range: 1-32)

### Default Setting

Shows all interfaces.

### Command Mode

Normal Exec, Privileged Exec

### Command Usage

If no interface is specified, information on all interfaces is displayed.

### Example

This example shows the configuration setting for port 4.

```
Console#show interfaces switchport ethernet 1/4
Broadcast threshold:      Enabled, 500 packets/second
LACP status:              Disabled
Ingress rate limit:       Disable, 1000M bits per second
Egress rate limit:        Disable, 1000M bits per second
VLAN membership mode:     Hybrid
Ingress rule:             Disabled
Acceptable frame type:    All frames
Native VLAN:              1
Priority for untagged traffic: 0
GVRP status:              Disabled
Allowed VLAN:              1(u),
Forbidden VLAN:
Console#
```

**Table 24-2 show interfaces switchport - display description**

Field	Description
Broadcast threshold	Shows if broadcast storm suppression is enabled or disabled; if enabled it also shows the threshold level (page 24-10).
LACP status	Shows if Link Aggregation Control Protocol has been enabled or disabled (page 25-4).
Ingress/Egress rate limit	Shows if rate limiting is enabled, and the current rate limit (page 27-1).
VLAN membership mode	Indicates membership mode as Trunk or Hybrid (page 30-10).
Ingress rule	Shows if ingress filtering is enabled or disabled (page 30-12).
Acceptable frame type	Shows if acceptable VLAN frames include all types or tagged frames only (page 30-11).
Native VLAN	Indicates the default Port VLAN ID (page 30-13).
Priority for untagged traffic	Indicates the default priority for untagged frames (page 31-3).
GVRP status	Shows if GARP VLAN Registration Protocol is enabled or disabled (page 30-4).
Allowed VLAN	Shows the VLANs this interface has joined, where “(u)” indicates untagged and “(t)” indicates tagged (page 30-14).
Forbidden VLAN	Shows the VLANs this interface can not dynamically join via GVRP (page 30-15).

# CHAPTER 25

## LINK AGGREGATION

## COMMANDS

---

Ports can be statically grouped into an aggregate link (i.e., trunk) to increase the bandwidth of a network connection or to ensure fault recovery. Or you can use the Link Aggregation Control Protocol (LACP) to automatically negotiate a trunk link between this switch and another network device. For static trunks, the switches have to comply with the Cisco EtherChannel standard. For dynamic trunks, the switches have to comply with LACP. This switch supports up to six trunks. For example, a trunk consisting of two 1000 Mbps ports can support an aggregate bandwidth of 4 Gbps when operating at full duplex.

**Table 25-1 Link Aggregation Commands**

Command	Function	Mode	Page
<i>Manual Configuration Commands</i>			
interface port-channel	Configures a trunk and enters interface configuration mode for the trunk	GC	24-2
channel-group	Adds a port to a trunk	IC (Ethernet)	25-3
<i>Dynamic Configuration Commands</i>			
lacp	Configures LACP for the current interface	IC (Ethernet)	25-4
lacp system-priority	Configures a port's LACP system priority	IC (Ethernet)	25-6
lacp admin-key	Configures a port's administration key	IC (Ethernet)	25-7

**Table 25-1 Link Aggregation Commands (Continued)**

Command	Function	Mode	Page
lacp admin-key	Configures an port channel's administration key	IC (Port Channel)	25-8
lacp port-priority	Configures a port's LACP port priority	IC (Ethernet)	25-9
<i>Trunk Status Display Commands</i>			
show interfaces status port-channel	Shows trunk information	NE, PE	24-12
show lacp	Shows LACP information	PE	25-10

**Guidelines for Creating Trunks***General Guidelines –*

- Finish configuring port trunks before you connect the corresponding network cables between switches to avoid creating a loop.
- A trunk can have up to 8 ports.
- The ports at both ends of a connection must be configured as trunk ports.
- All ports in a trunk must be configured in an identical manner, including communication mode (i.e., speed and duplex mode), VLAN assignments, and CoS settings.
- Any of the Gigabit ports on the front panel can be trunked together, including ports of different media types.
- All the ports in a trunk have to be treated as a whole when moved from/to, added or deleted from a VLAN via the specified port-channel.
- STP, VLAN, and IGMP settings can only be made for the entire trunk via the specified port-channel.

*Dynamically Creating a Port Channel –*

Ports assigned to a common port channel must meet the following criteria:

- Ports must have the same LACP system priority.
- Ports must have the same port admin key (Ethernet Interface).

- If the port channel admin key (lacp admin key - Port Channel) is not set when a channel group is formed (i.e., it has the null value of 0), this key is set to the same value as the port admin key (lacp admin key - Ethernet Interface) used by the interfaces that joined the group.
- However, if the port channel admin key is set, then the port admin key must be set to the same value for a port to be allowed to join a channel group.
- If a link goes down, LACP port priority is used to select the backup link.

## channel-group

This command adds a port to a trunk. Use the **no** form to remove a port from a trunk.

### Syntax

**channel-group** *channel-id*

**no channel-group**

*channel-id* - Trunk index (Range: 1-32)

### Default Setting

The current port will be added to this trunk.

### Command Mode

Interface Configuration (Ethernet)

### Command Usage

- When configuring static trunks, the switches must comply with the Cisco EtherChannel standard.
- Use **no channel-group** to remove a port group from a trunk.
- Use **no interfaces port-channel** to remove a trunk from the switch.

### Example

The following example creates trunk 1 and then adds port 11:

```
Console(config)#interface port-channel 1
Console(config-if)#exit
Console(config)#interface ethernet 1/11
Console(config-if)#channel-group 1
Console(config-if)#
```

## lACP

This command enables 802.3ad Link Aggregation Control Protocol (LACP) for the current interface. Use the **no** form to disable it.

### Syntax

[no] lACP

### Default Setting

Disabled

### Command Mode

Interface Configuration (Ethernet)

### Command Usage

- The ports on both ends of an LACP trunk must be configured for full duplex, either by forced mode or auto-negotiation.
- A trunk formed with another switch using LACP will automatically be assigned the next available port-channel ID.
- If the target switch has also enabled LACP on the connected ports, the trunk will be activated automatically.
- If more than eight ports attached to the same target switch have LACP enabled, the additional ports will be placed in standby mode, and will only be enabled if one of the active links fails.

## Example

The following shows LACP enabled on ports 10-12. Because LACP has also been enabled on the ports at the other end of the links, the **show interfaces status port-channel 1** command shows that Trunk1 has been established.

```

Console(config)#interface ethernet 1/10
Console(config-if)#lacp
Console(config-if)#exit
Console(config)#interface ethernet 1/11
Console(config-if)#lacp
Console(config-if)#exit
Console(config)#interface ethernet 1/12
Console(config-if)#lacp
Console(config-if)#end
Console#show interfaces status port-channel 1
Information of Trunk 1
Basic information:
  Port type:          1000T
  Mac address:        00-30-F1-D4-73-A4
Configuration:
  Name:
  Port admin:         Up
  Speed-duplex:        Auto
  Capabilities:        10half, 10full, 100half, 100full, 1000full
  Flow control:        Disabled
  Port security:       Disabled
  Max MAC count:       0
Current status:
  Created by:          LACP
  Link status:         Up
  Operation speed-duplex: 1000full
  Flow control type:    None
  Member Ports:        Eth1/10, Eth1/11, Eth1/12,
Console#

```

### lacp system-priority

This command configures a port's LACP system priority. Use the **no** form to restore the default setting.

#### Syntax

**lacp {actor | partner} system-priority *priority***  
**no lacp {actor | partner} system-priority**

- **actor** - The local side an aggregate link.
- **partner** - The remote side of an aggregate link.
- *priority* - This priority is used to determine link aggregation group (LAG) membership, and to identify this device to other switches during LAG negotiations. (Range: 0-65535)

#### Default Setting

32768

#### Command Mode

Interface Configuration (Ethernet)

#### Command Usage

- Port must be configured with the same system priority to join the same LAG.
- System priority is combined with the switch's MAC address to form the LAG identifier. This identifier is used to indicate a specific LAG during LACP negotiations with other systems.
- Once the remote side of a link has been established, LACP operational settings are already in use on that side. Configuring LACP settings for the partner only applies to its administrative state, not its operational state, and will only take effect the next time an aggregate link is established with the partner.

#### Example

```
Console(config)#interface ethernet 1/5
Console(config-if)#lacp actor system-priority 3
Console(config-if)#
```



## **lacp admin-key** (Ethernet Interface)

This command configures a port's LACP administration key. Use the **no** form to restore the default setting.

### **Syntax**

**lacp** {**actor** | **partner**} **admin-key** *key*  
**[no] lacp** {**actor** | **partner**} **admin-key**

- **actor** - The local side an aggregate link.
- **partner** - The remote side of an aggregate link.
- *key* - The port admin key must be set to the same value for ports that belong to the same link aggregation group (LAG).  
(Range: 0-65535)

### **Default Setting**

0

### **Command Mode**

Interface Configuration (Ethernet)

### **Command Usage**

- Ports are only allowed to join the same LAG if (1) the LACP system priority matches, (2) the LACP port admin key matches, and (3) the LACP port channel key matches (if configured).
- If the port channel admin key (**lacp admin key** - Port Channel) is not set when a channel group is formed (i.e., it has the null value of 0), this key is set to the same value as the port admin key (**lacp admin key** - Ethernet Interface) used by the interfaces that joined the group.
- Once the remote side of a link has been established, LACP operational settings are already in use on that side. Configuring LACP settings for the partner only applies to its administrative state, not its operational state, and will only take effect the next time an aggregate link is established with the partner.

### **Example**

```
Console(config)#interface ethernet 1/5
Console(config-if)#lacp actor admin-key 120
Console(config-if)#
```

### lacp admin-key (Port Channel)

This command configures a port channel's LACP administration key string. Use the **no** form to restore the default setting.

#### Syntax

**lacp admin-key** *key*

**[no] lacp admin-key**

*key* - The port channel admin key is used to identify a specific link aggregation group (LAG) during local LACP setup on this switch.  
(Range: 0-65535)

#### Default Setting

0

#### Command Mode

Interface Configuration (Port Channel)

#### Command Usage

- Ports are only allowed to join the same LAG if (1) the LACP system priority matches, (2) the LACP port admin key matches, and (3) the LACP port channel key matches (if configured).
- If the port channel admin key (**lacp admin key** - Port Channel) is not set when a channel group is formed (i.e., it has the null value of 0), this key is set to the same value as the port admin key (**lacp admin key** - Ethernet Interface) used by the interfaces that joined the group. Note that when the LAG is no longer used, the port channel admin key is reset to 0.

#### Example

```
Console(config)#interface port-channel 1
Console(config-if)#lacp admin-key 3
Console(config-if)#
```

## lacp port-priority

This command configures LACP port priority. Use the **no** form to restore the default setting.

### Syntax

**lacp** {**actor** | **partner**} **port-priority** *priority*  
**no lacp** {**actor** | **partner**} **port-priority**

- **actor** - The local side an aggregate link.
- **partner** - The remote side of an aggregate link.
- *priority* - LACP port priority is used to select a backup link.  
(Range: 0-65535)

### Default Setting

32768

### Command Mode

Interface Configuration (Ethernet)

### Command Usage

- Setting a lower value indicates a higher effective priority.
- If an active port link goes down, the backup port with the highest priority is selected to replace the downed link. However, if two or more ports have the same LACP port priority, the port with the lowest physical port number will be selected as the backup port.
- Once the remote side of a link has been established, LACP operational settings are already in use on that side. Configuring LACP settings for the partner only applies to its administrative state, not its operational state, and will only take effect the next time an aggregate link is established with the partner.

### Example

```
Console(config)#interface ethernet 1/5
Console(config-if)#lacp actor port-priority 128
```

### show lacp

This command displays LACP information.

#### Syntax

**show lacp** [*port-channel*] {**counters** | **internal** | **neighbors** | **sys-id**}

- *port-channel* - Local identifier for a link aggregation group.  
(Range: 1-32)
- **counters** - Statistics for LACP protocol messages.
- **internal** - Configuration settings and operational state for local side.
- **neighbors** - Configuration settings and operational state for remote side.
- **sys-id** - Summary of system priority and MAC address for all channel groups.

#### Default Setting

Port Channel: all

#### Command Mode

Privileged Exec

#### Example

```
Console#show lacp 1 counters
Port channel: 1
-----
Eth 1/ 2
-----
LACPDUs Sent:      10
LACPDUs Receive:   5
Marker Sent:       0
Marker Receive:    0
LACPDUs Unknown Pkts: 0
LACPDUs Illegal Pkts: 0
:
```

**Table 25-2 show lacp counters - display description**

Field	Description
LACPDUs Sent	Number of valid LACPDUs transmitted from this channel group.
LACPDUs Received	Number of valid LACPDUs received on this channel group.
Marker Sent	Number of valid Marker PDUs transmitted from this channel group.
Marker Received	Number of valid Marker PDUs received by this channel group.
LACPDUs Unknown Pkts	Number of frames received that either (1) Carry the Slow Protocols Ethernet Type value, but contain an unknown PDU, or (2) are addressed to the Slow Protocols group MAC Address, but do not carry the Slow Protocols Ethernet Type.
LACPDUs Illegal Pkts	Number of frames that carry the Slow Protocols Ethernet Type value, but contain a badly formed PDU or an illegal value of Protocol Subtype.

```

Console#show lacp 1 internal
Port channel: 1
-----
Oper Key: 3
Admin Key: 0
Eth 1/ 2
-----
LACPDU Internal: 30 sec
LACP System Priority: 32768
LACP Port Priority: 32768
Admin Key: 3
Oper Key: 3
Admin State: defaulted, aggregation, long timeout, LACP-activity
Oper State: distributing, collecting, synchronization,
aggregation, long timeout, LACP-activity
:

```

**Table 25-3 show lacp internal - display description**

Field	Description
Oper Key	Current operational value of the key for the aggregation port.
Admin Key	Current administrative value of the key for the aggregation port.

**Table 25-3 show lacp internal - display description** (Continued)

Field	Description
LACPDUs Internal	Number of seconds before invalidating received LACPDU information.
LACP System Priority	LACP system priority assigned to this port channel.
LACP Port Priority	LACP port priority assigned to this interface within the channel group.
Admin State, Oper State	<p>Administrative or operational values of the actor's state parameters:</p> <ul style="list-style-type: none"> <li>Expired – The actor's receive machine is in the expired state;</li> <li>Defaulted – The actor's receive machine is using defaulted operational partner information, administratively configured for the partner.</li> <li>Distributing – If false, distribution of outgoing frames on this link is disabled; i.e., distribution is currently disabled and is not expected to be enabled in the absence of administrative changes or changes in received protocol information.</li> <li>Collecting – Collection of incoming frames on this link is enabled; i.e., collection is currently enabled and is not expected to be disabled in the absence of administrative changes or changes in received protocol information.</li> <li>Synchronization – The System considers this link to be IN_SYNC; i.e., it has been allocated to the correct Link Aggregation Group, the group has been associated with a compatible Aggregator, and the identity of the Link Aggregation Group is consistent with the System ID and operational Key information transmitted.</li> <li>Aggregation – The system considers this link to be aggregatable; i.e., a potential candidate for aggregation.</li> <li>Long timeout – Periodic transmission of LACPDUs uses a slow transmission rate.</li> <li>LACP-Activity – Activity control value with regard to this link. (0: Passive; 1: Active)</li> </ul>

```

Console#show lacp 1 neighbors
Port channel 1 neighbors
-----
Eth 1/1
-----
  Partner Admin System ID:  32768, 00-00-00-00-00-00
  Partner Oper System ID:   32768, 00-01-F4-78-AE-C0
  Partner Admin Port Number: 2
  Partner Oper Port Number:  2
  Port Admin Priority:        32768
  Port Oper Priority:         32768
  Admin Key:                  0
  Oper Key:                   3
  Admin State:                defaulted, distributing, collecting,
                              synchronization, long timeout,
  Oper State:                 distributing, collecting, synchronization,
                              aggregation, long timeout, LACP-activity
.
.
.

```

**Table 25-4 show lacp neighbors - display description**

Field	Description
Partner Admin System ID	LAG partner's system ID assigned by the user.
Partner Oper System ID	LAG partner's system ID assigned by the LACP protocol.
Partner Admin Port Number	Current administrative value of the port number for the protocol Partner.
Partner Oper Port Number	Operational port number assigned to this aggregation port by the port's protocol partner.
Port Admin Priority	Current administrative value of the port priority for the protocol partner.
Port Oper Priority	Priority value assigned to this aggregation port by the partner.
Admin Key	Current administrative value of the Key for the protocol partner.
Oper Key	Current operational value of the Key for the protocol partner.
Admin State	Administrative values of the partner's state parameters. (See preceding table.)
Oper State	Operational values of the partner's state parameters. (See preceding table.)

Console#show lacp sysid			
Port	Channel	System Priority	System MAC Address
-----			
	1	32768	00-30-F1-8F-2C-A7
	2	32768	00-30-F1-8F-2C-A7
	3	32768	00-30-F1-8F-2C-A7
	4	32768	00-30-F1-8F-2C-A7
	5	32768	00-30-F1-8F-2C-A7
	6	32768	00-30-F1-8F-2C-A7
	7	32768	00-30-F1-D4-73-A0
	8	32768	00-30-F1-D4-73-A0
	9	32768	00-30-F1-D4-73-A0
	10	32768	00-30-F1-D4-73-A0
	11	32768	00-30-F1-D4-73-A0
	12	32768	00-30-F1-D4-73-A0
	:		

**Table 25-5 show lacp sysid - display description**

Field	Description
Channel group	A link aggregation group configured on this switch.
System Priority*	LACP system priority for this channel group.
System MAC Address*	System MAC address.

\* The LACP system priority and system MAC address are concatenated to form the LAG system ID.



# CHAPTER 26

## MIRROR PORT COMMANDS

---

This section describes how to mirror traffic from a source port to a target port.

**Table 26-1 Mirror Port Commands**

Command	Function	Mode	Page
port monitor	Configures a mirror session	IC	26-1
show port monitor	Shows the configuration for a mirror port	PE	26-2

### port monitor

This command configures a mirror session. Use the **no** form to clear a mirror session.

#### Syntax

**port monitor** *interface* [**rx** | **tx** | **both**]

**no port monitor** *interface*

- *interface* - **ethernet** *unit/port* (source port)
  - *unit* - Stack unit. (Range: 1-8)
  - *port* - Port number. (Range: 1-26/50)
- **rx** - Mirror received packets.
- **tx** - Mirror transmitted packets.
- **both** - Mirror both received and transmitted packets.

#### Default Setting

No mirror session is defined. When enabled, the default mirroring is for both received and transmitted packets.

#### Command Mode

Interface Configuration (Ethernet, destination port)

### Command Usage

- You can mirror traffic from any source port to a destination port for real-time analysis. You can then attach a logic analyzer or RMON probe to the destination port and study the traffic crossing the source port in a completely unobtrusive manner.
- The destination port is set by specifying an Ethernet interface.
- The mirror port and monitor port speeds should match, otherwise traffic may be dropped from the monitor port.
- You can create multiple mirror sessions, but all sessions must share the same destination port. However, you should avoid sending too much traffic to the destination port from multiple source ports.

### Example

The following example configures the switch to mirror all packets from port 6 to 11:

```
Console(config)#interface ethernet 1/11
Console(config-if)#port monitor ethernet 1/6 both
Console(config-if)#
```

## show port monitor

This command displays mirror information.

### Syntax

**show port monitor** [*interface*]

*interface* - **ethernet** *unit/port* (source port)

- *unit* - Stack unit. (Range: 1-8)
- *port* - Port number. (Range: 1-26/50)

### Default Setting

Shows all sessions.

### Command Mode

Privileged Exec

## Command Usage

This command displays the currently configured source port, destination port, and mirror mode (i.e., RX, TX, RX/TX).

## Example

The following shows mirroring configured from port 6 to port 11:

```
Console(config)#interface ethernet 1/11
Console(config-if)#port monitor ethernet 1/6
Console(config-if)#end
Console#show port monitor
Port Mirroring
-----
Destination port(listen port):Eth1/1
Source port(monitored port)  :Eth1/6
Mode                         :RX/TX
Console#
```



# CHAPTER 27

## RATE LIMIT COMMANDS

---

This function allows the network manager to control the maximum rate for traffic transmitted or received on an interface. Rate limiting is configured on interfaces at the edge of a network to limit traffic into or out of the network. Traffic that falls within the rate limit is transmitted, while packets that exceed the acceptable amount of traffic are dropped.

Rate limiting can be applied to individual ports or trunks. When an interface is configured with this feature, the traffic rate will be monitored by the hardware to verify conformity. Non-conforming traffic is dropped, conforming traffic is forwarded without any changes.

**Table 27-1 Rate Limit Commands**

Command	Function	Mode	Page
rate-limit	Configures the maximum input or output rate for a port	IC	27-1

### rate-limit

This command defines the rate limit for a specific interface. Use this command without specifying a rate to restore the default rate. Use the **no** form to restore the default status of disabled.

#### Syntax

```
rate-limit {input | output} [rate]
no rate-limit {input | output}
```

- **input** – Input rate
- **output** – Output rate
- *rate* – Maximum value in Mbps. (Range: 1 to 1000 Mbps)

## *RATE LIMIT COMMANDS*

### **Default Setting**

Gigabit Ethernet: 1000 Mbps

### **Command Mode**

Interface Configuration (Ethernet, Port Channel)

### **Command Usage**

Rate limits are not supported for the 10 Gigabit Ethernet ports.

### **Example**

```
Console(config)#interface ethernet 1/1
Console(config-if)#rate-limit input 600
Console(config-if)#
```

# CHAPTER 28

## ADDRESS TABLE COMMANDS

---

These commands are used to configure the address table for filtering specified addresses, displaying current entries, clearing the table, or setting the aging time.

**Table 28-1 Address Table Commands**

Command	Function	Mode	Page
mac-address-table static	Maps a static address to a port in a VLAN	GC	28-2
clear mac-address-table dynamic	Removes any learned entries from the forwarding database	PE	28-3
show mac-address-table	Displays entries in the bridge-forwarding database	PE	28-4
mac-address-table aging-time	Sets the aging time of the address table	GC	28-5
show mac-address-table aging-time	Shows the aging time for the address table	PE	28-6

## **mac-address-table static**

This command maps a static address to a destination port in a VLAN. Use the **no** form to remove an address.

### **Syntax**

**mac-address-table static** *mac-address* **interface** *interface*  
**vlan** *vlan-id* [*action*]

**no mac-address-table static** *mac-address* **vlan** *vlan-id*

- *mac-address* - MAC address.
- *interface*
  - **ethernet** *unit/port*
    - *unit* - Stack unit. (Range: 1-8)
    - *port* - Port number. (Range: 1-26/50)
  - **port-channel** *channel-id* (Range: 1-32)
- *vlan-id* - VLAN ID (Range: 1-4093)
- *action* -
  - **delete-on-reset** - Assignment lasts until the switch is reset.
  - **permanent** - Assignment is permanent.

### **Default Setting**

No static addresses are defined. The default mode is **permanent**.

### **Command Mode**

Global Configuration

### **Command Usage**

The static address for a host device can be assigned to a specific port within a specific VLAN. Use this command to add static addresses to the MAC Address Table. Static addresses have the following characteristics:

- Static addresses will not be removed from the address table when a given interface link is down.
- Static addresses are bound to the assigned interface and will not be moved. When a static address is seen on another interface, the address will be ignored and will not be written to the address table.



- A static address cannot be learned on another port until the address is removed with the **no** form of this command.

**Example**

```
Console(config)#mac-address-table static 00-e0-29-94-34-de  
interface ethernet 1/1 vlan 1 delete-on-reset  
Console(config)#
```

**Related Commands**

ipv6 neighbor (36-38)

**clear mac-address-table dynamic**

This command removes any learned entries from the forwarding database and clears the transmit and receive counts for any static or system configured entries.

**Default Setting**

None

**Command Mode**

Privileged Exec

**Example**

```
Console#clear mac-address-table dynamic  
Console#
```

## show mac-address-table

This command shows classes of entries in the bridge-forwarding database.

### Syntax

```
show mac-address-table [address mac-address [mask]]  
[interface interface] [vlan vlan-id]  
[sort {address | vlan | interface}]
```

- *mac-address* - MAC address.
- *mask* - Bits to match in the address.
- *interface*
  - **ethernet** *unit/port*
    - *unit* - Stack unit. (Range: 1-8)
    - *port* - Port number. (Range: 1-26/50)
  - **port-channel** *channel-id* (Range: 1-32)
- *vlan-id* - VLAN ID (Range: 1-4093)
- **sort** - Sort by address, vlan or interface.

### Default Setting

None

### Command Mode

Privileged Exec

### Command Usage

- The MAC Address Table contains the MAC addresses associated with each interface. Note that the Type field may include the following types:
  - Learned - Dynamic address entries
  - Permanent - Static entry
  - Delete-on-reset - Static entry to be deleted when system is reset
- The mask should be hexadecimal numbers (representing an equivalent bit mask) in the form xx-xx-xx-xx-xx-xx that is applied to the specified MAC address. Enter hexadecimal numbers, where an equivalent binary bit “0” means to match a bit and “1” means to ignore a bit. For example, a mask of 00-00-00-00-00-00 means an exact match, and a mask of FF-FF-FF-FF-FF-FF means “any.”

- The maximum number of address entries is 8191.

### Example

```
Console#show mac-address-table
Interface MAC Address      VLAN Type
-----
Eth 1/ 1 00-e0-29-94-34-de 1 Delete-on-reset
Console#
```

### Related Commands

show ipv6 neighbors (36-43)

## mac-address-table aging-time

This command sets the aging time for entries in the address table. Use the **no** form to restore the default aging time.

### Syntax

**mac-address-table aging-time** *seconds*

**no mac-address-table aging-time**

*seconds* - Aging time. (Range: 10-1000000 seconds; 0 to disable aging)

### Default Setting

300 seconds

### Command Mode

Global Configuration

### Command Usage

The aging time is used to age out dynamically learned forwarding information.

### Example

```
Console(config)#mac-address-table aging-time 100
Console(config)#
```

## **show mac-address-table aging-time**

This command shows the aging time for entries in the address table.

### **Default Setting**

None

### **Command Mode**

Privileged Exec

### **Example**

```
Console#show mac-address-table aging-time
Aging time: 300 sec.
Console#
```

# CHAPTER 29

## SPANNING TREE COMMANDS

---

This section includes commands that configure the Spanning Tree Algorithm (STA) globally for the switch, and commands that configure STA for the selected interface.

**Table 29-1 Spanning Tree Commands**

Command	Function	Mode	Page
spanning-tree	Enables the spanning tree protocol	GC	29-3
spanning-tree mode	Configures STP, RSTP or MSTP mode	GC	29-4
spanning-tree forward-time	Configures the spanning tree bridge forward time	GC	29-5
spanning-tree hello-time	Configures the spanning tree bridge hello time	GC	29-6
spanning-tree max-age	Configures the spanning tree bridge maximum age	GC	29-7
spanning-tree priority	Configures the spanning tree bridge priority	GC	29-8
spanning-tree path-cost method	Configures the path cost method for RSTP/MSTP	GC	29-9
spanning-tree transmission-limit	Configures the transmission limit for RSTP/MSTP	GC	29-10
spanning-tree mst-configuration	Changes to MSTP configuration mode	GC	29-10
mst vlan	Adds VLANs to a spanning tree instance	MST	29-11
mst priority	Configures the priority of a spanning tree instance	MST	29-12
name	Configures the name for the multiple spanning tree	MST	29-13

**Table 29-1 Spanning Tree Commands (Continued)**

Command	Function	Mode	Page
revision	Configures the revision number for the multiple spanning tree	MST	29-14
max-hops	Configures the maximum number of hops allowed in the region before a BPDU is discarded	MST	29-14
spanning-tree spanning-disabled	Disables spanning tree for an interface	IC	29-15
spanning-tree cost	Configures the spanning tree path cost of an interface	IC	29-16
spanning-tree port-priority	Configures the spanning tree priority of an interface	IC	29-18
spanning-tree edge-port	Enables fast forwarding for edge ports	IC	29-18
spanning-tree portfast	Sets an interface to fast forwarding	IC	29-19
spanning-tree link-type	Configures the link type for RSTP/MSTP	IC	29-21
spanning-tree mst cost	Configures the path cost of an instance in the MST	IC	29-22
spanning-tree mst port-priority	Configures the priority of an instance in the MST	IC	29-23
spanning-tree protocol-migration	Re-checks the appropriate BPDU format	PE	29-24
show spanning-tree	Shows spanning tree configuration for the common spanning tree (i.e., overall bridge), a selected interface, or an instance within the multiple spanning tree	PE	29-25
show spanning-tree mst configuration	Shows the multiple spanning tree configuration	PE	29-27

## spanning-tree

This command enables the Spanning Tree Algorithm globally for the switch. Use the **no** form to disable it.

### Syntax

**[no] spanning-tree**

### Default Setting

Spanning tree is enabled.

### Command Mode

Global Configuration

### Command Usage

The Spanning Tree Algorithm (STA) can be used to detect and disable network loops, and to provide backup links between switches, bridges or routers. This allows the switch to interact with other bridging devices (that is, an STA-compliant switch, bridge or router) in your network to ensure that only one route exists between any two stations on the network, and provide backup links which automatically take over when a primary link goes down.

### Example

This example shows how to enable the Spanning Tree Algorithm for the switch:

```
Console(config)#spanning-tree
Console(config)#
```

## spanning-tree mode

This command selects the spanning tree mode for this switch. Use the **no** form to restore the default.

### Syntax

**spanning-tree mode {stp | rstp | mstp}**  
**no spanning-tree mode**

- **stp** - Spanning Tree Protocol (IEEE 802.1D)
- **rstp** - Rapid Spanning Tree Protocol (IEEE 802.1w)
- **mstp** - Multiple Spanning Tree (IEEE 802.1s)

### Default Setting

rstp

### Command Mode

Global Configuration

### Command Usage

- Spanning Tree Protocol  
Uses RSTP for the internal state machine, but sends only 802.1D BPDUs. This creates one spanning tree instance for the entire network. If multiple VLANs are implemented on a network, the path between specific VLAN members may be inadvertently disabled to prevent network loops, thus isolating group members. When operating multiple VLANs, we recommend selecting the MSTP option.
- Rapid Spanning Tree Protocol  
RSTP supports connections to either STP or RSTP nodes by monitoring the incoming protocol messages and dynamically adjusting the type of protocol messages the RSTP node transmits, as described below:
  - STP Mode – If the switch receives an 802.1D BPDU after a port's migration delay timer expires, the switch assumes it is connected to an 802.1D bridge and starts using only 802.1D BPDUs.
  - RSTP Mode – If RSTP is using 802.1D BPDUs on a port and receives an RSTP BPDU after the migration delay expires, RSTP



restarts the migration delay timer and begins using RSTP BPDUs on that port.

- Multiple Spanning Tree Protocol
  - To allow multiple spanning trees to operate over the network, you must configure a related set of bridges with the same MSTP configuration, allowing them to participate in a specific set of spanning tree instances.
  - A spanning tree instance can exist only on bridges that have compatible VLAN instance assignments.
  - Be careful when switching between spanning tree modes. Changing modes stops all spanning-tree instances for the previous mode and restarts the system in the new mode, temporarily disrupting user traffic.

### Example

The following example configures the switch to use Rapid Spanning Tree:

```
Console(config)#spanning-tree mode rstp
Console(config)#
```

## spanning-tree forward-time

This command configures the spanning tree bridge forward time globally for this switch. Use the **no** form to restore the default.

### Syntax

**spanning-tree forward-time** *seconds*

**no spanning-tree forward-time**

*seconds* - Time in seconds. (Range: 4 - 30 seconds)

The minimum value is the higher of 4 or  $\lceil (\text{max-age} / 2) + 1 \rceil$ .

### Default Setting

15 seconds

### Command Mode

Global Configuration

### Command Usage

This command sets the maximum time (in seconds) the root device will wait before changing states (i.e., discarding to learning to forwarding). This delay is required because every device must receive information about topology changes before it starts to forward frames. In addition, each port needs time to listen for conflicting information that would make it return to the discarding state; otherwise, temporary data loops might result.

### Example

```
Console(config)#spanning-tree forward-time 20
Console(config)#
```

### spanning-tree hello-time

This command configures the spanning tree bridge hello time globally for this switch. Use the **no** form to restore the default.

### Syntax

**spanning-tree hello-time** *time*  
**no spanning-tree hello-time**

*time* - Time in seconds. (Range: 1-10 seconds).

The maximum value is the lower of 10 or  $[(\text{max-age} / 2) - 1]$ .

### Default Setting

2 seconds

### Command Mode

Global Configuration

### Command Usage

This command sets the time interval (in seconds) at which the root device transmits a configuration message.

### Example

```
Console(config)#spanning-tree hello-time 5
Console(config)#
```

## Related Commands

spanning-tree forward-time (29-5)

spanning-tree max-age (29-7)

## spanning-tree max-age

This command configures the spanning tree bridge maximum age globally for this switch. Use the **no** form to restore the default.

### Syntax

**spanning-tree max-age** *seconds*

**no spanning-tree max-age**

*seconds* - Time in seconds. (Range: 6-40 seconds)

The minimum value is the higher of 6 or [2 x (hello-time + 1)].

The maximum value is the lower of 40 or [2 x (forward-time - 1)].

### Default Setting

20 seconds

### Command Mode

Global Configuration

### Command Usage

This command sets the maximum time (in seconds) a device can wait without receiving a configuration message before attempting to reconfigure. All device ports (except for designated ports) should receive configuration messages at regular intervals. Any port that ages out STA information (provided in the last configuration message) becomes the designated port for the attached LAN. If it is a root port, a new root port is selected from among the device ports attached to the network.

### Example

```
Console(config)#spanning-tree max-age 40
Console(config)#
```

### Related Commands

spanning-tree forward-time (29-5)

spanning-tree hello-time (29-6)

## spanning-tree priority

This command configures the spanning tree priority globally for this switch. Use the **no** form to restore the default.

### Syntax

**spanning-tree priority** *priority*

**no spanning-tree priority**

*priority* - Priority of the bridge. (Range: 0 - 65535)

(Range – 0-61440, in steps of 4096; Options: 0, 4096, 8192, 12288, 16384, 20480, 24576, 28672, 32768, 36864, 40960, 45056, 49152, 53248, 57344, 61440)

### Default Setting

32768

### Command Mode

Global Configuration

### Command Usage

Bridge priority is used in selecting the root device, root port, and designated port. The device with the highest priority (i.e., lower numeric value) becomes the STA root device. However, if all devices have the same priority, the device with the lowest MAC address will then become the root device.

### Example

```
Console(config)#spanning-tree priority 40000
Console(config)#
```

## spanning-tree pathcost method

This command configures the path cost method used for Rapid Spanning Tree and Multiple Spanning Tree. Use the **no** form to restore the default.

### Syntax

**spanning-tree pathcost method {long | short}**  
**no spanning-tree pathcost method**

- **long** - Specifies 32-bit based values that range from 1-200,000,000. This method is based on the IEEE 802.1w Rapid Spanning Tree Protocol.
- **short** - Specifies 16-bit based values that range from 1-65535. This method is based on the IEEE 802.1 Spanning Tree Protocol.

### Default Setting

Long method

### Command Mode

Global Configuration

### Command Usage

The path cost method is used to determine the best path between devices. Therefore, lower values should be assigned to ports attached to faster media, and higher values assigned to ports with slower media. Note that path cost (page 29-16) takes precedence over port priority (page 29-18).

### Example

```
Console(config)#spanning-tree pathcost method long
Console(config)#
```

## spanning-tree transmission-limit

This command configures the minimum interval between the transmission of consecutive RSTP/MSTP BPDUs. Use the **no** form to restore the default.

### Syntax

**spanning-tree transmission-limit** *count*  
**no spanning-tree transmission-limit**

*count* - The transmission limit in seconds. (Range: 1-10)

### Default Setting

3

### Command Mode

Global Configuration

### Command Usage

This command limits the maximum transmission rate for BPDUs.

### Example

```
Console(config)#spanning-tree transmission-limit 4  
Console(config)#
```

## spanning-tree mst-configuration

This command changes to Multiple Spanning Tree (MST) configuration mode.

### Default Setting

- No VLANs are mapped to any MST instance.
- The region name is set the switch's MAC address.

### Command Mode

Global Configuration

### Example

```
Console(config)#spanning-tree mst-configuration  
Console(config-mstp)#
```

## Related Commands

mst vlan (29-11)  
mst priority (29-12)  
name (29-13)  
revision (29-14)  
max-hops (29-14)

## mst vlan

This command adds VLANs to a spanning tree instance. Use the **no** form to remove the specified VLANs. Using the **no** form without any VLAN parameters to remove all VLANs.

### Syntax

[no] **mst** *instance\_id* **vlan** *vlan-range*

- *instance\_id* - Instance identifier of the spanning tree. (Range: 0-4094)
- *vlan-range* - Range of VLANs. (Range: 1-4093)

### Default Setting

none

### Command Mode

MST Configuration

### Command Usage

- Use this command to group VLANs into spanning tree instances. MSTP generates a unique spanning tree for each instance. This provides multiple pathways across the network, thereby balancing the traffic load, preventing wide-scale disruption when a bridge node in a single instance fails, and allowing for faster convergence of a new topology for the failed instance.
- By default all VLANs are assigned to the Internal Spanning Tree (MSTI 0) that connects all bridges and LANs within the MST region. This switch supports up to 58 instances. You should try to group VLANs which cover the same general area of your network. However, remember that you must configure all bridges within the same MSTI Region (page 29-13) with the same set of instances, and the same

instance (on each bridge) with the same set of VLANs. Also, note that RSTP treats each MSTI region as a single node, connecting all regions to the Common Spanning Tree.

### Example

```
Console(config-mstp)#mst 1 vlan 2-5
Console(config-mstp)#
```

## mst priority

This command configures the priority of a spanning tree instance. Use the **no** form to restore the default.

### Syntax

**mst** *instance\_id* **priority** *priority*  
**no mst** *instance\_id* **priority**

- *instance\_id* - Instance identifier of the spanning tree. (Range: 0-4094)
- *priority* - Priority of the a spanning tree instance.  
(Range: 0-61440 in steps of 4096; Options: 0, 4096, 8192, 12288, 16384, 20480, 24576, 28672, 32768, 36864, 40960, 45056, 49152, 53248, 57344, 61440)

### Default Setting

32768

### Command Mode

MST Configuration

### Command Usage

- MST priority is used in selecting the root bridge and alternate bridge of the specified instance. The device with the highest priority (i.e., lowest numerical value) becomes the MSTI root device. However, if all devices have the same priority, the device with the lowest MAC address will then become the root device.
- You can set this switch to act as the MSTI root device by specifying a priority of 0, or as the MSTI alternate device by specifying a priority of 16384.



### Example

```
Console(config-mstp)#mst 1 priority 4096
Console(config-mstp)#
```

## name

This command configures the name for the multiple spanning tree region in which this switch is located. Use the **no** form to clear the name.

### Syntax

**name** *name*

*name* - Name of the spanning tree.

### Default Setting

Switch's MAC address

### Command Mode

MST Configuration

### Command Usage

The MST region name and revision number (page 29-14) are used to designate a unique MST region. A bridge (i.e., spanning-tree compliant device such as this switch) can only belong to one MST region. And all bridges in the same region must be configured with the same MST instances.

### Example

```
Console(config-mstp)#name R&D
Console(config-mstp)#
```

### Related Commands

revision (29-14)

## revision

This command configures the revision number for this multiple spanning tree configuration of this switch. Use the **no** form to restore the default.

### Syntax

**revision** *number*

*number* - Revision number of the spanning tree.

(Range: 0-65535)

### Default Setting

0

### Command Mode

MST Configuration

### Command Usage

The MST region name (page 29-13) and revision number are used to designate a unique MST region. A bridge (i.e., spanning-tree compliant device such as this switch) can only belong to one MST region. And all bridges in the same region must be configured with the same MST instances.

### Example

```
Console(config-mstp)#revision 1
Console(config-mstp)#
```

### Related Commands

name (29-13)

## max-hops

This command configures the maximum number of hops in the region before a BPDU is discarded. Use the **no** form to restore the default.

### Syntax

**max-hops** *hop-number*

*hop-number* - Maximum hop number for multiple spanning tree. (Range: 1-40)

**Default Setting**

20

**Command Mode**

MST Configuration

**Command Usage**

An MSTI region is treated as a single node by the STP and RSTP protocols. Therefore, the message age for BPDUs inside an MSTI region is never changed. However, each spanning tree instance within a region, and the internal spanning tree (IST) that connects these instances use a hop count to specify the maximum number of bridges that will propagate a BPDU. Each bridge decrements the hop count by one before passing on the BPDU. When the hop count reaches zero, the message is dropped.

**Example**

```
Console(config-mstp)#max-hops 30
Console(config-mstp)#
```

**spanning-tree spanning-disabled**

This command disables the spanning tree algorithm for the specified interface. Use the **no** form to reenble the spanning tree algorithm for the specified interface.

**Syntax**

[no] **spanning-tree spanning-disabled**

**Default Setting**

Enabled

**Command Mode**

Interface Configuration (Ethernet, Port Channel)

### Example

This example disables the spanning tree algorithm for port 5.

```
Console(config)#interface ethernet 1/5
Console(config-if)#spanning-tree spanning-disabled
Console(config-if)#
```

## spanning-tree cost

This command configures the spanning tree path cost for the specified interface. Use the **no** form to restore the default.

### Syntax

**spanning-tree cost** *cost*

**no spanning-tree cost**

*cost* - The path cost for the port.

(Range: 0 for auto-configuration, or 1-200,000,000)

The recommended range is:

**Table 29-2 Recommended STA Path Cost Range**

Port Type	IEEE 802.1D-1998*	IEEE 802.1w-2001*
Gigabit Ethernet	3-10	2,000-200,000
10G Ethernet	1-5	200-20,000

\* Use the spanning-tree pathcost method command on page 29-9 to set the path cost method.

## Default Setting

By default, the system automatically detects the speed and duplex mode used on each port, and configures the path cost according to the values shown below. Path cost “0” is used to indicate auto-configuration mode.

**Table 29-3 Default STA Path Costs**

Port Type	Link Type	IEEE 802.1D-1998*	IEEE 802.1w-2001*
Gigabit Ethernet	Full Duplex	4	10,000
	Trunk	4	5,000
10G Ethernet	Full Duplex	2	1000
	Trunk	2	500

\* Use the spanning-tree pathcost method command on page 29-9 to set the path cost method.

## Command Mode

Interface Configuration (Ethernet, Port Channel)

## Command Usage

- This command is used by the Spanning Tree Algorithm to determine the best path between devices. Therefore, lower values should be assigned to ports attached to faster media, and higher values assigned to ports with slower media.
- Path cost takes precedence over port priority.
- When the spanning-tree pathcost method (page 29-9) is set to short, the maximum value for path cost is 65,535.

## Example

```
Console(config)#interface ethernet 1/5
Console(config-if)#spanning-tree cost 50
Console(config-if)#
```

## spanning-tree port-priority

This command configures the priority for the specified interface. Use the **no** form to restore the default.

### Syntax

**spanning-tree port-priority** *priority*  
**no spanning-tree port-priority**

*priority* - The priority for a port. (Range: 0-240, in steps of 16)

### Default Setting

128

### Command Mode

Interface Configuration (Ethernet, Port Channel)

### Command Usage

- This command defines the priority for the use of a port in the Spanning Tree Algorithm. If the path cost for all ports on a switch are the same, the port with the highest priority (that is, lowest value) will be configured as an active link in the spanning tree.
- Where more than one port is assigned the highest priority, the port with lowest numeric identifier will be enabled.

### Example

```
Console(config)#interface ethernet 1/5  
Console(config-if)#spanning-tree port-priority 0
```

### Related Commands

spanning-tree cost (29-16)

## spanning-tree edge-port

This command specifies an interface as an edge port. Use the **no** form to restore the default.

### Syntax

**[no] spanning-tree edge-port**

## Default Setting

Disabled

## Command Mode

Interface Configuration (Ethernet, Port Channel)

## Command Usage

- You can enable this option if an interface is attached to a LAN segment that is at the end of a bridged LAN or to an end node. Since end nodes cannot cause forwarding loops, they can pass directly through to the spanning tree forwarding state. Specifying Edge Ports provides quicker convergence for devices such as workstations or servers, retains the current forwarding database to reduce the amount of frame flooding required to rebuild address tables during reconfiguration events, does not cause the spanning tree to initiate reconfiguration when the interface changes state, and also overcomes other STA-related timeout problems. However, remember that Edge Port should only be enabled for ports connected to an end-node device.
- This command has the same effect as the **spanning-tree portfast**.

## Example

```
Console(config)#interface ethernet ethernet 1/5
Console(config-if)#spanning-tree edge-port
Console(config-if)#
```

## Related Commands

spanning-tree portfast (29-19)

## spanning-tree portfast

This command sets an interface to fast forwarding. Use the **no** form to disable fast forwarding.

## Syntax

[no] spanning-tree portfast

## Default Setting

Disabled

### Command Mode

Interface Configuration (Ethernet, Port Channel)

### Command Usage

- This command is used to enable/disable the fast spanning-tree mode for the selected port. In this mode, ports skip the Discarding and Learning states, and proceed straight to Forwarding.
- Since end-nodes cannot cause forwarding loops, they can be passed through the spanning tree state changes more quickly than allowed by standard convergence time. Fast forwarding can achieve quicker convergence for end-node workstations and servers, and also overcome other STA related timeout problems. (Remember that fast forwarding should only be enabled for ports connected to a LAN segment that is at the end of a bridged LAN or for an end-node device.)
- This command is the same as **spanning-tree edge-port**, and is only included for backward compatibility with earlier products. Note that this command may be removed for future software versions.

### Example

```
Console(config)#interface ethernet 1/5
Console(config-if)#bridge-group 1 portfast
Console(config-if)#
```

### Related Commands

spanning-tree edge-port (29-18)



## spanning-tree link-type

This command configures the link type for Rapid Spanning Tree and Multiple Spanning Tree. Use the **no** form to restore the default.

### Syntax

**spanning-tree link-type {auto | point-to-point | shared}**  
**no spanning-tree link-type**

- **auto** - Automatically derived from the duplex mode setting.
- **point-to-point** - Point-to-point link.
- **shared** - Shared medium.

### Default Setting

auto

### Command Mode

Interface Configuration (Ethernet, Port Channel)

### Command Usage

- Specify a point-to-point link if the interface can only be connected to exactly one other bridge, or a shared link if it can be connected to two or more bridges.
- When automatic detection is selected, the switch derives the link type from the duplex mode. A full-duplex interface is considered a point-to-point link, while a half-duplex interface is assumed to be on a shared link.
- RSTP only works on point-to-point links between two bridges. If you designate a port as a shared link, RSTP is forbidden. Since MSTP is an extension of RSTP, this same restriction applies.

### Example

```
Console(config)#interface ethernet ethernet 1/5  
Console(config-if)#spanning-tree link-type point-to-point
```

## spanning-tree mst cost

This command configures the path cost on a spanning instance in the Multiple Spanning Tree. Use the **no** form to restore the default.

### Syntax

**spanning-tree mst** *instance\_id* **cost** *cost*  
**no spanning-tree mst** *instance\_id* **cost**

- *instance\_id* - Instance identifier of the spanning tree.  
 (Range: 0-4094, no leading zeroes)
- *cost* - Path cost for an interface. (Range: 1-200,000,000)

The recommended range is:

**Table 29-4 Recommended STA Path Cost Range**

Port Type	IEEE 802.1D-1998*	IEEE 802.1w-2001*
Gigabit Ethernet	3-10	2,000-200,000
10G Ethernet	1-5	200-20,000

\* Use the spanning-tree pathcost method command on page 29-9 to set the path cost method.

### Default Setting

By default, the system automatically detects the speed and duplex mode used on each port, and configures the path cost according to the values shown below. Path cost “0” is used to indicate auto-configuration mode.

**Table 29-5 Default STA Path Costs**

Port Type	Link Type	IEEE 802.1D-1998*	IEEE 802.1w-2001*
Gigabit Ethernet	Full Duplex	4	10,000
	Trunk	4	5,000
10G Ethernet	Full Duplex	2	1000
	Trunk	2	500

\* Use the spanning-tree pathcost method command on page 29-9 to set the path cost method.

## Command Mode

Interface Configuration (Ethernet, Port Channel)

## Command Usage

- Each spanning-tree instance is associated with a unique set of VLAN IDs.
- This command is used by the multiple spanning-tree algorithm to determine the best path between devices. Therefore, lower values should be assigned to interfaces attached to faster media, and higher values assigned to interfaces with slower media.
- Use the **no spanning-tree mst cost** command to specify auto-configuration mode.
- Path cost takes precedence over interface priority.

## Example

```
Console(config)#interface ethernet ethernet 1/5
Console(config-if)#spanning-tree mst 1 cost 50
Console(config-if)#
```

## Related Commands

spanning-tree mst port-priority (29-23)

## spanning-tree mst port-priority

This command configures the interface priority on a spanning instance in the Multiple Spanning Tree. Use the **no** form to restore the default.

## Syntax

**spanning-tree mst** *instance\_id* **port-priority** *priority*  
**no spanning-tree mst** *instance\_id* **port-priority**

- *instance\_id* - Instance identifier of the spanning tree.  
(Range: 0-4094, no leading zeroes)
- *priority* - Priority for an interface. (Range: 0-240 in steps of 16)

## Default Setting

128

### Command Mode

Interface Configuration (Ethernet, Port Channel)

### Command Usage

This command defines the priority for the use of an interface in the multiple spanning-tree. If the path cost for all interfaces on a switch are the same, the interface with the highest priority (that is, lowest value) will be configured as an active link in the spanning tree.

Where more than one interface is assigned the highest priority, the interface with lowest numeric identifier will be enabled.

### Example

```
Console(config)#interface ethernet ethernet 1/5
Console(config-if)#spanning-tree mst 1 port-priority 0
Console(config-if)#
```

### Related Commands

spanning-tree mst cost (29-22)

## spanning-tree protocol-migration

This command re-checks the appropriate BPDU format to send on the selected interface.

### Syntax

**spanning-tree protocol-migration** *interface*

*interface*

- **ethernet** *unit/port*
  - *unit* - Stack unit. (Range: 1-8)
  - *port* - Port number. (Range: 1-26/50)
- **port-channel** *channel-id* (Range: 1-32)

### Command Mode

Privileged Exec

## Command Usage

If at any time the switch detects STP BPDUs, including Configuration or Topology Change Notification BPDUs, it will automatically set the selected interface to forced STP-compatible mode. However, you can also use the **spanning-tree protocol-migration** command at any time to manually re-check the appropriate BPDU format to send on the selected interfaces (i.e., RSTP or STP-compatible).

## Example

```
Console#spanning-tree protocol-migration eth 1/5
Console#
```

## show spanning-tree

This command shows the configuration for the common spanning tree (CST) or for an instance within the multiple spanning tree (MST).

### Syntax

**show spanning-tree** [*interface* | **mst** *instance\_id*]

- *interface*
  - **ethernet** *unit/port*
    - *unit* - Stack unit. (Range: 1-8)
    - *port* - Port number. (Range: 1-26/50)
  - **port-channel** *channel-id* (Range: 1-32)
- *instance\_id* - Instance identifier of the multiple spanning tree. (Range: 0-4094, no leading zeroes)

### Default Setting

None

### Command Mode

Privileged Exec

### Command Usage

- Use the **show spanning-tree** command with no parameters to display the spanning tree configuration for the switch for the Common Spanning Tree (CST) and for every interface in the tree.

- Use the **show spanning-tree interface** command to display the spanning tree configuration for an interface within the Common Spanning Tree (CST).
- Use the **show spanning-tree mst instance\_id** command to display the spanning tree configuration for an instance within the Multiple Spanning Tree (MST).
- For a description of the items displayed under “Spanning-tree information,” see “Configuring Global Settings” on page 4-146. For a description of the items displayed for specific interfaces, see “Displaying Interface Settings” on page 4-150.

### Example

```
Console#show spanning-tree
Spanning-tree information
-----
Spanning tree mode:           MSTP
Spanning tree enable/disable: enable
Instance:                     0
Vlans configuration:          1-4093
Priority:                      32768
Bridge Hello Time (sec.):      2
Bridge Max Age (sec.):         20
Bridge Forward Delay (sec.):   15
Root Hello Time (sec.):        2
Root Max Age (sec.):           20
Root Forward Delay (sec.):     15
Max hops:                     20
Remaining hops:                20
Designated Root:               32768.0.0000ABCD0000
Current root port:              1
Current root cost:              10000
Number of topology changes:     1
Last topology changes time (sec.): 22
Transmission limit:             3
Path Cost Method:               long
```

```

-----
Eth 1/ 1 information
-----
Admin status:          enable
Role:                  root
State:                 forwarding
External admin path cost: 10000
Internal admin cost:   10000
External oper path cost: 10000
Internal oper path cost: 10000
Priority:              128
Designated cost:       200000
Designated port:       128.24
Designated root:       32768.0.0000ABCD0000
Designated bridge:     32768.0.0030F1552000
Fast forwarding:       disable
Forward transitions:    1
Admin edge port:       enable
Oper edge port:        disable
Admin Link type:       auto
Oper Link type:        point-to-point
Spanning Tree Status:  enable
:
:

```

## show spanning-tree mst configuration

This command shows the configuration of the multiple spanning tree.

### Command Mode

Privileged Exec

### Example

```

Console#show spanning-tree mst configuration
Mstp Configuration Information
-----
Configuration name: R&D
Revision level:0

Instance Vlans
-----
      1      2
Console#

```





# CHAPTER 30

## VLAN COMMANDS

---

A VLAN is a group of ports that can be located anywhere in the network, but communicate as though they belong to the same physical segment. This section describes commands used to create VLAN groups, add port members, specify how VLAN tagging is used, and enable automatic VLAN registration for the selected interface.

**Table 30-1 VLAN Commands**

Command Groups	Function	Page
GVRP and Bridge Extension	Configures GVRP settings that permit automatic VLAN learning; shows the configuration for bridge extension MIB	30-2
Editing VLAN Groups	Sets up VLAN groups, including name, VID and state	30-7
Configuring VLAN Interfaces	Configures VLAN interface parameters, including ingress and egress tagging mode, ingress filtering, PVID, and GVRP	30-9
Displaying VLAN Information	Displays VLAN groups, status, port members, and MAC addresses	30-16
Configuring Private VLANs	Configures private VLANs, including uplink and downlink ports	30-17
Configuring Protocol VLANs	Configures protocol-based VLANs based on frame type and protocol	30-19

# **GVRP and Bridge Extension Commands**

GARP VLAN Registration Protocol defines a way for switches to exchange VLAN information in order to automatically register VLAN members on interfaces across the network. This section describes how to enable GVRP for individual interfaces and globally for the switch, as well as how to display default configuration settings for the Bridge Extension MIB.

**Table 30-2 GVRP and Bridge Extension Commands**

<b>Command</b>	<b>Function</b>	<b>Mode</b>	<b>Page</b>
bridge-ext gvrp	Enables GVRP globally for the switch	GC	30-2
show bridge-ext	Shows the global bridge extension configuration	PE	30-3
switchport gvrp	Enables GVRP for an interface	IC	30-4
switchport forbidden vlan	Configures forbidden VLANs for an interface	IC	30-15
show gvrp configuration	Displays GVRP configuration for the selected interface	NE, PE	30-4
garp timer	Sets the GARP timer for the selected function	IC	30-5
show garp timer	Shows the GARP timer for the selected function	NE, PE	30-6

## **bridge-ext gvrp**

This command enables GVRP globally for the switch. Use the **no** form to disable it.

### **Syntax**

**[no] bridge-ext gvrp**

### **Default Setting**

Disabled

### **Command Mode**

Global Configuration

## Command Usage

GVRP defines a way for switches to exchange VLAN information in order to register VLAN members on ports across the network. This function should be enabled to permit automatic VLAN registration, and to support VLANs which extend beyond the local switch.

## Example

```
Console(config)#bridge-ext gvrp
Console(config)#
```

## show bridge-ext

This command shows the configuration for bridge extension commands.

## Default Setting

None

## Command Mode

Privileged Exec

## Command Usage

See “Displaying Basic VLAN Information” on page 4-165 and “Displaying Bridge Extension Capabilities” on page 4-23 for a description of the displayed items.

## Example

```
Console#show bridge-ext
Max support VLAN numbers:          256
Max support VLAN ID:               4093
Extended multicast filtering services: No
Static entry individual port:      Yes
VLAN learning:                     IVL
Configurable PVID tagging:         Yes
Local VLAN capable:                No
Traffic classes:                   Enabled
Global GVRP status:                Disabled
GMRP:                              Disabled
Console#
```

### switchport gvrp

This command enables GVRP for a port. Use the **no** form to disable it.

#### Syntax

[no] **switchport gvrp**

#### Default Setting

Disabled

#### Command Mode

Interface Configuration (Ethernet, Port Channel)

#### Example

```
Console(config)#interface ethernet 1/1
Console(config-if)#switchport gvrp
Console(config-if)#
```

### show gvrp configuration

This command shows if GVRP is enabled.

#### Syntax

**show gvrp configuration** [*interface*]

*interface*

- **ethernet** *unit/port*
  - *unit* - Stack unit. (Range: 1-8)
  - *port* - Port number. (Range: 1-26/50)
- **port-channel** *channel-id* (Range: 1-32)

#### Default Setting

Shows both global and interface-specific configuration.

#### Command Mode

Normal Exec, Privileged Exec

#### Example

```
Console#show gvrp configuration ethernet 1/7
Eth 1/ 7:
  GVRP configuration: Disabled
Console#
```

## garp timer

This command sets the values for the join, leave and leaveall timers. Use the **no** form to restore the timers' default values.

### Syntax

```
garp timer {join | leave | leaveall} timer_value  
no garp timer {join | leave | leaveall}
```

- {**join** | **leave** | **leaveall**} - Which timer to set.
- *timer\_value* - Value of timer.  
Ranges:  
join: 20-1000 centiseconds  
leave: 60-3000 centiseconds  
leaveall: 500-18000 centiseconds

### Default Setting

- join: 20 centiseconds
- leave: 60 centiseconds
- leaveall: 1000 centiseconds

### Command Mode

Interface Configuration (Ethernet, Port Channel)

### Command Usage

- Group Address Registration Protocol is used by GVRP and GMRP to register or deregister client attributes for client services within a bridged LAN. The default values for the GARP timers are independent of the media access method or data rate. These values should not be changed unless you are experiencing difficulties with GMRP or GVRP registration/deregistration.
- Timer values are applied to GVRP for all the ports on all VLANs.
- Timer values must meet the following restrictions:
  - leave  $\geq$  (2 x join)
  - leaveall > leave

**Note:** Set GVRP timers on all Layer 2 devices connected in the same network to the same values. Otherwise, GVRP may not operate successfully.

### Example

```
Console(config)#interface ethernet 1/1
Console(config-if)#garp timer join 100
Console(config-if)#
```

### Related Commands

show garp timer (30-6)

## show garp timer

This command shows the GARP timers for the selected interface.

### Syntax

**show garp timer** [*interface*]

*interface*

- **ethernet** *unit/port*
  - *unit* - Stack unit. (Range: 1-8)
  - *port* - Port number. (Range: 1-26/50)
- **port-channel** *channel-id* (Range: 1-32)

### Default Setting

Shows all GARP timers.

### Command Mode

Normal Exec, Privileged Exec

### Example

```
Console#show garp timer ethernet 1/1
Eth 1/ 1 GARP timer status:
Join timer:      20 centiseconds
Leave timer:      60 centiseconds
Leaveall timer: 1000 centiseconds
Console#
```

### Related Commands

garp timer (30-5)

## Editing VLAN Groups

**Table 30-3 Commands for Editing VLAN Groups**

Command	Function	Mode	Page
vlan database	Enters VLAN database mode to add, change, and delete VLANs	GC	30-7
vlan	Configures a VLAN, including VID, name and state	VC	30-8

### vlan database

This command enters VLAN database mode. All commands in this mode will take effect immediately.

#### Default Setting

None

#### Command Mode

Global Configuration

#### Command Usage

- Use the VLAN database command mode to add, change, and delete VLANs. After finishing configuration changes, you can display the VLAN settings by entering the **show vlan** command.
- Use the **interface vlan** command mode to define the port membership mode and add or remove ports from a VLAN. The results of these commands are written to the running-configuration file, and you can display this file by entering the **show running-config** command.

#### Example

```
Console(config)#vlan database
Console(config-vlan)#
```

#### Related Commands

show vlan (30-16)

### vlan

This command configures a VLAN. Use the **no** form to restore the default settings or delete a VLAN.

#### Syntax

**vlan** *vlan-id* [**name** *vlan-name*] **media ethernet** [**state** {**active** | **suspend**}]  
**no vlan** *vlan-id* [**name** | **state**]

- *vlan-id* - ID of configured VLAN. (Range: 1-4093, no leading zeroes)
- **name** - Keyword to be followed by the VLAN name.
  - *vlan-name* - ASCII string from 1 to 32 characters.
- **media ethernet** - Ethernet media type.
- **state** - Keyword to be followed by the VLAN state.
  - **active** - VLAN is operational.
  - **suspend** - VLAN is suspended. Suspended VLANs do not pass packets.

#### Default Setting

By default only VLAN 1 exists and is active.

#### Command Mode

VLAN Database Configuration

#### Command Usage

- **no vlan** *vlan-id* deletes the VLAN.
- **no vlan** *vlan-id* **name** removes the VLAN name.
- **no vlan** *vlan-id* **state** returns the VLAN to the default state (i.e., active).
- You can configure up to 255 VLANs on the switch.

#### Example

The following example adds a VLAN, using VLAN ID 105 and name RD5. The VLAN is activated by default.

```
Console(config)#vlan database
Console(config-vlan)#vlan 105 name RD5 media ethernet
Console(config-vlan)#
```



**Related Commands**

show vlan (30-16)

**Configuring VLAN Interfaces****Table 30-4 Commands for Configuring VLAN Interfaces**

Command	Function	Mode	Page
interface vlan	Enters interface configuration mode for a specified VLAN	IC	30-9
switchport mode	Configures VLAN membership mode for an interface	IC	30-10
switchport acceptable-frame-types	Configures frame types to be accepted by an interface	IC	30-11
switchport ingress-filtering	Enables ingress filtering on an interface	IC	30-12
switchport native vlan	Configures the PVID (native VLAN) of an interface	IC	30-13
switchport allowed vlan	Configures the VLANs associated with an interface	IC	30-14
switchport gvrp	Enables GVRP for an interface	IC	30-4
switchport forbidden vlan	Configures forbidden VLANs for an interface	IC	30-15
switchport priority default	Sets a port priority for incoming untagged frames	IC	31-3

**interface vlan**

This command enters interface configuration mode for VLANs, which is used to configure VLAN parameters for a physical interface.

**Syntax**

**interface vlan** *vlan-id*

*vlan-id* - ID of the configured VLAN. (Range: 1-4093, no leading zeroes)

### Default Setting

None

### Command Mode

Global Configuration

### Example

The following example shows how to set the interface configuration mode to VLAN 1, and then assign an IP address to the VLAN:

```
Console(config)#interface vlan 1
Console(config-if)#ip address 192.168.1.254 255.255.255.0
Console(config-if)#
```

### Related Commands

shutdown (24-9)

## switchport mode

This command configures the VLAN membership mode for a port. Use the **no** form to restore the default.

### Syntax

**switchport mode {hybrid | trunk}**  
**no switchport mode**

- **hybrid** - Specifies a hybrid VLAN interface. The port may transmit tagged or untagged frames.
- **trunk** - Specifies a port as an end-point for a VLAN trunk. A trunk is a direct link between two switches, so the port transmits tagged frames that identify the source VLAN. Note that frames belonging to the port's default VLAN (i.e., associated with the PVID) are also transmitted as tagged frames.

### Default Setting

All ports are in hybrid mode with the PVID set to VLAN 1.

### Command Mode

Interface Configuration (Ethernet, Port Channel)

### Example

The following shows how to set the configuration mode to port 1, and then set the switchport mode to hybrid:

```
Console(config)#interface ethernet 1/1
Console(config-if)#switchport mode hybrid
Console(config-if)#
```

### Related Commands

switchport acceptable-frame-types (30-11)

## switchport acceptable-frame-types

This command configures the acceptable frame types for a port. Use the **no** form to restore the default.

### Syntax

**switchport acceptable-frame-types {all | tagged}**  
**no switchport acceptable-frame-types**

- **all** - The port accepts all frames, tagged or untagged.
- **tagged** - The port only receives tagged frames.

### Default Setting

All frame types

### Command Mode

Interface Configuration (Ethernet, Port Channel)

### Command Usage

When set to receive all frame types, any received frames that are untagged are assigned to the default VLAN.

### Example

The following example shows how to restrict the traffic received on port 1 to tagged frames:

```
Console(config)#interface ethernet 1/1
Console(config-if)#switchport acceptable-frame-types tagged
Console(config-if)#
```

### Related Commands

switchport mode (30-10)

### switchport ingress-filtering

This command enables ingress filtering for an interface. Use the **no** form to restore the default.

### Syntax

[no] **switchport ingress-filtering**

### Default Setting

Disabled

### Command Mode

Interface Configuration (Ethernet, Port Channel)

### Command Usage

- Ingress filtering only affects tagged frames.
- If ingress filtering is disabled and a port receives frames tagged for VLANs for which it is not a member, these frames will be flooded to all other ports (except for those VLANs explicitly forbidden on this port).
- If ingress filtering is enabled and a port receives frames tagged for VLANs for which it is not a member, these frames will be discarded.
- Ingress filtering does not affect VLAN independent BPDU frames, such as GVRP or STA. However, they do affect VLAN dependent BPDU frames, such as GMRP.

### Example

The following example shows how to set the interface to port 1 and then enable ingress filtering:

```
Console(config)#interface ethernet 1/1
Console(config-if)#switchport ingress-filtering
Console(config-if)#
```

## switchport native vlan

This command configures the PVID (i.e., default VLAN ID) for a port. Use the **no** form to restore the default.

### Syntax

**switchport native vlan** *vlan-id*  
**no switchport native vlan**

*vlan-id* - Default VLAN ID for a port. (Range: 1-4093, no leading zeroes)

### Default Setting

VLAN 1

### Command Mode

Interface Configuration (Ethernet, Port Channel)

### Command Usage

- If an interface is not a member of VLAN 1 and you assign its PVID to this VLAN, the interface will automatically be added to VLAN 1 as an untagged member. For all other VLANs, an interface must first be configured as an untagged member before you can assign its PVID to that group.
- If acceptable frame types is set to **all** or switchport mode is set to **hybrid**, the PVID will be inserted into all untagged frames entering the ingress port.

### Example

The following example shows how to set the PVID for port 1 to VLAN 3:

```
Console(config)#interface ethernet 1/1
Console(config-if)#switchport native vlan 3
Console(config-if)#
```

### switchport allowed vlan

This command configures VLAN groups on the selected interface. Use the **no** form to restore the default.

#### Syntax

```
switchport allowed vlan {add vlan-list [tagged | untagged] |  
                        remove vlan-list}  
no switchport allowed vlan
```

- **add** *vlan-list* - List of VLAN identifiers to add.
- **remove** *vlan-list* - List of VLAN identifiers to remove.
- *vlan-list* - Separate nonconsecutive VLAN identifiers with a comma and no spaces; use a hyphen to designate a range of IDs. Do not enter leading zeros. (Range: 1-4093).

#### Default Setting

- All ports are assigned to VLAN 1 by default.
- The default frame type is untagged.

#### Command Mode

Interface Configuration (Ethernet, Port Channel)

#### Command Usage

- A port, or a trunk with switchport mode set to **hybrid**, must be assigned to at least one VLAN as untagged.
- If a trunk has switchport mode set to **trunk** (i.e., 1Q Trunk), then you can only assign an interface to VLAN groups as a tagged member.
- Frames are always tagged within the switch. The tagged/untagged parameter used when adding a VLAN to an interface tells the switch whether to keep or remove the tag from a frame on egress.
- If none of the intermediate network devices nor the host at the other end of the connection supports VLANs, the interface should be added to these VLANs as an untagged member. Otherwise, it is only necessary to add at most one VLAN as untagged, and this should correspond to the native VLAN for the interface.

- If a VLAN on the forbidden list for an interface is manually added to that interface, the VLAN is automatically removed from the forbidden list for that interface.

### Example

The following example shows how to add VLANs 1, 2, 5 and 6 to the allowed list as tagged VLANs for port 1:

```
Console(config)#interface ethernet 1/1
Console(config-if)#switchport allowed vlan add 1,2,5,6 tagged
Console(config-if)#
```

## switchport forbidden vlan

This command configures forbidden VLANs. Use the **no** form to remove the list of forbidden VLANs.

### Syntax

**switchport forbidden vlan {add *vlan-list* | remove *vlan-list*}**  
**no switchport forbidden vlan**

- **add *vlan-list*** - List of VLAN identifiers to add.
- **remove *vlan-list*** - List of VLAN identifiers to remove.
- *vlan-list* - Separate nonconsecutive VLAN identifiers with a comma and no spaces; use a hyphen to designate a range of IDs. Do not enter leading zeros. (Range: 1-4093).

### Default Setting

No VLANs are included in the forbidden list.

### Command Mode

Interface Configuration (Ethernet, Port Channel)

### Command Usage

- This command prevents a VLAN from being automatically added to the specified interface via GVRP.
- If a VLAN has been added to the set of allowed VLANs for an interface, then you cannot add it to the set of forbidden VLANs for that same interface.

**Example**

The following example shows how to prevent port 1 from being added to VLAN 3:

```
Console(config)#interface ethernet 1/1
Console(config-if)#switchport forbidden vlan add 3
Console(config-if)#
```

**Displaying VLAN Information**

This section describes commands used to display VLAN information.

**Table 30-5 Commands for Displaying VLAN Information**

Command	Function	Mode	Page
show vlan	Shows VLAN information	NE, PE	30-16
show interfaces status vlan	Displays status for the specified VLAN interface	NE, PE	24-12
show interfaces switchport	Displays the administrative and operational status of an interface	NE, PE	24-15

**show vlan**

This command shows VLAN information.

**Syntax**

**show vlan** [**id** *vlan-id* | **name** *vlan-name*]

- **id** - Keyword to be followed by the VLAN ID.  
*vlan-id* - ID of the configured VLAN. (Range: 1-4093, no leading zeroes)
- **name** - Keyword to be followed by the VLAN name.  
*vlan-name* - ASCII string from 1 to 32 characters.

**Default Setting**

Shows all VLANs.

**Command Mode**

Normal Exec, Privileged Exec



### Example

The following example shows how to display information for VLAN 1:

```

Console#show vlan id 1

VLAN ID:          1
Type:             Static
Name:             DefaultVlan
Status:           Active
Ports/Port Channels:  Eth1/ 1(S) Eth1/ 2(S) Eth1/ 3(S) Eth1/ 4(S) Eth1/ 5(S)
                      Eth1/ 6(S) Eth1/ 7(S) Eth1/ 8(S) Eth1/ 9(S) Eth1/10(S)
                      Eth1/11(S) Eth1/12(S) Eth1/13(S) Eth1/14(S) Eth1/15(S)
                      Eth1/16(S) Eth1/17(S) Eth1/18(S) Eth1/19(S) Eth1/20(S)
                      Eth1/21(S) Eth1/22(S) Eth1/23(S) Eth1/24(S)

Console#

```

## Configuring Private VLANs

Private VLANs provide port-based security and isolation between ports within the assigned VLAN. This section describes commands used to configure private VLANs.

**Table 30-6 Private VLAN Commands**

Command	Function	Mode	Page
pvlan	Enables and configured private VLANs	GC	30-17
show pvlan	Displays the configured private VLANs	PE	30-18

### pvlan

This command enables or configures a private VLAN. Use the **no** form to disable the private VLAN.

#### Syntax

**pvlan** [**up-link** *interface-list* **down-link** *interface-list*]  
**no pvlan**

- **up-link** – Specifies an uplink interface.
- **down-link** – Specifies a downlink interface.

#### Default Setting

No private VLANs are defined.

### Command Mode

Global Configuration

### Command Usage

- A private VLAN provides port-based security and isolation between ports within the VLAN. Data traffic on the downlink ports can only be forwarded to, and from, the uplink port.
- Private VLANs and normal VLANs can exist simultaneously within the same switch.
- Entering the **pvlan** command without any parameters enables the private VLAN. Entering **no pvlan** disables the private VLAN.

### Example

This example enables the private VLAN, and then sets port 12 as the uplink and ports 5-8 as the downlinks.

```
Console(config)#pvlan
Console(config)#pvlan up-link ethernet 1/12 down-link ethernet 1/
5-8
Console(config)#
```

## show pvlan

This command displays the configured private VLAN.

### Command Mode

Privileged Exec

### Example

```
Console#show pvlan
Private VLAN status: Enabled
Up-link port:
  Ethernet 1/12
Down-link port:
  Ethernet 1/5
  Ethernet 1/6
  Ethernet 1/7
  Ethernet 1/8
Console#
```

## Configuring Protocol-based VLANs

The network devices required to support multiple protocols cannot be easily grouped into a common VLAN. This may require non-standard devices to pass traffic between different VLANs in order to encompass all the devices participating in a specific protocol. This kind of configuration deprives users of the basic benefits of VLANs, including security and easy accessibility.

To avoid these problems, you can configure this switch with protocol-based VLANs that divide the physical network into logical VLAN groups for each required protocol. When a frame is received at a port, its VLAN membership can then be determined based on the protocol type in use by the inbound packets.

**Table 30-7 Protocol-based VLAN Commands**

Command	Function	Mode	Page
protocol-vlan protocol-group	Create a protocol group, specifying the supported protocols	GC	30-20
protocol-vlan protocol-group	Maps a protocol group to a VLAN	IC	30-21
show protocol-vlan protocol-group	Shows the configuration of protocol groups	PE	30-22
show interfaces protocol-vlan protocol-group	Shows the interfaces mapped to a protocol group and the corresponding VLAN	PE	30-23

To configure protocol-based VLANs, follow these steps:

1. First configure VLAN groups for the protocols you want to use (page 30-8). Although not mandatory, we suggest configuring a separate VLAN for each major protocol running on your network. Do not add port members at this time.
2. Create a protocol group for each of the protocols you want to assign to a VLAN using the **protocol-vlan protocol-group** command (General Configuration mode).

3. Then map the protocol for each interface to the appropriate VLAN using the **protocol-vlan protocol-group** command (Interface Configuration mode).

## protocol-vlan protocol-group (Configuring Groups)

This command creates a protocol group, or to add specific protocols to a group. Use the **no** form to remove a protocol group.

### Syntax

**protocol-vlan protocol-group** *group-id* [{**add** | **remove**} **frame-type** *frame* **protocol-type** *protocol*]  
**no protocol-vlan protocol-group** *group-id*

- *group-id* - Group identifier of this protocol group. (Range: 1-2147483647)
- *frame*<sup>24</sup> - Frame type used by this protocol. (Options: ethernet, rfc\_1042, llc\_other)
- *protocol* - Protocol type. The only option for the llc\_other frame type is ipx\_raw. The options for all other frames types include: ip, ipv6, arp, rarp, and user-defined (0801-FFFF hexadecimal).

### Default Setting

No protocol groups are configured.

### Command Mode

Global Configuration

### Example

The following creates protocol group 1, and specifies Ethernet frames with IP and ARP protocol types:

```
Console(config)#protocol-vlan protocol-group 1 add frame-type
ethernet protocol-type ip
Console(config)#protocol-vlan protocol-group 1 add frame-type
ethernet protocol-type arp
Console(config)#
```

---

24. SNAP frame types are not supported by this switch due to hardware limitations.

**protocol-vlan protocol-group** (Configuring Interfaces)

This command maps a protocol group to a VLAN for the current interface. Use the **no** form to remove the protocol mapping for this interface.

**Syntax**

**protocol-vlan protocol-group** *group-id* **vlan** *vlan-id*  
**no protocol-vlan protocol-group** *group-id* **vlan**

- *group-id* - Group identifier of this protocol group.  
(Range: 1-2147483647)
- *vlan-id* - VLAN to which matching protocol traffic is forwarded.  
(Range: 1-4093)

**Default Setting**

No protocol groups are mapped for any interface.

**Command Mode**

Interface Configuration (Ethernet, Port Channel)

**Command Usage**

- When creating a protocol-based VLAN, only assign interfaces via this command. If you assign interfaces using any of the other VLAN commands (such as **vlan** on page 30-8), these interfaces will admit traffic of any protocol type into the associated VLAN.
- When a frame enters a port that has been assigned to a protocol VLAN, it is processed in the following manner:
  - If the frame is tagged, it will be processed according to the standard rules applied to tagged frames.
  - If the frame is untagged and the protocol type matches, the frame is forwarded to the appropriate VLAN.
  - If the frame is untagged but the protocol type does not match, the frame is forwarded to the default VLAN for this interface.

### Example

The following example maps the traffic entering Port 1 which matches the protocol type specified in protocol group 1 to VLAN 2.

```
Console(config)#interface ethernet 1/1
Console(config-if)#protocol-vlan protocol-group 1 vlan 2
Console(config-if)#
```

### show protocol-vlan protocol-group

This command shows the frame and protocol type associated with protocol groups.

#### Syntax

**show protocol-vlan protocol-group** [*group-id*]

*group-id* - Group identifier for a protocol group.  
(Range: 1-2147483647)

#### Default Setting

All protocol groups are displayed.

#### Command Mode

Privileged Exec

### Example

This shows protocol group 1 configured for IP over Ethernet:

```
Console#show protocol-vlan protocol-group

ProtocolGroup ID   Frame Type   Protocol Type
-----
                  1           ethernet    08 00
Console#
```

**show interfaces protocol-vlan protocol-group**

This command shows the mapping from protocol groups to VLANs for the selected interfaces.

**Syntax**

**show interfaces protocol-vlan protocol-group** [*interface*]

*interface*

- **ethernet** *unit/port*
  - *unit* - Stack unit. (Range: 1-8)
  - *port* - Port number. (Range: 1-26/50)
- **port-channel** *channel-id* (Range: 1-32)

**Default Setting**

The mapping for all interfaces is displayed.

**Command Mode**

Privileged Exec

**Example**

This shows that traffic entering Port 1 that matches the specifications for protocol group 1 will be mapped to VLAN 2:

```
Console#show interfaces protocol-vlan protocol-group
```

Port	ProtocolGroup ID	Vlan ID
-----		
Eth 1/1	1	vlan2

```
Console#
```





# CHAPTER 31

## CLASS OF SERVICE COMMANDS

---

The commands described in this section allow you to specify which data packets have greater precedence when traffic is buffered in the switch due to congestion. This switch supports CoS with eight priority queues for each port. Data packets in a port's high-priority queue will be transmitted before those in the lower-priority queues. You can set the default priority for each interface, the relative weight of each queue, and the mapping of frame priority tags to the switch's priority queues.

**Table 31-1 Priority Commands**

Command Groups	Function	Page
Priority (Layer 2)	Configures default priority for untagged frames, sets queue weights, and maps class of service tags to hardware queues	31-1
Priority (Layer 3 and 4)	Maps TCP ports, IP precedence tags, or IP DSCP tags to class of service values	31-8

### Priority Commands (Layer 2)

This section describes commands used to configure Layer 2 traffic priority on the switch.

**Table 31-2 Priority Commands (Layer 2)**

Command	Function	Mode	Page
queue mode	Sets the queue mode to strict priority or Weighted Round-Robin (WRR)	GC	31-2
switchport priority default	Sets a port priority for incoming untagged frames	IC	31-3
queue bandwidth	Assigns round-robin weights to the priority queues	IC	31-4

**Table 31-2 Priority Commands (Layer 2)**

Command	Function	Mode	Page
queue cos-map	Assigns class-of-service values to the priority queues	IC	31-5
show queue mode	Shows the current queue mode	PE	31-7
show queue bandwidth	Shows round-robin weights assigned to the priority queues	PE	31-7
show queue cos-map	Shows the class-of-service map	PE	31-8
show interfaces switchport	Displays the administrative and operational status of an interface	PE	24-15

## queue mode

This command sets the queue mode to strict priority or Weighted Round-Robin (WRR) for the class of service (CoS) priority queues. Use the **no** form to restore the default value.

### Syntax

**queue mode {strict | wrr}**  
**no queue mode**

- **strict** - Services the egress queues in sequential order, transmitting all traffic in the higher priority queues before servicing lower priority queues.
- **wrr** - Weighted Round-Robin shares bandwidth at the egress ports by using scheduling weights 1, 2, 4, 6, 8, 10, 12, 14 for queues 0 - 7 respectively.

### Default Setting

Weighted Round Robin

### Command Mode

Global Configuration

### Command Usage

You can set the switch to service the queues based on a strict rule that requires all traffic in a higher priority queue to be processed before lower priority queues are serviced, or use Weighted Round-Robin

(WRR) queuing that specifies a relative weight of each queue. WRR uses a predefined relative weight for each queue that determines the percentage of service time the switch services each queue before moving on to the next queue. This prevents the head-of-line blocking that can occur with strict priority queuing.

### Example

The following example sets the queue mode to strict priority service mode:

```
Console(config)#queue mode strict
Console(config)#
```

### Related Commands

queue bandwidth (31-4)  
show queue mode (31-7)

## switchport priority default

This command sets a priority for incoming untagged frames. Use the **no** form to restore the default value.

### Syntax

**switchport priority default** *default-priority-id*  
**no switchport priority default**

*default-priority-id* - The priority number for untagged ingress traffic. The priority is a number from 0 to 7. Seven is the highest priority.

### Default Setting

The priority is not set, and the default value for untagged frames received on the interface is zero.

### Command Mode

Interface Configuration (Ethernet, Port Channel)

### Command Usage

- The precedence for priority mapping is IP Port, IP Precedence or IP DSCP, and default switchport priority.
- The default priority applies for an untagged frame received on a port set to accept all frame types (i.e., receives both untagged and tagged

frames). This priority does not apply to IEEE 802.1Q VLAN tagged frames. If the incoming frame is an IEEE 802.1Q VLAN tagged frame, the IEEE 802.1p User Priority bits will be used.

- This switch provides eight priority queues for each port. It is configured to use Weighted Round Robin, which can be viewed with the **show queue bandwidth** command. Inbound frames that do not have VLAN tags are tagged with the input port's default ingress user priority, and then placed in the appropriate priority queue at the output port. The default priority for all ingress ports is zero. Therefore, any inbound frames that do not have priority tags will be placed in queue 0 of the output port. (Note that if the output port is an untagged member of the associated VLAN, these frames are stripped of all VLAN tags prior to transmission.)

### Example

The following example shows how to set a default priority on port 3 to 5:

```
Console(config)#interface ethernet 1/3
Console(config-if)#switchport priority default 5
```

### Related Commands

show interfaces switchport (24-15)

## queue bandwidth

This command assigns weighted round-robin (WRR) weights to the eight class of service (CoS) priority queues. Use the **no** form to restore the default weights.

### Syntax

**queue bandwidth** *weight1...weight4*  
**no queue bandwidth**

*weight1...weight4* - The ratio of weights for queues 0 - 7 determines the weights used by the WRR scheduler. (Range: 1 - 15)

### Default Setting

Weights 1, 2, 4, 6, 8, 10, 12, 14 are assigned to queues 0 - 7 respectively.

## Command Mode

Interface Configuration (Ethernet, Port Channel)

## Command Usage

WRR controls bandwidth sharing at the egress port by defining scheduling weights.

## Example

This example shows how to assign WRR weights to each of the priority queues:

```
Console#configure
Console(config)#int eth 1/5
Console(config-if)#queue bandwidth 1 3 5 7 9 11 13 15
Console(config-if)#
```

## Related Commands

show queue bandwidth (31-7)

## queue cos-map

This command assigns class of service (CoS) values to the priority queues (i.e., hardware output queues 0 - 7). Use the **no** form set the CoS map to the default values.

## Syntax

**queue cos-map** *queue\_id* [*cos1* ... *cosn*]

**no queue cos-map**

- *queue\_id* - The ID of the priority queue.  
Ranges are 0 to 7, where 7 is the highest priority queue.
- *cos1* ... *cosn* - The CoS values that are mapped to the queue ID. It is a space-separated list of numbers. The CoS value is a number from 0 to 7, where 7 is the highest priority.

Default Setting

This switch supports Class of Service by using eight priority queues, with Weighted Round Robin queuing for each port. Eight separate traffic classes are defined in IEEE 802.1p. The default priority levels are assigned according to recommendations in the IEEE 802.1p standard as shown below.

Table 31-3 Default CoS Priority Levels

Priority	0	1	2	3	4	5	6	7
Queue	2	0	1	3	4	5	6	7

Command Mode

Interface Configuration (Ethernet, Port Channel)

Command Usage

CoS values assigned at the ingress port are also used at the egress port.  
This command sets the CoS priority for all interfaces.

Example

The following example shows how to change the CoS assignments to a one-to-one mapping:

```
Console(config)#interface ethernet 1/1
Console(config-if)#queue cos-map 0 0
Console(config-if)#queue cos-map 1 1
Console(config-if)#queue cos-map 2 2
Console(config-if)#exit
Console#show queue cos-map ethernet 1/1
Information of Eth 1/1
  Traffic Class : 0 1 2 3 4 5 6 7
  Priority Queue: 0 1 2 3 4 5 6 7
Console#
```

Related Commands

show queue cos-map (31-8)

## show queue mode

This command shows the current queue mode.

### Default Setting

None

### Command Mode

Privileged Exec

### Example

```
Console#sh queue mode
Wrr status: Enabled
Console#
```

## show queue bandwidth

This command displays the weighted round-robin (WRR) bandwidth allocation for the eight priority queues.

### Default Setting

None

### Command Mode

Privileged Exec

### Example

```
Console#show queue bandwidth
Information of Eth 1/1
Queue ID  Weight
-----
0         1
1         2
2         4
3         6
4         8
5        10
6        12
7        14
:
```

show queue cos-map

This command shows the class of service priority map.

Syntax

show queue cos-map [interface]

*interface*

- **ethernet** *unit/port*
  - *unit* - Stack unit. (Range: 1-8)
  - *port* - Port number. (Range: 1-26/50)
- **port-channel** *channel-id* (Range: 1-32)

Default Setting

None

Command Mode

Privileged Exec

Example

```
Console#show queue cos-map ethernet 1/1
Information of Eth 1/1
CoS Value:      0 1 2 3 4 5 6 7
Priority Queue: 2 0 1 3 4 5 6 7
Console#
```

Priority Commands (Layer 3 and 4)

This section describes commands used to configure Layer 3 and Layer 4 traffic priority on the switch.

Table 31-4 Priority Commands (Layer 3 and 4)

Command	Function	Mode	Page
map ip port	Enables TCP/UDP class of service mapping	GC	31-9
map ip port	Maps TCP/UDP socket to a class of service	IC	31-10
map ip precedence	Enables IP precedence class of service mapping	GC	31-10



**Table 31-4 Priority Commands (Layer 3 and 4)**

Command	Function	Mode	Page
map ip precedence	Maps IP precedence value to a class of service	IC	31-11
map ip dscp	Enables IP DSCP class of service mapping	GC	31-12
map ip dscp	Maps IP DSCP value to a class of service	IC	31-13
show map ip port	Shows the IP port map	PE	31-14
show map ip precedence	Shows the IP precedence map	PE	31-15
show map ip dscp	Shows the IP DSCP map	PE	31-16

**map ip port (Global Configuration)**

This command enables IP port mapping (i.e., class of service mapping for TCP/UDP sockets). Use the **no** form to disable IP port mapping.

**Syntax**

[no] map ip port

**Default Setting**

Disabled

**Command Mode**

Global Configuration

**Command Usage**

The precedence for priority mapping is IP Port, IP Precedence or IP DSCP, and default switchport priority.

**Example**

The following example shows how to enable TCP/UDP port mapping globally:

```
Console(config)#map ip port
Console(config)#
```

## map ip port (Interface Configuration)

This command sets IP port priority (i.e., TCP/UDP port priority). Use the **no** form to remove a specific setting.

### Syntax

**map ip port** *port-number* **cos** *cos-value*

**no map ip port** *port-number*

- *port-number* - 16-bit TCP/UDP port number. (Range: 0-65535)
- *cos-value* - Class-of-Service value (Range: 0-7)

### Default Setting

None

### Command Mode

Interface Configuration (Ethernet, Port Channel)

### Command Usage

- The precedence for priority mapping is IP Port, IP Precedence or IP DSCP, and default switchport priority.
- Up to 8 entries can be specified for IP Port priority mapping.
- This command sets the IP port priority for all interfaces.

### Example

The following example shows how to map HTTP traffic to CoS value 0:

```
Console(config)#interface ethernet 1/5
Console(config-if)#map ip port 80 cos 0
Console(config-if)#
```

## map ip precedence (Global Configuration)

This command enables IP precedence mapping (i.e., IP Type of Service). Use the **no** form to disable IP precedence mapping.

### Syntax

**[no] map ip precedence**

### Default Setting

Disabled

**Command Mode**

Global Configuration

- Command Usage
- The precedence for priority mapping is IP Port, IP Precedence or IP DSCP, and default switchport priority.
- IP Precedence and IP DSCP cannot both be enabled. Enabling one of these priority types will automatically disable the other type.

**Example**

The following example shows how to enable IP precedence mapping globally:

```
Console(config)#map ip precedence
Console(config)#
```

**map ip precedence** (Interface Configuration)

This command sets IP precedence priority (i.e., IP Type of Service priority). Use the **no** form to restore the default table.

**Syntax**

**map ip precedence** *ip-precedence-value* **cos** *cos-value*

**no map ip precedence**

- *precedence-value* - 3-bit precedence value. (Range: 0-7)
- *cos-value* - Class-of-Service value (Range: 0-7)

**Default Setting**

The list below shows the default priority mapping.

**Table 31-5 Mapping IP Precedence to CoS Values**

IP Precedence Value	0	1	2	3	4	5	6	7
CoS Value	0	1	2	3	4	5	6	7

**Command Mode**

Interface Configuration (Ethernet, Port Channel)

### Command Usage

- The precedence for priority mapping is IP Port, IP Precedence or IP DSCP, and default switchport priority.
- IP Precedence values are mapped to default Class of Service values on a one-to-one basis according to recommendations in the IEEE 802.1p standard, and then subsequently mapped to the eight hardware priority queues.
- This command sets the IP Precedence for all interfaces.

### Example

The following example shows how to map IP precedence value 1 to CoS value 0:

```
Console(config)#interface ethernet 1/5
Console(config-if)#map ip precedence 1 cos 0
Console(config-if)#
```

## map ip dscp (Global Configuration)

This command enables IP DSCP mapping (i.e., Differentiated Services Code Point mapping). Use the **no** form to disable IP DSCP mapping.

### Syntax

[no] map ip dscp

### Default Setting

Disabled

### Command Mode

Global Configuration

### Command Usage

- The precedence for priority mapping is IP Port, IP Precedence or IP DSCP, and default switchport priority.
- IP Precedence and IP DSCP cannot both be enabled. Enabling one of these priority types will automatically disable the other type.

**Example**

The following example shows how to enable IP DSCP mapping globally:

```
Console(config)#map ip dscp
Console(config)#
```

**map ip dscp** (Interface Configuration)

This command sets IP DSCP priority (i.e., Differentiated Services Code Point priority). Use the **no** form to restore the default table.

**Syntax**

**map ip dscp** *dscp-value* **cos** *cos-value*

**no map ip dscp**

- *dscp-value* - 8-bit DSCP value. (Range: 0-63)
- *cos-value* - Class-of-Service value (Range: 0-7)

**Default Setting**

The DSCP default values are defined in the following table. Note that all the DSCP values that are not specified are mapped to CoS value 0.

**Table 31-6 Mapping IP DSCP to CoS Values**

IP DSCP Value	CoS Value
0	0
8	1
10, 12, 14, 16	2
18, 20, 22, 24	3
26, 28, 30, 32, 34, 36	4
38, 40, 42	5
48	6
46, 56	7

**Command Mode**

Interface Configuration (Ethernet, Port Channel)

### Command Usage

- The precedence for priority mapping is IP Port, IP Precedence or IP DSCP, and default switchport priority.
- DSCP priority values are mapped to default Class of Service values according to recommendations in the IEEE 802.1p standard, and then subsequently mapped to the eight hardware priority queues.
- This command sets the IP DSCP priority for all interfaces.

### Example

The following example shows how to map IP DSCP value 1 to CoS value 0:

```
Console(config)#interface ethernet 1/5
Console(config-if)#map ip dscp 1 cos 0
Console(config-if)#
```

### show map ip port

This command shows the IP port priority map.

#### Syntax

**show map ip port** [*interface*]

*interface*

- **ethernet** *unit/port*
  - *unit* - Stack unit. (Range: 1-8)
  - *port* - Port number. (Range: 1-26/50)
- **port-channel** *channel-id* (Range: 1-32)

#### Default Setting

None

#### Command Mode

Privileged Exec

**Example**

The following shows that HTTP traffic has been mapped to CoS value 0:

```

Console#show map ip port
TCP port mapping status: disabled

  Port          Port no. COS
  -----
  Eth 1/ 5      80    0
Console#

```

**Related Commands**

map ip port (Global Configuration) (31-9)

map ip port (Interface Configuration) (31-10)

**show map ip precedence**

This command shows the IP precedence priority map.

**Syntax**

**show map ip precedence** [*interface*]

*interface*

- **ethernet** *unit/port*
  - *unit* - Stack unit. (Range: 1-8)
  - *port* - Port number. (Range: 1-26/50)
- **port-channel** *channel-id* (Range: 1-32)

**Default Setting**

None

**Command Mode**

Privileged Exec

**Example**

```
Console#show map ip precedence ethernet 1/5
Precedence mapping status: disabled

Port          Precedence COS
-----
Eth 1/ 5      0    0
Eth 1/ 5      1    1
Eth 1/ 5      2    2
Eth 1/ 5      3    3
Eth 1/ 5      4    4
Eth 1/ 5      5    5
Eth 1/ 5      6    6
Eth 1/ 5      7    7
Console#
```

**Related Commands**

- map ip precedence (Global Configuration) (31-10)
- map ip precedence (Interface Configuration) (31-11)

**show map ip dscp**

This command shows the IP DSCP priority map.

**Syntax**

- show map ip dscp** [*interface*]
- interface*
- **ethernet** *unit/port*
    - *unit* - Stack unit. (Range: 1-8)
    - *port* - Port number. (Range: 1-26/50)
  - **port-channel** *channel-id* (Range: 1-32)

**Default Setting**

None

**Command Mode**

Privileged Exec



### Example

```
Console#show map ip dscp ethernet 1/1
DSCP mapping status: disabled
```

Port	DSCP	COS
Eth 1/ 1	0	0
Eth 1/ 1	1	0
Eth 1/ 1	2	0
Eth 1/ 1	3	0
:		
Eth 1/ 1	61	0
Eth 1/ 1	62	0
Eth 1/ 1	63	0

```
Console#
```

### Related Commands

- map ip dscp (Global Configuration) (31-12)
- map ip dscp (Interface Configuration) (31-13)

## *CLASS OF SERVICE COMMANDS*

# CHAPTER 32

## QUALITY OF SERVICE

### COMMANDS

---

The commands described in this section are used to configure Differentiated Services (DiffServ) classification criteria and service policies. You can classify traffic based on access lists, IP Precedence or DSCP values, or VLANs. Using access lists allows you select traffic based on Layer 2, Layer 3, or Layer 4 information contained in each packet.

**Table 32-1 Quality of Service Commands**

Command	Function	Mode	Page
class-map	Creates a class map for a type of traffic	GC	32-3
match	Defines the criteria used to classify traffic	CM	32-4
policy-map	Creates a policy map for multiple interfaces	GC	32-5
class	Defines a traffic classification for the policy to act on	PM	32-6
set	Classifies IP traffic by setting a CoS, DSCP, or IP-precedence value in a packet	PM-C	32-8
police	Defines an enforcer for classified traffic	PM-C	32-9
service-policy	Applies a policy map defined by the <b>policy-map</b> command to the input of a particular interface	IC	32-10
show class-map	Displays the QoS class maps which define matching criteria used for classifying traffic	PE	32-11

Table 32-1 Quality of Service Commands (Continued)

Command	Function	Mode	Page
show policy-map	Displays the QoS policy maps which define classification criteria for incoming traffic, and may include policers for bandwidth limitations	PE	32-12
show policy-map interface	Displays the configuration of all classes configured for all service policies on the specified interface	PE	32-12

To create a service policy for a specific category of ingress traffic, follow these steps:

1. Use the **class-map** command to designate a class name for a specific category of traffic, and enter the Class Map configuration mode.
2. Use the **match** command to select a specify type of traffic based on an access list, a DSCP or IP Precedence value, or a VLAN.
3. Set an ACL mask to enable filtering for the criteria specified in the **match** command.
4. Use the **policy-map** command to designate a policy name for a specific manner in which ingress traffic will be handled, and enter the Policy Map configuration mode.
5. Use the **class** command to identify the class map, and enter Policy Map Class configuration mode. A policy map can contain multiple class statements.
6. Use the **set** command to modify the QoS value for matching traffic class, and use the **policer** command to monitor the average flow and burst rate, and drop any traffic that exceeds the specified rate, or just reduce the DSCP service level for traffic exceeding the specified rate.
7. Use the **service-policy** command to assign a policy map to a specific interface.

- Notes:**
1. You can configure up to 16 rules per Class Map. You can also include multiple classes in a Policy Map.
  2. You should create a Class Map (page 32-3) before creating a Policy Map (page 32-5). Otherwise, you will not be able to specify a Class Map with the **class** command (page 32-6) after entering Policy-Map Configuration mode.

## class-map

This command creates a class map used for matching packets to the specified class, and enters Class Map configuration mode. Use the **no** form to delete a class map and return to Global configuration mode.

### Syntax

**[no] class-map** *class-map-name* [**match-any**]

- **match-any** - Match any condition within a class map.
- *class-map-name* - Name of the class map. (Range: 1-16 characters)

### Default Setting

None

### Command Mode

Global Configuration

### Command Usage

- First enter this command to designate a class map and enter the Class Map configuration mode. Then use the **match** command (page 32-4) to specify the criteria for ingress traffic that will be classified under this class map.
- Up to 16 **match** commands are permitted per class map.
- The class map is used with a policy map (page 32-5) to create a service policy (page 32-10) for a specific interface that defines packet classification, service tagging, and bandwidth policing.

### Example

This example creates a class map call “rd\_class,” and sets it to match packets marked for DSCP service value 3:

```
Console(config)#class-map rd_class match-any
Console(config-cmap)#match ip dscp 3
Console(config-cmap)#
```

### Related Commands

show class map (32-11)

## match

This command defines the criteria used to classify traffic. Use the **no** form to delete the matching criteria.

### Syntax

**[no] match** {**access-list** *acl-name* | **ip dscp** *dscp* | **ip precedence** *ip-precedence* | **vlan** *vlan*}

- *acl-name* - Name of the access control list. Any type of ACL can be specified, including standard or extended IP ACLs and MAC ACLs. (Range: 1-16 characters)
- *dscp* - A DSCP value. (Range: 0-63)
- *ip-precedence* - An IP Precedence value. (Range: 0-7)
- *vlan* - A VLAN. (Range:1-4094)

### Default Setting

None

### Command Mode

Class Map Configuration

### Command Usage

- First enter the **class-map** command to designate a class map and enter the Class Map configuration mode. Then use the **match** command to specify the fields within ingress packets that must match to qualify for this class map.
- Only one **match** command can be entered per class map.

### Example

This example creates a class map called “rd\_class#1,” and sets it to match packets marked for DSCP service value 3:

```
Console(config)#class-map rd_class#1_ match-any
Console(config-cmap)#match ip dscp 3
Console(config-cmap)#
```

This example creates a class map call “rd\_class#2,” and sets it to match packets marked for IP Precedence service value 5:

```
Console(config)#class-map rd_class#2 match-any
Console(config-cmap)#match ip precedence 5
Console(config-cmap)#
```

This example creates a class map call “rd\_class#3,” and sets it to match packets marked for VLAN 1:

```
Console(config)#class-map rd_class#3 match-any
Console(config-cmap)#match vlan 1
Console(config-cmap)#
```

## policy-map

This command creates a policy map that can be attached to multiple interfaces, and enters Policy Map configuration mode. Use the **no** form to delete a policy map and return to Global configuration mode.

### Syntax

**[no] policy-map** *policy-map-name*

*policy-map-name* - Name of the policy map. (Range: 1-16 characters)

### Default Setting

None

### Command Mode

Global Configuration

### Command Usage

- Use the **policy-map** command to specify the name of the policy map, and then use the **class** command to configure policies for traffic that matches criteria defined in a class map.

- A policy map can contain multiple class statements that can be applied to the same interface with the **service-policy** command (page 32-10).
- You must create a Class Map (page 32-5) before assigning it to a Policy Map.

### Example

This example creates a policy called “rd\_policy,” uses the **class** command to specify the previously defined “rd\_class,” uses the **set** command to classify the service that incoming packets will receive, and then uses the **police** command to limit the average bandwidth to 100,000 Kbps, the burst rate to 1522 bytes, and configure the response to drop any violating packets.

```
Console(config)#policy-map rd_policy
Console(config-pmap)#class rd_class
Console(config-pmap-c)#set ip dscp 3
Console(config-pmap-c)#police 100000 1522 exceed-action drop
Console(config-pmap-c)#
```

## class

This command defines a traffic classification upon which a policy can act, and enters Policy Map Class configuration mode. Use the **no** form to delete a class map and return to Policy Map configuration mode.

### Syntax

**[no]** **class** *class-map-name*

*class-map-name* - Name of the class map. (Range: 1-16 characters)

### Default Setting

None

### Command Mode

Policy Map Configuration

### Command Usage

- Use the **policy-map** command to specify a policy map and enter Policy Map configuration mode. Then use the **class** command to



enter Policy Map Class configuration mode. And finally, use the **set** and **police** commands to specify the match criteria, where the:

- **set** command classifies the service that an IP packet will receive.
- **police** command defines the maximum throughput, burst rate, and the action that results from a policy violation.
- You can configure up to 16 rules per Class Map. You can also include multiple classes in a Policy Map.

### Example

This example creates a policy called “rd\_policy,” uses the **class** command to specify the previously defined “rd\_class,” uses the **set** command to classify the service that incoming packets will receive, and then uses the **police** command to limit the average bandwidth to 100,000 Kbps, the burst rate to 1522 bytes, and configure the response to drop any violating packets.

```
Console(config)#policy-map rd_policy
Console(config-pmap)#class rd_class
Console(config-pmap-c)#set ip dscp 3
Console(config-pmap-c)#police 100000 1522 exceed-action drop
Console(config-pmap-c)#
```

## set

This command services IP traffic by setting a CoS, DSCP, or IP Precedence value in a matching packet (as specified by the **match** command on page 32-4). Use the **no** form to remove the traffic classification.

### Syntax

```
[no] set {cos new-cos | ip dscp new-dscp | ip precedence new-precedence  
| ipv6 dscp new-dscp}
```

- *new-cos* - New Class of Service (CoS) value. (Range: 0-7)
- *new-dscp* - New Differentiated Service Code Point (DSCP) value. (Range: 0-63)
- *new-precedence* - New IP Precedence value. (Range: 0-7)

### Default Setting

None

### Command Mode

Policy Map Class Configuration

### Example

This example creates a policy called “rd\_policy,” uses the **class** command to specify the previously defined “rd\_class,” uses the **set** command to classify the service that incoming packets will receive, and then uses the **police** command to limit the average bandwidth to 100,000 Kbps, the burst rate to 1522 bytes, and configure the response to drop any violating packets.

```
Console(config)#policy-map rd_policy  
Console(config-pmap)#class rd_class  
Console(config-pmap-c)#set ip dscp 3  
Console(config-pmap-c)#police 100000 1522 exceed-action drop  
Console(config-pmap-c)#
```

## police

This command defines an policer for classified traffic. Use the **no** form to remove a policer.

### Syntax

**[no] police** *rate-kbps* *burst-byte* [**exceed-action** {**drop** | **set**}]

- *rate-kbps* - Rate in kilobits per second. (Range: 1-100000 kbps or maximum port speed, whichever is lower)
- *burst-byte* - Burst in bytes. (Range: 64-1522 bytes)
- **drop** - Drop packet when specified rate or burst are exceeded.
- **set** - Set DSCP service to the specified value. (Range: 0-63)

### Default Setting

Drop out-of-profile packets.

### Command Mode

Policy Map Class Configuration

### Command Usage

- You can configure up to 64 policers (i.e., meters or class maps) for each of the following access list types: MAC ACL, IP ACL (including Standard ACL and Extended ACL), IPv6 Standard ACL, and IPv6 Extended ACL. This limitation applies to each switch chip (SMC8824M: ports 1-26, SMC8848M: ports 1-25, ports 26-50).
- Policing is based on a token bucket, where bucket depth (i.e., the maximum burst before the bucket overflows) is by specified the *burst-byte* field, and the average rate tokens are removed from the bucket is by specified by the *rate-kbps* option.

### Example

This example creates a policy called “rd\_policy,” uses the **class** command to specify the previously defined “rd\_class,” uses the **set** command to classify the service that incoming packets will receive, and then uses the **police** command to limit the average bandwidth to 100,000 Kbps, the burst rate to 1522 bytes, and configure the response to drop any violating packets.

```
Console(config)#policy-map rd_policy
Console(config-pmap)#class rd_class
Console(config-pmap-c)#set ip dscp 3
Console(config-pmap-c)#police 100000 1522 exceed-action drop
Console(config-pmap-c)#
```

## service-policy

This command applies a policy map defined by the **policy-map** command to the ingress queue of a particular interface. Use the **no** form to remove the policy map from this interface.

### Syntax

[no] **service-policy** input *policy-map-name*

- **input** - Apply to the input traffic.
- *policy-map-name* - Name of the policy map for this interface.  
(Range: 1-16 characters)

### Default Setting

No policy map is attached to an interface.

### Command Mode

Interface Configuration (Ethernet, Port Channel)

### Command Usage

- You can only assign one policy map to an interface.
- You must first define a class map, then define a policy map, and finally use the **service-policy** command to bind the policy map to the required interface.

## Example

This example applies a service policy to an ingress interface.

```
Console(config)#interface ethernet 1/1
Console(config-if)#service-policy input rd_policy
Console(config-if)#
```

## show class-map

This command displays the QoS class maps which define matching criteria used for classifying traffic.

### Syntax

**show class-map** [*class-map-name*]

*class-map-name* - Name of the class map. (Range: 1-16 characters)

### Default Setting

Displays all class maps.

### Command Mode

Privileged Exec

## Example

```
Console#show class-map
Class Map match-any rd_class#1
  Match ip dscp 3

Class Map match-any rd_class#2
  Match ip precedence 5

Class Map match-any rd_class#3
  Match vlan 1

Console#
```

## show policy-map

This command displays the QoS policy maps which define classification criteria for incoming traffic, and may include policers for bandwidth limitations.

### Syntax

**show policy-map** [*policy-map-name*] [**class** *class-map-name*]

- *policy-map-name* - Name of the policy map. (Range: 1-16 characters)
- *class-map-name* - Name of the class map. (Range: 1-16 characters)

### Default Setting

Displays all policy maps and all classes.

### Command Mode

Privileged Exec

### Example

```
Console#show policy-map
Policy Map rd_policy
  class rd_class
    set ip dscp 3
Console#show policy-map rd_policy class rd_class
Policy Map rd_policy
  class rd_class
    set ip dscp 3
Console#
```

## show policy-map interface

This command displays the service policy assigned to the specified interface.

### Syntax

**show policy-map interface** *interface* **input**

*interface*

- **ethernet** *unit/port*
  - *unit* - Stack unit. (Range: 1-8)
  - *port* - Port number. (Range: 1-26/50)
- **port-channel** *channel-id* (Range: 1-32)

## **Command Mode**

Privileged Exec

## **Example**

```
Console#show policy-map interface ethernet 1/5
Service-policy rd_policy input
Console#
```

## *QUALITY OF SERVICE COMMANDS*



# CHAPTER 33

## MULTICAST FILTERING

### COMMANDS

---

This switch uses IGMP (Internet Group Management Protocol) to query for any attached hosts that want to receive a specific multicast service. It identifies the ports containing hosts requesting a service and sends data out to those ports only. It then propagates the service request up to any neighboring multicast switch/router to ensure that it will continue to receive the multicast service.

**Table 33-1 Multicast Filtering Commands**

Command Groups	Function	Page
IGMP Snooping	Configures multicast groups via IGMP snooping or static assignment, sets the IGMP version, displays current snooping and query settings, and displays the multicast service and group members	33-2
IGMP Query	Configures IGMP query parameters for multicast filtering	33-6
Static Multicast Routing	Configures static multicast router ports	33-11

# IGMP Snooping Commands

This section describes commands used to configure IGMP snooping on the switch.

Table 33-2 IGMP Snooping Commands

Command	Function	Mode	Page
ip igmp snooping	Enables IGMP snooping	GC	33-2
ip igmp snooping vlan static	Adds an interface as a member of a multicast group	GC	33-3
ip igmp snooping version	Configures the IGMP version for snooping	GC	33-3
show ip igmp snooping	Shows the IGMP snooping and query configuration	PE	33-4
show mac-address-table multicast	Shows the IGMP snooping MAC multicast list	PE	33-5

## ip igmp snooping

This command enables IGMP snooping on this switch. Use the **no** form to disable it.

### Syntax

[no] ip igmp snooping

### Default Setting

Enabled

### Command Mode

Global Configuration

### Example

The following example enables IGMP snooping.

```
Console(config)#ip igmp snooping
Console(config)#
```

## ip igmp snooping vlan static

This command adds a port to a multicast group. Use the **no** form to remove the port.

### Syntax

**[no] ip igmp snooping vlan *vlan-id* static *ip-address* *interface***

- *vlan-id* - VLAN ID (Range: 1-4093)
- *ip-address* - IP address for multicast group
- *interface*
  - **ethernet** *unit/port*
    - *unit* - Stack unit. (Range: 1-8)
    - *port* - Port number. (Range: 1-26/50)
  - **port-channel** *channel-id* (Range: 1-32)

### Default Setting

None

### Command Mode

Global Configuration

### Example

The following shows how to statically configure a multicast group on a port:

```
Console(config)#ip igmp snooping vlan 1 static 224.0.0.12 ethernet
1/5
Console(config)#
```

## ip igmp snooping version

This command configures the IGMP snooping version. Use the **no** form to restore the default.

### Syntax

**ip igmp snooping version {1 | 2}**

**no ip igmp snooping version**

- **1** - IGMP Version 1
- **2** - IGMP Version 2

### Default Setting

IGMP Version 2

### Command Mode

Global Configuration

### Command Usage

- All systems on the subnet must support the same version. If there are legacy devices in your network that only support Version 1, you will also have to configure this switch to use Version 1.
- Some commands are only enabled for IGMPv2, including **ip igmp query-max-response-time** and **ip igmp query-timeout**.

### Example

The following configures the switch to use IGMP Version 1:

```
Console(config)#ip igmp snooping version 1
Console(config)#
```

## show ip igmp snooping

This command shows the IGMP snooping configuration.

### Default Setting

None

### Command Mode

Privileged Exec

### Command Usage

See “Configuring IGMP Snooping and Query Parameters” on page 4-197 for a description of the displayed items.

### Example

The following shows the current IGMP snooping configuration:

```
Console#show ip igmp snooping
Service status:      Enabled
Querier status:      Disabled
Query count:         2
Query interval:      125 sec
Query max response time: 10 sec
Router port expire time: 300 sec
IGMP snooping version: Version 2
Console#
```

### show mac-address-table multicast

This command shows known multicast addresses.

#### Syntax

**show mac-address-table multicast** [**vlan** *vlan-id*]  
[**user** | **igmp-snooping**]

- *vlan-id* - VLAN ID (1 to 4093)
- **user** - Display only the user-configured multicast entries.
- **igmp-snooping** - Display only entries learned through IGMP snooping.

#### Default Setting

None

#### Command Mode

Privileged Exec

#### Command Usage

Member types displayed include IGMP or USER, depending on selected options.

**Example**

The following shows the multicast entries learned through IGMP snooping for VLAN 1:

```
Console#show mac-address-table multicast vlan 1 igmp-snooping
VLAN M'cast IP addr. Member ports Type
-----
      1      224.1.1.2.3      Eth1/11      IGMP
Console#
```

**IGMP Query Commands**

This section describes commands used to configure Layer 2 IGMP query on the switch.

**Table 33-3 IGMP Query Commands**

Command	Function	Mode	Page
ip igmp snooping querier	Allows this device to act as the querier for IGMP snooping	GC	33-6
ip igmp snooping query-count	Configures the query count	GC	33-7
ip igmp snooping query-interval	Configures the query interval	GC	33-8
ip igmp snooping query-max-response-time	Configures the report delay	GC	33-9
ip igmp snooping router-port-expire-time	Configures the query timeout	GC	33-10

**ip igmp snooping querier**

This command enables the switch as an IGMP querier. Use the **no** form to disable it.

**Syntax**

[no] ip igmp snooping querier

**Default Setting**

Enabled

## Command Mode

Global Configuration

## Command Usage

If enabled, the switch will serve as querier if elected. The querier is responsible for asking hosts if they want to receive multicast traffic.

## Example

```
Console(config)#ip igmp snooping querier
Console(config)#
```

## ip igmp snooping query-count

This command configures the query count. Use the **no** form to restore the default.

## Syntax

**ip igmp snooping query-count** *count*

**no ip igmp snooping query-count**

*count* - The maximum number of queries issued for which there has been no response before the switch takes action to drop a client from the multicast group. (Range: 2-10)

## Default Setting

2 times

## Command Mode

Global Configuration

## Command Usage

The query count defines how long the querier waits for a response from a multicast client before taking action. If a querier has sent a number of queries defined by this command, but a client has not responded, a countdown timer is started using the time defined by **ip igmp snooping query-max- response-time**. If the countdown finishes, and the client still has not responded, then that client is considered to have left the multicast group.

### Example

The following shows how to configure the query count to 10:

```
Console(config)#ip igmp snooping query-count 10
Console(config)#
```

### Related Commands

ip igmp snooping query-max-response-time (33-9)

## ip igmp snooping query-interval

This command configures the query interval. Use the **no** form to restore the default.

### Syntax

**ip igmp snooping query-interval** *seconds*  
**no ip igmp snooping query-interval**

*seconds* - The frequency at which the switch sends IGMP host-query messages. (Range: 60-125)

### Default Setting

125 seconds

### Command Mode

Global Configuration

### Example

The following shows how to configure the query interval to 100 seconds:

```
Console(config)#ip igmp snooping query-interval 100
Console(config)#
```



## ip igmp snooping query-max-response-time

This command configures the query report delay. Use the **no** form to restore the default.

### Syntax

**ip igmp snooping query-max-response-time** *seconds*  
**no ip igmp snooping query-max-response-time**

*seconds* - The report delay advertised in IGMP queries. (Range: 5-25)

### Default Setting

10 seconds

### Command Mode

Global Configuration

### Command Usage

- The switch must be using IGMPv2 for this command to take effect.
- This command defines the time after a query, during which a response is expected from a multicast client. If a querier has sent a number of queries defined by the **ip igmp snooping query-count**, but a client has not responded, a countdown timer is started using an initial value set by this command. If the countdown finishes, and the client still has not responded, then that client is considered to have left the multicast group.

### Example

The following shows how to configure the maximum response time to 20 seconds:

```
Console(config)#ip igmp snooping query-max-response-time 20
Console(config)#
```

### Related Commands

ip igmp snooping version (33-3)  
ip igmp snooping query-max-response-time (33-9)

## ip igmp snooping router-port-expire-time

This command configures the query timeout. Use the **no** form to restore the default.

### Syntax

**ip igmp snooping router-port-expire-time** *seconds*  
**no ip igmp snooping router-port-expire-time**

*seconds* - The time the switch waits after the previous querier stops before it considers the router port (i.e., the interface which had been receiving query packets) to have expired.  
(Range: 300-500)

### Default Setting

300 seconds

### Command Mode

Global Configuration

### Command Usage

The switch must use IGMPv2 for this command to take effect.

### Example

The following shows how to configure the default timeout to 300 seconds:

```
Console(config)#ip igmp snooping router-port-expire-time 300  
Console(config)#
```

### Related Commands

ip igmp snooping version (33-3)

## Static Multicast Routing Commands

Table 33-4 Static Multicast Routing Commands

Command	Function	Mode	Page
ip igmp snooping vlan mrouter	Adds a multicast router port	GC	33-11
show ip igmp snooping mrouter	Shows multicast router ports	PE	33-12

### ip igmp snooping vlan mrouter

This command statically configures a multicast router port. Use the **no** form to remove the configuration.

#### Syntax

[no] **ip igmp snooping vlan** *vlan-id* **mrouter** *interface*

- *vlan-id* - VLAN ID (Range: 1-4093)
- *interface*
  - **ethernet** *unit/port*
    - *unit* - Stack unit. (Range: 1-8)
    - *port* - Port number. (Range: 1-26/50)
  - **port-channel** *channel-id* (Range: 1-32)

#### Default Setting

No static multicast router ports are configured.

#### Command Mode

Global Configuration

#### Command Usage

Depending on your network connections, IGMP snooping may not always be able to locate the IGMP querier. Therefore, if the IGMP querier is a known multicast router/switch connected over the network to an interface (port or trunk) on your router, you can manually configure that interface to join all the current multicast groups.

### Example

The following shows how to configure port 11 as a multicast router port within VLAN 1:

```
Console(config)#ip igmp snooping vlan 1 mrouter ethernet 1/11
Console(config)#
```

### show ip igmp snooping mrouter

This command displays information on statically configured and dynamically learned multicast router ports.

#### Syntax

**show ip igmp snooping mrouter [vlan *vlan-id*]**

*vlan-id* - VLAN ID (Range: 1-4093)

#### Default Setting

Displays multicast router ports for all configured VLANs.

#### Command Mode

Privileged Exec

#### Command Usage

Multicast router port types displayed include Static.

### Example

The following shows that port 11 in VLAN 1 is attached to a multicast router:

```
Console#show ip igmp snooping mrouter vlan 1
VLAN M'cast Router Ports Type
-----
    1                Eth 1/11  Static
Console#
```

# CHAPTER 34

## DOMAIN NAME SERVICE

### COMMANDS

---

These commands are used to configure Domain Naming System (DNS) services. You can manually configure entries in the DNS domain name to IP address mapping table, configure default domain names, or specify one or more name servers to use for domain name to address translation.

Note that domain name services will not be enabled until at least one name server is specified with the **ip name-server** command and domain lookup is enabled with the **ip domain-lookup** command.

**Table 34-1 DNS Commands**

Command	Function	Mode	Page
ip host	Creates a static host name-to-address mapping	GC	34-2
clear host	Deletes entries from the host name-to-address table	PE	34-3
ip domain-name	Defines a default domain name for incomplete host names	GC	34-4
ip domain-list	Defines a list of default domain names for incomplete host names	GC	34-5
ip name-server	Specifies the address of one or more name servers to use for host name-to-address translation	GC	34-6
ip domain-lookup	Enables DNS-based host name-to-address translation	GC	34-7
show hosts	Displays the static host name-to-address mapping table	PE	34-8
show dns	Displays the configuration for DNS services	PE	34-9

**Table 34-1 DNS Commands** (Continued)

Command	Function	Mode	Page
show dns cache	Displays entries in the DNS cache	PE	34-9
clear dns cache	Clears all entries from the DNS cache	PE	34-10

## ip host

This command creates a static entry in the DNS table that maps a host name to an IP address. Use the **no** form to remove an entry.

### Syntax

[no] **ip host** *name address1* [*address2 ... address8*]

- *name* - Name of the host. (Range: 1-64 characters)
- *address1* - Corresponding IP address.
- *address2 ... address8* - Additional corresponding IP addresses.

### Default Setting

No static entries

### Command Mode

Global Configuration

### Command Usage

Servers or other network devices may support one or more connections via multiple IP addresses. If more than one IP address is associated with a host name using this command, a DNS client can try each address in succession, until it establishes a connection with the target device.

## Example

This example maps two address to a host name.

```
Console(config)#ip host rd5 192.168.1.55 10.1.0.55
Console(config)#end
Console#show hosts

Hostname
  rd5
Inet address
  10.1.0.55 192.168.1.55
Alias
Console#
```

## clear host

This command deletes entries from the DNS table.

### Syntax

**clear host** {*name* | \*}

- *name* - Name of the host. (Range: 1-64 characters)
- \* - Removes all entries.

### Default Setting

None

### Command Mode

Privileged Exec

## Example

This example clears all static entries from the DNS table.

```
Console(config)#clear host *
Console(config)#
```

## ip domain-name

This command defines the default domain name appended to incomplete host names (i.e., host names passed from a client that are not formatted with dotted notation). Use the **no** form to remove the current domain name.

### Syntax

**ip domain-name** *name*

**no ip domain-name**

*name* - Name of the host. Do not include the initial dot that separates the host name from the domain name.

(Range: 1-64 characters)

### Default Setting

None

### Command Mode

Global Configuration

### Example

```
Console(config)#ip domain-name sample.com
Console(config)#end
Console#show dns
Domain Lookup Status:
    DNS disabled
Default Domain Name:
    .sample.com
Domain Name List:
Name Server List:
Console#
```

### Related Commands

ip domain-list (34-5)

ip name-server (34-6)

ip domain-lookup (34-7)



## ip domain-list

This command defines a list of domain names that can be appended to incomplete host names (i.e., host names passed from a client that are not formatted with dotted notation). Use the **no** form to remove a name from this list.

### Syntax

**[no] ip domain-list *name***

*name* - Name of the host. Do not include the initial dot that separates the host name from the domain name.

(Range: 1-64 characters)

### Default Setting

None

### Command Mode

Global Configuration

### Command Usage

- Domain names are added to the end of the list one at a time.
- When an incomplete host name is received by the DNS service on this switch, it will work through the domain list, appending each domain name in the list to the host name, and checking with the specified name servers for a match.
- If there is no domain list, the domain name specified with the **ip domain-name** command is used. If there is a domain list, the default domain name is not used.

### Example

This example adds two domain names to the current list and then displays the list.

```
Console(config)#ip domain-list sample.com.jp
Console(config)#ip domain-list sample.com.uk
Console(config)#end
Console#show dns
Domain Lookup Status:
    DNS disabled
Default Domain Name:
    .sample.com
Domain Name List:
    .sample.com.jp
    .sample.com.uk
Name Server List:
Console#
```

### Related Commands

ip domain-name (34-4)

## ip name-server

This command specifies the address of one or more domain name servers to use for name-to-address resolution. Use the **no** form to remove a name server from this list.

### Syntax

**[no] ip name-server** *server-address1* [*server-address2* ... *server-address6*]

- *server-address1* - IP address of domain-name server.
- *server-address2* ... *server-address6* - IP address of additional domain-name servers.

### Default Setting

None

### Command Mode

Global Configuration

### Command Usage

The listed name servers are queried in the specified sequence until a response is received, or the end of the list is reached with no response.

## Example

This example adds two domain-name servers to the list and then displays the list.

```
Console(config)#ip domain-server 192.168.1.55 10.1.0.55
Console(config)#end
Console#show dns
Domain Lookup Status:
    DNS disabled
Default Domain Name:
    .sample.com
Domain Name List:
    .sample.com.jp
    .sample.com.uk
Name Server List:
    192.168.1.55
    10.1.0.55
Console#
```

## Related Commands

ip domain-name (34-4)  
ip domain-lookup (34-7)

## ip domain-lookup

This command enables DNS host name-to-address translation. Use the **no** form to disable DNS.

### Syntax

**[no] ip domain-lookup**

### Default Setting

Disabled

### Command Mode

Global Configuration

### Command Usage

- At least one name server must be specified before you can enable DNS.
- If all name servers are deleted, DNS will automatically be disabled.

### Example

This example enables DNS and then displays the configuration.

```
Console(config)#ip domain-lookup
Console(config)#end
Console#show dns
Domain Lookup Status:
    DNS enabled
Default Domain Name:
    .sample.com
Domain Name List:
    .sample.com.jp
    .sample.com.uk
Name Server List:
    192.168.1.55
    10.1.0.55
```

### Related Commands

ip domain-name (34-4)  
ip name-server (34-6)

## show hosts

This command displays the static host name-to-address mapping table.

### Command Mode

Privileged Exec

### Example

Note that a host name will be displayed as an alias if it is mapped to the same address(es) as a previously configured entry.

```
Console#show hosts

Hostname
  rd5
Inet address
  10.1.0.55 192.168.1.55
Alias
  1.rd6
Console#
```

## show dns

This command displays the configuration of the DNS service.

### Command Mode

Privileged Exec

### Example

```
Console#show dns
Domain Lookup Status:
    DNS enabled
Default Domain Name:
    sample.com
Domain Name List:
    sample.com.jp
    sample.com.uk
Name Server List:
    192.168.1.55
    10.1.0.55
Console#
```

## show dns cache

This command displays entries in the DNS cache.

### Command Mode

Privileged Exec

### Example

```
Console#show dns cache
NO      FLAG      TYPE      IP          TTL      DOMAIN
2        4      CNAME     66.218.71.84  298      www.yahoo.akadns.net
3        4      CNAME     66.218.71.83  298      www.yahoo.akadns.net
4        4      CNAME     66.218.71.81  298      www.yahoo.akadns.net
5        4      CNAME     66.218.71.80  298      www.yahoo.akadns.net
6        4      CNAME     66.218.71.89  298      www.yahoo.akadns.net
7        4      CNAME     66.218.71.86  298      www.yahoo.akadns.net
8        4      ALIAS     POINTER TO:7   298      www.yahoo.com
Console#
```

**Table 34-2 show dns cache - display description**

Field	Description
NO	The entry number for each resource record.
FLAG	The flag is always “4” indicating a cache entry and therefore unreliable.

**Table 34-2 show dns cache - display description** (Continued)

Field	Description
TYPE	This field includes CNAME which specifies the canonical or primary name for the owner, and ALIAS which specifies multiple domain names which are mapped to the same IP address as an existing entry.
IP	The IP address associated with this record.
TTL	The time to live reported by the name server.
DOMAIN	The domain name associated with this record.

**clear dns cache**

This command clears all entries in the DNS cache.

**Command Mode**

Privileged Exec

**Example**

```
Console#clear dns cache
Console#show dns cache
NO      FLAG      TYPE      IP              TTL      DOMAIN
Console#
```

# CHAPTER 35

## DHCP COMMANDS

---

These commands are used to configure Dynamic Host Configuration Protocol (DHCP) client, relay, and server functions. You can configure any VLAN interface to be automatically assigned an IP address via DHCP. This switch can be configured to relay DHCP client configuration requests to a DHCP server on another network, or you can configure this switch to provide DHCP service directly to any client.

**Table 35-1 DHCP Commands**

Command Group	Function	Page
DHCP Client	Allows interfaces to dynamically acquire IP address information	35-2
DHCP Relay	Relays DHCP requests from local hosts to a remote DHCP server	35-4
DHCP Server	Configures DHCP service using address pools or static bindings	35-6

## DHCP Client

**Table 35-2 DHCP Client Commands**

Command	Function	Mode	Page
ip dhcp client-identifier	Specifies the DHCP client identifier for this switch	IC	35-2
ip dhcp restart client	Submits a BOOTP or DHCP client request	PE	35-3

### ip dhcp client-identifier

This command specifies the DHCP client identifier for the current interface. Use the **no** form to remove this identifier.

#### Syntax

**ip dhcp client-identifier** {**text** *text* | **hex** *hex*}

**no ip dhcp client-identifier**

- *text* - A text string. (Range: 1-15 characters)
- *hex* - The hexadecimal value.

#### Default Setting

None

#### Command Mode

Interface Configuration (VLAN)

#### Command Usage

This command is used to include a client identifier in all communications with the DHCP server. The identifier type depends on the requirements of your DHCP server.

#### Example

```
Console(config)#interface vlan 2
Console(config-if)#ip dhcp client-identifier hex 00-00-e8-66-65-72
Console(config-if)#
```

#### Related Commands

ip dhcp restart client (35-3)



## ip dhcp restart client

This command submits a BOOTP or DHCP client request.

### Default Setting

None

### Command Mode

Privileged Exec

### Command Usage

- This command issues a BOOTP or DHCP client request for any IP interface that has been set to BOOTP or DHCP mode via the **ip address** command.
- DHCP requires the server to reassign the client's last address if available.
- If the BOOTP or DHCP server has been moved to a different domain, the network portion of the address provided to the client will be based on this new domain.

### Example

In the following example, the device is reassigned the same address.

```
Console(config)#interface vlan 1
Console(config-if)#ip address dhcp
Console(config-if)#exit
Console#ip dhcp restart client
Console#show ip interface

Vlan 1 is up, addressing mode is DHCP
  Interface address is 192.168.1.54, mask is 255.255.255.0, Primary
  MTU is 1500 bytes
  Proxy ARP is disabled
  Split horizon is enabled
Console#
```

### Related Commands

ip address (36-4)

## DHCP Relay

**Table 35-3 DHCP Relay Commands**

Command	Function	Mode	Page
ip dhcp restart relay	Enables DHCP relay agent	IC	35-4
ip dhcp relay server	Specifies DHCP server addresses for relay	IC	35-5

### **ip dhcp restart relay**

This command enables DHCP relay for the specified VLAN. Use the **no** form to disable it.

#### **Syntax**

**[no] ip dhcp relay**

#### **Default Setting**

Disabled

#### **Command Mode**

Interface Configuration (VLAN)

#### **Command Usage**

This command is used to configure DHCP relay functions for host devices attached to the switch. If DHCP relay service is enabled, and this switch sees a DHCP request broadcast, it inserts its own IP address into the request so the DHCP server will know the subnet where the client is located. Then, the switch forwards the packet to the DHCP server on another network. When the server receives the DHCP request, it allocates a free IP address for the DHCP client from its defined scope for the DHCP client's subnet, and sends a DHCP response back to the DHCP relay agent (i.e., this switch). This switch then broadcasts the DHCP response received from the server to the client.

## Example

In the following example, the device is reassigned the same address.

```
Console(config)#interface vlan 1
Console(config-if)#ip dhcp relay
Console(config-if)#end
Console#show ip interface

Vlan 1 is up, addressing mode is Dhcp
  Interface address is 10.1.0.254, mask is 255.255.255.0, Primary
  MTU is 1500 bytes
  Proxy ARP is disabled
  Split horizon is enabled
Console#
```

## Related Commands

ip dhcp relay server (35-5)

## ip dhcp relay server

This command specifies the addresses of DHCP servers to be used by the switch's DHCP relay agent. Use the **no** form to clear all addresses.

### Syntax

**ip dhcp relay server** *address1* [*address2* [*address3* ...]]

**no ip dhcp relay server**

*address* - IP address of DHCP server. (Range: 1-3 addresses)

### Default Setting

None

### Command Mode

Interface Configuration (VLAN)

### Usage Guidelines

- You must specify the IP address for at least one DHCP server. Otherwise, the switch's DHCP relay agent will not forward client requests to a DHCP server.
- To start DHCP relay service, enter the **ip dhcp restart relay** command.

**Example**

```

Console(config)#interface vlan 1
Console(config-if)#ip dhcp relay server 10.1.0.99
Console(config-if)#

```

**Related Commands**

ip dhcp restart relay (35-4)

**DHCP Server****Table 35-4 DHCP Server Commands**

Command	Function	Mode	Page
service dhcp	Enables the DHCP server feature on this switch	GC	35-7
ip dhcp excluded-address	Specifies IP addresses that a DHCP server should not assign to DHCP clients	GC	35-8
ip dhcp pool	Configures a DHCP address pool on a DHCP Server	GC	35-8
network	Configures the subnet number and mask for a DHCP address pool	DC	35-9
default-router	Specifies the default router list for a DHCP client	DC	35-10
domain-name	Specifies the domain name for a DHCP client	DC	35-11
dns-server	Specifies the Domain Name Server (DNS) servers available to a DHCP client	DC	35-11
next-server	Configures the next server in the boot process of a DHCP client	DC	35-12
bootfile	Specifies a default boot image for a DHCP client	DC	35-13
netbios-name-server	Configures NetBIOS Windows Internet Naming Service (WINS) name servers available to Microsoft DHCP clients	DC	35-13
netbios-node-type	Configures NetBIOS node type for Microsoft DHCP clients	DC	35-14
lease	Sets the duration an IP address is assigned to a DHCP client	DC	35-15

**Table 35-4 DHCP Server Commands** (Continued)

Command	Function	Mode	Page
host*	Specifies the IP address and network mask to manually bind to a DHCP client	DC	35-16
client-identifier*	Specifies a client identifier for a DHCP client	DC	35-17
hardware-address*	Specifies the hardware address of a DHCP client	DC	35-18
clear ip dhcp binding	Deletes an automatic address binding from the DHCP server database	PE	35-19
show ip dhcp binding	Displays address bindings on the DHCP server	PE, NE	35-20

\* These commands are used for manually binding an address to a client.

## service dhcp

This command enables the DHCP server on this switch. Use the **no** form to disable the DHCP server.

### Syntax

[no] service dhcp

### Default Setting

Enabled

### Command Mode

Global Configuration

### Command Usage

If the DHCP server is running, you must restart it to implement any configuration changes.

### Example

```
Console(config)#service dhcp
Console(config)#
```

## ip dhcp excluded-address

This command specifies IP addresses that the DHCP server should not assign to DHCP clients. Use the **no** form to remove the excluded IP addresses.

### Syntax

**[no] ip dhcp excluded-address** *low-address* [*high-address*]

- *low-address* - An excluded IP address, or the first IP address in an excluded address range.
- *high-address* - The last IP address in an excluded address range.

### Default Setting

All IP pool addresses may be assigned.

### Command Mode

Global Configuration

### Example

```
Console(config)#ip dhcp excluded-address 10.1.0.19
Console(config)#
```

## ip dhcp pool

This command configures a DHCP address pool and enter DHCP Pool Configuration mode. Use the **no** form to remove the address pool.

### Syntax

**[no] ip dhcp pool** *name*

*name* - A string or integer. (Range: 1-8 characters)

### Default Setting

DHCP address pools are not configured.

### Command Mode

Global Configuration

### Usage Guidelines

- After executing this command, the switch changes to DHCP Pool Configuration mode, identified by the (config-dhcp)# prompt.
- From this mode, first configure address pools for the network interfaces (using the **network** command). You can also manually bind an address to a specific client (with the **host** command) if required. You can configure up to 8 network address pools, and up to 32 manually bound host address pools (i.e., listing one host address per pool). However, note that any address specified in a **host** command must fall within the range of a configured network address pool.

### Example

```
Console(config)#ip dhcp pool R&D
Console(config-dhcp)#
```

### Related Commands

network (35-9)

host (35-16)

## network

This command configures the subnet number and mask for a DHCP address pool. Use the **no** form to remove the subnet number and mask.

### Syntax

**network** *network-number* [*mask*]

**no network**

- *network-number* - The IP address of the DHCP address pool.
- *mask* - The bit combination that identifies the network (or subnet) and the host portion of the DHCP address pool.

### Command Mode

DHCP Pool Configuration

### Usage Guidelines

- When a client request is received, the switch first checks for a network address pool matching the gateway where the request originated (i.e., if the request was forwarded by a relay server). If there is no gateway

in the client request (i.e., the request was not forwarded by a relay server), the switch searches for a network pool matching the interface through which the client request was received. It then searches for a manually configured host address that falls within the matching network pool. If no manually configured host address is found, it assigns an address from the matching network address pool. However, if no matching address pool is found the request is ignored.

- This command is valid for DHCP network address pools only. If the mask is not specified, the class A, B, or C natural mask is used (see page 4-253). The DHCP server assumes that all host addresses are available. You can exclude subsets of the address space by using the **ip dhcp excluded-address** command.

### Example

```
Console(config-dhcp)#network 10.1.0.0 255.255.255.0
Console(config-dhcp)#
```

## default-router

This command specifies default routers for a DHCP pool. Use the **no** form to remove the default routers.

### Syntax

**default-router** *address1* [*address2*]  
**no default-router**

- *address1* - Specifies the IP address of the primary router.
- *address2* - Specifies the IP address of an alternate router.

### Default Setting

None

### Command Mode

DHCP Pool Configuration

### Usage Guidelines

The IP address of the router should be on the same subnet as the client. You can specify up to two routers. Routers are listed in order of preference (starting with *address1* as the most preferred router).



**Example**

```
Console(config-dhcp)#default-router 10.1.0.54 10.1.0.64
Console(config-dhcp)#
```

**domain-name**

This command specifies the domain name for a DHCP client. Use the **no** form to remove the domain name.

**Syntax**

**domain-name** *domain*

**no domain-name**

*domain* - Specifies the domain name of the client.  
(Range: 1-32 characters)

**Default Setting**

None

**Command Mode**

DHCP Pool Configuration

**Example**

```
Console(config-dhcp)#domain-name sample.com
Console(config-dhcp)#
```

**dns-server**

This command specifies the Domain Name System (DNS) IP servers available to a DHCP client. Use the **no** form to remove the DNS server list.

**Syntax**

**dns-server** *address1* [*address2*]

**no dns-server**

- *address1* - Specifies the IP address of the primary DNS server.
- *address2* - Specifies the IP address of the alternate DNS server.

**Default Setting**

None

## Command Mode

DHCP Pool Configuration

## Usage Guidelines

- If DNS IP servers are not configured for a DHCP client, the client cannot correlate host names to IP addresses.
- Servers are listed in order of preference (starting with *address1* as the most preferred server).

## Example

```
Console(config-dhcp)#dns-server 10.1.1.253 192.168.3.19
Console(config-dhcp)#
```

## next-server

This command configures the next server in the boot process of a DHCP client. Use the **no** form to remove the boot server list.

## Syntax

**[no] next-server** *address*

*address* - Specifies the IP address of the next server in the boot process, which is typically a Trivial File Transfer Protocol (TFTP) server.

## Default Setting

None

## Command Mode

DHCP Pool Configuration

## Example

```
Console(config-dhcp)#next-server 10.1.0.21
Console(config-dhcp)#
```

## Related Commands

bootfile (35-13)

## bootfile

This command specifies the name of the default boot image for a DHCP client. This file should be placed on the Trivial File Transfer Protocol (TFTP) server specified with the **next-server** command. Use the **no** form to delete the boot image name.

### Syntax

**bootfile** *filename*  
**no bootfile**

*filename* - Name of the file that is used as a default boot image.

### Default Setting

None

### Command Mode

DHCP Pool Configuration

### Example

```
Console(config-dhcp)#bootfile wme.bat
Console(config-dhcp)#
```

### Related Commands

next-server (35-12)

## netbios-name-server

This command configures NetBIOS Windows Internet Naming Service (WINS) name servers that are available to Microsoft DHCP clients. Use the **no** form to remove the NetBIOS name server list.

### Syntax

**netbios-name-server** *address1* [*address2*]  
**no netbios-name-server**

- *address1* - Specifies IP address of primary NetBIOS WINS name server.
- *address2* - Specifies IP address of alternate NetBIOS WINS name server.

### Default Setting

None

### Command Mode

DHCP Pool Configuration

### Usage Guidelines

Servers are listed in order of preference (starting with *address1* as the most preferred server).

### Example

```
Console(config-dhcp)#netbios-name-server 10.1.0.33 10.1.0.34
Console(config-dhcp)#
```

### Related Commands

netbios-node-type (35-14)

## netbios-node-type

This command configures the NetBIOS node type for Microsoft DHCP clients. Use the **no** form to remove the NetBIOS node type.

### Syntax

**netbios-node-type** *type*

**no netbios-node-type**

*type* - Specifies the NetBIOS node type:

- **broadcast**
- **hybrid (recommended)**
- **mixed**
- **peer-to-peer**

### Default Setting

None

### Command Mode

DHCP Pool Configuration

**Example**

```
Console(config-dhcp)#netbios-node-type hybrid
Console(config-dhcp)#
```

**Related Commands**

netbios-name-server (35-13)

**lease**

This command configures the duration that an IP address is assigned to a DHCP client. Use the **no** form to restore the default value.

**Syntax**

**lease** {*days* [*hours*][*minutes*] | **infinite**}  
**no lease**

- *days* - Specifies the duration of the lease in numbers of days. (Range: 0-364)
- *hours* - Specifies the number of hours in the lease. A *days* value must be supplied before you can configure *hours*. (Range: 0-23)
- *minutes* - Specifies the number of minutes in the lease. A *days* and *hours* value must be supplied before you can configure *minutes*. (Range: 0-59)
- **infinite** - Specifies that the lease time is unlimited. This option is normally used for addresses manually bound to a BOOTP client via the **host** command.

**Default Setting**

One day

**Command Modes**

DHCP Pool Configuration

**Example**

The following example leases an address to clients using this pool for 7 days.

```
Console(config-dhcp)#lease 7
Console(config-dhcp)#
```

## host

Use this command to specify the IP address and network mask to manually bind to a DHCP client. Use the **no** form to remove the IP address for the client.

### Syntax

**host** *address* [*mask*]

**no host**

- *address* - Specifies the IP address of a client.
- *mask* - Specifies the network mask of the client.

### Default Setting

None

### Command Mode

DHCP Pool Configuration

### Usage Guidelines

- Host addresses must fall within the range specified for an existing network pool.
- When a client request is received, the switch first checks for a network address pool matching the gateway where the request originated (i.e., if the request was forwarded by a relay server). If there is no gateway in the client request (i.e., the request was not forwarded by a relay server), the switch searches for a network pool matching the interface through which the client request was received. It then searches for a manually configured host address that falls within the matching network pool.
- When searching for a manual binding, the switch compares the client identifier for DHCP clients, and then compares the hardware address for DHCP or BOOTP clients.
- If no manual binding has been specified for a host entry with the **client-identifier** or **hardware-address** commands, then the switch will assign an address from the matching network pool.
- If the mask is unspecified, DHCP examines its address pools. If no mask is found in the pool database, the Class A, B, or C natural mask

is used (see page 4-253). This command is valid for manual bindings only.

- The **no host** command only clears the address from the DHCP server database. It does not cancel the IP address currently in use by the host.

### Example

```
Console(config-dhcp)#host 10.1.0.21 255.255.255.0
Console(config-dhcp)#
```

### Related Commands

client-identifier (35-17)

hardware-address (35-18)

## client-identifier

This command specifies the client identifier of a DHCP client. Use the **no** form to remove the client identifier.

### Syntax

**client-identifier** {**text** *text* | **hex** *hex*}

**no client-identifier**

- *text* - A text string. (Range: 1-15 characters)
- *hex* - The hexadecimal value.

### Default Setting

None

### Command Mode

DHCP Pool Configuration

### Command Usage

- This command identifies a DHCP client to bind to an address specified in the **host** command. If both a client identifier and hardware address are configured for a host address, the client identifier takes precedence over the hardware address in the search procedure.
- BOOTP clients cannot transmit a client identifier. To bind an address to a BOOTP client, you must associate a hardware address with the host entry.

### Example

```
Console(config-dhcp)#client-identifier text steve
Console(config-dhcp)#
```

### Related Commands

host (35-16)

## hardware-address

This command specifies the hardware address of a DHCP client. This command is valid for manual bindings only. Use the **no** form to remove the hardware address.

### Syntax

**hardware-address** *hardware-address type*

**no hardware-address**

- *hardware-address* - Specifies the MAC address of the client device.
- *type* - Indicates the following protocol used on the client device:
  - ethernet
  - ieee802
  - fddi

### Default Setting

If no type is specified, the default protocol is Ethernet.

### Command Mode

DHCP Pool Configuration

### Command Usage

This command identifies a DHCP or BOOTP client to bind to an address specified in the **host** command. BOOTP clients cannot transmit a client identifier. To bind an address to a BOOTP client, you must associate a hardware address with the host entry.

### Example

```
Console(config-dhcp)#hardware-address 00-e0-29-94-34-28 ethernet
Console(config-dhcp)#
```



**Related Commands**

host (35-16)

**clear ip dhcp binding**

This command deletes an automatic address binding from the DHCP server database.

**Syntax**

**clear ip dhcp binding** {*address* | \* }

- *address* - The address of the binding to clear.
- \* - Clears all automatic bindings.

**Default Setting**

None

**Command Mode**

Privileged Exec

**Usage Guidelines**

- An *address* specifies the client's IP address. If an asterisk (\*) is used as the address parameter, the DHCP server clears all automatic bindings.
- Use the **no host** command to delete a manual binding.
- This command is normally used after modifying the address pool, or after moving DHCP service to another device.

**Example.**

```
Console#clear ip dhcp binding *
Console#
```

**Related Commands**

show ip dhcp binding (35-20)

## show ip dhcp binding

This command displays address bindings on the DHCP server.

### Syntax

**show ip dhcp binding** [*address*]

*address* - Specifies the IP address of the DHCP client for which bindings will be displayed.

### Default Setting

None

### Command Mode

Normal Exec, Privileged Exec

### Example

```
Console#show ip dhcp binding
```

IP	MAC	Lease Time (dd/hh/mm/ss)	Start
192.1.3.21	00-00-e8-98-73-21	86400	Dec 25 08:01:57 2002

```
Console#
```

# CHAPTER 36

## IP INTERFACE COMMANDS

---

An IP address may be used for management access to the router over your network. An IPv4 address is obtained via DHCP by default for VLAN 1. You can also manually configure a new address for other VLANs on the router to enable management access through these VLANs or to connect the router to existing IP subnets. You can manually configure a specific IPv4 or IPv6 address, or direct the router to obtain an IPv4 address from a BOOTP or DHCP server when it is powered on. Both IP Version 4 and 6 addresses can be defined and used simultaneously to access the router. An IPv6 address can either be manually configured or dynamically generated. You may also need to establish an IPv4 or IPv6 default gateway between this device and management stations or other devices that exist on another network segment (if routing is not enabled).

This section includes commands for configuring IP interfaces, the Address Resolution Protocol (ARP) and Proxy ARP. These commands are used to connect subnetworks to the enterprise network.

**Table 36-1 IP Interface Commands**

Command Group	Function	Page
Basic IP Configuration	Configures the IP address for interfaces and the gateway router	36-2
Address Resolution Protocol (ARP)	Configures static, dynamic and proxy ARP service	36-45

## Basic IP Configuration

Table 36-2 Basic IP Configuration Commands

Command	Function	Mode	Page
<b>IP Version 4</b>			
ip address	Sets the IP address for the current interface	IC	36-4
ip default-gateway	Defines the default gateway through which this router can reach other subnetworks	GC	36-6
ip dhcp restart client	Submits a BOOTP or DHCP client request	PE	36-7
show ip interface	Displays the IP settings for this device	PE	36-8
show ip redirects	Displays the default gateway configured for this device	PE	36-8
ping	Sends ICMP echo request packets to another node on the network	NE, PE	36-9
<b>IP Version 6</b>			
<i>Interface Address Configuration and Utilities</i>			
ipv6 enable	Enables IPv6 on an interface that has not been configured with an explicit IPv6 address	IC	36-10
ipv6 general-prefix	Defines an IPv6 general prefix for the network address segment	GC	36-12
show ipv6 general-prefix	Displays all configured IPv6 general prefixes	NE, PE	36-13
ipv6 address	Configures an IPv6 global unicast address with an option to use an IPv6 general prefix, and enables IPv6 on an interface	IC	36-14
ipv6 address autoconfig	Enables automatic configuration of IPv6 global unicast addresses on an interface and enables IPv6 on the interface	IC	36-16
ipv6 address eui-64	Configures an IPv6 global unicast address for an interface using an EUI-64 interface ID in the low order 64 bits, and enables IPv6 on the interface	IC	36-18

**Table 36-2 Basic IP Configuration Commands (Continued)**

Command	Function	Mode	Page
ipv6 address link-local	Configures an IPv6 link-local address for an interface and enables IPv6 on the interface	IC	36-20
show ipv6 interface	Displays the usability and configured settings for IPv6 interfaces	NE, PE	36-22
ipv6 default-gateway	Sets an IPv6 default gateway for traffic with no known next hop	GC	36-24
show ipv6 default-gateway	Displays the current IPv6 default gateway	NE, PE	36-25
ipv6 mtu	Sets the size of the maximum transmission unit (MTU) for IPv6 packets sent on an interface	IC	36-26
show ipv6 mtu	Displays maximum transmission unit (MTU) information for IPv6 interfaces	NE, PE	36-27
show ipv6 traffic	Displays statistics about IPv6 traffic	NE, PE	36-27
clear ipv6 traffic	Resets IPv6 traffic counters	PE	36-35
ping ipv6	Sends ICMP echo request packets to an IPv6 node on the network	NE, PE	36-36
<i>Neighbor Discovery</i>			
ipv6 neighbor	Configures a static entry in the IPv6 neighbor discovery cache	GC	36-38
ipv6 nd dad attempts	Configures the number of consecutive neighbor solicitation messages sent on an interface during duplicate address detection	IC	36-39
ipv6 nd ns interval	Configures the interval between IPv6 neighbor solicitation retransmissions on an interface	IC	36-41
show ipv6 neighbors	Displays information in the IPv6 neighbor discovery cache	NE, PE	36-43
clear ipv6 neighbors	Deletes all dynamic entries in the IPv6 neighbor discovery cache	PE	36-44

### ip address

This command sets the IPv4 address for the currently selected VLAN interface. Use the **no** form to restore the default IP address.

#### Syntax

**ip address** {*ip-address netmask* | **bootp** | **dhcp**} [*secondary*]  
**no ip address**

- *ip-address* - IP address
- *netmask* - Network mask for the associated IP subnet. This mask identifies the host address bits used for routing to specific subnets.
- **bootp** - Obtains IP address from BOOTP.
- **dhcp** - Obtains IP address from DHCP.
- *secondary* - Specifies a secondary IP address.

#### Default Setting

DHCP

#### Command Mode

Interface Configuration (VLAN)

#### Command Usage

- If this router is directly connected to end node devices (or connected to end nodes via shared media) that will be assigned to a specific subnet, then you must create a router interface for each VLAN that will support routing. The router interface consists of an IP address and subnet mask. This interface address defines both the network number to which the router interface is attached and the router's host number on that network. In other words, a router interface address defines the network and subnetwork numbers of the segment that is connected to that interface, and allows you to send IP packets to or from the router.
- Before you configure any network interfaces on this router, you should first create a VLAN for each unique user group, or for each network application and its associated users. Then assign the ports associated with each of these VLANs.
- You must assign an IP address to this device to gain management access over the network or to connect the router to existing IP

subnets. You can manually configure a specific IP address, or direct the device to obtain an address from a BOOTP or DHCP server. Valid IP addresses consist of four numbers, 0 to 255, separated by periods. Anything outside this format will not be accepted by the configuration program.

- An interface can have only one primary IP address, but can have many secondary IP addresses. In other words, you will need to specify secondary addresses if more than one IP subnet can be accessed via this interface.
- If you select the **bootp** or **dhcp** option, IP is enabled but will not function until a BOOTP or DHCP reply has been received. Requests will be broadcast periodically by this device in an effort to learn its IP address. (BOOTP and DHCP values can include the IP address, default gateway, and subnet mask).
- You can start broadcasting BOOTP or DHCP requests by entering an **ip dhcp restart client** command, or by rebooting the router.

- Notes:**
1. Only one VLAN interface can be assigned an IP address (the default is VLAN 1). This defines the management VLAN, the only VLAN through which you can gain management access to the router. If you assign an IP address to any other VLAN, the new IP address overrides the original IP address and this becomes the new management VLAN.
  2. Each VLAN group can be assigned its own IP interface address. Therefore, if routing is enabled, you can manage the router via any of these IP addresses.
  3. Before you can change the primary IP address on an interface, you must first clear the current address with the **no** form of this command.

### Example

In the following example, the device is assigned an address in VLAN 1.

```
Console(config)#interface vlan 1
Console(config-if)#ip address 192.168.1.5 255.255.255.0
Console(config-if)#
```

### Related Commands

`ip dhcp restart client` (36-7)  
`ipv6 address` (36-14)

### ip default-gateway

This command specifies the IPv4 default gateway for destinations not found in the local routing tables. Use the **no** form to remove a default gateway.

#### Syntax

**ip default-gateway** *gateway*  
**no ip default-gateway**

*gateway* - IP address of the default gateway

#### Default Setting

No static route is established.

#### Command Mode

Global Configuration

#### Command Usage

- The gateway specified in this command is only valid if routing is disabled with the **no ip routing** command (page 37-2). If IP routing is disabled, you must define a gateway if the target device is located in a different subnet.
- If routing is enabled, you can still define a static route using the **ip route** command (page 37-3) to ensure that traffic to the designated address or subnet passes through a preferred gateway.
- An default gateway can only be successfully set when a network interface that directly connects to the gateway has been configured on the router.

#### Example

The following example defines a default gateway for this device:

```
Console(config)#ip default-gateway 10.1.1.254
Console(config)#
```



**Related Commands**

show ip redirects (36-8)  
ipv6 default-gateway (36-24)

**ip dhcp restart client**

This command submits an IPv4 BOOTP or DHCP client request.

**Default Setting**

None

**Command Mode**

Privileged Exec

**Command Usage**

- This command issues a BOOTP or DHCP client request for any IP interface that has been set to BOOTP or DHCP mode via the **ip address** command.
- DHCP requires the server to reassign the client's last address if available.
- If the BOOTP or DHCP server has been moved to a different domain, the network portion of the address provided to the client will be based on this new domain.

**Example**

In the following example, the device is reassigned the same address.

```
Console(config)#interface vlan 1
Console(config-if)#ip address dhcp
Console(config-if)#end
Console#ip dhcp restart client
Console#show ip interface

Vlan 1 is up, addressing mode is User
  Interface address is 192.168.1.54, mask is 255.255.255.0, Primary
  MTU is 1500 bytes
  Proxy ARP is disabled
  Split horizon is enabled
Console#
```

### **Related Commands**

- ip address (36-4)
- ip routing (37-2)
- ip route (37-3)

### **show ip interface**

This command displays the settings of an IPv4 interface.

### **Command Mode**

Privileged Exec

### **Example**

```
Console#show ip interface

Vlan 1 is up, addressing mode is User
  Interface address is 192.168.1.54, mask is 255.255.255.0, Primary
  MTU is 1500 bytes
  Proxy ARP is disabled
  Split horizon is enabled
Console#
```

### **Related Commands**

- show ip redirects (36-8)
- show ipv6 interface (36-22)

### **show ip redirects**

This command shows the IPv4 default gateway configured for this device.

### **Default Setting**

None

### **Command Mode**

Privileged Exec

### **Example**

```
Console#show ip redirects
ip default gateway 10.1.0.254
Console#
```

**Related Commands**

ip default-gateway (36-6)  
 show ipv6 default-gateway (36-25)

**ping**

This command sends (IPv4) ICMP echo request packets to another node on the network.

**Syntax**

**ping** *host* [**count** *count*][**size** *size*]

- *host* - IP address or IP alias of the host.
- *count* - Number of packets to send. (Range: 1-16, default: 5)
- *size* - Number of bytes in a packet. (Range: 32-512, default: 32)  
 The actual packet size will be eight bytes larger than the size specified because the router adds header information.

**Default Setting**

This command has no default for the host.

**Command Mode**

Normal Exec, Privileged Exec

**Command Usage**

- Use the ping command to see if another site on the network can be reached.
- The following are some results of the **ping** command:
  - *Normal response* - The normal response occurs in one to ten seconds, depending on network traffic.
  - *Destination does not respond* - If the host does not respond, a “timeout” appears in ten seconds.
  - *Destination unreachable* - The gateway for this destination indicates that the destination is unreachable.
  - *Network or host unreachable* - The gateway found no corresponding entry in the route table.
- Press <Esc> to stop pinging.

### Example

```
Console#ping 10.1.0.9
Type ESC to abort.
PING to 10.1.0.9, by 5 32-byte payload ICMP packets, timeout is 5
seconds
response time: 10 ms
response time: 10 ms
response time: 10 ms
response time: 10 ms
response time: 0 ms
Ping statistics for 10.1.0.9:
    5 packets transmitted, 5 packets received (100%), 0 packets lost (0%)
Approximate round trip times:
    Minimum = 0 ms, Maximum = 10 ms, Average = 8 ms
Console#
```

### Related Commands

interface (24-2)  
ping ipv6 (36-36)

## ipv6 enable

This command enables IPv6 on an interface that has not been configured with an explicit IPv6 address. Use the **no** form to disable IPv6 on an interface that has not been configured with an explicit IPv6 address.

### Syntax

[no] **ipv6 enable**

### Default Setting

IPv6 is disabled

### Command Mode

Interface Configuration (VLAN)

### Command Usage

- This command enables IPv6 on the current VLAN interface and automatically generates a link-local unicast address. The address prefix uses FE80, and the host portion of the address is generated by converting the router's MAC address to modified EUI-64 format (see

page 36-18). This address type makes the router accessible over IPv6 for all devices attached to the same local subnet.

- If a duplicate address is detected on the local segment, this interface will be disabled and a warning message displayed on the console.
- The **no ipv6 enable** command does not disable IPv6 for an interface that has been explicitly configured with an IPv6 address.

### Example

In this example, IPv6 is enabled on VLAN 1, and the link-local address FE80::200:E8FF:FE90:0/64 is automatically generated by the router.

```
Console(config)#interface vlan 1
Console(config-if)#ipv6 enable
Console(config-if)#end
Console#show ipv6 interface
Vlan 1 is up
IPv6 is enable.
Link-local address:
  FE80::200:E8FF:FE90:0/64
Global unicast address(es):
Joined group address(es):
  FF01::1/16
  FF02::1/16
  FF02::1:FE90:0/104
MTU is 1500 bytes.
ND DAD is enabled, number of DAD attempts: 1.
ND retransmit interval is 1000 milliseconds
Console#
```

### Related Commands

- ipv6 address link-local (36-20)
- show ipv6 interface (36-22)

## ipv6 general-prefix

This command defines an IPv6 general prefix for the network address segment. Use the **no** form to remove the IPv6 general prefix.

### Syntax

**ipv6 general-prefix** *prefix-name* *ipv6-prefix/prefix-length*

**no ipv6 general-prefix** *prefix-name*

- *prefix-name* - The label assigned to the general prefix.
- *ipv6-prefix* - The high-order bits of the network address segment assigned to the general prefix. The prefix must be formatted according to RFC 2373 “IPv6 Addressing Architecture,” using 8 colon-separated 16-bit hexadecimal values. One double colon may be used in the address to indicate the appropriate number of zeros required to fill the undefined fields.
- *prefix-length* - A decimal value indicating how many of the contiguous bits (from the left) of the address comprise the prefix (i.e., the network portion of the address).

### Default Setting

No general prefix is defined

### Command Mode

Global Configuration

### Command Usage

- Prefixes may contain zero-value fields or end in zeros.
- A general prefix holds a short prefix that indicates the high-order bits used in the network portion of the address. Longer, more specific, prefixes can be based on the general prefix to specify any number of subnets. When the general prefix is changed, all of the more specific prefixes based on this prefix will also change.

**Example**

This example assigns a general network prefix of 2009:DB9:2229::/48 to the router.

```
Console(config)#ipv6 general-prefix rd 2009:DB9:2229::/48
Console(config)#end
Console#show ipv6 general-prefix
IPv6 general prefix: rd
2009:DB9:2229::/48
Console#
```

**Related Commands**

show ipv6 general-prefix (36-13)

**show ipv6 general-prefix**

This command displays all configured IPv6 general prefixes.

**Command Mode**

Normal Exec, Privileged Exec

**Example**

This example displays a single IPv6 general prefix configured for the router.

```
Console#show ipv6 general-prefix
IPv6 general prefix: rd
2009:DB9:2229::/48
Console#
```

## **ipv6 address**

This command configures an IPv6 global unicast address and enables IPv6 on an interface. Use the **no** form without any arguments to remove all IPv6 addresses from the interface, or use the **no** form with a specific IPv6 address to remove that address from the interface.

### **Syntax**

**ipv6 address** [*general-prefix-name*] *ipv6-address/prefix-length*  
**no ipv6 address** [[*general-prefix-name*] *ipv6-address/prefix-length*]]

- *general-prefix-name* - The label assigned to the general prefix which specifies the leading bits of the network portion of the address.
- *ipv6-address* - A full IPv6 address if no general prefix is used, or the subsequent bits following the general prefix if one is used followed by the host address bits. The address must be formatted according to RFC 2373 “IPv6 Addressing Architecture,” using 8 colon-separated 16-bit hexadecimal values. One double colon may be used in the address to indicate the appropriate number of zeros required to fill the undefined fields.
- *prefix-length* - A decimal value indicating how many contiguous bits (from the left) of the address comprise the prefix (i.e., the network portion of the address). The length of this prefix includes both the general prefix and any number of subsequent IPv6 prefix bits specified in this command. If the prefix length specified by this command is shorter than the general prefix, then the length of the general prefix takes precedence.

### **Default Setting**

No IPv6 addresses are defined

### **Command Mode**

Interface Configuration (VLAN)

### **Command Usage**

- The general prefix normally applies to all interfaces, and is therefore specified at the global configuration level. The subsequent network prefix bits normally apply to one or more specific interfaces, and are



therefore specified by this command at the interface configuration level.

- If a link-local address has not yet been assigned to this interface, this command will assign the specified static global unicast address and also dynamically generate a link-local unicast address for the interface. (The link-local address is made with an address prefix of FE80 and a host portion based the router's MAC address in modified EUI-64 format.)
- If a duplicate address is detected, a warning message is sent to the console.

### Example

This example uses the general network prefix of 2009:DB9:2229::/48 used in an earlier example, and then specifies the subsequent prefix bits 0:0:0:7279::/64, and finally the host address portion of 79.

```
Console(config)#interface vlan 1
Console(config-if)#ipv6 address rd 0:0:0:7279::79/64
Console(config-if)#end
Console#show ipv6 interface
Vlan 1 is up
IPv6 is enable.
Link-local address:
  FE80::200:E8FF:FE90:0/64
Global unicast address(es):
  2009:DB9:2229:7279::79, subnet is 2009:DB9:2229:7279::/64
Joined group address(es):
  FF01::1/16
  FF02::1/16
  FF02::1:FF00:79/104
  FF02::1:FF90:0/104
MTU is 1500 bytes.
ND DAD is enabled, number of DAD attempts: 1.
ND retransmit interval is 1000 milliseconds
```

### Related Commands

```
ipv6 address eui-64 (36-18)
ipv6 address autoconfig (36-16)
show ipv6 interface (36-22)
ip address (36-4)
```

## **ipv6 address autoconfig**

This command enables stateless autoconfiguration of IPv6 addresses on an interface and enables IPv6 on the interface. The network portion of the address is based on prefixes received in IPv6 router advertisement messages; the host portion is based on the modified EUI-64 form of the interface identifier (i.e., the router's MAC address). Use the **no** form to remove the address generated by this command.

### **Syntax**

**[no] ipv6 address autoconfig**

### **Default Setting**

No IPv6 addresses are defined

### **Command Mode**

Interface Configuration (VLAN)

### **Command Usage**

- If a link local address has not yet been assigned to this interface, this command will dynamically generate a global unicast address and a link local address for the interface. (The link-local address is made with an address prefix of FE80 and a host portion based the router's MAC address in modified EUI-64 format.)
- If a duplicate address is detected, a warning message is sent to the console.
- If the router advertisements have the "other stateful configuration" flag set, the router will attempt to acquire other non-address configuration information (such as a default gateway) from a DHCP for IPv6 server.

**Example**

This example assigns two dynamic global unicast address of 2005::212:CFFF:FE0B:4600 and 3FFE:501:FFFF:100:212:CFFF:FE0B:4600 to the router.

```
Console(config-if)#ipv6 address autoconfig
Console(config-if)#end
Console#show ipv6 interface
Vlan 1 is up
IPv6 is enable.
Link-local address:
    FE80::212:CFFF:FE0B:4600/64
Global unicast address(es):
    2005::212:CFFF:FE0B:4600, subnet is 2005:0:0:0::/64
    3FFE:501:FFFF:100:212:CFFF:FE0B:4600, subnet is 3FFE:501:FFFF:100::/64
Joined group address(es):
    FF01::1/16
    FF02::1/16
    FF02::1:FE0B:4600/104
MTU is 1500 bytes.
ND DAD is enabled, number of DAD attempts: 1.
ND retransmit interval is 1000 milliseconds
Console#
```

**Related Commands**

ipv6 address (36-14)  
show ipv6 interface (36-22)

## **ipv6 address eui-64**

This command configures an IPv6 address for an interface using an EUI-64 interface ID in the low order 64 bits and enables IPv6 on the interface. Use the **no** form without any arguments to remove all manually configured IPv6 addresses from the interface. Use the **no** form with a specific address to remove it from the interface.

### **Syntax**

**ipv6 address** *ipv6-prefix/prefix-length* **eui-64**  
**no ipv6 address** [*ipv6-prefix/prefix-length* **eui-64**]

- *ipv6-prefix* - The IPv6 network portion of the address assigned to the interface. The prefix must be formatted according to RFC 2373 “IPv6 Addressing Architecture,” using 8 colon-separated 16-bit hexadecimal values. One double colon may be used in the address to indicate the appropriate number of zeros required to fill the undefined fields.
- *prefix-length* - A decimal value indicating how many contiguous bits (from the left) of the address comprise the prefix (i.e., the network portion of the address).

### **Default Setting**

No IPv6 addresses are defined

### **Command Mode**

Interface Configuration (VLAN)

### **Command Usage**

- If a link local address has not yet been assigned to this interface, this command will dynamically generate a global unicast address and a link-local address for this interface. (The link-local address is made with an address prefix of FE80 and a host portion based the router's MAC address in modified EUI-64 format.)
- Note that the value specified in the *ipv6-prefix* may include some of the high-order host bits if the specified prefix length is less than 64 bits. If the specified prefix length exceeds 64 bits, then the network portion of the address will take precedence over the interface identifier.

- If a duplicate address is detected, a warning message is sent to the console.
- IPv6 addresses are 16 bytes long, of which the bottom 8 bytes typically form a unique host identifier based on the device's MAC address. The EUI-64 specification is designed for devices that use an extended 8-byte MAC address. For devices that still use a 6-byte MAC address (also known as EUI-48 format), it must be converted into EUI-64 format by inverting the universal/local bit in the address and inserting the hexadecimal number FFFE between the upper and lower three bytes of the of the MAC address.
- For example, if a device had an EUI-48 address of 28-9F-18-1C-82-35, the global/local bit must first be inverted to meet EUI-64 requirements (i.e., 1 for globally defined addresses and 0 for locally defined addresses), changing 28 to 2A. Then the two bytes FFFE are inserted between the OUI (i.e., company id) and the rest of the address, resulting in a modified EUI-64 interface identifier of 2A-9F-18-FF-FE-1C-82-35.
- This host addressing method allows the same interface identifier to be used on multiple IP interfaces of a single device, as long as those interfaces are attached to different subnets.

### Example

This example uses the general network prefix of 2001:0DB8:0:1::/64 used in an earlier example, and specifies that the EUI-64 interface identifier be used in the lower 64 bits of the address.

```

Console(config)#interface vlan 1
Console(config-if)#ipv6 address 2001:0DB8:0:1::/64 eui-64
Console(config-if)#end
Console#show ipv6 interface
Vlan 1 is up
IPv6 is enable.
Link-local address:
    FE80::200:E8FF:FE90:0/64
Global unicast address(es):
    2001:DB8::1:200:E8FF:FE90:0, subnet is 2001:DB8:0:1::/64
Joined group address(es):
    FF01::1/16
    FF02::1/16
    FF02::1:FF90:0/104
MTU is 1500 bytes.
ND DAD is enabled, number of DAD attempts: 1.
ND retransmit interval is 1000 milliseconds

```

### Related Commands

ipv6 address autoconfig (36-16)  
show ipv6 interface (36-22)

### ipv6 address link-local

This command configures an IPv6 link-local address for an interface and enables IPv6 on the interface. Use the **no** form without any arguments to remove all manually configured IPv6 addresses from the interface. Use the **no** form with a specific address to remove it from the interface.

### Syntax

**ipv6 address *ipv6-address* link-local**  
**no ipv6 address [*ipv6-address* link-local]**

*ipv6-address* - The IPv6 address assigned to the interface. The address must be formatted according to RFC 2373 “IPv6 Addressing Architecture,” using 8 colon-separated 16-bit hexadecimal values. One double colon may be used in the address to indicate the appropriate number of zeros required to fill the undefined fields. And the address prefix must be FE80.

### Default Setting

No IPv6 addresses are defined

### Command Mode

Interface Configuration (VLAN)

### Command Usage

- The address specified with this command replaces a link-local address that was automatically generated for the interface.
- You can configure multiple IPv6 global unicast addresses per interface, but only one link-local address per interface.
- If a duplicate address is detected, a warning message is sent to the console.

**Example**

This example assigns a link-local address of FE80::269:3EF9:FE19:6779 to VLAN 1. Note that the prefix FE80 is required for link-local addresses, and the first 16-bit group in the host address is padded with a zero in the form 0269.

```
Console(config)#interface vlan 1
Console(config-if)#ipv6 address 2001:0DB8:0:1::/64 eui-64
Console(config-if)#end
Console#show ipv6 interface
Vlan 1 is up
IPv6 is enable.
Link-local address:
    FE80::269:3EF9:FE19:6779/64
Global unicast address(es):
    2001:DB8::1:200:E8FF:FE90:0, subnet is 2001:DB8:0:1::/64
Joined group address(es):
    FF01::1/16
    FF02::1/16
    FF02::1:FE19:6779/104
MTU is 1500 bytes.
ND DAD is enabled, number of DAD attempts: 1.
ND retransmit interval is 1000 milliseconds
Console#
```

**Related Commands**

- ipv6 enable (36-10)
- show ipv6 interface (36-22)

## show ipv6 interface

This command displays the usability and configured settings for IPv6 interfaces.

### Syntax

**show ipv6 interface** [**brief** [**vlan** *vlan-id* [*ipv6-prefix/prefix-length*]]]

- **brief** - Displays a brief summary of IPv6 operational status and the addresses configured for each interface.
- *vlan-id* - VLAN ID (Range: 1-4093)
- *ipv6-prefix* - The IPv6 network portion of the address assigned to the interface. The prefix must be formatted according to RFC 2373 “IPv6 Addressing Architecture,” using 8 colon-separated 16-bit hexadecimal values. One double colon may be used in the address to indicate the appropriate number of zeros required to fill the undefined fields.
- *prefix-length* - A decimal value indicating how many of the contiguous bits (from the left) of the address comprise the prefix (i.e., the network portion of the address).

### Command Mode

Normal Exec, Privileged Exec

### Example

This example displays all the IPv6 addresses configured for the router.

```
Console#show ipv6 interface
Vlan 1 is up
IPv6 is enable.
Link-local address:
  FE80::269:3EF9:FE19:6779/64
Global unicast address(es):
  2009:DB9:2229::79, subnet is 2009:DB9:2229:0::/64
Joined group address(es):
  FF01::1/16
  FF02::1/16
  FF02::1:FF00:79/104
  FF02::1:FF19:6779/104
MTU is 1500 bytes.
ND DAD is enabled, number of DAD attempts: 1.
ND retransmit interval is 1000 milliseconds
Console#
```



**Table 36-3 show ipv6 interface - display description**

Field	Description
VLAN	A VLAN is marked “up” if the router can send and receive packets on this interface, “down” if a line signal is not present, or “administratively down” if the interface has been disabled by the administrator.
IPv6	IPv6 is marked “enable” if the router can send and receive IP traffic on this interface, “disable” if the router cannot send and receive IP traffic on this interface, or “stalled” if a duplicate link-local address is detected on the interface.
Link-local address	Shows the link-local address assigned to this interface
Global unicast address(es)	Shows the global unicast address(es) assigned to this interface
Joined group address(es)	<p>In addition to the unicast addresses assigned to an interface, a node is required to join the all-nodes multicast addresses FF01::1 and FF02::1 for all IPv6 nodes within scope 1 (interface-local) and scope 2 (link-local), respectively.</p> <p>FF01::1/16 is the transient node-local multicast address for all attached IPv6 nodes, and FF02::1/16 is the link-local multicast address for all attached IPv6 nodes. The node-local multicast address is only used for loopback transmission of multicast traffic. Link-local multicast addresses cover the same types as used by link-local unicast addresses, including all nodes (FF02::1), all routers (FF02::2), and solicited nodes (FF02::1:FFXX:XXXX) as described below.</p> <p>A node is also required to compute and join the associated solicited-node multicast addresses for every unicast and anycast address it is assigned. IPv6 addresses that differ only in the high-order bits, e.g. due to multiple high-order prefixes associated with different aggregations, will map to the same solicited-node address, thereby reducing the number of multicast addresses a node must join. In this example, FF02::1:FF90:0/104 is the solicited-node multicast address which is formed by taking the low-order 24 bits of the address and appending those bits to the prefix.</p>
MTU	Maximum transmission unit for this interface.

**Table 36-3 show ipv6 interface - display description** (Continued)

Field	Description
ND DAD	Indicates whether (neighbor discovery) duplicate address detection is enabled.
number of DAD attempts	The number of consecutive neighbor solicitation messages sent on the interface during duplicate address detection.

This example displays a brief summary of IPv6 addresses configured on the router.

```

Console#show ipv6 interface brief
Vlan 1 is up
IPv6 is enable.
  FE01::1
  2009:DB9:2229::79
  FE80::269:3EF9:FE19:6779
  FE02::1
  FF02::1:FF00:79
  FF02::1:FF19:6779
Console#

```

### Related Commands

show ip interface (36-8)

## ipv6 default-gateway

This command sets an IPv6 default gateway to use for destinations with no known next hop. Use the **no** form to remove a previously configured default gateway.

### Syntax

**ipv6 default-gateway** *ipv6-address*

**no ipv6 address**

*ipv6-address* - The IPv6 address of the default next hop router to use when no other routing information is known about an IPv6 address. The address must be formatted according to RFC 2373 “IPv6 Addressing Architecture,” using 8 colon-separated 16-bit hexadecimal values. One double colon may be used in the address to indicate the appropriate number of zeros required to fill the undefined fields.

**Default Setting**

No default gateway is defined

**Command Mode**

Global Configuration

**Command Usage**

- The gateway specified in this command is only valid if routing is disabled with the **no ip routing** command. If IP routing is disabled, you must define a gateway if the target device is located in a different subnet.
- If routing is enabled, you can still define a static route using the **ip route** command (page 37-3) to ensure that traffic to the designated address or subnet passes through a preferred gateway.
- An IPv6 default gateway can only be successfully set when a network interface that directly connects to the gateway has been configured on the router.

**Example**

The following example defines a default gateway for this device:

```
Console(config)#ipv6 default-gateway FE80::269:3EF9:FE19:6780
Console(config)#
```

**Related Commands**

show ipv6 default-gateway (36-25)  
ip default-gateway (36-6)

**show ipv6 default-gateway**

This command displays the current IPv6 default gateway.

**Command Mode**

Normal Exec, Privileged Exec

**Example**

The following shows the default gateway configured for this device:

```
Console#show ipv6 default-gateway
ipv6 default gateway: FE80::269:3EF9:FE19:6780
Console#
```

### Related Commands

show ip redirects (36-8)

## ipv6 mtu

This command sets the size of the maximum transmission unit (MTU) for IPv6 packets sent on an interface. Use the **no** form to restore the default setting.

### Syntax

**ipv6 mtu** *size*

**no ipv6 mtu**

*size* - Specifies the MTU size. (Range: 1280-65535 bytes)

### Default Setting

1500 bytes

### Command Mode

Interface Configuration (VLAN)

### Command Usage

- If a non-default value is configured, an MTU option is included in the router advertisements sent from this device. This option is provided to ensure that all nodes on a link use the same MTU value in cases where the link MTU is not otherwise well known.
- IPv6 routers do not fragment IPv6 packets forwarded from other routers. However, traffic originating from an end-station connected to an IPv6 router may be fragmented.
- All devices on the same physical medium must use the same MTU in order to operate correctly.
- IPv6 must be enabled on an interface before the MTU can be set.

### Example

The following example sets the MTU for VLAN 1 to 1280 bytes:

```
Console(config)#interface vlan 1
Console(config-if)#ipv6 mtu 1280
Console(config-if)#
```

**Related Commands**

show ipv6 mtu (36-27)  
jumbo frame (20-11)

**show ipv6 mtu**

This command displays the maximum transmission unit (MTU) cache for destinations that have returned an ICMP packet-too-big message along with an acceptable MTU to this router.

**Command Mode**

Normal Exec, Privileged Exec

**Example**

The following example shows the MTU cache for this device:

```
Console#show ipv6 mtu
MTU      Since    Destination Address
1400     00:04:21  5000:1::3
1280     00:04:50  FE80::203:A0FF:FED6:141D
Console#
```

**Table 36-4 show ipv6 mtu - display description**

Field	Description
MTU	Adjusted MTU contained in the ICMP packet-too-big message returned from this destination, and now used for all traffic sent along this path.
Since	Time since an ICMP packet-too-big message was received from this destination.
Destination Address	Address which sent an ICMP packet-too-big message.

**show ipv6 traffic**

This command displays statistics about IPv6 traffic passing through this router.

**Command Mode**

Normal Exec, Privileged Exec

**Example**

The following example shows statistics for all IPv6 unicast and multicast traffic, as well as ICMP, UDP and TCP statistics:

```
Console#show ipv6 traffic
IPv6 Statistics:
IPv6 rcvd
    rcvd total                1432
    source routed              0
    truncated                  0
    format errors              0
    hop count exceeded         0
    unknown protocol           0
    not a router                0
    fragments                  0
    total reassembled          0
    reassembly timeouts        0
    reassembly failures        0
IPv6 sent
    sent generated             1435
    forwarded                   0
    fragmented                  0
    generated fragments        0
    Fragmented failed          0
    encapsulation failed       0
    no route                    0
    too big                     0
IPv6 mcast
    mcast received             0
    mcast sent                  2
ICMP Statistics:
IPv6 icmp input
    input                       1
    checksum errors             0
    too short                   0
    unknown info type           0
    unknown error type          0
    unreachable routing         0
    unreachable admin           0
    unreachable neighbor        0
    unreachable address         0
    unreachable port            1
    Parameter error              0
    Parameter header             0
    Parameter option             0
    hopcount expired            0
    reassembly timeout          0
    too big                     0
    echo request                 0
    echo reply                   0
    group query                  0
    group report                 0
    group reduce                 0
```

router solicit	0
router advert	0
redirects	0
neighbor solicit	0
neighbor advert	0
Ipv6 icmp output	
sent output	6
unreach routing	0
unreach admin	0
unreach neighbor	0
unreach address	0
unreach port	1
parameter error	0
parameter header	0
parameter option	0
hopcount expired	0
Reassembly timeout	0
too big	0
echo request	0
echo reply	0
group query	0
group report	1
group reduce	0
router solicit	0
router advert	0
redirects	0
neighbor solicit	1
neighbor advert	0
UDP Statistics:	
input	1
checksum errors	0
length errors	0
no port	1
dropped	0
output	1
TCP Statistics:	
input	1911
checksum errors	0
output	4339
retransmitted	0
Console#	

Table 36-5 show ipv6 traffic - display description

Field	Description
<b>IPv6 Statistics</b>	
<i>Ipv6 rcvd</i>	
rcvd total	The total number of input datagrams received by the interface, including those received in error.
source routed	The number of source-routed packets.

**Table 36-5 show ipv6 traffic - display description** (Continued)

Field	Description
truncated	The number of input datagrams discarded because the datagram frame did not carry enough data.
format errors	The number of input datagrams discarded due to errors in their IPv6 headers, including version number mismatches, other format errors, hop count exceeded, errors discovered in processing their IPv6 options, etc.
hop count exceeded	Number of packets discarded because its time-to-live (TTL) field was decremented to zero.
unknown protocol	The number of locally-addressed datagrams received successfully but discarded because of an unknown or unsupported protocol. This counter is incremented at the interface to which these datagrams were addressed which might not be necessarily the input interface for some of the datagrams.
not a router	The number of input datagrams discarded because the IPv6 address in their IPv6 header's destination field was not a valid address to be received at this entity. This count includes invalid addresses (e.g., ::0) and unsupported addresses (e.g., addresses with unallocated prefixes). For entities which are not IPv6 routers and therefore do not forward datagrams, this counter includes datagrams discarded because the destination address was not a local address.
fragments	The number of IPv6 fragments received which needed to be reassembled at this interface. Note that this counter is incremented at the interface to which these fragments were addressed which might not be necessarily the input interface for some of the fragments.
total reassembled	The number of IPv6 datagrams successfully reassembled. Note that this counter is incremented at the interface to which these datagrams were addressed which might not be necessarily the input interface for some of the fragments.
reassembly timeouts	The number of times the reassembly of a packet timed out.



**Table 36-5 show ipv6 traffic - display description** (Continued)

Field	Description
reassemble failures	The number of failures detected by the IPv6 re-assembly algorithm (for whatever reason: timed out, errors, etc.). Note that this is not necessarily a count of discarded IPv6 fragments since some algorithms (notably the algorithm in RFC 815) can lose track of the number of fragments by combining them as they are received. This counter is incremented at the interface to which these fragments were addressed which might not be necessarily the input interface for some of the fragments.
<i>Ipv6 sent</i>	
sent generated	The total number of IPv6 datagrams which local IPv6 user-protocols (including ICMP) supplied to IPv6 in requests for transmission. Note that this counter does not include any datagrams counted in <code>ipv6IfStatsOutForwDatagrams</code> .
forwarded	The number of output datagrams which this entity received and forwarded to their final destinations. In entities which do not act as IPv6 routers, this counter will include only those packets which were Source-Routed via this entity, and the Source-Route processing was successful. Note that for a successfully forwarded datagram, the counter of the outgoing interface is incremented.
fragmented	The number of IPv6 datagrams that have been successfully fragmented at this output interface.
generated fragments	The number of output datagram fragments that have been generated as a result of fragmentation at this output interface.
fragmented failed	The number of IPv6 datagrams that have been discarded because they needed to be fragmented at this output interface but could not be.
encapsulation failed	Failure that can result from an unresolved address or failure to queue a packet.
no route	The number of input datagrams discarded because no route could be found to transmit them to their destination.
too big	The number of input datagrams that could not be forwarded because their size exceeded the link MTU of the outgoing interface.

**Table 36-5 show ipv6 traffic - display description** (Continued)

Field	Description
<i>Ipv6 mcast</i>	
mcast received	The number of multicast packets received by the interface.
mcast sent	The number of multicast packets transmitted by the interface.
<b>ICMP Statistics</b>	
<i>Ipv6 icmp input</i>	
input	The total number of ICMP messages received by the interface which includes all those counted by ipv6IfIcmpInErrors. Note that this interface is the interface to which the ICMP messages were addressed which may not be necessarily the input interface for the messages.
checksum errors	The number of ICMP messages which the interface received but determined as having ICMP-specific errors (bad ICMP checksums, bad length, etc.).
too short	Packet length is too short.
unknown info type	ICMPv6 information message not defined in the standards.
unknown error type	ICMPv6 error message not defined in the standards.
unreach routing	The number of times no route was found to the destination.
unreach admin	The number of ICMP destination unreachable/communication administratively prohibited messages received by the interface.
unreach neighbor	Indicates that the destination is beyond the scope of the source address. For example, the source may be a local site or the destination may not have a route back to the source.
unreach address	The number of times that an address is unreachable.
unreach port	The number of times that a port is unreachable.
parameter error	The number of ICMP Parameter Problem messages received by the interface.
parameter header	The number of Receive ICMP parameter problem messages caused by an unrecognized header error.
parameter option	The number of Receive ICMP parameter problem messages caused by an unrecognized option error.

**Table 36-5 show ipv6 traffic - display description** (Continued)

Field	Description
hopcount expired	The number of Receive ICMP parameter problem messages caused by the hop limit being exceeded in transit.
reassembly timeout	The number of Receive ICMP parameter problem messages caused by the fragment reassembly time being exceeded.
too big	The number of ICMP Packet Too Big messages received by the interface.
echo request	The number of ICMP Echo (request) messages received by the interface.
echo reply	The number of ICMP Echo Reply messages received by the interface.
group query	The number of ICMPv6 Group Membership Query messages received by the interface.
group report	The number of ICMPv6 Group Membership Response messages received by the interface.
group reduce	The number of ICMPv6 Group Membership Reduction messages received by the interface.
router solicit	The number of ICMP Router Solicit messages received by the interface.
router advert	The number of ICMP Router Advertisement messages received by the interface.
redirects	The number of Redirect messages received.
neighbor solicit	The number of ICMP Neighbor Solicitation messages received by the interface.
neighbor advert	The number of ICMP Neighbor Advertisement messages received by the interface.
<i>Ipv6 icmp output</i>	
sent output	The total number of ICMP messages which this interface attempted to send. Note that this counter includes all those counted by icmpOutErrors.
unreach routing	The number of times no route was found to the destination.
unreach admin	The number of ICMP destination unreachable/communication administratively prohibited messages sent by the interface.

**Table 36-5 show ipv6 traffic - display description** (Continued)

Field	Description
unreach neighbor	Indicates that the destination is beyond the scope of the source address. For example, the source may be a local site or the destination may not have a route back to the source.
unreach address	The number of times that an address is unreachable.
unreach port	The number of times that a port is unreachable.
parameter error	The number of ICMP Parameter Problem messages sent by the interface.
parameter header	The number of Send ICMP parameter problem messages caused by an unrecognized header error.
parameter option	The number of Send ICMP parameter problem messages caused by an unrecognized option error.
hopcount expired	The number of Send ICMP parameter problem messages caused by the hop limit being exceeded in transit.
reassembly timeout	The number of Send ICMP parameter problem messages caused by the fragment reassembly time being exceeded.
too big	The number of ICMP Packet Too Big messages sent by the interface.
echo request	The number of ICMP Echo (request) messages sent by the interface.
echo reply	The number of ICMP Echo Reply messages sent by the interface.
group query	The number of ICMPv6 Group Membership Query messages sent.
group report	The number of ICMPv6 Group Membership Response messages sent.
group reduce	The number of ICMPv6 Group Membership Reduction messages sent.
router solicit	The number of ICMP Router Solicitation messages sent by the interface.
router advert	The number of ICMP Router Advertisement messages sent by the interface.
redirects	The number of Redirect messages sent. For a host, this object will always be zero, since hosts do not send redirects.

**Table 36-5 show ipv6 traffic - display description** (Continued)

Field	Description
neighbor solicit	The number of ICMP Neighbor Solicitation messages sent by the interface.
neighbor advert	The number of ICMP Neighbor Advertisement messages sent by the interface.
<b>UDP Statistics</b>	
input	The total number of UDP datagrams delivered to UDP users.
checksum errors	The total number of UDP packet checksum errors.
length errors	The total number of UDP header length errors.
no port	The total number of received UDP datagrams for which there was no application at the destination port.
dropped	The number of times the system encounter an error when trying to queue the received packet.
output	The total number of UDP datagrams sent from this entity.
<b>TCP Statistics</b>	
input	The total number of segments received, including those received in error. This count includes segments received on currently established connections.
checksum errors	The total number of TCP packet checksum errors.
output	The total number of segments sent, including those on current connections but excluding those containing only retransmitted octets.
retransmitted	The total number of segments retransmitted - that is, the number of TCP segments transmitted containing one or more previously transmitted octets.

## clear ipv6 traffic

This command resets IPv6 traffic counters.

### Command Mode

Privileged Exec

### Command Usage

This command resets all of the counters displayed by the **show ipv6 traffic** command.

### Example

```
Console#clear ipv6 traffic
Console#
```

### ping ipv6

This command sends ICMP echo request packets to an IPv6 node on the network.

**ping ipv6 address** {*ipv6-address* | *host-name*} [**size** *datagram-size* | **repeat** *repeat-count* | **data** *hex-data-pattern* | **source** *source-address* | **timeout** *seconds* | **verbose**]

- *ipv6-address* - The IPv6 address of the device to ping. The address must be formatted according to RFC 2373 “IPv6 Addressing Architecture,” using 8 colon-separated 16-bit hexadecimal values. One double colon may be used in the address to indicate the appropriate number of zeros required to fill the undefined fields.
- *host-name* - The name the IPv6 device to ping. A host name can be resolved into an IPv6 address using DNS.
- *datagram-size* - Specifies the size of the datagram to send in each ping. (Range: 48 - 18024 bytes)
- *repeat-count* - The number of pings to send. (Range: 1 - 2147483647)
- *hex-data-pattern* - The data pattern to send. (Range: 0 - FFFF)
- *source-address* - The source address or name to include in the ping. This is normally set to an address assigned to the interface sending the ping.
- *seconds* - The timeout interval. (Range: 0 to 3600 seconds)
- **verbose** - Displays detailed output.

### Default Setting

*repeat* - 5

*timeout* - 2 seconds

### Command Mode

Normal Exec - The only command options are *count* and *size*.

Privileged Exec - All command options are available.

## Command Usage

- Ping sends an echo request to the specified address, and waits for a reply. Ping output can help determine path reliability, path delays, and if the host is reachable or functioning.
- If the system cannot map an address for a host name, it returns the message “Can not get address information for host,” or “protocol not running.”
- To terminate a ping session, type the escape sequence Ctrl-X.
- Using a timeout of zero seconds generates a flood ping, resulting in replies that are received only from immediately adjacent routers (depending on the utilization on the both the target and intermediate devices), the distance to the remote device, and other factors.
- Not all protocols require hosts to support pings. For some protocols, only another switch or router of the same type may respond to ping requests.
- Use the IPv4 **ping** command (page 36-9) for addresses that resolve to IPv4.

## Example

```
Console# ping ipv6 2001:0DB8::3/64 repeat 5

Which outside interface [1]:1
Type ESC to abort.
Sending 5, [100]-byte ICMP Echos to 2009:DB9:2229::80, timeout is 2
seconds.
!!!!!!
Success rate is 100 percent
round-trip min/max/avg = 10/30/14.000000 ms
Console#
```

## Related Commands

ping (36-9)

### ipv6 neighbor

This command configures a static entry in the IPv6 neighbor discovery cache. Use the **no** form to remove a static entry from the cache.

#### Syntax

**ipv6 neighbor** *ipv6-address* **vlan** *vlan-id* *hardware-address*  
**no ipv6 mtu**

- *ipv6-address* - The IPv6 address of a neighbor device that can be reached through one of the network interfaces configured on this router. You can specify either a link-local or global unicast address formatted according to RFC 2373 “IPv6 Addressing Architecture,” using 8 colon-separated 16-bit hexadecimal values. One double colon may be used in the address to indicate the appropriate number of zeros required to fill the undefined fields.
- *vlan-id* - VLAN ID (Range: 1-4093)
- *hardware-address* - The 48-bit MAC layer address for the neighbor device. This address must be formatted as six hexadecimal pairs separated by hyphens.

#### Default Setting

None

#### Command Mode

Global Configuration

#### Command Usage

- Address Resolution Protocol (ARP) has been replaced in IPv6 with the Neighbor Discovery Protocol (NDP). The **ipv6 neighbor** command is similar to the **mac-address-table static** command (page 28-2) that is implemented using ARP.
- Static entries can only be configured on an IPv6-enabled interface.
- The router does not determine whether a static entry is reachable before placing it in the IPv6 neighbor discovery cache.
- If the specified entry was dynamically learned through the IPv6 neighbor discovery process, and already exists in the neighbor discovery cache, it is converted to a static entry. Static entries in the



IPv6 neighbor discovery cache are not modified if subsequently detected by the neighbor discovery process.

- Disabling IPv6 on an interface with the **no ipv6 enable** command (see page 36-10) deletes all dynamically learned entries in the IPv6 neighbor discovery cache for that interface, but does not delete static entries.

### Example

The following maps a static entry for global unicast address to a MAC address:

```

Console(config)#ipv6 neighbor 2009:DB9:2229::81 vlan 1 30-65-14-01-11-86
Console(config)#end
Console#show ipv6 neighbors
IPv6 Address      Age      Link-layer Addr  State  Vlan
2009:DB9:2229::80  956      12-34-11-11-43-21 STALE  1
2009:DB9:2229::81  Permanent 30-65-14-01-11-86 REACH  1
FE80::1034:11FF:FE11:4321 961      12-34-11-11-43-21 STALE  1
Console#

```

### Related Commands

- show ipv6 neighbors (36-43)
- mac-address-table static (28-2)

## ipv6 nd dad attempts

This command configures the number of consecutive neighbor solicitation messages sent on an interface during duplicate address detection. Use the **no** form to restore the default setting.

### Syntax

**ipv6 nd dad attempts** *count*  
**no ipv6 nd dad attempts**

*count* - The number of neighbor solicitation messages sent to determine whether or not a duplicate address exists on this interface. (Range: 0-600)

### Default Setting

1

### **Command Mode**

Interface Configuration (VLAN)

### **Command Usage**

- Configuring a value of 0 disables duplicate address detection.
- Duplicate address detection determines if a new unicast IPv6 address already exists on the network before it is assigned to an interface.
- Duplicate address detection is stopped on any interface that has been suspended (see the **vlan** command on page 30-8). While an interface is suspended, all unicast IPv6 addresses assigned to that interface are placed in a “pending” state. Duplicate address detection is automatically restarted when the interface is administratively re-activated.
- An interface that is re-activated restarts duplicate address detection for all unicast IPv6 addresses on the interface. While duplicate address detection is performed on the interface’s link-local address, the other IPv6 addresses remain in a “tentative” state. If no duplicate link-local address is found, duplicate address detection is started for the remaining IPv6 addresses.
- If a duplicate address is detected, it is set to “duplicate” state, and a warning message is sent to the console. If a duplicate link-local address is detected, IPv6 processes are disabled on the interface. If a duplicate global unicast address is detected, it is not used. All configuration commands associated with a duplicate address remain configured while the address is in “duplicate” state.
- If the link-local address for an interface is changed, duplicate address detection is performed on the new link-local address, but not for any of the IPv6 global unicast addresses already associated with the interface.

### Example

The following configures five neighbor solicitation attempts for addresses configured on VLAN 1. The **show ipv6 interface** command indicates that the duplicate address detection process is still on-going.

```

Console(config)#interface vlan 1
Console(config-if)#ipv6 nd dad attempts 5
Console(config-if)#end
Console#show ipv6 interface
Vlan 1 is up
IPv6 is stalled.
Link-local address:
  FE80::200:E8FF:FE90:0/64 [TENTATIVE]
Global unicast address(es):
  2009:DB9:2229::79, subnet is 2009:DB9:2229:0::/64 [TENTATIVE]
Joined group address(es):
  FF01::1/16
  FF02::1/16
  FF02::1:FF00:79/104
  FF02::1:FF90:0/104
MTU is 1500 bytes.
ND DAD is enabled, number of DAD attempts: 5.
ND retransmit interval is 1000 milliseconds
Console#

```

### Related Commands

ipv6 nd ns interval (36-41)  
show ipv6 neighbors (36-43)

## ipv6 nd ns interval

This command configures the interval between transmitting IPv6 neighbor solicitation messages on an interface. Use the **no** form to restore the default value.

### Syntax

**ipv6 nd ns-interval** *milliseconds*  
**no ipv6 nd ns-interval**

*milliseconds* - The interval between transmitting IPv6 neighbor solicitation messages. (Range: 1000-3600000)

### Default Setting

- 1000 milliseconds is used for neighbor discovery operations
- 0 milliseconds is advertised in router advertisements

### Command Mode

Interface Configuration (VLAN)

### Command Usage

- When a non-default value is configured, the specified interval is used both for router advertisements and by the router itself.
- This command specifies the interval between transmitting neighbor solicitation messages when resolving an address, or when probing the reachability of a neighbor. Therefore, avoid using very short intervals for normal IPv6 operations.

### Example

The following sets the interval between sending neighbor solicitation messages to 30000 milliseconds:

```
Console(config)#interface vlan 1
Console(config)#ipv6 nd ns-interval 30000
Console(config)#end
Console#show ipv6 interface
Vlan 1 is up
IPv6 is enable.
Link-local address:
  FE80::200:E8FF:FE90:0/64
Global unicast address(es):
  2009:DB9:2229::79, subnet is 2009:DB9:2229:0::/64
Joined group address(es):
  FF01::1/16
  FF02::1/16
  FF02::1:FF00:79/104
  FF02::1:FF90:0/104
MTU is 1500 bytes.
ND DAD is enabled, number of DAD attempts: 5.
ND retransmit interval is 1000 milliseconds
ND router advertisements are sent every 200 seconds
Console#
```

### Related Commands

show running-config (20-6)

## show ipv6 neighbors

This command displays information in the IPv6 neighbor discovery cache.

### Syntax

**show ipv6 neighbors** [**vlan** *vlan-id* | *ipv6-address*]

- *vlan-id* - VLAN ID (Range: 1-4093)
- *ipv6-address* - The IPv6 address of a neighbor device. You can specify either a link-local or global unicast address formatted according to RFC 2373 “IPv6 Addressing Architecture,” using 8 colon-separated 16-bit hexadecimal values. One double colon may be used in the address to indicate the appropriate number of zeros required to fill the undefined fields.

### Default Setting

All IPv6 neighbor discovery cache entries are displayed.

### Command Mode

- Normal Exec - No command options are available.
- Privileged Exec - All command options are available.

### Example

The following shows all known IPv6 neighbors for this router:

Console#show ipv6 neighbors				
IPv6 Address	Age	Link-layer Addr	State	Vlan
2009:DB9:2229::79	666	00-00-E8-90-00-00	STALE	1
FE80::200:E8FF:FE90:0	671	00-00-E8-90-00-00	STALE	1
Console#				

**Table 36-6 show ipv6 neighbors - display description**

Field	Description
IPv6 Address	IPv6 address of neighbor
Age	The time since the address was verified as reachable (in minutes). A static entry is indicated by the value “Permanent.”
Link-layer Addr	Physical layer MAC address.

**Table 36-6 show ipv6 neighbors - display description**

Field	Description
State	<p>The following states are used for dynamic entries:</p> <ul style="list-style-type: none"> <li>• INCOMPLETE (Incomplete) - Address resolution is being carried out on the entry. A neighbor solicitation message has been sent to the multicast address of the target, but it has not yet returned a neighbor advertisement message.</li> <li>• REACH (Reachable) - Positive confirmation was received within the last ReachableTime interval that the forward path to the neighbor was functioning. While in REACH state, the device takes no special action when sending packets.</li> <li>• STALE - More than the ReachableTime interval has elapsed since the last positive confirmation was received that the forward path was functioning. While in STALE state, the device takes no action until a packet is sent.</li> <li>• DELAY - More than the ReachableTime interval has elapsed since the last positive confirmation was received that the forward path was functioning. A packet was sent within the last DELAY_FIRST_PROBE_TIME interval. If no reachability confirmation is received within this interval after entering the DELAY state, the router will send a neighbor solicitation message and change the state to PROBE.</li> <li>• PROBE - A reachability confirmation is actively sought by resending neighbor solicitation messages every RetransTimer interval until confirmation of reachability is received.</li> <li>• ??? - Unknown state.</li> </ul> <p>The following states are used for static entries:</p> <ul style="list-style-type: none"> <li>• INCOMPLETE (Incomplete)-The interface for this entry is down.</li> <li>• REACH (Reachable) - The interface for this entry is up. Reachability detection is not applied to static entries in the IPv6 neighbor discovery cache.</li> </ul>
VLAN	VLAN interface from which the address was reached.

**Related Commands**

show mac-address-table (28-4)

**clear ipv6 neighbors**

This command deletes all dynamic entries in the IPv6 neighbor discovery cache.

**Command Mode**

Privileged Exec

**Example**

The following deletes all dynamic entries in the IPv6 neighbor cache:

```
Console#clear ipv6 neighbors
Console#
```

**Address Resolution Protocol (ARP)****Table 36-7 Address Resolution Protocol Commands**

Command	Function	Mode	Page
arp	Adds a static entry in the ARP cache	GC	36-45
arp-timeout	Sets the time a dynamic entry remains in the ARP cache	GC	36-46
clear arp-cache	Deletes all dynamic entries from the ARP cache	PE	36-47
show arp	Displays entries in the ARP cache	NE, PE	36-47
ip proxy-arp	Enables proxy ARP service	VC	36-48

**arp**

This command adds a static entry in the Address Resolution Protocol (ARP) cache. Use the **no** form to remove an entry from the cache.

**Syntax**

**arp** *ip-address hardware-address*

**no arp** *ip-address*

- *ip-address* - IP address to map to a specified hardware address.
- *hardware-address* - Hardware address to map to a specified IP address.  
(The format for this address is xx-xx-xx-xx-xx-xx.)

### Default Setting

No default entries

### Command Mode

Global Configuration

### Command Usage

- The ARP cache is used to map 32-bit IP addresses into 48-bit hardware (i.e., Media Access Control) addresses. This cache includes entries for hosts and other routers on local network interfaces defined on this router.
- The maximum number of static entries allowed in the ARP cache is 128.
- You may need to enter a static entry in the cache if there is no response to an ARP broadcast message. For example, some applications may not respond to ARP requests or the response arrives too late, causing network operations to time out.

### Example

```
Console(config)#arp 10.1.0.19 01-02-03-04-05-06
Console(config)#
```

### Related Commands

```
clear arp-cache
show arp
```

## arp-timeout

This command sets the aging time for dynamic entries in the Address Resolution Protocol (ARP) cache. Use the **no** form to restore the default.

### Syntax

```
arp-timeout seconds
no arp-timeout
```

*seconds* - The time a dynamic entry remains in the ARP cache.  
(Range: 300-86400; 86400 is one day)



### **Default Setting**

1200 seconds (20 minutes)

### **Command Mode**

Global Configuration

### **Command Usage**

Use the **show arp** command to display the current cache timeout value.

### **Example**

This example sets the ARP cache timeout for 15 minutes (i.e., 900 seconds).

```
Console(config)#arp-timeout 900
Console(config)#
```

## **clear arp-cache**

This command deletes all dynamic entries from the Address Resolution Protocol (ARP) cache.

### **Command Mode**

Privileged Exec

### **Example**

This example clears all dynamic entries in the ARP cache.

```
Console#clear arp-cache
This operation will delete all the dynamic entries in ARP Cache.
Are you sure to continue this operation (y/n)?y
Console#
```

## **show arp**

Use this command to display entries in the Address Resolution Protocol (ARP) cache.

### **Command Mode**

Normal Exec, Privileged Exec

### Command Usage

This command displays information about the ARP cache. The first line shows the cache timeout. It also shows each cache entry, including the corresponding IP address, MAC address, type (static, dynamic, other), and VLAN interface. Note that entry type “other” indicates local addresses for this router.

### Example

This example displays all entries in the ARP cache.

Console#show arp			
Arp cache timeout: 1200 (seconds)			
IP Address	MAC Address	Type	Interface
-----	-----	-----	-----
10.1.0.0	ff-ff-ff-ff-ff-ff	other	1
10.1.0.254	00-00-ab-cd-00-00	other	1
10.1.0.255	ff-ff-ff-ff-ff-ff	other	1
123.20.10.123	02-10-20-30-40-50	static	2
345.30.20.23	09-50-40-30-20-10	dynamic	3
Total entry : 5			
Console#			

## ip proxy-arp

This command enables proxy Address Resolution Protocol (ARP). Use the **no** form to disable proxy ARP.

### Syntax

[no] ip proxy-arp

### Default Setting

Disabled

### Command Mode

Interface Configuration (VLAN)

### Command Usage

Proxy ARP allows a non-routing device to determine the MAC address of a host on another subnet or network.

### **Example**

```
Console(config)#interface vlan 3
Console(config-if)#ip proxy-arp
Console(config-if)#
```



# CHAPTER 37

## IP ROUTING COMMANDS

---

After you configure network interfaces for this router, you must set the paths used to send traffic between different interfaces. If you enable routing on this device, traffic will automatically be forwarded between all of the local subnetworks. However, to forward traffic to devices on other subnetworks, you can either configure fixed paths with static routing commands, or enable a dynamic routing protocol that exchanges information with other routers on the network to automatically determine the best path to any subnetwork.

This section includes commands for both static and dynamic routing. These commands are used to connect between different local subnetworks or to connect the router to the enterprise network.

**Table 37-1 IP Routing Commands**

Command Group	Function	Page
Global Routing Configuration	Configures global parameters for static and dynamic routing, displays the routing table, and statistics for protocols used to exchange routing information	37-2
Routing Information Protocol (RIP)	Configures global and interface specific parameters for RIP	37-8

## Global Routing Configuration

**Table 37-2 Global Routing Configuration Commands**

Command	Function	Mode	Page
ip routing	Enables static and dynamic IP routing	GC	37-2
ip route	Configures static routes	GC	37-3
clear ip route	Deletes specified entries from the routing table	PE	37-4
show ip route	Displays specified entries in the routing table	PE	37-5
show ip host-route	Displays displays the interface associated with known routes	PE	37-6
show ip traffic	Displays statistics for IP, ICMP, UDP, TCP and ARP protocols	PE	37-7

### ip routing

This command enables IP routing. Use the **no** form to disable IP routing.

#### Syntax

[no] ip routing

#### Default Setting

Enabled

#### Command Mode

Global Configuration

#### Command Usage

- The command affects both static and dynamic unicast routing.
- If IP routing is enabled, all IP packets are routed using either static routing or dynamic routing via RIP or OSPF, and other packets for all non-IP protocols (e.g., NetBuei, NetWare or AppleTalk) are switched based on MAC addresses. If IP routing is disabled, all packets are switched, with filtering and forwarding decisions based strictly on MAC addresses.

**Example**

```
Console(config)#ip routing
Console(config)#
```

**ip route**

This command configures static routes. Use the **no** form to remove static routes.

**Syntax**

```
ip route {destination-ip netmask | default} {gateway} [metric metric]
no ip route {destination-ip netmask | default | *}
```

- *destination-ip* – IP address of the destination network, subnetwork, or host.
- *netmask* – Network mask for the associated IP subnet. This mask identifies the host address bits used for routing to specific subnets.
- **default** – Sets this entry as the default route.
- *gateway* – IP address of the gateway used for this route.
- *metric* – Selected RIP cost for this interface. (Range: 1-5, default: 1)
- **\*** – Removes all static routing table entries.

**Default Setting**

No static routes are configured.

**Command Mode**

Global Configuration

**Command Usage**

- You can configure up to 256 static routes.
- If both static and dynamic paths have the same lowest cost, the static paths will take precedence over the dynamic paths.
- Static routes are included in RIP updates periodically sent by the router if this feature is has been enabled by the **redistribute** command (see page 37-15).

### Example

This example forwards all traffic for subnet 192.168.1.0 to the router 192.168.5.254, using the default metric of 1.

```
Console(config)#ip route 192.168.1.0 255.255.255.0 192.168.5.254
Console(config)#
```

### clear ip route

This command removes dynamically learned entries from the IP routing table.

#### Syntax

**clear ip route** {*network* [*netmask*] | \*}

- *network* – Network or subnet address.
- *netmask* - Network mask for the associated IP subnet. This mask identifies the host address bits used for routing to specific subnets.
- \* – Removes all dynamic routing table entries.

#### Command Mode

Privileged Exec

#### Command Usage

- This command only clears dynamically learned routes.
- Use the **no ip address** command to remove a local interface.
- Use the **no ip route** command to remove a static route.

### Example

```
Console#clear ip route 10.1.5.0
Console#
```



## show ip route

This command displays information in the IP routing table.

### Syntax

**show ip route** [**config** | *address* [*netmask*]]

- **config** – Displays all static routing entries.
- *address* – IP address of the destination network, subnetwork or host for which routing information is to be displayed.
- *netmask* - Network mask for the associated IP subnet. This mask identifies the host address bits used for routing to specific subnets.

### Command Mode

Privileged Exec

### Command Usage

If the *address* is specified without the *netmask* parameter, the router displays all routes for the corresponding natural class address (page 37-12).

### Example

Console#show ip route						
Ip Address	Netmask	Next Hop	Protocol	Metric	Interface	
0.0.0.0	0.0.0.0	10.2.48.102	static	0	1	
10.2.48.2	255.255.252.0	10.2.48.16	local	0	1	
10.2.5.6	255.255.255.0	10.2.8.12	RIP	1	2	
10.3.9.1	255.255.255.0	10.2.9.254	OSPF-intra	2	3	
Total entry: 4						
Console#						

**Table 37-3 show ip route - display description**

Field	Description
Ip Address	IP address of the destination network, subnetwork, or host. Note that the address 0.0.0.0 indicates the default gateway for this router.
Netmask	Network mask for the associated IP subnet.
Next Hop	IP address of the next hop (or gateway) used for this route.
Protocol	The protocol which generated this route information. (Values: static, local, RIP, OSPF)

**Table 37-3 show ip route - display description** (Continued)

Field	Description
Metric	Cost for this interface.
Interface	VLAN interface through which this address can be reached.

**show ip host-route**

This command displays the interface associated with known routes.

**Command Mode**

Privileged Exec

**Example**

Console#show ip host-route				
Total count: 0				
IP address		Mac address	VLAN	Port
-----		-----	-----	-----
192.168. 1.250		00-00-30-01-01-01	3	1/ 1
10. 2. 48. 2		00-00-30-01-01-02	1	1/ 1
10. 2. 5. 6		00-00-30-01-01-03	1	1/ 2
10. 3. 9. 1		00-00-30-01-01-04	2	1/ 3
Console#				

**Table 37-4 show ip host-route - display description**

Field	Description
Ip address	IP address of the destination network, subnetwork, or host.
Mac address	The physical layer address associated with the IP address.
VLAN	The VLAN that connects to this IP address.
Port	The port that connects to this IP address.

**show ip traffic**

This command displays statistics for IP, ICMP, UDP, TCP and ARP protocols.

**Command Mode**

Privileged Exec

**Command Usage**

For a description of the information shown by this command, see “Displaying Statistics for IP Protocols” on page 4-242.

**Example**

```

Console#show ip traffic
IP statistics:
  Rcvd:  5 total, 5 local destination
         0 checksum errors
         0 unknown protocol, 0 not a gateway
  Frags: 0 reassembled, 0 timeouts
         0 fragmented, 0 couldn't fragment
  Sent:  9 generated
         0 no route
ICMP statistics:
  Rcvd: 0 checksum errors, 0 redirects, 0 unreachable, 0 echo
        5 echo reply, 0 mask requests, 0 mask replies, 0 quench
        0 parameter, 0 timestamp
  Sent: 0 redirects, 0 unreachable, 0 echo, 0 echo reply
        0 mask requests, 0 mask replies, 0 quench, 0 timestamp
        0 time exceeded, 0 parameter problem
UDP statistics:
  Rcvd: 0 total, 0 checksum errors, 0 no port
  Sent: 0 total
TCP statistics:
  Rcvd: 0 total, 0 checksum errors
  Sent: 0 total
ARP statistics:
  Rcvd: 0 requests, 1 replies
  Sent: 1 requests, 0 replies
Console#

```

## Routing Information Protocol (RIP)

**Table 37-5 Routing Information Protocol Commands**

Command	Function	Mode	Page
router rip	Enables the RIP routing protocol	GC	37-9
default-metric	Sets the default metric assigned to external routes imported from other protocols	RC	37-9
timers basic	Sets basic timers, including update, timeout, garbage collection	RC	37-11
network	Specifies the network interfaces that are to use RIP routing	RC	37-12
neighbor	Defines a neighboring router with which to exchange information	RC	37-13
version	Specifies the RIP version to use on all network interfaces (if not already specified with a receive version or send version command)	RC	37-15
redistribute	Redistribute routes from one routing domain to another	RC	37-15
ip rip receive version	Sets the RIP receive version to use on a network interface	IC	37-16
ip rip send version	Sets the RIP send version to use on a network interface	IC	37-17
ip split-horizon	Enables split-horizon or poison-reverse loop prevention	IC	37-19
ip rip authentication key	Enables authentication for RIP2 packets and specifies keys	IC	37-20
ip rip authentication mode	Specifies the type of authentication used for RIP2 packets	IC	37-21
show rip globals	Displays global configuration settings and statistics for RIP	PE	37-22
show ip rip	Displays RIP configuration information for each network interface	PE	37-22

## router rip

This command enables Routing Information Protocol (RIP) routing for all IP interfaces on the router. Use the **no** form to disable it.

### Syntax

[no] **router rip**

### Command Mode

Global Configuration

### Default Setting

Disabled

### Command Usage

- RIP is used to specify how routers exchange routing table information.
- This command is also used to enter router configuration mode.

### Example

```
Console(config)#router rip
Console(config-router)#
```

### Related Commands

network (37-12)

## default-metric

This command sets the default metric assigned to external routes imported from other protocols. Use the **no** form to restore the default value.

### Syntax

**default-metric** *metric-value*

**no default-metric**

*metric-value* – Metric assigned to external routes. (Range: 0-15)

### Command Mode

Router Configuration

### Default Setting

8

### Command Usage

- This command does not override the metric value set by the **redistribute** command (see page 37-15). When a metric value has not been configured by the **redistribute** command, the **default-metric** command sets the metric value to be used for all imported external routes.
- The default metric must be used to resolve the problem of redistributing external routes with incompatible metrics.
- It is advisable to use a low metric when redistributing routes from another protocol into RIP. Using a high metric limits the usefulness of external routes redistributed into RIP. For example, if a metric of 10 is defined for redistributed routes, these routes can only be advertised to routers up to 5 hops away, at which point the metric exceeds the maximum hop count of 15. By defining a low metric of 1, traffic can follow a imported route the maximum number of hops allowed within a RIP domain. However, note that using a low metric can increase the possibility of routing loops. For example, this can occur if there are multiple redistribution points and the router learns about the same external network with a better metric from a redistribution point other than that derived from the original source.

### Example

This example sets the default metric to 5.

```
Console(config-router)#default-metric 5
Console(config-router)#
```

### Related Commands

redistribute (37-15)

## timers basic

This command configures the RIP update timer, timeout timer, and garbage- collection timer. Use the **no** form to restore the defaults.

### Syntax

**timers basic** *update-seconds*

**no timers basic**

*update-seconds* – Sets the update timer to the specified value, sets the timeout time value to 6 times the update time, and sets the garbage- collection timer to 4 times the update time.

(Range for update timer: 15-60 seconds)

### Command Mode

Router Configuration

### Default Setting

- Update: 30 seconds
- Timeout: 180 seconds
- Garbage collection: 120 seconds

### Command Usage

- The *update* timer sets the rate at which updates are sent. This is the fundamental timer used to control all basic RIP processes.
- The *timeout* timer is the time after which there have been no update messages that a route is declared dead. The route is marked inaccessible (i.e., the metric set to infinite) and advertised as unreachable. However, packets are still forwarded on this route.
- After the *timeout* interval expires, the router waits for an interval specified by the *garbage-collection* timer before removing this entry from the routing table. This timer allows neighbors to become aware of an invalid route prior to purging it.
- Setting the update timer to a short interval can cause the router to spend an excessive amount of time processing updates.
- These timers must be set to the same values for all routers in the network.

### Example

This example sets the update timer to 40 seconds. The timeout timer is subsequently set to 240 seconds, and the garbage-collection timer to 160 seconds.

```
Console(config-router)#timers basic 15  
Console(config-router)#
```

### network

This command specifies the network interfaces that will be included in the RIP routing process. Use the **no** form to remove an entry.

#### Syntax

**[no] network** *subnet-address*

*subnet-address* – IP address of a network directly connected to this router.

#### Command Mode

Router Configuration

#### Default Setting

No networks are specified.

#### Command Usage

- RIP only sends updates to interfaces specified by this command.
- Subnet addresses are interpreted as class A, B or C, based on the first field in the specified address. In other words, if a subnet address nnn.xxx.xxx.xxx is entered, the first field (nnn) determines the class:
  - 0 - 127 is class A, and only the first field in the network address is used.
  - 128 - 191 is class B, and the first two fields in the network address are used.
  - 192 - 223 is class C, and the first three fields in the network address are used.



**Example**

This example includes network interface 10.1.0.0 in the RIP routing process.

```
Console(config-router)#network 10.1.0.0
Console(config-router)#
```

**Related Commands**

router rip (37-9)

**neighbor**

This command defines a neighboring router with which this router will exchange routing information. Use the **no** form to remove an entry.

**Syntax**

**[no] neighbor** *ip-address*

*ip-address* - IP address to map to a specified hardware address.

**Command Mode**

Router Configuration

**Default Setting**

No neighbors are defined.

**Command Usage**

This command can be used to configure a static neighbor with which this router will exchange information, rather than relying on broadcast messages generated by the RIP protocol.

**Example**

```
Console(config-router)#neighbor 10.2.0.254
Console(config-router)#
```

### version

This command specifies a RIP version used globally by the router. Use the **no** form to restore the default value.

#### Syntax

**version {1 | 2}**  
**no version**

- **1** - RIP Version 1
- **2** - RIP Version 2

#### Command Mode

Router Configuration

#### Default Setting

RIP Version 1

#### Command Usage

- When this command is used to specify a global RIP version, any VLAN interface not previously set by the **ip rip receive version** or **ip rip send version** command will be set to the following values:
  - RIP Version 1 configures the unset interfaces to send RIPv1 compatible protocol messages and receive either RIPv1 or RIPv2 protocol messages.
  - RIP Version 2 configures the unset interfaces to use RIPv2 for both sending and receiving protocol messages.
- When the **no** form of this command is used to restore the default value, any VLAN interface not previously set by the **ip rip receive version** or **ip rip send version** command will be set to the default send or receive version.

#### Example

This example sets the global version for RIP to send and receive version 2 packets.

```
Console(config-router)#version 2
Console(config-router)#
```

### Related Commands

ip rip receive version (37-16)

ip rip send version (37-17)

## redistribute

This command imports external routing information from other routing domains (that is, protocols or static routes) into the autonomous system. Use the **no** form to disable this feature.

### Syntax

[no] **redistribute** {**static**} [**metric** <*metric-value*>]

- **static** - Static routes will be imported into this routing domain.
- *metric-value* - Metric value assigned to all external routes for the specified protocol. (Range: 1-15)

### Command Mode

Router Configuration

### Default Setting

- redistribution - none:
- metric-value - set by the **default-metric** command (see page 37-9)

### Command Usage

- When a metric value has not been configured by the **redistribute** command, the **default-metric** command (page 37-9) sets the metric value to be used for all imported external routes.
- A route metric must be used to resolve the problem of redistributing external routes with incompatible metrics.
- It is advisable to use a low metric when redistributing routes from another protocol into RIP. Using a high metric limits the usefulness of external routes redistributed into RIP. For example, if a metric of 10 is defined for redistributed routes, these routes can only be advertised to routers up to 5 hops away, at which point the metric exceeds the maximum hop count of 15. By defining a low metric of 1, traffic can follow a imported route the maximum number of hops allowed within a RIP domain. However, using a low metric can increase the possibility

of routing loops. For example, this can occur if there are multiple redistribution points and the router learns about the same external network with a better metric from a redistribution point other than that derived from the original source.

### Example

This example redistributes static routes and sets the metric for all of these routes to a value of 3.

```
Console(config-router)#redistribute static metric 3
Console(config-router)#
```

### Related Commands

default-metric (37-9)

## ip rip receive version

This command specifies a RIP version to receive on an interface. Use the **no** form to restore the default value.

### Syntax

**ip rip receive version {none | 1 | 2 | 1 2}**  
**no ip rip receive version**

- **none** - Does not accept incoming RIP packets.
- **1** - Accepts only RIPv1 packets.
- **2** - Accepts only RIPv2 packets.
- **1 2** - Accepts RIPv1 or RIPv2 packets

### Command Mode

Interface Configuration (VLAN)

### Default Setting

The default depends on the setting specified with the **version** command:

- Global RIPv1 - RIPv1 or RIPv2 packets
- Global RIPv2 - RIPv2 packets

### Command Usage

- Use this command to override the global setting specified by the RIP **redistribute** command.
- You can specify the receive version based on these options:
  - Use “none” if you do not want to add any dynamic entries to the routing table for an interface. (For example, you may only want to allow static routes for a specific interface.)
  - Use “1” or “2” if all routers in the local network are based on RIPv1 or RIPv2, respectively.
  - Use “1 2” if some routers in the local network are using RIPv2, but there are still some older routers using RIPv1.

### Example

This example sets the interface version for VLAN 1 to receive RIPv1 packets.

```
Console(config)#interface vlan 1
Console(config-if)#ip rip receive version 1
Console(config-if)#
```

### Related Commands

redistribute (37-15)

## ip rip send version

This command specifies a RIP version to send on an interface. Use the **no** form to restore the default value.

### Syntax

**ip rip send version {none | 1 | 2 | v2-broadcast}**  
**no ip rip send version**

- **none** - Does not transmit RIP updates.
- **1** - Sends only RIPv1 packets.
- **2** - Sends only RIPv2 packets.
- **v2-broadcast** - Route information is broadcast to other routers with RIPv2.

### Command Mode

Interface Configuration (VLAN)

### Default Setting

The default depends on the setting specified with the **version** command:

- Global RIPv1 - Route information is broadcast to other routers with RIPv2
- Global RIPv2 - RIPv2 packets

### Command Usage

- Use this command to override the global setting specified by the RIPv **redistribute** command.
- You can specify the receive version based on these options:
  - Use “none” to passively monitor route information advertised by other routers attached to the network.
  - Use “1” or “2” if all routers in the local network are based on RIPv1 or RIPv2, respectively.
  - Use “v2-broadcast” to propagate route information by broadcasting to other routers on the network using RIPv2, instead of multicasting as normally required by RIPv2. (Using this mode allows RIPv1 routers to receive these protocol messages, but still allows RIPv2 routers to receive the additional information provided by RIPv2, including subnet mask, next hop and authentication information.)

### Example

This example sets the interface version for VLAN 1 to send RIPv1 packets.

```
Console(config)#interface vlan 1
Console(config-if)#ip rip send version 1
Console(config-if)#
```

### Related Commands

redistribute (37-15)

## ip split-horizon

This command enables split-horizon or poison-reverse (a variation) on an interface. Use the **no** form to disable split-horizon.

### Syntax

**ip split-horizon [poison-reverse]**

**no ip split-horizon**

**poison-reverse** - Enables poison-reverse on the current interface.

### Command Mode

Interface Configuration (VLAN)

### Default Setting

split-horizon

### Command Usage

- Split horizon never propagates routes back to an interface from which they have been acquired.
- Poison reverse propagates routes back to an interface port from which they have been acquired, but sets the distance-vector metrics to infinity. (This provides faster convergence.)

### Example

This example propagates routes back to the source using poison-reverse.

```
Console(config)#interface vlan 1
Console(config-if)#ip split-horizon poison-reverse
Console(config-if)#
```

## ip rip authentication key

This command enables authentication for RIPv2 packets and to specify the key that must be used on an interface. Use the **no** form to prevent authentication.

### Syntax

**ip rip authentication key** *key-string*  
**no ip rip authentication**

*key-string* - A password used for authentication.  
(Range: 1-16 characters, case sensitive)

### Command Mode

Interface Configuration (VLAN)

### Default Setting

No authentication

### Command Usage

- This command can be used to restrict the interfaces that can exchange RIPv2 routing information. (Note that this command does not apply to RIPv1.)
- For authentication to function properly, both the sending and receiving interface must be configured with the same password.

### Example

This example sets an authentication password of “small” to verify incoming routing messages and to tag outgoing routing messages.

```
Console(config)#interface vlan 1
Console(config-if)#ip rip authentication key small
Console(config-if)#
```

### Related Commands

ip rip authentication mode (37-21)



## ip rip authentication mode

This command specifies the type of authentication that can be used on an interface. Note that the current firmware version only supports a simple password. Use the **no** form to restore the default value.

### Syntax

**ip rip authentication mode {text}**

**no ip rip authentication mode**

**text** - Indicates that a simple password will be used.

### Command Mode

Interface Configuration (VLAN)

### Default Setting

No authentication

### Command Usage

- The password to be used for authentication is specified in the **ip rip authentication key** command (page 37-20).
- This command requires the interface to exchange routing information with other routers based on an authorized password. (Note that this command only applies to RIPv2.)
- For authentication to function properly, both the sending and receiving interface must be configured with the same password or authentication key.

### Example

This example sets the authentication mode to plain text.

```
Console(config)#interface vlan 1
Console(config-if)#ip rip authentication mode text
Console(config-if)#
```

### Related Commands

ip rip authentication key (37-20)

## show rip globals

This command displays global configuration settings for RIP.

### Command Mode

Privileged Exec

### Example

```
Console#show rip globals

RIP Process: Enabled
Update Time in Seconds: 30
Number of Route Change: 0
Number of Queries: 1
Console#
```

**Table 37-6 show rip globals - display description**

Field	Description
RIP Process	Indicates if RIP has been enabled or disabled.
Update Time in Seconds	The interval at which RIP advertises known route information. (Default: 30 seconds)
Number of Route Changes	Number of times routing information has changed.
Number of Queries	Number of router database queries received by this router.

## show ip rip

This command displays information about interfaces configured for RIP.

### Syntax

**show ip rip {configuration | status | peer}**

- **configuration** - Shows RIP configuration settings for each interface.
- **status** - Shows the status of routing messages on each interface.
- **peer** - Shows information on neighboring routers, along with information about the last time a route update was received, the RIP version used by the neighbor, and the status of routing messages received from this neighbor.

**Command Mode**

Privileged Exec

**Example**

```

Console#show ip rip configuration

```

Interface	SendMode	ReceiveMode	Poison
10.1.0.253	rip1Compatible	RIPv1Orv2	SplitHorizon
10.1.1.253	rip1Compatible	RIPv1Orv2	SplitHorizon

```

noAuthentication
noAuthentication
Console#show ip rip status

```

Interface	RcvBadPackets	RcvBadRoutes	SendUpdates
10.1.0.253	0	0	13
10.1.1.253	0	0	13

```

Console#show ip rip peer

```

Peer	UpdateTime	Version	RcvBadPackets	RcvBadRoutes
10.1.0.254	1625	2	0	0
10.1.1.254	1625	2	0	0

```

Console#

```

**Table 37-7 show ip rip - display description**

Field	Description
<i>show ip rip configuration</i>	
Interface	IP address of the interface.
SendMode	RIP version sent on this interface (none, RIPv1, RIPv2, or RIPv2-broadcast)
ReceiveMode	RIP version received on this interface (none, RIPv1, RIPv2, RIPv1 or RIPv2)
Poison	Shows if split-horizon, poison-reverse, or no protocol message loopback prevention method is in use.
Authentication	Shows if authentication is set to simple password or none.
<i>show ip rip status</i>	
Interface	IP address of the interface.
RcvBadPackets	Number of bad RIP packets received.
RcvBadRoutes	Number of bad routes received.

**Table 37-7 show ip rip - display description** (Continued)

Field	Description
SendUpdates	Number of route changes.
<i>show ip rip peer</i>	
Peer	IP address of a neighboring RIP router.
UpdateTime	Last time a route update was received from this peer.
Version	Whether RIPv1 or RIPv2 packets were received from this peer.
RcvBadPackets	Number of bad RIP packets received from this peer.
RcvBadRoutes	Number of bad routes received from this peer.

# SECTION IV

## APPENDICES

---

This section provides additional information on the following topics.

Software Specifications .....A-1

Troubleshooting .....B-1

Glossary

Index

## *APPENDICES*

# APPENDIX A

## SOFTWARE SPECIFICATIONS

---

### Software Features

#### **Authentication**

Local, RADIUS, TACACS+, Port (802.1X), HTTPS, SSH, Port Security

#### **Access Control Lists**

256 ACLs (96 MAC rules, 96 IP rules, 96 IPv6 rules)

#### **DHCP Client, Relay, Server**

#### **BOOTP Client**

#### **DNS Client, Proxy**

#### **Port Configuration**

1000BASE-T: 10/100 Mbps at half/full duplex, 1000 Mbps at full duplex

1000BASE-SX/LX/LH - 1000 Mbps at full duplex (SFP),

10GBASE-SR/LR/ER - 10 Gbps at full duplex (Module)

#### **Flow Control**

Full Duplex: IEEE 802.3x

Half Duplex: Back pressure

#### **Broadcast Storm Control**

Traffic throttled above a critical threshold

#### **Port Mirroring**

Multiple source ports, one destination port

#### **Rate Limits**

Input Limit

Output limit

Range (configured per port)

**Port Trunking**

Static trunks (Cisco EtherChannel compliant)

Dynamic trunks (Link Aggregation Control Protocol)

**Spanning Tree Algorithm**

Spanning Tree Protocol (STP, IEEE 802.1D)

Rapid Spanning Tree Protocol (RSTP, IEEE 802.1w)

Multiple Spanning Tree Protocol (MSTP, IEEE 802.1s)

**VLAN Support**

Up to 255 groups; port-based, protocol-based, or tagged (802.1Q),

GVRP for automatic VLAN learning, private VLANs

**Class of Service**

Supports eight levels of priority and Weighted Round Robin Queueing  
(which can be configured by VLAN tag or port),

Layer 3/4 priority mapping: IP Port, IP Precedence, IP DSCP

**Quality of Service**

DiffServ supports class maps, policy maps, and service policies

**Multicast Filtering**

IGMP Snooping

**IP Routing**

ARP, Proxy ARP

Static routes

RIP, RIPv2 dynamic routing

**Additional Features**

BOOTP client

CIDR (Classless Inter-Domain Routing)

SNTP (Simple Network Time Protocol)

SNMP (Simple Network Management Protocol)

RMON (Remote Monitoring, groups 1,2,3,9)

SMTP Email Alerts



## Management Features

### **In-Band Management**

Telnet, web-based HTTP or HTTPS, SNMP manager, or Secure Shell

### **Out-of-Band Management**

RS-232 DB-9 console port

### **Software Loading**

TFTP in-band or XModem out-of-band

### **SNMP**

Management access via MIB database

Trap management to specified hosts

### **RMON**

Groups 1, 2, 3, 9 (Statistics, History, Alarm, Event)

## Standards

IEEE 802.1D Spanning Tree Protocol and traffic priorities

IEEE 802.1p Priority tags

IEEE 802.1Q VLAN

IEEE 802.1v Protocol-based VLANs

IEEE 802.1s Multiple Spanning Tree Protocol

IEEE 802.1w Rapid Spanning Tree Protocol

IEEE 802.1X Port Authentication

IEEE 802.3-2002

Ethernet, Fast Ethernet, Gigabit Ethernet

Link Aggregation Control Protocol (LACP)

Full-duplex flow control (ISO/IEC 8802-3)

IEEE 802.3ac VLAN tagging

ARP (RFC 826)

DHCP Client (RFC 2131)

DHCP Relay (RFC 3046, 951)

DHCP Server (RFC 2131)

HTTPS  
ICMP (RFC 792)  
IGMP (RFC 1112)  
IGMPv2 (RFC 2236)  
IPv4 IGMP (RFC 3228)  
RADIUS+ (RFC 2618)  
RIP (RFC 1058)  
RIPv2 (RFC 2453)  
RIPv2, extension (RFC 1724)  
RMON (RFC 2819 groups 1,2,3,9)  
SNMP (RFC 1157)  
SNMPv2c (RFC 2571)  
SNMPv3 (RFC DRAFT 3414, 3410, 2273, 3411, 3415)  
SNTP (RFC 2030)  
SSH (Version 2.0)  
TFTP (RFC 1350)

## **Management Information Bases**

Bridge MIB (RFC 1493)  
DNS Resolver MIB (RFC 1612)  
Differentiated Services MIB (RFC 3289)  
Entity MIB (RFC 2737)  
Ether-like MIB (RFC 2665)  
Extended Bridge MIB (RFC 2674)  
Extensible SNMP Agents MIB (RFC 2742)  
Forwarding Table MIB (RFC 2096)  
IGMP MIB (RFC 2933)  
Interface Group MIB (RFC 2233)  
Interfaces Evolution MIB (RFC 2863)  
IP MIB (RFC 2011)  
IP Multicasting related MIBs  
IPV6-MIB (RFC 2065)  
IPV6-ICMP-MIB (RFC 2066)

IPV6-TCP-MIB (RFC 2052)  
IPV6-UDP-MIB (RFC2054)  
MAU MIB (RFC 3636)  
MIB II (RFC 1213)  
Port Access Entity MIB (IEEE 802.1X)  
Port Access Entity Equipment MIB  
Private MIB  
Quality of Service MIB  
RADIUS Authentication Client MIB (RFC 2621)  
RIP1 MIB (RFC 1058)  
RIP2 MIB (RFC 2453)  
RIP2 Extension (RFC1724)  
RMON MIB (RFC 2819)  
RMON II Probe Configuration Group (RFC 2021, partial  
implementation)  
SNMPv2 IP MIB (RFC 2011)  
SNMP Framework MIB (RFC 3411)  
SNMP-MPD MIB (RFC 3412)  
SNMP Target MIB, SNMP Notification MIB (RFC 3413)  
SNMP User-Based SM MIB (RFC 3414)  
SNMP View Based ACM MIB (RFC 3415)  
SNMP Community MIB (RFC 3584)  
TACACS+ Authentication Client MIB  
TCP MIB (RFC 2012)  
Trap (RFC 1215)  
UDP MIB (RFC 2013)



# APPENDIX B

## TROUBLESHOOTING

---

### Problems Accessing the Management Interface

**Table B-1 Troubleshooting Chart**

Symptom	Action
Cannot connect using Telnet, web browser, or SNMP software	<ul style="list-style-type: none"><li>• Be sure the switch is powered up.</li><li>• Check network cabling between the management station and the switch.</li><li>• Check that you have a valid network connection to the switch and that the port you are using has not been disabled.</li><li>• Be sure you have configured the VLAN interface through which the management station is connected with a valid IP address, subnet mask and default gateway.</li><li>• Be sure the management station has an IP address in the same subnet as the switch's IP interface to which it is connected.</li><li>• If you are trying to connect to the switch via the IP address for a tagged VLAN group, your management station, and the ports connecting intermediate switches in the network, must be configured with the appropriate tag.</li><li>• If you cannot connect using Telnet, you may have exceeded the maximum number of concurrent Telnet/SSH sessions permitted. Try connecting again at a later time.</li></ul>

**Table B-1 Troubleshooting Chart (Continued)**

Symptom	Action
Cannot connect using Secure Shell	<ul style="list-style-type: none"> <li>• If you cannot connect using SSH, you may have exceeded the maximum number of concurrent Telnet/SSH sessions permitted. Try connecting again at a later time.</li> <li>• Be sure the control parameters for the SSH server are properly configured on the switch, and that the SSH client software is properly configured on the management station.</li> <li>• Be sure you have generated a public key on the switch, and exported this key to the SSH client.</li> <li>• Be sure you have set up an account on the switch for each SSH user, including user name, authentication level, and password.</li> <li>• Be sure you have imported the client's public key to the switch (if public key authentication is used).</li> </ul>
Cannot access the on-board configuration program via a serial port connection	<ul style="list-style-type: none"> <li>• Be sure you have set the terminal emulator program to VT100 compatible, 8 data bits, 1 stop bit, no parity, and the baud rate set to any of the following (9600, 19200, 38400, 57600, 115200 bps).</li> <li>• Check that the null-modem serial cable conforms to the pin-out connections provided in the Installation Guide.</li> </ul>
Forgot or lost the password	<ul style="list-style-type: none"> <li>• Contact your local distributor.</li> </ul>

## Using System Logs

If a fault does occur, refer to the Installation Guide to ensure that the problem you encountered is actually caused by the switch. If the problem appears to be caused by the switch, follow these steps:

1. Enable logging.
2. Set the error messages reported to include all categories.
3. Designate the SNMP host that is to receive the error messages.
4. Repeat the sequence of commands or other actions that lead up to the error.
5. Make a list of the commands or circumstances that led to the fault. Also make a list of any error messages displayed.
6. Contact your distributor's service engineer.

For example:

```
Console(config)#logging on
Console(config)#logging history flash 7
Console(config)#snmp-server host 192.168.1.23
:
```

## *TROUBLESHOOTING*



# GLOSSARY

## **Access Control List (ACL)**

ACLs can limit network traffic and restrict access to certain users or devices by checking each packet for certain IP or MAC (i.e., Layer 2) information.

## **Address Resolution Protocol (ARP)**

ARP converts between IP addresses and MAC (i.e., hardware) addresses. ARP is used to locate the MAC address corresponding to a given IP address. This allows the switch to use IP addresses for routing decisions and the corresponding MAC addresses to forward packets from one hop to the next.

## **Boot Protocol (BOOTP)**

**BOOTP** is used to provide bootup information for network devices, including IP address information, the address of the TFTP server that contains the devices system files, and the name of the boot file.

## **Class of Service (CoS)**

CoS is supported by prioritizing packets based on the required level of service, and then placing them in the appropriate output queue. Data is transmitted from the queues using weighted round-robin service to enforce priority service and prevent blockage of lower-level queues. Priority may be set according to the port default, the packet's priority bit (in the VLAN tag), TCP/UDP port number, IP Precedence bit, or DSCP priority bit.

## **Differentiated Services (DiffServ)**

**DiffServ** provides quality of service on large networks by employing a well-defined set of building blocks from which a variety of aggregate forwarding behaviors may be built. Each packet carries information (DS byte) used by each hop to give it a particular forwarding treatment, or

per-hop behavior, at each network node. **DiffServ** allocates different levels of service to users on the network with mechanisms such as traffic meters, shapers/droppers, packet markers at the boundaries of the network.

### **Differentiated Services Code Point Service (DSCP)**

DSCP uses a six-bit tag to provide for up to 64 different forwarding behaviors. Based on network policies, different kinds of traffic can be marked for different kinds of forwarding. The DSCP bits are mapped to the Class of Service categories, and then into the output queues.

### **Domain Name Service (DNS)**

A system used for translating host names for network nodes into IP addresses.

### **Dynamic Host Control Protocol (DHCP)**

Provides a framework for passing configuration information to hosts on a TCP/IP network. DHCP is based on the Bootstrap Protocol (BOOTP), adding the capability of automatic allocation of reusable network addresses and additional configuration options.

### **Extended Universal Identifier (EUI)**

An address format used by IPv6 to identify the host portion of the network address. The interface identifier in EUI compatible addresses is based on the link-layer (MAC) address of an interface. Interface identifiers used in global unicast and other IPv6 address types are 64 bits long and may be constructed in the EUI-64 format. The modified EUI-64 format interface ID is derived from a 48-bit link-layer address by inserting the hexadecimal number FFFE between the upper three bytes (OUI field) and the lower 3 bytes (serial number) of the link layer address. To ensure that the chosen address is from a unique Ethernet MAC address, the 7th bit in the high-order byte is set to 1 (equivalent to the IEEE Global/Local bit) to indicate the uniqueness of the 48-bit address.

**Extensible Authentication Protocol over LAN (EAPOL)**

EAPOL is a client authentication protocol used by this switch to verify the network access rights for any device that is plugged into the switch. A user name and password is requested by the switch, and then passed to an authentication server (e.g., RADIUS) for verification. EAPOL is implemented as part of the IEEE 802.1X Port Authentication standard.

**GARP VLAN Registration Protocol (GVRP)**

Defines a way for switches to exchange VLAN information in order to register necessary VLAN members on ports along the Spanning Tree so that VLANs defined in each switch can work automatically over a Spanning Tree network.

**Generic Attribute Registration Protocol (GARP)**

GARP is a protocol that can be used by endstations and switches to register and propagate multicast group membership information in a switched environment so that multicast data frames are propagated only to those parts of a switched LAN containing registered endstations. Formerly called Group Address Registration Protocol.

**Generic Multicast Registration Protocol (GMRP)**

GMRP allows network devices to register end stations with multicast groups. GMRP requires that any participating network devices or end stations comply with the IEEE 802.1p standard.

**Group Attribute Registration Protocol (GARP)**

*See Generic Attribute Registration Protocol.*

**IEEE 802.1D**

Specifies a general method for the operation of MAC bridges, including the Spanning Tree Protocol.

**IEEE 802.1Q**

VLAN Tagging—Defines Ethernet frame tags which carry VLAN information. It allows switches to assign endstations to different virtual LANs, and defines a standard way for VLANs to communicate across switched networks.

**IEEE 802.1p**

An IEEE standard for providing quality of service (QoS) in Ethernet networks. The standard uses packet tags that define up to eight traffic classes and allows switches to transmit packets based on the tagged priority value.

**IEEE 802.1s**

An IEEE standard for the Multiple Spanning Tree Protocol (MSTP) which provides independent spanning trees for VLAN groups.

**IEEE 802.1X**

Port Authentication controls access to the switch ports by requiring users to first enter a user ID and password for authentication.

**IEEE 802.3ac**

Defines frame extensions for VLAN tagging.

**IEEE 802.3x**

Defines Ethernet frame start/stop requests and timers used for flow control on full-duplex links.

**IGMP Snooping**

Listening to IGMP Query and IGMP Report packets transferred between IP Multicast Routers and IP Multicast host groups to identify IP Multicast group members.

**IGMP Query**

On each subnetwork, one IGMP-capable device will act as the querier — that is, the device that asks all hosts to report on the IP multicast groups they wish to join or to which they already belong. The elected querier will be the device with the lowest IP address in the subnetwork.

**Internet Control Message Protocol (ICMP)**

A network layer protocol that reports errors in processing IP packets. ICMP is also used by routers to feed back information about better routing choices.

**Internet Group Management Protocol (IGMP)**

A protocol through which hosts can register with their local router for multicast services. If there is more than one multicast switch/router on a given subnetwork, one of the devices is made the “querier” and assumes responsibility for keeping track of group membership.

**In-Band Management**

Management of the network from a station attached directly to the network.

**IP Multicast Filtering**

A process whereby this switch can pass multicast traffic along to participating hosts.

**IP Precedence**

The Type of Service (ToS) octet in the IPv4 header includes three precedence bits defining eight different priority levels ranging from highest priority for network control packets to lowest priority for routine traffic. The eight values are mapped one-to-one to the Class of Service categories by default, but may be configured differently to suit the requirements for specific network applications.

## **Layer 2**

Data Link layer in the ISO 7-Layer Data Communications Protocol. This is related directly to the hardware interface for network devices and passes on traffic based on MAC addresses.

## **Layer 3**

Network layer in the ISO 7-Layer Data Communications Protocol. This layer handles the routing functions for data moving from one open system to another.

## **Link Aggregation**

*See Port Trunk.*

## **Link Aggregation Control Protocol (LACP)**

Allows ports to automatically negotiate a trunked link with LACP-configured ports on another device.

## **Management Information Base (MIB)**

An acronym for Management Information Base. It is a set of database objects that contains information about a specific device.

## **MD5 Message-Digest Algorithm**

An algorithm that is used to create digital signatures. It is intended for use with 32 bit machines and is safer than the MD4 algorithm, which has been broken. MD5 is a one-way hash function, meaning that it takes a message and converts it into a fixed string of digits, also called a message digest.

## **Multicast Switching**

A process whereby the switch filters incoming multicast frames for services for which no attached host has registered, or forwards them to all ports contained within the designated multicast VLAN group.

**Network Time Protocol (NTP)**

NTP provides the mechanisms to synchronize time across the network. The time servers operate in a hierarchical-master-slave configuration in order to synchronize local clocks within the subnet and to national time standards via wire or radio.

**Out-of-Band Management**

Management of the network from a station not attached to the network.

**Port Authentication**

*See IEEE 802.1X.*

**Port Mirroring**

A method whereby data on a target port is mirrored to a monitor port for troubleshooting with a logic analyzer or RMON probe. This allows data on the target port to be studied unobstructively.

**Port Trunk**

Defines a network link aggregation and trunking method which specifies how to create a single high-speed logical link that combines several lower-speed physical links.

**Private VLANs**

Private VLANs provide port-based security and isolation between ports within the assigned VLAN. Data traffic on downlink ports can only be forwarded to, and from, uplink ports.

**Quality of Service (QoS)**

QoS refers to the capability of a network to provide better service to selected traffic flows using features such as data prioritization, queuing, congestion avoidance and traffic shaping. These features effectively provide preferential treatment to specific flows either by raising the priority of one flow or limiting the priority of another flow.

**Quality of Service (QoS)**

QoS refers to the capability of a network to provide better service to selected traffic flows using features such as data prioritization, queuing, congestion avoidance and traffic shaping. These features effectively provide preferential treatment to specific flows either by raising the priority of one flow or limiting the priority of another flow.

**Remote Authentication Dial-in User Service (RADIUS)**

RADIUS is a logon authentication protocol that uses software running on a central server to control access to RADIUS-compliant devices on the network.

**Remote Monitoring (RMON)**

RMON provides comprehensive network monitoring capabilities. It eliminates the polling required in standard SNMP, and can set alarms on a variety of traffic conditions, including specific error types.

**Rapid Spanning Tree Protocol (RSTP)**

RSTP reduces the convergence time for network topology changes to about 10% of that required by the older IEEE 802.1D STP standard.

**Routing Information Protocol (RIP)**

The RIP protocol seeks to find the shortest route to another device by minimizing the distance-vector, or hop count, which serves as a rough estimate of transmission cost. RIP-2 is a compatible upgrade to RIP. It adds useful capabilities for subnet routing, authentication, and multicast transmissions.

**Secure Shell (SSH)**

A secure replacement for remote access functions, including Telnet. SSH can authenticate users with a cryptographic key, and encrypt data connections between management clients and the switch.



**Simple Mail Transfer Protocol (SMTP)**

A standard host-to-host mail transport protocol that operates over TCP, port 25.

**Simple Network Management Protocol (SNMP)**

The application protocol in the Internet suite of protocols which offers network management services.

**Simple Network Time Protocol (SNTP)**

SNTP allows a device to set its internal clock based on periodic updates from a Network Time Protocol (NTP) server. Updates can be requested from a specific NTP server, or can be received via broadcasts sent by NTP servers.

**Spanning Tree Algorithm (STA)**

A technology that checks your network for any loops. A loop can often occur in complicated or backup linked network systems. Spanning Tree detects and directs data along the shortest available path, maximizing the performance and efficiency of the network.

**Telnet**

Defines a remote communication facility for interfacing to a terminal device over TCP/IP.

**Terminal Access Controller Access Control System Plus (TACACS+)**

TACACS+ is a logon authentication protocol that uses software running on a central server to control access to TACACS-compliant devices on the network.

**Transmission Control Protocol/Internet Protocol (TCP/IP)**

Protocol suite that includes TCP as the primary transport protocol, and IP as the network layer protocol.

**Trivial File Transfer Protocol (TFTP)**

A TCP/IP protocol commonly used for software downloads.

**Universal Time Coordinate (UTC)**

UTC is a time scale that couples Greenwich Mean Time (based solely on the Earth's rotation rate) with highly accurate atomic time. The UTC does not have daylight saving time.

**User Datagram Protocol (UDP)**

UDP provides a datagram mode for packet-switched communications. It uses IP as the underlying transport mechanism to provide access to IP-like services. UDP packets are delivered just like IP packets – connection-less datagrams that may be discarded before reaching their targets. UDP is useful when TCP would be too complex, too slow, or just unnecessary.

**Virtual LAN (VLAN)**

A Virtual LAN is a collection of network nodes that share the same collision domain regardless of their physical location or connection point in the network. A VLAN serves as a logical workgroup with no physical barriers, and allows users to share information and resources as though located on the same LAN.

**XModem**

A protocol used to transfer files between devices. Data is grouped in 128-byte blocks and error-corrected.

# INDEX

## Numerics

802.1X, port authentication 6-21, 22-37

## A

acceptable frame type 11-14, 30-11

Access Control List *See* ACL

ACL

Extended IP (IPv4) 7-2, 7-4, 23-2,  
23-5

IPv6 Extended 7-2, 7-10, 23-9, 23-12

IPv6 Standard 7-2, 7-9, 23-9, 23-11

MAC 7-2, 23-16, 23-17–23-20

Standard IP (IPv4) 7-2, 7-3, 23-2, 23-4

Address Resolution Protocol *See* ARP

address table 9-1, 28-1

aging time 9-5, 28-6

ARP

configuration 17-11, 36-45

description 17-9

proxy 17-10, 36-48

statistics 17-17, 37-7

## B

BOOTP 4-11, 36-4

BPDU 10-2

broadcast storm, threshold 8-23, 24-10

## C

Class of Service *See* CoS

CLI, showing commands 18-5

command line interface *See* CLI

community string 2-19, 5-4, 21-4

configuration files

restoring defaults 20-13

configuration settings, saving or

restoring 2-22, 4-32, 20-13

console port, required connections 2-3

CoS

configuring 12-1, 31-1, 32-1

DSCP 12-12, 31-12

IP port priority 12-14, 31-9

IP precedence 12-10, 31-10

layer 3/4 priorities 12-8, 31-8

queue mapping 12-3, 31-5

queue mode 12-6, 31-2

traffic class weights 12-7, 31-4

## D

default gateway, configuration 17-5

default IPv4 gateway, configuration 4-9,  
36-6

default IPv6 gateway, configuration 4-15,  
36-24

default priority, ingress port 12-1, 31-3

default settings, system 1-9

DHCP 4-11, 36-4

address pool 16-6, 35-8

client 4-9, 34-1, 35-2

dynamic configuration 2-15

relay service 16-2, 35-4

server 16-4, 35-6

Differentiated Code Point Service *See*  
DSCP

Differentiated Services *See* DiffServ

DiffServ 13-2, 32-1

binding policy to interface 13-10,  
32-10

class map 13-2, 32-3, 32-6

policy map 13-6, 32-5

service policy 13-10, 32-10

DNS

default domain name 15-1, 34-4

## INDEX

- displaying the cache 15-6
- domain name list 15-1, 34-2
- enabling lookup 15-1, 34-7
- name server list 15-1, 34-6
- static entries 15-4

Domain Name Service *See* DNS  
downloading software 4-30, 20-13

### DSCP

- enabling 12-9, 31-12
- mapping priorities 12-12, 31-13

dynamic addresses, displaying 9-3, 28-4  
Dynamic Host Configuration Protocol *See* DHCP

## E

edge port, STA 10-16, 10-19, 29-18  
event logging 20-34

## F

firmware

- displaying version 4-4, 20-10
- upgrading 4-30, 20-13

## G

GARP VLAN Registration Protocol *See* GVRP  
gateway, default 17-6  
gateway, IPv4 default 4-9, 36-6  
gateway, IPv6 default 4-15, 36-24  
general network prefix, IPv6 36-12  
GVRP

- global setting 11-5, 30-2
- interface configuration 11-15, 30-4

## H

hardware version, displaying 4-4, 20-10

HTTPS 6-7, 22-17  
HTTPS, secure server 6-7, 22-17

## I

IEEE 802.1D 10-1, 29-4  
IEEE 802.1s 29-4  
IEEE 802.1w 10-1, 29-4  
IEEE 802.1X 6-21, 22-37  
IGMP

- groups, displaying 14-7, 33-5
- Layer 2 14-2, 33-2
- query 14-2, 33-6
- query, Layer 2 14-3, 33-6
- snooping 14-2, 33-2
- snooping, configuring 14-2, 33-2

ingress filtering 11-14, 30-12  
IP address

- BOOTP/DHCP 35-3

IP port priority

- enabling 12-14, 31-9
- mapping priorities 12-14, 31-10

IP precedence

- enabling 12-9, 31-10
- mapping priorities 12-10, 31-11

IP routing 17-1, 37-1

- configuring interfaces 17-7, 36-4, 36-14
- enabling or disabling 17-5, 37-2
- status 17-5, 37-2
- unicast protocols 17-4

IP, statistics 17-19, 37-7  
IPv4 address

- BOOTP/DHCP 4-11, 36-4, 36-7
- dynamic configuration 2-15
- manual configuration 2-12
- setting 2-11, 4-8, 36-4

IPv6

- configuring static neighbors 4-24, 36-38
- displaying neighbors 4-24, 36-38



ports

- autonegotiation 8-5, 24-5
- broadcast storm threshold 8-23, 24-10
- capabilities 8-5, 24-6
- duplex mode 8-4, 24-3
- flow control 8-5
- forced selection on combo ports 24-8
- speed 8-4, 24-3
- ports, configuring 8-1, 24-1
- ports, mirroring 8-25, 26-1
- priority, default port ingress 12-1, 31-3
- problems, troubleshooting B-1
- protocol migration 10-20, 29-24
- proxy ARP 17-10, 36-48

Q

- QoS 13-1, 32-1
- Quality of Service *See* QoS
- queue weights 12-7, 31-4

R

- RADIUS, logon authentication 6-3, 22-8
- rate limits, setting 8-26, 27-1
- remote logging 20-38
- restarting the system 4-49, 19-5
- RIP
  - configuring 17-30, 37-9–37-22
  - description 17-4
  - global settings 17-31, 37-9–37-11
  - interface protocol settings 17-35, 37-12–37-21
  - specifying interfaces 17-34, 37-12
  - statistics 17-41, 37-23, 37-24
- routing table, displaying 17-28, 37-5, 37-6
- RSTP 10-1, 29-4
  - global configuration 10-4, 29-4

S

- secure shell 6-10, 22-21
- Secure Shell configuration 6-10, 22-25, 22-26
- serial port
  - configuring 20-21
- SNMP 5-1
  - community string 5-4, 21-4
  - enabling traps 5-6, 21-9
  - trap manager 5-6, 21-6
- software
  - displaying version 4-4, 20-10
  - downloading 4-30, 20-13
- Spanning Tree Protocol *See* STA
- specifications, software A-1
- SSH, configuring 6-10, 22-25, 22-26
- STA 10-1, 29-1
  - edge port 10-16, 10-19, 29-18
  - global settings, configuring 10-8, 29-3–29-10
  - global settings, displaying 10-4, 29-25
  - interface settings 10-13, 10-24, 10-26, 29-16–29-24, 29-26
  - link type 10-16, 10-19, 29-21
  - path cost 10-5, 10-15, 29-16
  - path cost method 10-10, 29-9
  - port priority 10-15, 29-18
  - protocol migration 10-20, 29-24
  - transmission limit 10-10, 29-10
- standards, IEEE A-3
- startup files
  - creating 4-34, 20-13
  - displaying 4-30, 20-4
  - setting 4-30, 20-20
- static addresses, setting 9-1, 28-2
- static routes, configuring 17-26, 37-3
- statistics
  - ARP 17-17, 37-7
  - ICMP 17-21, 37-7
  - IP 17-19, 37-7

- port 8-28, 24-13
- RIP 17-41, 37-23, 37-24
- TCP 17-25, 37-7
- UDP 17-24, 37-7
- STP 10-8, 29-4
- STP *Also see* STA
- switch settings, saving or restoring 20-13
- system clock, setting 4-50, 20-48
- system software, downloading from
  - server 4-30, 20-13

## T

- TACACS+, logon authentication 6-3, 22-13
- time, setting 4-50, 20-48
- traffic class weights 12-7, 31-4
- trap manager 2-20, 5-6, 21-6
- troubleshooting B-1
- trunk
  - configuration 8-8, 25-1
  - LACP 8-11, 25-1, 25-4
  - static 8-9, 25-3

## U

- upgrading software 4-30, 20-13

- user account 6-1
- user password 6-1, 22-2, 22-4

## V

- VLANs 11-1—11-18, 30-1—30-18
  - adding static members 11-10, 11-13, 30-14
  - creating 11-8, 30-8
  - description 11-1
  - displaying basic information 11-6, 30-3
  - displaying port members 11-7, 30-16
  - egress mode 11-15, 30-10
  - interface configuration 11-14, 30-11—30-15
  - private 11-17, 30-17
  - protocol 11-19, 30-19

## W

- Web interface
  - access requirements 3-1
  - configuration buttons 3-4
  - home page 3-3
  - menu list 3-6
  - panel display 3-5

## *INDEX*





## FOR TECHNICAL SUPPORT, CALL:

From U.S.A. and Canada (24 hours a day, 7 days a week)

(800) SMC-4-YOU; (949) 679-8000; Fax: (949) 679-1481

From Europe: Contact details can be found on

[www.smc-europe.com](http://www.smc-europe.com) or [www.smc.com](http://www.smc.com)

## INTERNET

E-mail addresses:

[techsupport@smc.com](mailto:techsupport@smc.com)

[european.techsupport@smc-europe.com](mailto:european.techsupport@smc-europe.com)

Driver updates:

[http://www.smc.com/index.cfm?action=tech\\_support\\_drivers\\_downloads](http://www.smc.com/index.cfm?action=tech_support_drivers_downloads)

World Wide Web:

<http://www.smc.com>

<http://www.smc-europe.com>

## FOR LITERATURE OR ADVERTISING RESPONSE, CALL:

U.S.A. and Canada:	(800) SMC-4-YOU;	Fax (949) 679-1481
Spain:	34-91-352-00-40;	Fax 34-93-477-3774
UK:	44 (0) 1932 866553;	Fax 44 (0) 118 974 8701
France:	33 (0) 41 38 32 32;	Fax 33 (0) 41 38 01 58
Italy:	39 (0) 335 5708602;	Fax 39 02 739 14 17
Benelux:	31 33 455 72 88;	Fax 31 33 455 73 30
Central Europe:	49 (0) 89 92861-0;	Fax 49 (0) 89 92861-230
Nordic:	46 (0) 868 70700;	Fax 46 (0) 887 62 62
Eastern Europe:	34 -93-477-4920;	Fax 34 93 477 3774
Sub Saharian Africa:	216-712-36616;	Fax 216-71751415
North West Africa:	34 93 477 4920;	Fax 34 93 477 3774
CIS:	7 (095) 7893573;	Fax 7 (095) 789 35 73
PRC:	86-10-6235-4958;	Fax 86-10-6235-4962
Taiwan:	886-2-8797-8006;	Fax 886-2-8797-6288
Asia Pacific:	(65) 6 238 6556;	Fax (65) 6 238 6466
Korea:	82-2-553-0860;	Fax 82-2-553-7202
Japan:	81-45-224-2332;	Fax 81-45-224-2331
Australia:	61-2-8875-7887;	Fax 61-2-8875-7777
India:	91-22-8204437;	Fax 91-22-8204443

If you are looking for further contact information, please visit [www.smc.com](http://www.smc.com),  
[www.smc-europe.com](http://www.smc-europe.com), or [www.smc-asia.com](http://www.smc-asia.com).



38 Tesla  
Irvine, CA 92618  
Phone: (949) 679-8000

Model Number: SMC8824M, SMC8848M  
Pub. Number: 150200054400A  
Revision Number: F3.30.7.54 E042006-ST-R02